

# Arm® System Memory Management Unit Architecture Specification SMMU architecture version 3

Document number **ARM IHI 0070** 

E.a Document version

Non-confidential Document confidentiality

Copyright © 2016-2023 Arm Limited or its affiliates. All rights reserved.

# **Arm System Memory Management Unit Architecture Specification**

# **Release information**

| Date        | Version | Changes  |
|-------------|---------|--|
| 2023/Jan/31 | E.a     | <ul> <li>Update with SMMU for RME architecture</li> <li>Amendments and clarifications</li> </ul>     |
| 2021/Apr/30 | D.b     | Amendments and clarifications  |
| 2020/Aug/31 | D.a     | <ul><li> Update with SMMUv3.3 architecture</li><li> Amendments and clarifications</li></ul>          |
| 2019/Jul/18 | C.a     | Amendments and clarifications  |
| 2018/Mar/16 | C       | <ul> <li>Update with SMMUv3.2 architecture</li> <li>Further amendments and clarifications</li> </ul> |
| 2017/Jun/15 | В       | Amendments and clarifications  |
| 2016/Oct/15 | A       | • First release  |

## **Non-Confidential Proprietary Notice**

This document is protected by copyright and other related rights and the practice or implementation of the information contained in this document may be protected by one or more patents or pending patent applications. No part of this document may be reproduced in any form by any means without the express prior written permission of Arm. No license, express or implied, by estoppel or otherwise to any intellectual property rights is granted by this document unless specifically stated.

Your access to the information in this document is conditional upon your acceptance that you will not use or permit others to use the information for the purposes of determining whether implementations infringe any third party patents.

THIS DOCUMENT IS PROVIDED "AS IS". ARM PROVIDES NO REPRESENTATIONS AND NO WARRANTIES, EXPRESS, IMPLIED OR STATUTORY, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY, SATISFACTORY QUALITY, NON-INFRINGEMENT OR FITNESS FOR A PARTICULAR PURPOSE WITH RESPECT TO THE DOCUMENT. For the avoidance of doubt, Arm makes no representation with respect to, and has undertaken no analysis to identify or understand the scope and content of, patents, copyrights, trade secrets, or other rights.

This document may include technical inaccuracies or typographical errors.

TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT WILL ARM BE LIABLE FOR ANY DAMAGES, INCLUDING WITHOUT LIMITATION ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES, HOWEVER CAUSED AND REGARDLESS OF THE THEORY OF LIABILITY, ARISING OUT OF ANY USE OF THIS DOCUMENT, EVEN IF ARM HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

This document consists solely of commercial items. You shall be responsible for ensuring that any use, duplication or disclosure of this document complies fully with any relevant export laws and regulations to assure that this document or any portion thereof is not exported, directly or indirectly, in violation of such export laws. Use of the word "partner" in reference to Arm's customers is not intended to create or refer to any partnership relationship with any other company. Arm may make changes to this document at any time and without notice.

This document may be translated into other languages for convenience, and you agree that if there is any conflict between the English version of this document and any translation, the terms of the English version of the Agreement shall prevail.

The Arm corporate logo and words marked with ® or TM are registered trademarks or trademarks of Arm Limited (or its affiliates) in the US and/or elsewhere. All rights reserved. Other brands and names mentioned in this document may be the trademarks of their respective owners. Please follow Arm's trademark usage guidelines at http://www.arm.com/company/policies/trademarks.

Copyright © 2016-2023 Arm Limited (or its affiliates). All rights reserved.

Arm Limited. Company 02557590 registered in England.

110 Fulbourn Road, Cambridge, England CB1 9NJ.

LES-PRE-20349 version 21.0

# **Contents**

# **Arm® System Memory Management Unit Architecture Specification**

|           | Arm        | Release | lemory Management Unit Architecture Specification                                | i<br>i<br>ii |
|-----------|------------|---------|--|--------------|
| Chapter 1 | <b>Abo</b> |         | document erences   | 12           |
|           | 1.1        |         | ns and abbreviations   | 13           |
|           | 1.2        | 1.2.1   | Progressive Terminology Commitment   | 17           |
|           | 1.3        |         | ument Scope  | 18           |
| Chapter 2 | Intro      | oductio | n  |              |
| •         | 2.1        | Hist    | ory  | 21           |
|           | 2.2        |         | ΛÚν3.0 features  | 22           |
|           | 2.3        | SMN     | MUv3.1 features  | 24           |
|           | 2.4        | SMN     | MUv3.2 features  | 25           |
|           | 2.5        | SMN     | MUv3.3 features  | 26           |
|           | 2.6        | SMI     | //U for RME features   | 27           |
|           | 2.7        | Perr    | nitted implementation of subsets of SMMUv3.x and SMMUv3.(x+1) archiural features | 28           |
|           | 2.8        |         | em placement   | 29           |
| Chapter 3 | Ope        | ration  |  |              |
| -         | 3.1        | Soft    | ware interface   | 32           |
|           | 3.2        | Stre    | am numbering   | 34           |
|           | 3.3        | Data    | a structures and translation procedure   | 36           |
|           |            | 3.3.1   | Stream table lookup  | 36           |
|           |            | 3.3.2   | StreamIDs to Context Descriptors   | 38           |
|           |            | 3.3.3   | Configuration and Translation lookup   | 43           |
|           |            | 3.3.4   | Transaction attributes: incoming, two-stage translation and overrides            | 45           |
|           |            | 3.3.5   | Translation table descriptors  | 46           |
|           | 3.4        | Add     | ress sizes   | 47           |
|           |            | 3.4.1   | Input address size and Virtual Address size                                      | 49           |
|           |            | 3.4.2   | Address alignment checks   | 50           |
|           |            | 3.4.3   | Address sizes of SMMU-originated accesses  | 50           |
|           | 3.5        | Con     | nmand and Event queues   | 53           |
|           |            | 3.5.1   | SMMU circular queues   | 53           |
|           |            | 3.5.2   | Queue entry visibility semantics   | 56           |
|           |            | 3.5.3   | Event queue behavior   | 56           |
|           |            | 3.5.4   | Definition of event record write "Commit"  | 57           |
|           |            | 3.5.5   | Event merging  | 57           |
|           |            | 3.5.6   | Enhanced Command gueue interfaces  | 58           |
|           | 3.6        | Stru    | cture and queue ownership  | 61           |
|           | 3.7        |         | gramming registers   | 62           |
|           | 3.8        | ,       | ialization   | 63           |
|           | 3.9        |         | port for PCI Express, PASIDs, PRI and ATS  | 64           |
|           |            | 3.9.1   | ATS Interface  | 64           |
|           |            | 3.9.2   | Changing ATS configuration   |              |

|      | 3.9.3            | SMMU interactions with CXL  | 72  |
|------|------------------|---|-----|
| 3.10 | Suppo            | ort for Secure state  | 73  |
|      | 3.10.1           | StreamID Security state (SEC_SID)   | 74  |
|      | 3.10.2           | Secure commands, events and configuration   | 74  |
|      | 3.10.3           | Secure EL2 and support for Secure stage 2 translation   | 76  |
| 3.11 |                  | Enable and initialization   | 78  |
| 3.12 |                  | models, recording and reporting   | 81  |
| •    | 3.12.1           | Terminate model   | 83  |
|      | 3.12.2           | Stall model   | 84  |
|      | 3.12.3           | Considerations for client devices using the Stall fault model   | 87  |
|      | 3.12.4           | Virtual Memory paging with SMMU   | 87  |
|      | 3.12.5           | Combinations of fault configuration with two stages   | 88  |
| 3.13 |                  | ation table entries and Access/Dirty flags  | 90  |
| 0.10 | 3.13.1           | Software update of flags  | 90  |
|      | 3.13.2           | Access flag hardware update   | 91  |
|      | 3.13.3           | Dirty flag hardware update  | 92  |
|      | 3.13.4           | HTTU behavior summary   | 93  |
|      | 3.13.5           | HTTU with two stages of translation   | 93  |
|      | 3.13.6           | ATS, PRI and translation table flag update  | 94  |
|      | 3.13.7           | Hardware flag update for Cache Maintenance Operations and Destruc-  | 34  |
|      | 3.13.7           | tive Reads  | 96  |
| 3.14 | Snooi            | Ilative accesses  | 97  |
| 3.15 | •                | rency considerations and memory access types  | 98  |
| 3.13 | 3.15.1           | Client devices  | 98  |
| 3.16 | 0                | dded implementations  | 100 |
| 3.10 | 3.16.1           | •   | 100 |
| 3.17 |                  | Changes to structure and queue storage behavior when fixed/preset agging, VMIDs, ASIDs and participation in broadcast TLB maintenance . | 100 |
| 3.17 | 3.17.1           | • • •   | 102 |
|      |                  | The Global flag in the translation table descriptor   |     |
|      | 3.17.2           | Broadcast TLB maintenance from Armv8-A PEs with EL3 in AArch64.   | 105 |
|      | 3.17.3           | Broadcast TLB maintenance from ARMv7-A PEs or Armv8-A PEs with  | 100 |
|      | 0.17.4           | EL3 using AArch32   | 106 |
|      | 3.17.4           | Broadcast TLB maintenance in mixed AArch32 and AArch64 systems  | 107 |
|      | 0 17 5           | and with mixed ASID or VMID sizes   |     |
|      | 3.17.5           | EL2 ASIDs and TLB maintenance in EL2 Host (E2H) mode  |     |
|      | 3.17.6<br>3.17.7 | VMID Wildcards  |     |
| 0.40 |                  | Broadcast TLB maintenance for GPT information   |     |
| 3.18 |                  | upts and notifications  | 111 |
|      |                  | MSI synchronization   |     |
| 0.40 | 3.18.2           | Interrupt sources   | 111 |
| 3.19 |                  | control   | 113 |
| 0.00 | 3.19.1           | Dormant state   | 113 |
| 3.20 |                  | nd configuration cache conflict   | 114 |
|      | 3.20.1           | TLB conflict  | 114 |
| 0.04 | 3.20.2           | Configuration cache conflicts   | 114 |
| 3.21 |                  | ure access rules and update procedures  | 116 |
|      | 3.21.1           | Translation tables and TLB invalidation completion behavior   | 116 |
|      | 3.21.2           | Queues  | 119 |
| 0.00 | 3.21.3           | Configuration structures and configuration invalidation completion  | 120 |
| 3.22 |                  | uctive reads and directed cache prefetch transactions   | 124 |
|      | 3.22.1           | Control of transaction downgrade  | 125 |
|      | 3.22.2           | Permissions model   | 126 |
|      | 3.22.3           | Memory types and Shareability   | 127 |
| 3.23 |                  | ory Tagging Extension   | 128 |
| 3.24 |                  | lle Protection Checks   |     |
|      | 3.24.1           | Client-originated accesses  | 129 |

|           |     | 3.24.2 | Interactions with PCIe ATS                                       | 130 |
|-----------|-----|--------|--|-----|
|           |     | 3.24.3 | SMMU-originated accesses   | 130 |
|           |     | 3.24.4 | Reporting of GPC faults  |     |
|           |     | 3.24.5 | SMMU behavior if a GPC fault is active                           | 131 |
|           |     | 3.24.6 | Observability of GPC faults                                      | 132 |
| Chapter 4 | Com | nmands |  |     |
| onapier + | 4.1 |        | mands overview   | 134 |
|           |     | 4.1.1  | Command opcodes  |     |
|           |     | 4.1.2  | Submitting commands to the Command queue                         |     |
|           |     | 4.1.3  | Command errors   |     |
|           |     | 4.1.4  | Consumption of commands from the Command queue                   |     |
|           |     | 4.1.5  | Reserved fields  |     |
|           |     | 4.1.6  | Common command fields  |     |
|           |     | 4.1.7  | Out-of-range parameters  |     |
|           | 4.2 |        | etch   |     |
|           |     | 4.2.1  | CMD PREFETCH CONFIG(StreamID, SSec, SubstreamID, SSV)            |     |
|           |     | 4.2.2  | CMD PREFETCH ADDR(StreamID, SSec, SubstreamID, SSV, Addr,        | .00 |
|           |     | 7.2.2  | NS, Size, Stride)  | 140 |
|           | 4.3 | Conf   | iguration structure invalidation                                 |     |
|           | 4.0 | 4.3.1  | CMD_CFGI_STE(StreamID, SSec, Leaf)                               |     |
|           |     | 4.3.2  | CMD_CFGI_STE_RANGE(StreamID, SSec, Range)                        |     |
|           |     | 4.3.3  | CMD_CFGI_CD(StreamID, SSec, SubstreamID, Leaf)                   |     |
|           |     | 4.3.4  | CMD_CFGI_CD_ALL(StreamID, SSec)                                  |     |
|           |     | 4.3.5  | CMD_CFGI_VMS_PIDM(SSec, VMID)                                    |     |
|           |     | 4.3.6  | CMD_CFGI_ALL(SSec)   |     |
|           |     | 4.3.7  | Action of VM guest OS structure invalidations by hypervisor      |     |
|           |     | 4.3.8  | Configuration structure invalidation semantics/rules             |     |
|           | 4.4 |        | invalidation   |     |
|           | 7.7 | 4.4.1  | Common TLB invalidation fields                                   |     |
|           |     | 4.4.2  | TLB invalidation of stage 1                                      |     |
|           |     | 4.4.3  | TLB invalidation of stage 2                                      |     |
|           |     | 4.4.4  | Common TLB invalidation  |     |
|           | 4.5 |        | and PRI  |     |
|           | 4.5 | 4.5.1  | CMD ATC INV(StreamID, SubstreamID, SSV, Global, Address, Size) . |     |
|           |     | 4.5.2  | CMD PRI RESP(StreamID, SubstreamID, SSV, PRGIndex, Resp)         |     |
|           | 4.6 |        | response and synchronization commands                            |     |
|           | 4.0 | 4.6.1  | CMD RESUME(StreamID, SSec, STAG, Action, Abort)                  |     |
|           |     | 4.6.2  | CMD_STALL_TERM(StreamID, SSec)                                   |     |
|           |     | 4.6.3  |  | 170 |
|           | 4.7 |        | mand Consumption summary   |     |
|           |     |        | · · · · · · · · · · · · · · · · · · ·                            | 170 |
| Chapter 5 |     |        | ure formats  |     |
|           | 5.1 |        | 1 1 Stream Table Descriptor                                      |     |
|           | 5.2 |        | am Table Entry   |     |
|           |     | 5.2.1  | General properties of the STE                                    |     |
|           |     | 5.2.2  | Validity of STE  |     |
|           | 5.3 |        | I 1 Context Descriptor   |     |
|           |     | 5.3.1  | General properties of the L1CD                                   |     |
|           | 5.4 |        | ext Descriptor   |     |
|           |     | 5.4.1  | CD notes   |     |
|           | _   | 5.4.2  | Validity of CD   |     |
|           | 5.5 |        | configuration (A, R, S bits)                                     |     |
|           | 5.6 |        | al Machine Structure (VMS)                                       |     |
|           |     | 5.6.1  | VMS layout   | 234 |

|           |     | 5.6.2    | VMS presence and fetching                 |
|-----------|-----|----------|---|
|           |     | 5.6.3    | VMS caching and invalidation              |
| Chapter 6 | Mer | nory mai | p and registers                           |
| •         | 6.1 |          | ory map                                   |
|           | 6.2 | Regis    | ster overview                             |
|           |     | 6.2.1    | Registers in Page 0                       |
|           |     | 6.2.2    | Registers in Page 1                       |
|           |     | 6.2.3    | Registers in the VATOS page               |
|           |     | 6.2.4    | Registers in the S_VATOS page             |
|           |     | 6.2.5    | Registers in a Command queue control page |
|           |     | 6.2.6    | Root Control Page                         |
|           | 6.3 |          | ster formats                              |
|           | 0.0 | 6.3.1    | SMMU_IDR0                                 |
|           |     | 6.3.2    | SMMU_IDR1                                 |
|           |     | 6.3.3    | SMMU IDR2                                 |
|           |     | 6.3.4    | SMMU IDR3                                 |
|           |     | 6.3.5    | SMMU IDR4                                 |
|           |     | 6.3.6    | SMMU IDR5                                 |
|           |     | 6.3.7    | <del>-</del>                              |
|           |     |          | SMMU_IIDR                                 |
|           |     | 6.3.8    | SMMU_AIDR                                 |
|           |     | 6.3.9    | SMMU_CR0                                  |
|           |     | 6.3.10   | SMMU_CR0ACK                               |
|           |     | 6.3.11   | SMMU_CR1                                  |
|           |     | 6.3.12   | SMMU_CR2                                  |
|           |     | 6.3.13   | SMMU_STATUSR                              |
|           |     | 6.3.14   | SMMU_GBPA                                 |
|           |     | 6.3.15   | SMMU_AGBPA                                |
|           |     | 6.3.16   | SMMU_IRQ_CTRL                             |
|           |     | 6.3.17   | SMMU_IRQ_CTRLACK                          |
|           |     | 6.3.18   | SMMU_GERROR                               |
|           |     | 6.3.19   | SMMU_GERRORN                              |
|           |     | 6.3.20   | SMMU_GERROR_IRQ_CFG0                      |
|           |     | 6.3.21   | SMMU_GERROR_IRQ_CFG1                      |
|           |     | 6.3.22   | SMMU_GERROR_IRQ_CFG2                      |
|           |     | 6.3.23   | SMMU_STRTAB_BASE 31                       |
|           |     | 6.3.24   | SMMU_STRTAB_BASE_CFG                      |
|           |     | 6.3.25   | SMMU_CMDQ_BASE                            |
|           |     | 6.3.26   | SMMU_CMDQ_PROD                            |
|           |     | 6.3.27   | SMMU_CMDQ_CONS                            |
|           |     | 6.3.28   | SMMU_EVENTQ_BASE 329                      |
|           |     | 6.3.29   | SMMU_EVENTQ_IRQ_CFG0                      |
|           |     | 6.3.30   | SMMU_EVENTQ_IRQ_CFG1                      |
|           |     | 6.3.31   | SMMU_EVENTQ_IRQ_CFG2                      |
|           |     | 6.3.32   | SMMU_PRIQ_BASE                            |
|           |     | 6.3.33   | SMMU_PRIQ_IRQ_CFG0                        |
|           |     | 6.3.34   | SMMU_PRIQ_IRQ_CFG1                        |
|           |     | 6.3.35   | SMMU_PRIQ_IRQ_CFG2                        |
|           |     | 6.3.36   | SMMU_GATOS_CTRL                           |
|           |     | 6.3.37   | SMMU GATOS SID                            |
|           |     | 6.3.38   | SMMU_GATOS_ADDR                           |
|           |     | 6.3.39   | SMMU GATOS PAR                            |
|           |     | 6.3.40   | SMMU MPAMIDR                              |
|           |     | 6.3.41   | SMMU GMPAM                                |
|           |     | 6.3.42   | SMMU GRPMPAM 360                          |

| 6.3.43 | SMMU_VATOS_SEL  |     |
|--------|---|-----|
| 6.3.44 | SMMU_IDR6   | 364 |
| 6.3.45 | SMMU CMDQ CONTROL PAGE BASE <n>, n = 0 - 255</n>                        | 366 |
| 6.3.46 | SMMU_CMDQ_CONTROL_PAGE_CFG <n>, n = 0 - 255</n>                         | 368 |
| 6.3.47 | SMMU_CMDQ_CONTROL_PAGE_STATUS <n>, n = 0 - 255</n>                      |     |
| 6.3.48 | SMMU_S_IDR0   |     |
| 6.3.49 | SMMU S IDR1   |     |
| 6.3.50 | SMMU S IDR2   |     |
| 6.3.51 | SMMU_S_IDR3   |     |
| 6.3.52 | SMMU S IDR4   |     |
| 6.3.53 | SMMU S CR0  |     |
| 6.3.54 | SMMU S CROACK   |     |
| 6.3.55 | SMMU S CR1  |     |
| 6.3.56 | SMMU S CR2  |     |
| 6.3.57 | SMMU S INIT   |     |
| 6.3.58 | SMMU S GBPA   |     |
| 6.3.59 | SMMU S AGBPA  |     |
| 6.3.60 | SMMU_S_IRQ_CTRL   |     |
| 6.3.61 | SMMU S IRQ CTRLACK  |     |
| 6.3.62 | SMMU_S_GERROR   |     |
|        |   |     |
| 6.3.63 | SMMU_S_GERRORN  |     |
| 6.3.64 | SMMU_S_GERROR_IRQ_CFG0  |     |
| 6.3.65 | SMMU_S_GERROR_IRQ_CFG1  |     |
| 6.3.66 | SMMU_S_GERROR_IRQ_CFG2  |     |
| 6.3.67 | SMMU_S_STRTAB_BASE  |     |
| 6.3.68 | SMMU_S_STRTAB_BASE_CFG  |     |
| 6.3.69 | SMMU_S_CMDQ_BASE  |     |
| 6.3.70 | SMMU_S_CMDQ_PROD  |     |
| 6.3.71 | SMMU_S_CMDQ_CONS  |     |
| 6.3.72 | SMMU_S_EVENTQ_BASE  |     |
| 6.3.73 | SMMU_S_EVENTQ_PROD  |     |
| 6.3.74 | SMMU_S_EVENTQ_CONS  |     |
| 6.3.75 | SMMU_S_EVENTQ_IRQ_CFG0  |     |
| 6.3.76 | SMMU_S_EVENTQ_IRQ_CFG1  |     |
| 6.3.77 | SMMU_S_EVENTQ_IRQ_CFG2  |     |
| 6.3.78 | SMMU_S_GATOS_CTRL   |     |
| 6.3.79 | SMMU_S_GATOS_SID  |     |
| 6.3.80 | SMMU_S_GATOS_ADDR   |     |
| 6.3.81 | SMMU_S_GATOS_PAR  |     |
| 6.3.82 | SMMU_S_MPAMIDR  |     |
| 6.3.83 | SMMU_S_GMPAM  |     |
| 6.3.84 | SMMU_S_GBPMPAM  |     |
| 6.3.85 | SMMU_S_VATOS_SEL  |     |
| 6.3.86 | SMMU_S_IDR6   |     |
| 6.3.87 | $SMMU\_S\_CMDQ\_CONTROL\_PAGE\_BASE < n>,  n = 0 - 255 \ \dots \ \dots$ |     |
| 6.3.88 | SMMU_S_CMDQ_CONTROL_PAGE_CFG $<$ n $>$ , n = 0 - 255                    |     |
| 6.3.89 | SMMU_S_CMDQ_CONTROL_PAGE_STATUS $<$ n $>$ , n = 0 - 255                 |     |
| 6.3.90 | SMMU_EVENTQ_PROD  |     |
| 6.3.91 | SMMU_EVENTQ_CONS  |     |
| 6.3.92 | SMMU_PRIQ_PROD  |     |
| 6.3.93 | SMMU_PRIQ_CONS  |     |
| 6.3.94 | SMMU_VATOS_CTRL   |     |
| 6.3.95 | SMMU_VATOS_SID  | 475 |
| 6.3.96 | SMMU_VATOS_ADDR   | 477 |
| 6.3.97 | SMMU VATOS PAR  | 480 |

|           |      | 6.3.98    | SMMU_S_VATOS_CTRL  |    |
|-----------|------|-----------|--|----|
|           |      | 6.3.99    | SMMU_S_VATOS_SID   | 86 |
|           |      | 6.3.100   | SMMU_S_VATOS_ADDR4   | 88 |
|           |      | 6.3.101   | SMMU_S_VATOS_PAR   | 91 |
|           |      | 6.3.102   | SMMU_ECMDQ_BASE <n>, n = 0 - 255</n>   |    |
|           |      | 6.3.103   | SMMU_ECMDQ_PROD <n>, n = 0 - 255</n>   | 98 |
|           |      | 6.3.104   | SMMU_ECMDQ_CONS <n>, n = 0 - 255</n>   | 00 |
|           |      | 6.3.105   | SMMU_ROOT_IDR0   | 02 |
|           |      | 6.3.106   | SMMU_ROOT_IIDR   | 04 |
|           |      | 6.3.107   | SMMU_ROOT_CR0  | 05 |
|           |      | 6.3.108   | SMMU ROOT CROACK   | 80 |
|           |      | 6.3.109   | SMMU ROOT GPT BASE   |    |
|           |      | 6.3.110   | SMMU_ROOT_GPT_BASE_CFG   |    |
|           |      | 6.3.111   | SMMU_ROOT_GPF_FAR  |    |
|           |      | 6.3.112   | SMMU ROOT GPT CFG FAR  |    |
|           |      | 6.3.113   | SMMU_ROOT_TLBI   |    |
|           |      | 6.3.114   | SMMU ROOT TLBI CTRL  |    |
|           |      | 6.3.115   | ID REGS  |    |
|           |      | 0.5.115   | ID_ILEGO   | 20 |
| Chapter 7 | Faul | ts. error | s and Event queue  |    |
| onaptor i | 7.1  | Comr      | nand queue errors  | 20 |
|           | 7.2  |           | queue recorded faults and events   |    |
|           | 1.2  | 7.2.1     | Recording of events and conditions for writing to the Event queue 5  |    |
|           |      | 7.2.1     | Event queue access external abort  |    |
|           |      | 7.2.3     | Secure and Non-secure Event queues   |    |
|           | 7.3  | _         | records  |    |
|           | 7.3  | 7.3.1     | Event record merging   |    |
|           |      |           |  |    |
|           |      | 7.3.2     | F_UUT  |    |
|           |      | 7.3.3     | C_BAD_STREAMID   |    |
|           |      | 7.3.4     | F_STE_FETCH  |    |
|           |      | 7.3.5     | C_BAD_STE  |    |
|           |      | 7.3.6     | F_BAD_ATS_TREQ   |    |
|           |      | 7.3.7     | F_STREAM_DISABLED  |    |
|           |      | 7.3.8     | F_TRANSL_FORBIDDEN   |    |
|           |      | 7.3.9     | C_BAD_SUBSTREAMID  |    |
|           |      | 7.3.10    | F_CD_FETCH   |    |
|           |      | 7.3.11    | C_BAD_CD   |    |
|           |      | 7.3.12    | F_WALK_EABT  | 44 |
|           |      | 7.3.13    | F_TRANSLATION  | 46 |
|           |      | 7.3.14    | F_ADDR_SIZE  | 47 |
|           |      | 7.3.15    | F_ACCESS   | 48 |
|           |      | 7.3.16    | F_PERMISSION   | 49 |
|           |      | 7.3.17    | F_TLB_CONFLICT   | 50 |
|           |      | 7.3.18    | F_CFG_CONFLICT   | 51 |
|           |      | 7.3.19    | E_PAGE_REQUEST   | 52 |
|           |      | 7.3.20    | F VMS FETCH  |    |
|           |      | 7.3.21    | IMPDEF EVENTn  |    |
|           |      | 7.3.22    | Event queue record priorities  |    |
|           | 7.4  |           | queue overflow   |    |
|           | 7.5  |           | al error recording   |    |
|           | 7.0  | 7.5.1     | GERROR interrupt notification  |    |
|           |      | 7.0.1     | GENERAL TRANSPORTER TO A TOTAL CONTRACTOR OF THE STATE OF | 50 |
| Chapter 8 | Page | e reaues  | t queue  |    |
| I         | 8.1  |           | ueue overflow  | 62 |
|           | 2    | 8.1.1     | Recovery procedure   |    |
|           |      | J         |  | -  |

|            | 8.2<br>8.3   |                | ellaneous  |     |
|------------|--------------|----------------|--|-----|
| Chapter 9  |              |                | anslation Operations                                       |     |
|            | 9.1          | _              | ster usage   |     |
|            |              | 9.1.1          | ATOS_CTRL  |     |
|            |              | 9.1.2          | ATOS_SID   |     |
|            |              | 9.1.3          | ATOS_ADDR  |     |
|            |              | 9.1.4          | ATOS_PAR   |     |
|            |              | 9.1.5<br>9.1.6 | ATOS_PAR.FAULTCODE encodings                               |     |
| Chapter 10 | Perf         | ormanc         | e Monitors Extension                                       |     |
| onaptor 10 | 10.1         |                | port and discovery   | 578 |
|            | 10.2         |                | view of counters and groups                                |     |
|            |              | 10.2.1         | Overflow, interrupts and capture                           |     |
|            | 10.3         | Moni           | tor events   |     |
|            | 10.4         | Strea          | amIDs and filtering  |     |
|            |              | 10.4.1         | Counter Group StreamID size                                |     |
|            |              | 10.4.2         | Couting of NoStreamID accesses                             | 586 |
|            |              | 10.4.3         | PARTID- and PMG-based filtering                            | 587 |
|            | 10.5         | Regi           | sters  | 589 |
|            |              | 10.5.1         | SMMU_PMCGn address map                                     | 589 |
|            |              | 10.5.2         | Register details   | 591 |
|            | 10.6         | Supp           | port for Secure state                                      | 639 |
| Chapter 11 | Deb          | ug/Trac        | e  |     |
| Chapter 12 | Relia        | ability, A     | Availability and Serviceability (RAS)                      |     |
| •          | 12.1         | Error          | propagation, consumption and containment in the SMMU       | 643 |
|            | 12.2         | Error          | consumption visible through the SMMU programming interface | 644 |
|            | 12.3         | Serv           | ,  | 645 |
|            | 12.4         |                |  |     |
|            | 12.5         |                |  | 647 |
|            | 12.6         | Reco           | , ,  | 648 |
|            |              | 12.6.1         |  |     |
|            |              | 12.6.2         | Common SMMU microarchitectural events                      | 650 |
| Chapter 13 |              |                | ansformation   |     |
|            | 13.1         |                | MU handling of attributes                                  |     |
|            |              | 13.1.1         | Attribute definitions                                      |     |
|            |              | 13.1.2         | Attribute support  |     |
|            |              | 13.1.3         | Default input attributes                                   |     |
|            |              | 13.1.4         |  |     |
|            |              | 13.1.5         |  |     |
|            |              | 13.1.6         | Stage 2 control of memory types and cacheability           |     |
|            | 40.0         | 13.1.7         | Ensuring consistent output attributes                      |     |
|            | 13.2         |                | <b>5</b> ,1  |     |
|            | 13.3         |                | , ,,   |     |
|            | 13.4         |                |  | 663 |
|            |              | 13.4.1         | Stage 1 page permissions                                   |     |
|            |              | 13.4.2         | · ·  |     |
|            |              | 13.4.3         | •  | 665 |
|            | 10 5         | 13.4.4         |  | 665 |
|            | 13.5<br>13.6 |                | mary of attribute/permission configuration fields          |     |

#### Contents Contents

|            | 13.6.1 PCIe memory type attributes  13.6.2 ATS attribute overview  13.6.3 Split-stage (STE.EATS == 0b10) ATS behavior and respon 13.6.4 Full ATS skipping stage 1  13.6.5 Split-stage ATS skipping stage 1  13.7 PCIe permission attribute interpretation  13.7.1 Permission attributes granted in ATS Translation Completio Attributes for SMMU-originated accesses | 672<br>ses 672<br>673<br>674<br>676<br>ns 678 |
|------------|--|---|
| Chapter 14 | External interfaces  |   |
|            | 14.1 Data path ingress/egress ports  | 681   |
|            | 14.2 ATS Interface, packets, protocol  | 683   |
|            | 14.3 SMMU-originated transactions  | 684   |
| Chapter 15 | Translation procedure  |   |
| •          | 15.1 Translation procedure charts  | 687   |
|            | 15.2 Notes on translation procedure charts   | 693   |
| Chapter 16 | System and Implementation Considerations   |   |
| •          | 16.1 Stages  | 694   |
|            | 16.2 Caching   | 695   |
|            | 16.2.1 Caching combined structures   | 696   |
|            | 16.2.2 Data dependencies between structures  | 696   |
|            | 16.3 Programming implications of bus address sizing  |   |
|            | 16.4 System integration  |   |
|            | 16.5 System software   |   |
|            | 16.6 Implementation-defined features   |   |
|            | 16.6.1 Configuration and translation cache locking   |   |
|            | 16.7 Interconnect-specific features  |   |
|            | 16.7.1 Reporting of Unsupported Client Transactions  |   |
|            | 16.7.2 Non-data transfer transactions  |   |
|            | 16.7.3 Treatment of AMBA Exclusives from client devices  |   |
|            | 16.7.4 Treatment of downstream aborts  |   |
|            | 16.7.5 SMMU and AMBA attribute differences   |   |
|            | 16.7.6 Far Atomic operations   |   |
|            | 10.7.7 AIMBA DVIM Messages With respect to CD.ASET == 1 TEB  | entries 706                                   |
| Chapter 17 | Memory System Resource Partitioning and Monitoring   |   |
|            | 17.1 Discovery and global configuration  |   |
|            | 17.2 Assignment of PARTID and PMG for client transactions  |   |
|            | 17.3 PCIe ATS transactions   |   |
|            | 17.4 Assignment of PARTID and PMG for SMMU-originated transaction  |   |
|            | 17.5 Assignment of PARTID and PMG for PMCG-originated MSIs   |   |
|            | 17.6 SMMU support for partitioning and monitoring of internal resource 17.7 Determination of PARTID space values   |   |
|            | 17.7 Determination of Farmin Space values  | / 16  |

# Chapter 1

# **About this document**

## 1.1 References

This document refers to the following documents:

- [1] PCI Express® Base Specification Revision 6.0. PCI-SIG.
- [2] Arm® Architecture Reference Manual for A-profile architecture. (ARM DDI 0487) Arm Ltd.
- [3] Arm® Architecture Reference Manual Supplement, Memory System Resource Partitioning and Monitoring (MPAM), for A-profile architecture. (ARM DDI 0598) Arm Ltd.
- [4] Arm® System Memory Management Unit, SMMU architecture version 2.0. (ARM IHI 0062) Arm Ltd.
- [5]  $Arm^{\otimes}$  Architecture Reference Manual Supplement, The Realm Management Extension (RME), for Armv9-A. (ARM DDI 0615) Arm Ltd.
- [6] Compute Express Link Specification. (Revision 1.1) CXL Contractual SIG.
- [7] Arm® Generic Interrupt Controller, GIC architecture version 3.0 and version 4.0. (ARM IHI 0069) Arm Ltd.
- [8] AMBA  $^{\circledR}$  AXI and ACE Protocol Specification. (ARM IHI 0022) Arm Ltd.
- [9] Arm® CoreSight TM Architecture Specification 3.0. (ARM IHI 0029) Arm Ltd.
- [10] Arm® Reliability, Availability, and Serviceability (RAS) Specification. (ARM DDI 0587) Arm Ltd.
- [11] Arm® Server Base System Architecture. (ARM DEN 0029) Arm Ltd.

#### 1.2 Terms and abbreviations

This document uses the following terms and abbreviations.

#### **ASID**

Address Space ID, distinguishing TLB entries for separate address spaces. For example, address spaces of PE processes are distinguished by ASID.

#### **ATOS**

SMMU facility providing VA-to-IPA/PA translations using system-accessible registers. In addition, VATOS provides a second set of registers for direct use from a virtual machine, with the added constraint that only VA-to-IPA translations can be returned.

#### **ATS**

PCI Express [1] term for Address Translation Services provided for remote endpoint TLBs

#### **ATS Translated transaction**

A memory transaction input to the SMMU, in which the supplied address has been translated. In PCIe this is indicated with the AT TLP field value 0b10. For more information see 3.9 Support for PCI Express, PASIDs, PRI and ATS.

#### **Bypass**

A configuration that passes through a stage of translation without any addresses transformation is using bypass. If an SMMU does not implement a translation stage, that stage is considered equivalent to a bypass configuration.

#### CD

Context Descriptor.

#### **Client device**

A device whose incoming traffic to the system is controlled by an SMMU.

#### Completer

An agent in a computing system that responds to and completes a memory transaction that was initiated by a Requester.

#### **CONSTRAINED UNPREDICTABLE**

Where an instruction can result in UNPREDICTABLE behavior, the architecture specifies a narrow range of permitted behaviors. This range is the range of CONSTRAINED UNPREDICTABLE behavior. All implementations that are compliant with the architecture must follow the CONSTRAINED UNPREDICTABLE behavior. In body text, the term CONSTRAINED UNPREDICTABLE is shown in SMALL CAPITALS.

#### DVM

Distributed Virtual Memory, a protocol for interconnect messages to provide broadcast TLB maintenance operations (among other things).

#### E2H

EL2 Host Mode. The Virtualization Host Extensions in Armv8.1 [2] extend the EL2 translation regime providing ASID-tagged translations. In this document, EL2-E2H mode is the abbreviation that is used.

#### **Endpoint (EP)**

A PCI Express [1] function, used in the context of a device that is a client of the SMMU.

#### **GPC**

Granule Protection Check

#### **GPC** fault

A Granule Protection Check fault, arising either because a Granule Protection Table lookup could not be completed, or because the lookup was successful and the access being checked failed the check.

#### **GPF**

Granule Protection Fault. The fault reported when a Granule Protection Table lookup is successful, but the access being checked fails the Granule Protection Check.

#### **GPT**

Granule Protection Table. An in-memory structure that describes the association of a Location and a PA space.

#### **HTTU**

Hardware Translation Table Update. The act of updating the Access flag or dirty state of a page in a given descriptor which is automatically done in hardware, on an access or write to the corresponding page.

#### **IGNORED**

Indicates that the architecture guarantees that the bit or field is not interpreted or modified by hardware. In body text, the term IGNORED is shown in SMALL CAPITALS.

#### **ILLEGAL**

A set of conditions that make an STE or CD structure illegal. These conditions differ for the individual CDs and STEs, and are described in detail in the relevant CD and STE descriptions. A field in a structure can make the structure ILLEGAL, for example when it contains an incorrect value, only if the field was not IGNORED for other reasons. Attempts to use an ILLEGAL structure generate an error that is specific to the type of structure.

#### **IMPLEMENTATION DEFINED**

Means that the behavior is not architecturally defined, but must be defined and documented by individual implementations. For more information, see [2]. In body text, the term IMPLEMENTATION DEFINED is shown in SMALL CAPITALS.

#### Implementation specific

Behavior that is not defined by the SMMU architecture, and might not be documented by individual implementations. Used where one of a number of implementation options might be chosen and the option chosen does not affect software compatibility. Software cannot rely on any implementation specific behavior.

#### **IPA**

Intermediate Physical Address

#### L1CD

Level-1 Context Descriptor. Used in a 2-level CD table.

#### L1STD

Level-1 Stream Table Descriptor. Used in a 2-level Stream table.

#### **LPAE**

Large Physical Address Extension. The ARMv7 'Long' translation table format, supporting 40-bit output addresses (and 40-bit IPAs) and having 64-bit descriptors - identical to the Armv8 AArch32 translation table format.

#### **MPAM**

Memory System Resource Partitioning And Monitoring, part of the Armv8.4-A architecture [3].

### **Nested**

A configuration that enables both stage 1 and stage 2 translation.

#### NoStreamID device

An SMMU client device that is not associated with a StreamID.

#### PA

Physical Address

#### PARTID, PMG

MPAM partition and performance monitoring group identifiers.

#### **PASID**

PCI Express [1] term, a Process Address Space ID. Note: a PASID is an endpoint-local ID so there might be many distinct uses of a specific PASID value in a system. Despite the similarity in name, a PCIe PASID is not the same as a PE ASID, which is intended to be unique within the scope of an Operating System.

#### **PRI**

PCI Express term for Page Request Interface, an extension to ATS allowing an endpoint to request an OS to make a paged virtual memory mapping present for DMA.

#### **Processing Element (PE)**

The abstract machine defined in the Arm architecture, as documented in an Arm Architecture Reference Manual [2]. A PE implementation compliant with the Arm architecture must conform with the behaviors described in the corresponding Arm Architecture Reference Manual.

#### RC

PCI Express Root Complex [1]

#### Requester

An agent in a computing system that is capable of initiating memory transactions.

#### RES0

A Reserved bit or field with Should-Be-Zero-or-Preserved (SBZP) behavior, or equivalent read-only or write-only behavior. Used for fields in register descriptions, and for fields in architecturally-defined data structures that are held in memory, for example in translation table descriptors. For a full description see [2].

#### RES<sub>1</sub>

A Reserved bit or field with Should-Be-One-or-Preserved (SBOP) behavior. Used for fields in register descriptions, and for fields in architecturally-defined data structures that are held in memory, for example in translation table descriptors. For a full description see [2].

#### Reserved

Unless otherwise specified, a Reserved field behaves as RESO. For an identification, or otherwise read-only register field, a Reserved encoding is never given by the SMMU. For a field that is provided to the SMMU, Reserved values must not be used and their behavior must not be relied upon.

#### SEC\_SID

StreamID Security state. The identifer used to associate the StreamID in transactions from a client device with a specific Security state, and therefore determining which SMMU programming interface is responsible for configuration for the stream. See section 3.10.1 StreamID Security state (SEC\_SID).

#### **SMMU**

System MMU. Unless otherwise specified, this term is used to mean SMMUv3. Any reference to prior versions of the SMMU specifications is explicitly suffixed with the architecture version number, for example SMMUv1.

#### Split-stage ATS

SMMU facility used with two-stage translation, providing a way to use ATS with stage 1 and use non-ATS translation for stage 2.

#### Stage 1, Stage 2

One of the two stages of translation whereby the output of one set of translation tables can be fed into a second set of translation tables. In sequence, stage 1 is the first table indexed, stage 2 is the second. Each stage can be independently enabled. Stage 1 translates a VA to an IPA. Stage 2 translates an IPA to a PA.

#### Stage N-only

A translation configuration for a stream of data in which one of two translation stages is configured to translate and the other is in bypass (whether by configuration or fixed by SMMU implementation).

#### STE

Stream Table Entry.

#### **Terminate**

To complete a transaction with a negative status/abort response; the exact details depend on an implementation's interconnect behavior. When a client transaction is said to have been *terminated* by the SMMU, it has been prevented from progressing into the system and an abort response has been issued to the client (if appropriate for the interconnect in use).

#### TR

Translation Request, used in the context of a PCIe ATS request to the SMMU, or another distributed implementation making translation requests to a central unit.

#### TT

Translation table, synonymous with Page Table, as used by Arm architecture.

#### **TTD**

Translation table descriptor, synonymous with Page Table Entry, as used by the Arm architecture

#### **TTW**

Translation Table Walk. This is the act of performing a translation by traversing the in-memory tables.

#### UNKNOWN

An UNKNOWN value does not contain valid data, and can vary from moment to moment and implementation to implementation. An UNKNOWN value must not return information that cannot be accessed at the current or a lower level of privilege of operating software using accesses that are not UNPREDICTABLE and do not return UNKNOWN values. An UNKNOWN value must not be documented or promoted as having a defined value or effect. In body text, the term UNKNOWN is shown in SMALL CAPITALS.

#### **UNPREDICTABLE**

Means the behavior cannot be relied upon. UNPREDICTABLE behavior must not perform any function that cannot be performed at the current or a lower level of privilege using instructions that are not UNPREDICTABLE. UNPREDICTABLE behavior must not be documented or promoted as having a defined effect. In body text, the term UNPREDICTABLE is shown in SMALL CAPITALS.

#### Untranslated transaction.

A memory transaction input to the SMMU, in which the supplied address has not been translated. In PCIe this is indicated with the AT TLP field value 0b00. For more information see 3.9 Support for PCI Express, PASIDs, PRI and ATS.

#### **VA**

Virtual Address

#### **VM**

Chapter 1. About this document 1.2. Terms and abbreviations

Virtual Machine. In this document, VM never means Virtual Memory except when used as part of an existing acronym.

**VMID** 

Virtual Machine ID, distinguishing TLB entries for addresses from separate virtual machines

**VMS** 

Virtual Machine Structure. Data structure containing per-VM information.

# 1.2.1 Progressive Terminology Commitment

Arm values inclusive communities. Arm recognizes that we and our industry have used terms that can be offensive. Arm strives to lead the industry and create change.

Previous issues of this document included terms that can be offensive. We have replaced these terms.

If you find offensive terms in this document, please contact terms@arm.com.

# 1.3 Document Scope

This document is the specification for a System Memory Management Unit version 3 following on from the previous SMMUv2 architecture [4].

This includes all the features from SMMUv3.0 to SMMUv3.3.

# Chapter 2

# Introduction

A System Memory Management Unit (SMMU) performs a task that is analogous to that of an MMU in a PE, translating addresses for DMA requests from system I/O devices before the requests are passed into the system interconnect. It is active for DMA only. Traffic in the other direction, from the system or PE to the device, is managed by other means – for example, the PE MMUs.

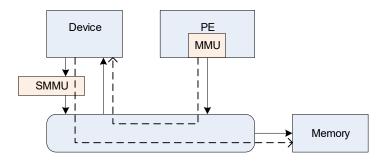


Figure 2.1: System MMU in DMA traffic

Translation of DMA addresses might be performed for reasons of isolation or convenience.

In order to associate device traffic with translations and to differentiate different devices behind an SMMU, requests have an extra property, alongside address, read/write, permissions, to identify a stream. Different streams are logically associated with different devices and the SMMU can perform different translations or checks for each stream. In systems with exactly one client device served by an SMMU the concept still stands, but might have only one stream.

A number of SMMUs might exist within a system. An SMMU might translate traffic from just one device or a set of devices.

The SMMU supports two stages of translation in a similar way to PEs supporting the Virtualization Extensions [2]. Each stage of translation can be independently enabled. An incoming address is logically translated from VA to IPA in stage 1, then the IPA is input to stage 2 which translates the IPA to the output PA. Stage 1 is intended to be used by a software entity to provide isolation or translation to buffers within the entity, for example DMA isolation within an OS. Stage 2 is intended to be available in systems supporting the Virtualization Extensions and is intended to virtualize device DMA to guest VM address spaces. When both stage 1 and stage 2 are enabled, the translation configuration is called *nested*.

# 2.1 History

- SMMUv1 supports a modest number of contexts/streams configured using registers, limiting scalability.
- SMMUv2 extends SMMUv1 with Armv8-A translation table formats, large addresses, with the same limited number of contexts and streams.

SMMUv1 and SMMUv2 map an incoming data stream onto one of many register-based context banks which indicate translation tables and translation configuration to use. The context bank might also indicate a second context bank for nested translation of a second stage (stage 1 and stage 2). The stream is identified using an externally-generated ID supplied with each transaction. A second ID might be supplied to determine the Security state of a stream or group of streams. The use of register-based configuration limits the number of context banks and support of thousands of concurrent contexts is not possible.

Because live data streams might potentially present transactions at any time, the available number of contexts limits the number of streams that might be concurrently enabled. For example, a system might have 1000 network interfaces that might all be idle but whose DMA might be triggered by incoming traffic at any time. The streams must be constantly available in order to function correctly. It is usually not possible to time-division multiplex a context between many devices requiring service.

The SMMU programming interface register SMMU\_AIDR indicates which SMMU architecture version the SMMU implements, as follows:

- If  $SMMU\_AIDR[7:0] == 0x00$ , the SMMU implements SMMUv3.0.
- If  $SMMU\_AIDR[7:0] == 0 \times 01$ , the SMMU implements SMMUv3.1.
- If  $SMMU\_AIDR[7:0] == 0x02$ , the SMMU implements SMMUv3.2.
- If SMMU\_AIDR[7:0] == 0x03, the SMMU implements SMMUv3.3.

Unless specified otherwise, all architecture behaviors apply equally to all minor revisions of SMMUv3.

#### 2.2 SMMUv3.0 features

SMMUv3 provides feature to complement PCI Express [1] Root Complexes and other potentially large I/O systems by supporting large numbers of concurrent translation contexts.

- Memory-based configuration structures to support large numbers of streams.
- Implementations might support only stage 1, only stage 2 or both stages of translation. This capability, and other implementation-specific options, can be discovered from the register interface.
- Up to 16-bit ASIDs.
- Up to 16-bit VMIDs [2].
- Address translation and protection according to Armv8.1 [2] Virtual Memory System Architecture. SMMU translation tables shareable with PEs, allowing software the choice of sharing an existing table or creating an SMMU-private table.
- 49-bit VA, matching Army8-A's 2×48-bit translation table input sizes.

Support for the following is optional in an implementation:

- Either stage 1 or stage 2.
- Stage 1 and 2 support for the AArch32 (LPAE) and AArch64 translation table format.
- Secure stream support.
- · Broadcast TLB invalidation.
- Hardware Translation Table Update (HTTU) of Access flag and dirty state of a page. An implementation might support update of the Access flag only, update of both the Access flag and the dirty state of the page, or no HTTU.
- PCIe ATS [1] and PRI, when used with compatible Root Complex.
- 16KB and 64KB page granules. However, the presence of 64KB page granules at both stage 1 and stage 2 is suggested to align with the PE requirements in the Server Base System Architecture.

Because the support of large numbers of streams using in-memory configuration causes the SMMUv3 programming interface to be significantly different to that of SMMUv2 [4], SMMUv3 is not designed to be backward-compatible with SMMUv2.

| SMMU feature name                | Description   | A-profile feature name |
|----------------------------------|---|------------------------|
| SMMUv3.0-ASID16                  | Support for 16-bit ASIDs, see SMMU_IDR0.ASID16.   |                        |
| SMMUv3.0-ATS                     | Support for PCIe ATS, see <a href="SMMU_IDR0.ATS">SMMU_IDR0.ATS</a> and [1].            |                        |
| SMMUv3.0-BTM                     | Support for broadcast of TLB maintenance, see SMMU_IDR0.BTM.                            |                        |
| SMMUv3.0-HAD                     | Support for disabling hierarchical attributes in translation tables, see SMMU_IDR3.HAD. | FEAT_HPDS              |
| SMMUv3.0-HTTUA<br>SMMUv3.0-HTTUD | Support for hardware translation table Access and dirty state, see SMMU_IDR0.HTTU.      | FEAT_HAFDBS            |
| SMMUv3.0-Hyp                     | Hypervisor stage 1 contexts supported, see SMMU_IDR0.HYP.                               | FEAT_VHE EL2           |
| SMMUv3.0-GRAN4K                  | Support for 4KB translation granule, see SMMU_IDR5.GRAN4K.                              |                        |
| SMMUv3.0-GRAN16K                 | Support for 16KB translation granule, see SMMU_IDR5.GRAN16K.                            |                        |
| SMMUv3.0-GRAN64K                 | Support for 16KB translation granule, see SMMU_IDR5.GRAN64K.                            |                        |

| SMMU feature name    | Description   | A-profile feature name |
|----------------------|---|------------------------|
| SMMUv3.0-PRI         | Support for PCIe Page Request Interface, see SMMU_IDR0.PRI and [1].   |                        |
| SMMUv3.0-S1P         | Support for Stage 1 translations, see SMMU_IDR0.S1P.  |                        |
| SMMUv3.0-S2P         | Support for Stage 2 translations, see SMMU_IDR0.S2P.  |                        |
| SMMUv3.0-SECURE_IMPL | Support for Secure and Non-secure streams, see SMMU_S_IDR1.SECURE_IMPL.   |                        |
| SMMUv3.0-TTFAA32     | Support for AArch32 format translation tables.  |                        |
| SMMUv3.0-TTFAA64     | Support for AArch64 format translation tables.  |                        |
| SMMUv3.0-VMID16      | Support for 16-bit VMID, see SMMU_IDR0.VMID16.  | FEAT_VMID16            |
| SMMUv3.0-ATOS        | Support for address translation operation registers, see SMMU_IDR0.ATOS.  |                        |
| SMMUv3.0-VATOS       | Support for stage 1-only address translation operation registers, see <a href="SMMU_IDR0.VATOS">SMMU_IDR0.VATOS</a> . |                        |

SMMUv3.0 also includes a Performance Monitor Counter Group extension, with the following optional features:

| SMMU PMCG feature name            | Description   |
|-----------------------------------|---|
| SMMU_PMCGv3.0-SID_FILTER_TYPE_ALL | Support for filtering of event counts on a global or per-event basis. See SMMU_PMCG_CFGR.SID_FILTER_TYPE.   |
| SMMU_PMCGv3.0-CAPTURE             | Support for software-initiated capture of counter values. See SMMU_PMCG_CFGR.CAPTURE.                       |
| SMMU_PMCGv3.0-MSI                 | Support for PMCG-originated MSIs. See SMMU_PMCG_CFGR.MSI.   |
| SMMU_PMCGv3.0-RELOC_CTRS          | Support for exposing PMCG event counts in independent page of address space. See SMMU_PMCG_CFGR.RELOC_CTRS. |
| SMMU_PMCGv3.0-SECURE_IMPL         | Support for counting events from more than one Security state. See SMMU_PMCG_SCR bit [31].                  |

## 2.3 SMMUv3.1 features

SMMUv3.1 extends the base SMMUv3.0 architecture with the following features:

- Support for PEs implementing Armv8.2-A:
  - Support for 52-bit VA, IPA and PA.
    - \* Note: An SMMUv3.1 implementation is not required to support 52-bit addressing, but the SMMUv3.1 architecture extends fields to allow an implementation the option of doing so.
  - Page-Based Hardware Attributes (PBHA).
  - EL0 vs EL1 execute never controls in stage 2 translation tables.
  - Note: Armv8.2 introduces a Common not Private (CnP) concept to the PE which does not apply to the SMMU architecture, because all SMMU translations are treated as common.
- Support for transactions that perform cache-stash or destructive read side-effects.
- Performance Monitor Counter Group (PMCG) error status.

| SMMU feature name | Description   | A-profile feature name |
|-------------------|---|------------------------|
| SMMUv3.1-XNX      | Provides support for translation table stage 2<br>Unprivileged Execute-never, see<br>SMMU_IDR3.XNX. | FEAT_XNX               |
| SMMUv3.1-TTPBHA   | Provides support for translation table page-based hardware attributes, see SMMU_IDR3.PBHA.          | FEAT_HPDS2             |
| SMMUv3.1-VAX      | Support for large Virtual Address space, see SMMU_IDR5.VAX.   | FEAT_LVA               |
| SMMUv3.1-LPA      | Support for large Physical Address space, see SMMU_IDR5.OAS.  | FEAT_LPA               |

## 2.4 SMMUv3.2 features

SMMUv3.2 extends the SMMUv3.1 architecture with the following features:

- Support for PEs implementing Armv8.4-A [2]:
  - Support for Memory System Resource Partitioning and Monitoring (MPAM) [3].
    - \* Note: Support for MPAM is optional in SMMUv3.2.
  - Secure EL2 and Secure stage 2 translation.
    - \* All previous rules about Secure streams being stage-1 only are removed.
  - Stage-2 control of memory types and Cacheability.
  - Small translation tables support.
  - Range-based TLB invalidation and Level Hint.
  - Translation table updates without break-before-make.
- Introduction of a Virtual Machine Structure for describing some per-VM configuration.

| SMMU feature name                | Description   | A-profile feature name   |
|----------------------------------|---|--------------------------|
| SMMUv3.2-BBML1<br>SMMUv3.2-BBML2 | Support for change in size of translation table mappings, see SMMU_IDR3.BBML.       | FEAT_BBM                 |
| SMMUv3.2-RIL                     | Support for range-based TLB invalidation and level hint, see SMMU_IDR3.RIL.         | FEAT_TTL, FEAT_TLBIRANGE |
| SMMUv3.2-SecEL2                  | Support for Secure EL2 and Secure stage 2 translations, see SMMU_S_IDR1.SEL2.       | FEAT_SEL2                |
| SMMUv3.2-STT                     | Support for small translation tables, see SMMU_IDR3.STT.                            | FEAT_TTST                |
| SMMUv3.2-MPAM                    | Support for Memory System Resource Partitioning and Monitoring, see SMMU_IDR3.MPAM. | FEAT_MPAM                |
| SMMUv3.2-S2FWB                   | Support for Stage 2 forced Write-Back, see SMMU_IDR3.FWB.                           | FEAT_S2FWB               |

SMMUv3.2 also introduces the following optional features to the PMCG extension:

| SMMU PMCG feature name | Description   |
|------------------------|---|
| SMMU_PMCGv3.2-MPAM     | Support for associating PMCG-originated MSIs with specific MPAM PARTID and PMG values. See SMMU_PMCG_CFGR.MPAM. |

## 2.5 SMMUv3.3 features

SMMUv3.3 extends the SMMUv3.2 architecture with the following features:

- Support for features of PEs implementing Armv8.5 [2]:
  - E0PD feature, equivalent to FEAT\_E0PD introduced in Armv8.5.
  - Protected Table Walk (PTW) behavior alignment with Armv8.
  - MPAM\_NS mechanism, for alignment with FORCE\_NS feature [3].
  - Requirements for interaction with the Memory Tagging Extension [2].
- Enhanced Command queue interface for reducing contention when submitting Commands to the SMMU.
  Support for recording non-Translation-related events for ATS Translation Requests.
- Guidelines for RAS error recording.

| SMMU feature name              | Description   | A-profile feature name |
|--------------------------------|---|------------------------|
| SMMUv3.3-E0PD Mandatory        | Support for preventing EL0 access to halves of address maps. See SMMU_IDR3.E0PD.                            | FEAT_E0PD              |
| SMMUv3.3-PTWNNC<br>Mandatory   | Support for treating table walks to Device memory as Normal Non- cacheable. See SMMU_IDR3.PTWNNC.           |                        |
| SMMUv3.3-MPAM_NS<br>Optional   | Support for Secure transactions using Non-secure PARTID space. See SMMU_S_MPAMIDR.HAS_MPAM_NS.              |                        |
| SMMUv3.3-ECMDQ<br>Optional     | Support for Enhanced Command queue interfaces. See SMMU_IDR1.ECMDQ.   |                        |
| SMMUv3.3-SEC_ECMDQ<br>Optional | Support for Enhanced Command queue interfaces for Secure state. See SMMU_S_IDR0.ECMDQ.                      |                        |
| SMMUv3.3-ATSRECERR<br>Optional | Support for recording events on configuration errors for ATS translation requests. See SMMU_IDR0.ATSRECERR. |                        |

SMMUv3.3 also introduces the following optional features to the PMCG extension:

| SMMU PMCG feature name    | Description  |
|---------------------------|--|
| SMMU_PMCGv3.3-FILTER_MPAM | Support for filtering event counts by MPAM attributes. See SMMU_PMCG_CFGR.FILTER_PARTID_PMG.                                   |
| SMMU_PMCGv3.3-MPAM_NS     | Support for issuing PMCG MSIs for Secure state, associated with a Non-secure MPAM PARTID. See SMMU_PMCG_S_MPAMIDR.HAS_MPAM_NS. |

#### 2.6 SMMU for RME features

SMMU for RME introduces support for Granule Protection Checks, for interoperability with PEs that implement FEAT\_RME [5].

There are two aspects to RME support for SMMU:

- Whether the SMMU has the Root programming interface and can perform Granule Protection Checks. This is advertised with SMMU\_ROOT\_IDR0.ROOT\_IMPL == 1.
- Whether the SMMU has RME-related changes exposed to the Secure and Non-secure programming interfaces. This is advertised with SMMU\_IDR0.RME\_IMPL == 1.

Any SMMU behaviors specified as applying to an 'SMMU with RME' apply to an SMMU implementation with SMMU\_ROOT\_IDR0.ROOT\_IMPL == 1.

An SMMU with RME must have SMMU\_ROOT\_IDR0.ROOT\_IMPL == 1. It is permitted for an SMMU with RME to have SMMU\_IDR0.RME\_IMPL == 0.

An SMMU with RME also implements SMMUv3.2 or later.

An SMMU with SMMU\_IDR0.RME\_IMPL == 1 does not support the EL3 StreamWorld. This means that:

- An STE with STRW configured for EL3 is ILLEGAL and results in C\_BAD\_STE.
- The commands CMD\_TLBI\_EL3\_ALL, CMD\_TLBI\_EL3\_VA result in CERROR\_ILL.
- The SMMU is not required to perform any invalidation on receipt of a broadcast TLBI for EL3.

Note: The value of SMMU\_IDR0.RME\_IMPL does not affect support for other features associated with Secure state

See also 3.24 Granule Protection Checks.

# 2.7 Permitted implementation of subsets of SMMUv3.x and SMMUv3.(x+1) architectural features

An SMMUv3.x compliant implementation can include any arbitrary subset of the architectural features of SMMUv3.(x+1), subject only to those constraints that require that certain features be implemented together.

An SMMUv3.x compliant implementation cannot include any features of SMMUv3.(x+2) or later. Arm strongly recommends that implementations use the latest version available at design time.

# 2.8 System placement

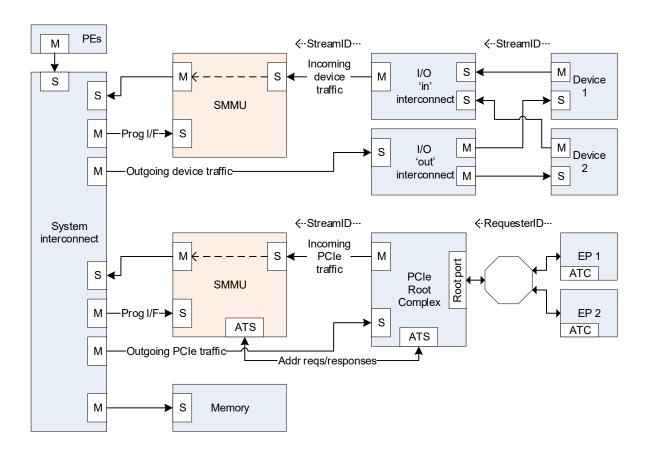


Figure 2.2: SMMU placement in an example system

Two example uses of an SMMU are shown in Figure 2.2. One SMMU interfaces incoming traffic from two client devices to the system interconnect. The devices can perform DMA using virtual, IPA or other bus address schemes and the SMMU translates these addresses to PAs. The second example SMMU interfaces one to one to a PCIe Root Complex (which itself hosts a network of endpoints). This illustrates an additional interface specified in this document, an ATS port to support PCIe ATS and PRI (or similar functionality for compatible non-PCIe devices).

Outgoing accesses to the system interconnect and Completer devices do not pass through an additional SMMU. In general, Requesters are behind an SMMU (or, in the case of PEs, have an inbuilt MMU), so outgoing accesses to the system interconnect and Completer devices are mediated by the MMU of the Requester. If a Requester has no MMU, it has full-system access. Therefore, its DMA must be mediated by software, and in this case only the most privileged system software can program it.

In this specification, a Requester associated with an SMMU is referred to as a *client device* of the SMMU.

The SMMU has a programming interface that receives accesses from system software for setup and maintenance. The SMMU also makes accesses of its own (as a Requester) to configuration structures, for example to perform translation table walks. Whether the traffic originating from the SMMU itself shares the same interconnect resources as traffic passed through from device clients is implementation specific.

Each SMMU is configured separately to any others that might exist in the system.

Note: Arm recommends that SMMUs bridge I/O device DMA addresses onto system or physical addresses. Arm recommends that SMMUs are placed between a device Requester port (or I/O interconnect) and system

interconnect. Generally, Arm recommends that SMMUs are not placed in series and that the path of an SMMU to memory or other Completer devices does not pass through another SMMU, whether for fetch of SMMU configuration data or client transactions.

Note: Interconnect-specific channels to support cache coherency are not shown in Figure 2.2.

The SMMU interface to the system interconnect is intended to be IO-coherent, thereby providing IO-coherent access for the client devices of the SMMU. The SMMU interface for traffic incoming from client devices does not require any coherency support. In addition, because there is no address translation in the outgoing direction, snoop traffic cannot be forwarded from the system towards the client devices so fully-coherent device caches cannot be placed behind an SMMU.

Note: It is feasible to implement an SMMU as part of a complex device containing fully-coherent caches in the same way that the MMU of a PE is paired to fully-coherent PE caches. Practically, this means the caches must be tagged with physical addresses.

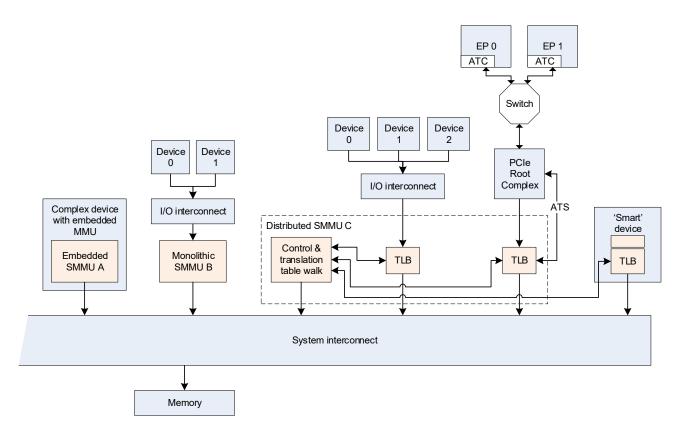


Figure 2.3: Example SMMU implementations

Figure 2.3 shows three example implementations of SMMU.

- SMMU A is implemented as part of a complex device, providing translation for accesses from that device only. Arm expects this implementation to have an SMMU programming interface in addition to device-specific control. This design can provide dedicated contention-free translation and TLBs.
- SMMU B is a monolithic block that combines translation, programming interface and translation table walk facilities. Two client devices use this SMMU as their path for DMA into the system.
- SMMU C is distributed and provides multiple paths into the system for higher bandwidth. It comprises:
  - A central translation table walker, which has its own Requester interface to fetch translation and

configuration structures and queues and a Completer interface to receive programming accesses. This unit might contain a macro-TLB and caches of configuration.

- Remote TLB units which, on a miss, make translation requests to the central unit and cache the results locally. Two units are shown, supporting a set of three devices through one port, and a PCIe Root Complex through another.
  - \* The second TLB unit also provides an ATS interface to the Root Complex, so that the PCIe Endpoints can use ATS to make translation requests through to the central unit.
- Finally, a smart device is shown, which embeds a TLB and makes translation requests to the central unit of SMMU C. To software, this looks identical to a simple device connected behind a discrete TLB unit. This design provides a dedicated TLB for the device, but uses the programming interface and translation facilities of the central unit, reducing complexity of the device.

In all cases, it appears to software as though a device is connected behind a logically-separate SMMU (similar to Device 0/1 on SMMU B). All implementations give the illusion of simple read/write transactions arriving from a client device to a discrete SMMU, even if physically it is the device performing the read/write transactions directly into the system, using translations provided by an SMMU.

Note: This allows a single SMMU driver to be used for radically different SMMU implementations.

Note: Devices might integrate a TLB, or whole SMMU, for performance reasons, but a closely-coupled TLB might also be used to provide physical addresses suitable for fully-coherent device caches.

Regardless of the implementation style, this document uses the abstraction of client device transactions *arriving at an SMMU*. The boundary of SMMU might contain a single module or several distributed sub-components but these must all behave consistently.

# Chapter 3

# **Operation**

## 3.1 Software interface

The SMMU has three interfaces that software uses:

- 1. Memory-based data structures to map devices to translation tables which are used to translate client device addresses.
- 2. Memory-based circular buffer queues. These are a Command queue for commands to the SMMU, an Event queue for event/fault reports from the SMMU, and a PRI queue for receipt of PCIe page requests.
  - Note: The PRI queue is only present on SMMUs supporting PRI services. This additional queue allows processing of PRI requests from devices separate from event or fault reports.
- 3. A set of registers, for each supported Security state, for discovery and SMMU-global configuration.

The registers indicate the base addresses of the structures and queues, provide feature detection and identification registers and a global control register to enable queue processing and translation of traffic. When Secure state is supported, an additional register set exists to allow Secure software to maintain Secure device structures, issue commands on a second Secure Command queue and read Secure events from a Secure Event queue.

In virtualization scenarios allowing stage 1 translation, a guest OS is presented with exactly the same programming interface and therefore believes it is in control of a real SMMU (albeit stage 1-only) with the same format of Command, Event, and optionally PRI, queues, and in-memory data structures.

Certain fields in architected SMMU registers and structures are marked as IMPLEMENTATION DEFINED. The content of these fields is specific to the SMMU implementation, but implementers must not use these fields in such a way that a generic SMMUv3 driver becomes unusable. Unless a driver has extended knowledge of particular IMPLEMENTATION DEFINED fields or features, the driver must treat all such fields as Reserved and set them to 0.

# Chapter 3. Operation 3.1. Software interface

An implementation only uses IMPLEMENTATION DEFINED fields to enable extended functionality or features, and remains compatible with generic driver software by maintaining architected behavior when these fields are set to 0.

# 3.2 Stream numbering

An incoming transaction has an address, size, and attributes such as read/write, Secure/Non-secure, Shareability, Cacheability. If more than one client device uses the SMMU traffic must also have a sideband StreamID so the sources can be differentiated. How a StreamID is constructed and carried through the system is IMPLEMENTATION DEFINED. Logically, a StreamID corresponds to a device that initiated a transaction.

Note: The mapping of a physical device to StreamID must be described to system software.

Arm recommends that StreamID be a dense namespace starting at 0. The StreamID namespace is per-SMMU. Devices assigned the same StreamID but behind different SMMUs are seen to be different sources. A device might emit traffic with more than one StreamID, representing data streams differentiated by device-specific state.

StreamID is of IMPLEMENTATION DEFINED size, between 0 and 32 bits.

The StreamID is used to select a Stream Table Entry (STE) in a Stream table, which contains per-device configuration. The maximum size of in-memory configuration structures relates to the maximum StreamID span (see 3.3 Data structures and translation procedure below), with a maximum of 2<sup>StreamIDSize</sup> entries in the Stream table.

Another property, SubstreamID, might optionally be provided to an SMMU implementing stage 1 translation. The SubstreamID is of IMPLEMENTATION DEFINED size, between 0 and 20 bits, and differentiates streams of traffic originating from the same logical block in order to associate different application address translations to each.

Note: An example would be a compute accelerator with 8 contexts that might each map to a different user process, but where the single device has common configuration meaning it must be assigned to a VM whole.

Note: The SubstreamID is equivalent to a PCIe PASID. Because the concept can be applied to non-PCIe systems, it has been given a more generic name in the SMMU. The maximum size of SubstreamID, 20 bits, matches the maximum size of a PCIe PASID.

The incoming transaction flags whether or not a SubstreamID is supplied and this might differ on a per-transaction basis.

Both of these properties and sizes are discoverable through the SMMU\_IDR1 register. See section 16.4 System integration for recommendations on StreamID and SubstreamID sizing.

The StreamID is the key that identifies all configuration for a transaction. A StreamID is configured to bypass or be subject to translation and such configuration determines which stage 1 or stage 2 translation to apply. The SubstreamID provides a modifier that selects between a set of stage 1 translations indicated by the StreamID but has no effect on the stage 2 translation which is selected by the StreamID only.

A stage 2-only implementation does not take a SubstreamID input. An implementation with stage 1 is not required to support substreams, therefore is not required to take a SubstreamID input.

The SMMU optionally supports Secure state and, if supported, the StreamID input to the SMMU is qualified by a SEC\_SID flag that determines whether the input StreamID value refers to the Secure or Non-secure StreamID namespace. A Non-secure StreamID identifies an STE within the Non-secure Stream table and a Secure StreamID identifies an STE within the Secure Stream table. In this document, the term StreamID implicitly refers to the StreamID disambiguated by SEC\_SID (if present) and does not refer solely to a literal StreamID input value (which would be associated with two STEs when Secure state is supported) unless explicitly stated otherwise. See section 3.10 Support for Secure state.

Arm expects that, for PCI, StreamID is generated from the PCI RequesterID so that StreamID[15:0] == RequesterID[15:0]. When more than one Root Complex is hosted by one SMMU, Arm recommends that the 16-bit RequesterID namespaces are arranged into a larger StreamID namespace by using upper bits of StreamID to differentiate the contiguous RequesterID namespaces, so that StreamID[N:16] indicates which Root Complex (PCIe domain/segment) is the source of the stream source. In PCIe systems, the SubstreamID is intended to be directly provided from the PASID [1] in a one to one fashion.

Chapter 3. Operation 3.2. Stream numbering

Therefore, for SMMU implementations intended for use with PCI clients, supported StreamID size must be at least 16 bits.

# 3.3 Data structures and translation procedure

The SMMU uses a set of data structures in memory to locate translation data. Registers hold the base addresses of the initial root structure, the Stream table. A Stream Table Entry (STE) contains stage 2 translation table base pointers, and also locates stage 1 configuration structures, which contain translation table base pointers. A Context Descriptor (CD) represents stage 1 translation, and a Stream Table Entry represents stage 2 translation.

Therefore, there are two distinct groups of structures used by the SMMU:

- Configuration structures, which map from the StreamID of a transaction (a device originator identifier) to the translation table base pointers, configuration, and context under which the translation tables are accessed.
- Translation table structures that are used to perform the VA to IPA and IPA to PA translation of addresses for stage 1 and stage 2, respectively.

The procedure for translation of an incoming transaction is to first locate configuration appropriate for that transaction, identified by its StreamID and, optionally, SubstreamID, and then to use that configuration to locate translations for the address used.

The first step in dealing with an incoming transaction is to locate the STE, which tells the SMMU what other configuration it requires.

Conceptually, an STE describes configuration for a client device in terms of whether it is subject to stage 1 or stage 2 translation or both. Multiple devices can be associated with a single Virtual Machine, so multiple STEs can share common stage 2 translation tables. Similarly, multiple devices (strictly, streams) might share common stage 1 configuration, therefore multiple STEs could share common CDs.

### 3.3.1 Stream table lookup

The StreamID of an incoming transaction locates an STE. Two formats of Stream table are supported. The format is set by the Stream table base registers. The incoming StreamID is range-checked against the programmed table size, and a transaction is terminated if its StreamID would otherwise select an entry outside the configured Stream table extent (or outside a level 2 span). See SMMU\_STRTAB\_BASE\_CFG and C\_BAD\_STREAMID.

The StreamID of an incoming transaction might be qualified by SEC\_SID, and this determines which Stream table, or cached copies of that Stream table, is used for lookup. See section 3.10.1 StreamID Security state (SEC\_SID).

#### 3.3.1.1 Linear Stream table

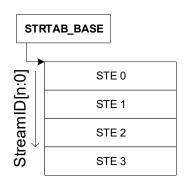


Figure 3.1: Linear Stream table

A linear Stream table is a contiguous array of STEs, indexed from 0 by StreamID. The size is configurable as a  $2^n$  multiple of STE size up to the maximum number of StreamID bits supported in hardware by the SMMU. The

linear Stream table format is supported by all SMMU implementations.

#### 3.3.1.2 2-level Stream table

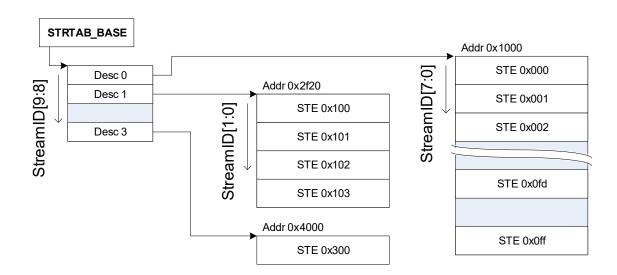


Figure 3.2: Example Two level Stream table with SPLIT == 8

A 2-level Stream table is a structure consisting of one top-level table that contains descriptors that point to multiple second-level tables that contain linear arrays of STEs. The span of StreamIDs covered by the entire structure is configurable up to the maximum number supported by the SMMU but the second-level tables do not have to be fully populated and might vary in size. This saves memory and avoids the requirement of large physically-contiguous allocations for very large StreamID spaces.

The top-level table is indexed by StreamID[n:x], where n is the uppermost StreamID bit covered, and x is a configurable Split point given by SMMU\_(S\_)STRTAB\_BASE\_CFG.SPLIT. The second-level tables are indexed by up to StreamID[x - 1:0], depending on the span of each table.

Support for the 2-level Stream table format is discoverable using the SMMU\_IDR0.ST\_LEVEL field. Where 2-level Stream tables are supported, split points of 6, 8 and 10 bits can be used. Implementations support either a linear Stream table format, or both linear and 2-level formats.

SMMUs supporting more than 64 StreamIDs (6 bits of StreamID) must also support 2-level Stream tables.

Note: Implementations supporting fewer than 64 StreamIDs might support 2-level Stream tables, but doing so is not generally useful as all streams would fit within a single second-level table.

Note: This rule means that an implementation supports two-level tables when the maximum size of linear Stream table would be too big to fit in a 4KB page.

The top-level descriptors contain a pointer to the second-level table along with the StreamID span that the table represents. Each descriptor can also be marked as invalid.

This example top-level table is depicted in Figure 3.2, where the split point is set to 8:

| Level 1 index | Valid | Level 2 pointer | Level 2 span |
|---------------|-------|-----------------|--------------|
| 0             | Y     | 0x1000          | 28           |
| 1             | Y     | 0x2F20          | $2^2$        |

| Level 1 index | Valid | Level 2 pointer | Level 2 span |
|---------------|-------|-----------------|--------------|
| 2             | N     | -               | -            |
| 3             | Y     | 0x4000          | $2^{0}$      |

### In this example:

- StreamIDs 0-1023 (4 x 8-bit level 2 tables) are represented, though not all are valid.
- StreamIDs 0-255 are configured by the array of STEs at 0x1000 (each of which separately enables the relevant StreamID).
- StreamIDs 256-259 are configured by the array of STEs at 0x2F20.
- StreamIDs 512-767 are all invalid.
- The STE of StreamID 768 is at 0x4000.

A two-level table with a split point of 8 can reduce the memory usage compared to a large and sparse linear table used with PCIe. If the full 256 PCIe bus numbers are supported, the RequesterID or StreamID space is 16-bits. However, because there is usually one PCIe bus for each physical link and potentially one device for each bus, in the worst case a valid StreamID might only appear once every 256 StreamIDs.

Alternatively, a split point of 6 provides 64 bottom-level STEs, enabling use of a 4KB page for each bottom-level table.

Note: Depending on the size of the StreamID space, the L1 Stream table might require allocation of a region of physically-contiguous memory greater than a single granule. This table shows some example sizes for the amount of memory occupied by L1 and L2 Stream tables:

| SIDSIZE | SPLIT | L1 table size | L2 table size |
|---------|-------|---------------|---------------|
| 16      | 6     | 8KB           | 4KB           |
| 16      | 8     | 2KB           | 16KB          |
| 16      | 10    | 512B          | 64KB          |
| 24      | 6     | 2MB           | 4KB           |
| 24      | 8     | 512KB         | 16KB          |
| 24      | 10    | 128KB         | 64KB          |

# 3.3.2 StreamIDs to Context Descriptors

The STE contains the configuration for each stream indicating:

- Whether traffic from the device is enabled.
- Whether it is subject to stage 1 translation.
- Whether it is subject to stage 2 translation, and the relevant translation tables.
- Which data structures locate translation tables for stage 1.

If stage 1 is used, the STE indicates the address of one or more CDs in memory using the STE.S1ContextPtr field.

The CD associates the StreamID with stage 1 translation table base pointers (to translate VA into IPA), per-stream configuration, and ASID. If substreams are in use, multiple CDs indicate multiple stage 1 translations, one for each substream. Transactions provided with a SubstreamID are terminated when stage 1 translation is not enabled.

If stage 2 is used, the STE contains the stage 2 translation table base pointer (to translate IPA to PA) and VMID. If multiple devices are associated with a particular virtual machine, meaning they share stage 2 translation tables,

then multiple STEs might map to one stage 2 translation table.

Note: Arm expects that, where hypervisor software is present, the Stream table and stage 2 translation table are managed by the hypervisor and the CDs and stage 1 translation tables associated with devices under guest control are managed by the guest OS. Additionally, the hypervisor can make use of separate hypervisor stage 1 translations for its own internal purposes. Where a hypervisor is not used, a bare-metal OS manages the Stream table and CDs. For more information, see section 3.6 Structure and queue ownership.

When a SubstreamID is supplied with a transaction and the configuration enables substreams, the SubstreamID indexes the CDs to select a stage 1 translation context. In this configuration, if a SubstreamID is not supplied, behavior depends on the STE.S1DSS flag:

- When STE.S1DSS == 0b00, all traffic is expected to have a SubstreamID and the lack of SubstreamID is an error. A transaction without a SubstreamID is aborted and an event recorded.
- When STE.S1DSS == 0b01, a transaction without a SubstreamID is accepted but is treated exactly as if its configuration were stage 1-bypass. The stage 1 translations are enabled only for transactions with SubstreamIDs.
- When STE.S1DSS == 0b10, a transaction without a SubstreamID is accepted and uses the CD of Substream 0. Under this configuration, transactions that arrive with SubstreamID 0 are aborted and an event recorded.

When stage 1 is used, the STE.S1ContextPtr field gives the address of one of the following, configured by STE.S1Fmt and STE.S1CDMax:

- A single CD.
- The start address of a single-level table of CDs.
  - The table is a contiguous array of CDs indexed by the SubstreamID.
- The start address of a first-level, L1, table of L1CDs.
  - Each L1CD.L2Ptr in the L1 table can be configured with the address of a linear level two, L2, table of CDs.
  - The L1 table is a contiguous array of L1CDs indexed by upper bits of SubstreamID. The L2 table is a
    contiguous array of CDs indexed by lower bits of SubstreamID. The ranges of SubstreamID bits that are
    used for the L1 and L2 indices are configured by STE.S1Fmt.

The S1ContextPtr and L2Ptr addresses are IPAs when both stage 1 and stage 2 are used and PAs when only stage 1 is used. S1ContextPtr is not used when stage 1 is not used.

The ASID and VMID values provided by the CD and STE structures tag TLB entries created from translation lookups performed through configuration from the CD and STEs. These tags are used on lookup to differentiate translation address spaces between different streams, or to match entries for invalidation on receipt of broadcast TLB maintenance operations. Implementations might also use these tags to efficiently allow sharing of identical translation tables between different streams.

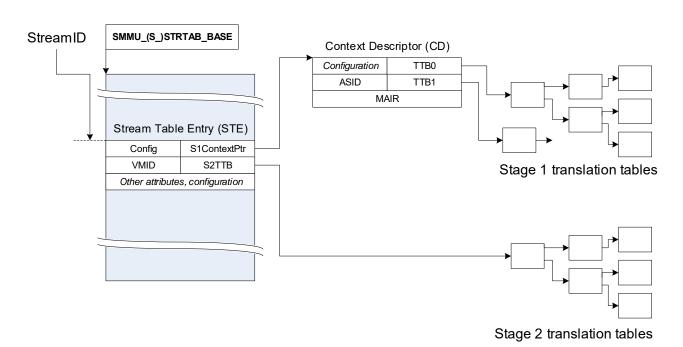


Figure 3.3: Configuration structure example

Figure 3.3 shows an example configuration in which a StreamID selects an STE from a linear Stream table, the STE points to a translation table for stage 2 and points to a single CD for stage 1 configuration, and then the CD points to translation tables for stage 1.

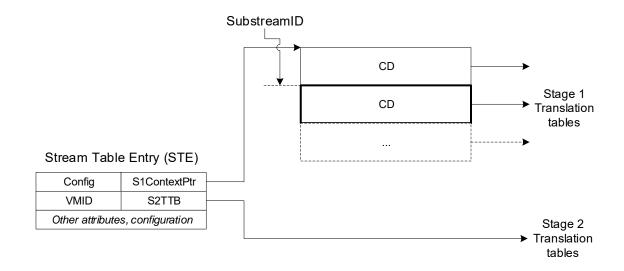


Figure 3.4: Multiple Context Descriptors for Substreams

Figure 3.4 shows a configuration in which an STE points to an array of several CDs. An incoming SubstreamID selects one of the CDs and therefore the SubstreamID determines which stage 1 translations are used by a transaction.

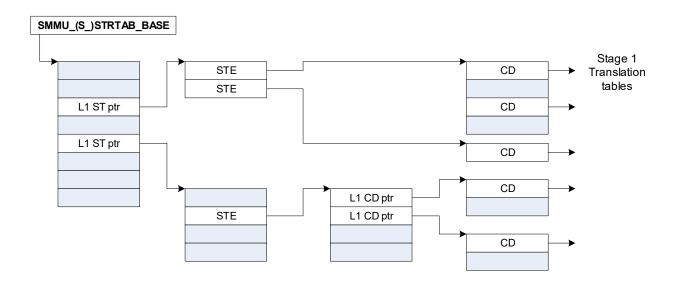


Figure 3.5: Multi-level Stream and CD tables

Figure 3.5 shows a more complex layout in which a multi-level Stream table is used. Two of the STEs point to a single CD, or a flat array of CDs, whereas the third STE points to a multi-level CD table. With multiple levels, many streams and many substreams might be supported without large physically-contiguous tables.

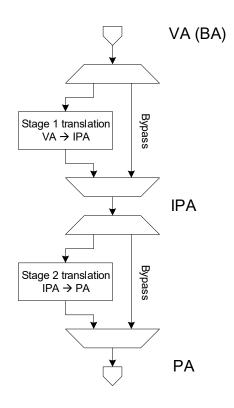


Figure 3.6: Translation stages and addresses

An incoming transaction is dealt with in a number of logical steps:

- 1. If the SMMU is globally disabled (for example when it has just come out of reset with SMMU\_CR0.SMMUEN == 0), the transaction passes through the SMMU without any address modification. Global attributes, such as memory type or Shareability, might be applied from the SMMU\_GBPA register of the SMMU. Or, the SMMU\_GBPA register might be configured to abort all transactions.
- 2. If the global bypass described in (1) does not apply, the configuration is determined:
  - a) An STE is located.
  - b) If the STE enables stage 2 translation, the STE contains the stage 2 translation table base.
  - c) If the STE enables stage 1 translation, a CD is located. If stage 2 translation is also enabled by the STE, the CD is fetched from IPA space which uses the stage 2 translations. Otherwise, the CD is fetched from PA space.
- 3. Translations are performed, if the configuration is valid.
  - a) If stage 1 is configured to translate, the CD contains a translation table base which is walked. This might require stage 2 translations, if stage 2 is enabled for the STE. Otherwise, stage 1 bypasses translation and the input address is provided directly to stage 2.
  - b) If stage 2 is configured to translate, the STE contains a translation table base that performs a nested walk of a stage 1 translation table if enabled, or a normal walk of an incoming IPA. Otherwise, stage 2 bypasses translation and the stage 2 input address is provided as the output address.
- 4. A transaction with a valid configuration that does not experience a fault on translation has the output address (and memory attributes, as appropriate) applied and is forwarded.

Note: This sequence illustrates the path of a transaction on a Non-secure stream. If Secure state is supported, the path of a transaction on a Secure stream is similar, except SMMU\_S\_CR0.SMMUEN and SMMU\_S\_GBPA control bypass.

An implementation might cache data as required for any of these steps. Section 16.2 *Caching* describes caching of configuration and translation structures.

Furthermore, events might occur at several stages in the process that prevent the transaction from progressing any further. If a transaction fails to locate valid configuration or is of an unsupported type, it is terminated with an abort, and an event might be recorded. If the transaction progresses as far as translation, faults can arise at either stage of translation. The configuration that is specific to the CD and STEs that are used determines whether the transaction is terminated or whether it is stalled, pending software fault resolution, see section 3.12 Fault models, recording and reporting.

The two translation stages are described using the VA to IPA and IPA to PA stages of the Armv8-A Virtualization terminology.

Note: Some systems refer to the SMMU input as a Bus Address (BA). The term VA emphasizes that the input address to the SMMU can potentially be from the same virtual address space as a PE process (using VAs).

Unless otherwise specified, translation tables and their configuration fields act exactly the same way as their equivalents specified in the Armv8-A Translation System for PEs [2].

If an SMMU does not implement one of the two stages of translation, it behaves as though that stage is configured to permanently bypass translation. Other restrictions are also relevant, for example it is not valid to configure a non-present stage to translate. An SMMU must support at least one stage of translation.

# 3.3.3 Configuration and Translation lookup

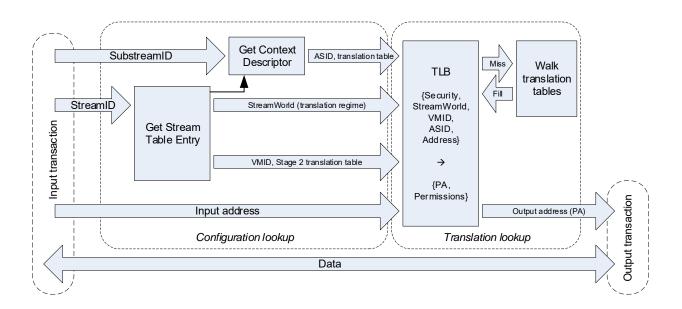


Figure 3.7: Configuration and translation lookup sequence

Figure 3.7 illustrates the concepts that are used in this document when referring to a *configuration lookup* and *translation lookup*.

As described in 3.3.2 *StreamIDs to Context Descriptors* above, an incoming transaction is first subject to a configuration lookup, and the SMMU determines how to begin to translate the transaction. This involves locating the appropriate STE then, if required, a CD.

The configuration lookup stage does not depend on the input address and is a function of the:

- SMMU global register configuration.
- Incoming transaction StreamID.
- Incoming transaction SubstreamID (if supplied).

The result of the configuration lookup is the stream or substream-specific configuration that locates the translation, including:

- Stage 1 translation table base pointers, ASID, and properties modifying the interpretation or walk of the translation tables (such as translation granule).
- Stage 2 translation table base pointer, VMID and properties modifying the interpretation or walk of the translation table.
- Stream-specific properties, such as the StreamWorld (the Exception Level, or translation regime, in PE terms) to which the stream is assigned.

The translation lookup stage logically works the same way as a PE memory address translation system. The output is the final physical address provided to the system, which is a function of the:

- Input address
- StreamWorld (Stream Security state and Exception level), ASID and VMID (which are provided from the previous step).

Figure 3.7 shows a PE-style TLB used in the translation lookup step. Arm expects the SMMU to use a TLB to cache translations instead of performing translation table walks for each transaction, but this is not mandatory.

Note: For clarity, Figure 3.7 does not show error reporting paths or CD fetch through stage 2 translation (which would also access the TLB or translation table walk facilities). An implementation might choose to flatten or combine some of the steps shown, while maintaining the same behavior.

A cached translation is associated with a StreamWorld that denotes its translation regime. StreamWorld is directly equivalent to an Exception level on a PE.

The StreamWorld of a translation is determined by the configuration that inserts that translation. The StreamWorld of a cached translation is determined from the combination of the Security state of an STE, its STE.Config field, its STE.STRW field and the corresponding SMMU\_(S\_)CR2.E2H configuration. See the STE.STRW field in section 5.2 Stream Table Entry.

In addition to insertion into a TLB, the StreamWorld affects TLB lookups, and the scope of different types of TLB invalidations. An SMMU implementation is not required to distinguish between cached translations inserted for EL2 versus EL2-E2H.

For the behavior of TLB invalidations, see section 3.17 TLB tagging, VMIDs, ASIDs and participation in broadcast TLB maintenance.

A translation is associated with one of the following StreamWorlds:

| StreamWorld | Properties   |  |
|-------------|--|--|
| NS-EL1      | On a PE, equivalent to Non-secure EL1  |  |
| NS-EL2      | Equivalent to Non-secure EL2 when E2H is not used (has no ASID)  |  |
| NS-EL2-E2H  | Equivalent to Non-secure EL2 when E2H is used (has ASID tag)   |  |
| S-EL2       | Equivalent to Secure EL2 when E2H is not used (has no ASID)  |  |
| S-EL2-E2H   | Equivalent to Secure EL2 when E2H is used (has ASID tag)   |  |
| Secure      | <ul> <li>Equivalent to either:</li> <li>The single translation regime that is used by Secure EL1 and Secure EL3 when EL3 is running in AArch32 state.</li> <li>Secure EL1 when EL3 is running in AArch64 state (EL3 has a separate translation regime).</li> <li>This regime has an ASID and, if Secure stage 2 is supported, a VMID.</li> </ul> |  |
| EL3         | Equivalent to EL3 when EL3 is running in AArch64 state.  |  |

Note: StreamWorld can differentiate multiple translation regimes in the SMMU that are associated with different bodies of software at different Exception levels. For example, a Secure Monitor EL3 translation for address 0x1000 is different to (and unaffected by) a Non-secure hypervisor EL2 translation for address 0x1000, as are NS-EL1 translations for address0x1000. In general, Arm expects that the StreamWorld configured for a stream in the SMMU will match the Exception level of the software that controls the stream or device.

The term 'any-EL2' is used to describe behaviors common to NS-EL2 and S-EL2. The term 'any-EL2-E2H' is used to describe behaviors common to NS-EL2-E2H and S-EL2-E2H StreamWorlds.

In the same way as in an Armv8-A MMU, a translation is architecturally unique if it is identified by a unique set of {StreamWorld, VMID, ASID, Address} input parameters.

For example, the following are unique and can all co-exist in a translation cache:

- Entries with the same address, but different ASIDs.
- Entries with the same address and ASID, but different VMIDs.

• Entries with the same address and ASID but a different StreamWorld.

Architecturally, a translation is not uniquely identified by a StreamID and SubstreamID. This results in two properties:

- A translation is not required to be unique for a set of transaction input parameters (StreamID, SubstreamID).
  - Two streams can be configured to use the same translation configuration and the resulting ASID/VMID from their configuration lookup will identify a single set of shared translation cache entries.
- Multiple StreamID/SubstreamID configurations that result in identical ASID/VMID/StreamWorld configuration must maintain exactly the same configuration where configuration can affect TLB lookup.
  - For example, two streams configured for a stage 1, NS-EL1 with ASID == 3 must both use the same translation table base addresses and translation granule.

When translating an address, NS-EL2, S-EL2 and EL3 regimes use only one translation table. CD.TTB1 is unused in these configurations. All other StreamWorlds use both translation tables, and therefore CD.TTB0 and CD.TTB1 are both required.

Only some stage 1 translation table formats are valid in each StreamWorld, consistent with the PE. Valid combinations are described in the CD.AA64 description. Selecting an inconsistent combination of StreamWorld and CD.AA64 (for example, using AArch32 translation tables to represent an AArch64 EL3 translation regime) causes the CD to be ILLEGAL.

Secure stage 1 permits AArch32 and AArch64 translation tables. Secure stage 2 is only permitted to use AArch64 translation tables.

In this document, the term *TLB* is used to mean the concept of a translation cache, indexed by StreamWorld/VMID/ASID and VA.

SMMU cache maintenance commands therefore fall into two groups:

- Configuration cache maintenance, acting upon StreamIDs and SubstreamIDs.
- Translation cache maintenance (or TLB maintenance), acting on addresses, ASIDs, VMIDs and StreamWorld.

The second set of commands directly matches broadcast TLB maintenance operations that might be available from PEs in some systems. The StreamWorld tag determines how TLB entries respond to incoming broadcast TLB invalidations and TLB invalidation SMMU commands, see section 3.17 TLB tagging, VMIDs, ASIDs and participation in broadcast TLB maintenance for details.

## 3.3.4 Transaction attributes: incoming, two-stage translation and overrides

In addition to an address, size and read/write attributes, an incoming transaction might be presented to the SMMU with other attributes, such as an access type (for example Device, WB-cached Normal memory), Shareability (for example Outer Shareable), cache allocation hints, and permissions-related attributes, instruction/data, privileged/unprivileged, Secure/Non-secure. Some of these attributes are used to check the access against the page permissions that are determined from the translation tables. After passing through the SMMU, a transaction presented to the system might also have a set of attributes, which might have been affected by the SMMU.

Depending on the StreamWorld configuration, these attributes can be configured differently. For example, the format of access permissions in a stage 1 translation table descriptor is affected when located from a configuration with StreamWorld == any-EL2 or StreamWorld == EL3, consistent with the Armv8 Translation System [2]. Specifically, the AP[1] bit (of the AP[2:1] field) is ignored and treated as if it were 1 because privilege checks are ignored for EL2 and EL3 (AArch64) translations. However, any-EL2-E2H translations maintain privileged/non-privileged checks in the same manner as EL1.

The details of how input attributes affect the attributes output into the system, in combination with translation table attributes and other configuration, is described in detail in Chapter 13 Attribute Transformation.

The input attributes are conceptually provided from the system, either conveyed from a client device that defines the transaction attributes in a device-specific way, or set in a system-specific way by the interconnect before the transaction is input to the SMMU.

#### As an overview:

Permission-related attributes (instruction/data, privileged/unprivileged) and read/write properties are used
for checking against translation table permissions, which might deny the access. The permission-related
attributes input into the SMMU might be overridden on a per-device basis before the permission checks
are performed, using the INSTCFG, PRIVCFG and NSCFG STE fields. The SMMU might output these
attributes.

Note: The overrides might be useful if a device is not able to express a particular kind of traffic.

• Other attributes (memory type, Shareability, cache hints) are intended to have an effect on the memory system rather than the SMMU, for example, control cache lookup for the transaction. The attributes output into the memory system are a function of the attributes specified by the translation table descriptors (at stage 1, stage 2, or stage 1 and stage 2) used to translate the input address. The SMMU might convey attributes input from a device through this process, so that the device might influence the final transaction access, and input attributes might be overridden on a per-device basis using the MTCFG/MemAttr, SHCFG, ALLOCCFG STE fields. The input attribute, modified by these fields, is primarily useful for setting the resulting output access attribute when both stage 1 and stage 2 translation is bypassed (no translation table descriptors to determine attribute) but can also be useful for stage 2-only configurations in which a device stream might have finer knowledge about the required access behavior than the general virtual machine-global stage 2 translation tables.

The STE attribute and permission override fields, MTCFG/MemAttr, SHCFG, ALLOCCFG, INSTCFG, PRIVCFG and NSCFG, allow an incoming value to be used or, for each field, a specific override value to be selected. For example, INSTCFG can configure a stream as Always Data, replacing an incoming INST property that might be in either state. However, in SMMU implementations that are closely-coupled to, or embedded in, a device, the incoming attribute can always be considered to be the most appropriate. When an SMMU and device guarantee that the incoming attributes are correct, it is permissible for an SMMU to always use the incoming value for each attribute value. See SMMU\_IDR1.ATTR\_TYPES\_OVR and SMMU\_IDR1.ATTR\_PERMS\_OVR for more information. For an SMMU that cannot guarantee that these attributes are always provided correctly from the client device, for example a discrete SMMU design, Arm strongly recommends supporting overrides of incoming attributes.

### 3.3.5 Translation table descriptors

The Armv8-A VMSA defines bits [63:60] of stage 2 Block and Page descriptors as being Reserved for use by a System MMU. In SMMUv3.1 and later, these bits are Reserved, RESO.

Note: When PBHA is enabled for a bit in this range, bits [62:60] are affected by the PBHA mechanism. When PBHA is not enabled, the previous definition applies.

## 3.4 Address sizes

There are three address size concepts to consider in the SMMU, the input address size from the system, the Intermediate Address Size (IAS), and the Output Address Size (OAS):

- The SMMU input address size is 64 bits.
  - Note: See section 3.4.1 Input address size and Virtual Address size for recommendations on how a smaller interconnect or device address capability is presented to the SMMU.
- IAS reflects the maximum usable IPA of an implementation that is generated by stage 1 and input to stage 2:
  - This term is defined to illustrate the handling of intermediate addresses in this section and is not a configurable parameter.
  - The maximum usable IPA size of an SMMU is defined in terms of other SMMU implementation choices,
     as:

```
IAS = MAX(SMMU_IDR0.TTF[0]==1 ? 40 : 0), SMMU_IDR0.TTF[1]==1 ? OAS : 0));
```

- An IPA of 40 bits is required to support of AArch32 LPAE translations, and AArch64 limits the maximum IPA size to the maximum PA size. Otherwise, when AArch32 LPAE is not implemented, the IPA size equals OAS, the PA size, and might be smaller than 40 bits.
- The purpose of definition of the IAS term is to abstract away from these implementation variables.
- OAS reflects the maximum usable PA output from the last stage of AArch64 translations, and must match
  the system physical address size. The OAS is discoverable from SMMU\_IDR5.OAS. Final-stage AArch32
  translations always output 40 bits which are zero-extended into a larger OAS, or truncated to a smaller OAS.

Note: Except where explicitly noted, all address translation and fault checking behavior is consistent with Armv8-A [2].

If the SMMU is disabled (with SMMU\_(S\_)CR0.SMMUEN == 0, and SMMU\_(S\_)GBPA.ABORT == 0 allows traffic bypass), the input address is presented directly to the output PA. If the input address of a transaction exceeds the size of the OAS, the transaction is terminated with an abort and no event is recorded. Otherwise, when SMMU\_(S\_)CR0.SMMUEN == 1, transactions are treated as described in the rest of this section.

When a stream selects an STE with STE.Config[2:0] == 0b100, transactions bypass all stages of translation. If the input address of a transaction exceeds the size of the OAS, the transaction is terminated with an abort and a stage 1 Address Size fault (F\_ADDR\_SIZE) is recorded.

Note: In Armv8-A PEs, when both stages of translation bypass, a (stage 1) Address Size fault might be generated where an (input) address is greater than the PA size, depending on whether a PE is in AArch32 or AArch64 state. This behavior does not directly translate to the SMMU because no configuration is available to select translation system when in bypass or disabled, therefore the address size is always tested.

When a stream selects an STE with one or more stages of translation present:

For input to stage 1, the input address is treated as a VA (see section 3.4.1 *Input address size and Virtual Address size*) and if stage 1 is not bypassed the following stage 1 address checks are performed:

- 1. On input, a stage 1 Translation fault (F\_TRANSLATION) occurs if the VA is outside the range specified by the relevant CD:
  - a. For a CD configured as AArch32 LPAE, the maximum input range is fixed at 32 bits, and the range of the address input into a given TTB0 or TTB1 translation table is determined by the T0SZ and T1SZ fields.

Note: The arrangement of the TTB0/TTB1 translation table input spans might be such that there is a range of 32-bit addresses that is outside both of the TTB0 and TTB1 spans and will always cause a Translation fault.

- b. For a CD configured as AArch64, the range is determined by the T0SZ and T1SZ fields.
  - i. For SMMUv3.0, up to a maximum of 49 bits (two 48-bit TTB0/TTB1).
  - ii. For SMMUv3.1 and later, when SMMU\_IDR5.VAX == 1, each TTBx that is configured for a 64KB granule using CD.TGx has a maximum input size of 52 bits. When SMMU\_IDR5.VAX == 0 or a TTBx is configured for a 4KB or 16KB granule, the maximum input size of the TTBx is 48 bits.

A VA is inside the range only if it is correctly sign-extended from the top bit of the range size upwards, although an exception is made for Top Byte Ignore (TBI) configurations.

Note: For example, with a 49-bit VA range and TBI disabled, addresses 0x0000FFFFFFFFFFFFFF and 0xFFFF000000000000 are within the range but 0x0001000000000 and 0xFFFE00000000000 are not. See 3.4.1 *Input address size and Virtual Address size* below for details.

- 2. The address output from the translation causes a stage 1 Address Size fault if it exceeds the range of the effective IPA size for the given CD:
  - a. For AArch32 LPAE CDs, the IPA size is fixed at 40 bits (the IPS field of the CD is IGNORED).
  - b. For AArch64 CDs, the IPA size is given by the effective value of the IPS field of the CD, which is capped to the OAS.

If bypassing stage 1 (because STE.Config[0] == 0, STE.S1DSS == 0b01 or if unimplemented), the input address is passed directly to stage 2 as the IPA. If the input address of a transaction exceeds the size of the IAS, a stage 1 Address Size fault occurs, the transaction is terminated with an abort and F\_ADDR\_SIZE is recorded. Otherwise, the address might still lie outside the range that stage 2 will accept. In this case, the stage 2 check 1 described in this section causes a stage 2 Translation fault.

Note: The TBI configuration can only be enabled when a CD is used (that is when stage 1 translates) and is always disabled when stage 1 is bypassed or disabled.

Note: The SMMU stage 1 bypass behavior is analogous to a PE with stage 1 disabled but stage 2 translating. The SMMU checks stage 1 bypassed addresses against the IAS, which (when AArch32 LPAE support is implemented) might be greater than the PA. This supports stage 2-only assignment of devices to guest VMs expecting to program 40-bit DMA addresses, which are input to stage 2 translation.

Note: This also means that an SMMU implementing only stage 2, or implementing both stages but translating through stage 2 only, can still produce a fault marked as coming from stage 1.

Stage 2 receives an IPA, and if not bypassing, the following stage 2 address size checks are performed:

- 1. On input, a stage 2 Translation fault occurs if the IPA is outside the range configured by the relevant S2T0SZ field of the STE.
  - a. For an STE configured as AArch32 LPAE (see STE.S2AA64), the input range is capped at 40 bits (and cannot exceed 40 bits) regardless of the IAS size.
  - b. For a STE configured as AArch64, the input range is capped by the IAS.
  - c. For SMMUv3.1 and later, when OAS == IAS == 52, the stage 2 input range is further limited to 48 bits unless STE.S2TG indicates a 64KB granule.

Note: This ensures, for a system having OAS < 40, that an AArch64 stage 2 can accept a 40-bit IPA from an AArch32 stage 1, if the SMMU supports AArch32.

- 2. The address output from the translation causes a stage 2 Address Size fault if it exceeds the effective PA output range:
  - a. For an AArch64 STE, this is the effective value configured in the S2PS field of the STE (which is capped to the OAS).

Note: For SMMUv3.1 and later, the effective size can be 52 only if OAS == 52 and 64KB granules are used.

b. For an AArch32 STE, this output range is fixed at 40 bits and the STE.S2PS field is IGNORED. If the OAS is less than 40, and if the output address is outside the range of the OAS, the address is silently truncated to fit the OAS.

After this check, if the output address of stage 2 is smaller than the OAS, the address is zero-extended to match the OAS.

If bypassing stage 2 (because STE.Config[1] == 0 or if unimplemented), the IPA is presented directly as the PA output address. If the IPA is outside the range of the OAS, the address is silently truncated to fit the OAS. If the IPA is smaller than the OAS, it is zero-extended.

Note: Because the SMMU contains configuration structures that are checked for validity before beginning translation table walks, certain configuration errors are detected as an invalid structure configuration. This includes STE.S2TTB being out of range of the effective stage 2 output address size, or CD.TTBx being out of range of the effective stage 1 output address size. These invoke C\_BAD\_STE or C\_BAD\_CD configuration faults, respectively, instead of an Address Size fault.

# 3.4.1 Input address size and Virtual Address size

The architectural input address size of the SMMU is 64 bits. If a client device outputs an address smaller than 64 bits, or if the interconnect between a client device and the SMMU input supports fewer than 64 bits of address, the smaller address is converted to a 64-bit SMMU input address in a system-specific manner. This conversion is outside of the scope of this specification, but must comply with the rules in this section.

Armv8.0 and Armv8.1 [2] support a maximum of a 49-bit VA in AArch64, meaning there are up to 49 significant lower bits sign-extended to a 64-bit address. Armv8.2 supports a maximum of a 53-bit VA or 49-bit VA in AArch64, meaning there are up to 53 or 49 significant lower bits sign-extended to a 64-bit address. Stage 1 translation contexts configured as AArch64 have input VA ranges configurable up to the maximum (arranged as two halves and translated through TTB0 and TTB1).

The term VAS represents the VA size chosen for a given SMMU implementation. When SMMU\_IDR5.VAX == 0, this is 49 bits (2 x 48 bits). When SMMU\_IDR5.VAX == 1, this is 53 bits (2 x 52 bits).

Note: In SMMUv3.0, SMMU\_IDR5.VAX is RESO and therefore VAS is always 49 bits.

Stage 1's high translation table, TTB1, can only be selected if VAS significant bits of address are presented to the SMMU sign-extended. If applications require use of both TTB0 and TTB1 then the system design must transmit addresses of at least VAS bits end-to-end, from device address registers through the interconnect to the SMMU, and that sign-extension occurs from the input MSB upwards as described in this section.

Stage 1 translation contexts configured as AArch32 have a 32-bit VA. In this case, bits [31:0] of the input address are used directly as the VA. A Translation fault is raised if the upper 32 bits of the input address are not all zero. The TxSZ fields are used to select TTB0 or TTB1 from the upper bits [31:n] in the input range.

Input range checks made for a stage 1 AArch64 translation table configured (with TxSZ) for an input range of N significant bits fail unless bits VA[AddrTop:N - 1] are identical.

- When Top Byte Ignore (TBI) is not used, AddrTop == 63.
- When Top Byte Ignore is enabled, AddrTop == 55, which means that VA[63:56] are ignored.

When TBI is enabled, only VA[55:N-1] must be identical and the effective VA[63:56] bits are taken to be a sign-extension of VA[55] for translation purposes.

Note: TBI configuration is part of the CD, so it can only be enabled when stage 1 translates. When stage 1 is bypassed or disabled, no CD is used and TBI is always disabled.

The term *Upstream Address Size* (UAS) represents the number of effective bits of address presented to the SMMU from a client device:

1. If 57 <= UAS < 64, TBI has meaning as there are bits supplied in VA[63:56] that might differ from VA[55:(VAS-1)]. TBI determines whether a Translation fault is invoked if they differ.

- 2. If VAS <= UAS < 57, TBI is meaningless as the input sign-extension means VA[63:56] cannot differ from VA[55].
- 3. If UAS <= VAS, the range checks can only fail if translation table range is configured with a TOSZ, or T1SZ, if UAS == 49, smaller than the presented address. That is, the maximum configuration of stage 1 translation tables covers any presented input address.

For AArch64, the stage 1 translation table, TTB0 or TTB1, is selected based on VA[55]. Therefore, because an address size from the client device that is less than the VAS bits is zero-extended to 64, this means VA[55] == 0 and TTB1 is never selected.

If any upper address bits of a 64-bit address programmed into a peripheral are not available to the SMMU sign-checking logic, whether by truncation in the interconnect or peripheral, software must not rely on mis-programmed upper bits to cause a Translation fault in the SMMU. If such checking is required within such a system, software must check the validity of upper bits of DMA addresses programmed into such a device.

All input address bits are recorded unmodified in SMMU fault event records.

# 3.4.2 Address alignment checks

The SMMU architecture does not check the alignment of incoming transaction addresses.

Note: For a PE, the alignment check is based on the size of an access. This semantic is not directly applicable to client device accesses.

# 3.4.3 Address sizes of SMMU-originated accesses

Distinct from client device accesses forwarded into the system, the SMMU originates accesses to the system for the purposes of:

- Configuration structure access (STE, CD).
- Queue access (Command, Event, PRI).
- MSI interrupt writes.
- Last-stage translation table walks:
  - Note: Addresses output from stage 1 walks in a nested configuration are input to stage 2 and translated in the expected manner (including causing stage 1 Address Size faults, or stage 2 Translation faults from IPAs outside the stage 2 translation range), rather than being output into the system directly.

An access address can be out of range if it relates to a base address that is already greater than an allowed address size, or if an index is applied to a base address so that the result is greater than an allowed address size. If an access address is calculated to be a PA value greater than the SMMU OAS or physical address size, or an IPA value greater than the IAS or intermediate address size, behavior is as follows:

| Access type               | Configured by    | Address type            | Behavior when address too large                               |
|---------------------------|------------------|-------------------------|---|
| CD fetch or<br>L1CD fetch | STE.S1ContextPtr | If stage 1-only, PA     | Truncate to OAS or F_CD_FETCH or C_BAD_STE (1)                |
|                           |                  | If stage 2 present, IPA | Truncate to IAS or C_BAD_STE or Stage 2 Translation fault (2) |
| CD fetch                  | L1CD.L2Ptr       | If stage 1-only, PA     | Truncate to OAS or F_CD_FETCH or C_BAD_SUBSTREAMID (3)        |

| Access type                             | Configured by  | Address type            | Behavior when address too large   |
|---|--|-------------------------|---|
|   |  | If stage 2 present, IPA | Truncate to IAS or<br>C_BAD_SUBSTREAMID or<br>stage 2 Translation fault (4) |
| STE fetch                               | SMMU_(S_)STRTAB_BASE or L1STD.L2Ptr  | PA                      | Truncate to OAS or F_STE_FETCH (5)  |
| VMS fetch                               | STE.VMSPtr   | PA                      | C_BAD_STE   |
| Queue access                            | SMMU_(S_)*Q_BASE   | PA                      | Truncate to OAS (6)   |
| MSI write                               | SMMU_(S_)*_IRQ_CFG {0,1,2} or CMD_SYNC arguments   | PA                      | Truncate to OAS (6)   |
| Last-stage<br>translation table<br>walk | Addresses derived from intermediate translation table descriptors located using STE.S2TTB or STE.S_S2TTB or CD.TTB{0,1}, after the first level translation table descriptor fetch. | PA                      | Stage 1/2 Address Size fault  |
|   | Starting-level translation table descriptor address in STE.S2TTB or STE.S_S2TTB or CD.TTB{0,1}   | PA                      | CD or STE ILLEGAL (see CD.TTB{0,1} and STE.S2TTB description).              |

## In the context of these respective access types:

- 1. An implementation of SMMUv3.1 or later generates C\_BAD\_STE and terminates the transaction. It is CONSTRAINED UNPREDICTABLE whether an SMMUv3.0 implementation:
  - a. Generates an F\_CD\_FETCH and terminates the transaction. The event contains the non-truncated fetch address.
  - b. Generates a C BAD STE and terminates the transaction.
  - c. Truncates STE.S1ContextPtr to the OAS and initiates a read of a CD/L1CD from this address (translation continues).
- 2. It is CONSTRAINED UNPREDICTABLE whether an implementation:
  - a. Generates a C\_BAD\_STE and terminates the transaction.
  - b. Inputs the IPA to stage 2 without truncation, generating a stage 2 Translation fault that reports a non-truncated fault address.
  - c. SMMUv3.0 only, inputs the IPA to stage 2 with truncation to the IAS. If translation is successful, initiates a read of a CD/L1CD from the result otherwise generates a stage 2 fault that reports a truncated fault address.
- 3. An implementation of SMMUv3.1 or later generates C\_BAD\_SUBSTREAMID and terminates the transaction. It is CONSTRAINED UNPREDICTABLE whether an SMMUv3.0 implementation:
  - a. Generates an F\_CD\_FETCH and terminates the transaction. The event contains the non-truncated fetch address.
  - b. Generates a C\_BAD\_SUBSTREAMID and terminates the transaction.
  - c. Truncates L1CD.L2Ptr to the OAS and initiates a read of a CD from this address (translation continues).
- 4. It is CONSTRAINED UNPREDICTABLE whether an implementation:
  - a. Generates a C\_BAD\_SUBSTREAMID and terminates the transaction.

- b. Inputs the IPA to stage 2 without truncation, generating a stage 2 Translation fault that reports a non-truncated fault address.
- c. SMMUv3.0 only, inputs the IPA to stage 2 with truncation to the IAS. If translation is successful, initiates a read of a CD from the result otherwise generates a stage 2 fault that reports a truncated fault address.
- It is CONSTRAINED UNPREDICTABLE whether an implementation truncates an STE fetch address (and
  continues translation) or generates an F\_STE\_FETCH condition which terminates the transaction and might
  deliver an error event.
- 6. Note: When hypervisor software presents an emulated SMMU interface to a guest, Arm recommends that guest-provided addresses are correctly masked to the IPA size to ensure consistent SMMU behavior from the perspective of the guest driver.

In all cases where a non-truncated address is reported in a fault (for instance, a stage 2 Translation fault), the reported address is the calculated address of the structure being accessed, for example an L1CD address calculated from a base address of STE.S1ContextPtr indexed by the incoming SubstreamID to locate a L1CD structure.

The address of an L1CD or CD, given by STE.S1ContextPtr or L1CD.L2Ptr, is not subject to a stage 1 Address Size fault check.

In summary, configuration registers, command fields and structure fields programmed with out-of-range physical addresses might truncate the addresses to the OAS or PA size.

Note: This behavior in part arises from the fact that register address fields are not required to provide storage for high-order physical address bits beyond the OAS. See section 6.3 *Register formats* for details.

Note: Commands, register and structure fields taking IPA addresses store the entire field width so that a potential stage 2 fault can be correctly raised (providing a full non-truncated IPA in a fault record).

# 3.5 Command and Event queues

All SMMU queues for both input to, and output from the SMMU are arranged as circular buffers in memory. A programming interface has one Command queue for input and one Event queue (and optionally one PRI queue) for output. Each queue is used in a producer-consumer fashion so that an output queue contains data produced by the SMMU and consumed by software. An input queue contains data produced by software, consumed by the SMMU.

## 3.5.1 SMMU circular queues

A queue is arranged as a 2<sup>n</sup>-items sized circular FIFO with a base pointer and two index registers, PROD and CONS indicating the producer and consumer current positions in the queue. In each of the output and input roles, only one index is maintained by the SMMU, with the other is maintained by software.

For an input queue (Command queue), the PROD index is updated by software after inserting an item into the queue, and is read by the SMMU to determine new items. The CONS index is updated by the SMMU as items are consumed, and is read by software to determine that items are consumed and space is free. An output queue is the exact opposite.

PROD indicates the index of the location that can be written next, if the queue is not full, by the producer. CONS indicates the index of the location that can be read next, if the queue is not empty. The indexes must always increment and wrap to the bottom when they pass the top entry of the queue.

The queues use the mirrored circular buffer arrangement that allows all entries to be valid simultaneously (rather than N-1 valid entries in other circular buffer schemes). Each index has a wrap flag, represented by the next higher bit adjacent to the index value contained in PROD and CONS. This bit must toggle each time the index wraps off the high end and back onto the low end of the buffer. It is the responsibility of the owner of each index, producer or consumer, to toggle this bit when the owner updates the index after wrapping. It is intended that software reads the register, increments or wraps the index (toggling wrap when required) and writes back both wrap and index fields at the same time. This single update prevents inconsistency between index and wrap state.

- If the two indexes are equal and their wrap bits are equal, the queue is empty and nothing can be consumed from it
- If the two indexes are equal and their wrap bits are different, the queue is full and nothing can be produced to it.
- If the two indexes differ or the wrap bits differ, the consumer consumes entries, incrementing the CONS index until the queue is empty (both indices and wrap bits are equal).

Therefore, the wrap bits differentiate the cases of an empty buffer and a full buffer where otherwise both indexes would indicate the same location in both full and empty cases.

On initialization, the queue indexes are written by the agent controlling the SMMU before enabling the queue. The queue indexes must be initialized into one of the following consistent states:

- PROD.WR == CONS.RD and PROD.WR\_WRAP == CONS.RD\_WRAP, representing an empty queue.
   Note: Arm expects this to be the state on normal initialization.
- PROD.WR == CONS.RD and PROD.WR\_WRAP != CONS.RD\_WRAP, representing a full queue.
- PROD.WR > CONS.RD and PROD.WR\_WRAP == CONS.RD\_WRAP, representing a partially-full queue.
- PROD.WR < CONS.RD and PROD.WR\_WRAP != CONS.RD\_WRAP, representing a partially-full queue.</li>

The agent controlling the SMMU must not write queue indexes to any of the following inconsistent states whether at initialization or after the queue is enabled:

- PROD.WR > CONS.RD and PROD.WR WRAP != CONS.RD WRAP
- PROD.WR < CONS.RD and PROD.WR WRAP == CONS.RD WRAP

If the queue indexes are written to an inconsistent state, one of the following CONSTRAINED UNPREDICTABLE behaviors is permitted:

## 3.5. Command and Event queues

- The SMMU consumes, or produces as appropriate to the given queue, queue entries at UNKNOWN locations in the queue.
- The SMMU does not consume, or produce as appropriate, queue entries while the queue indexes are in an inconsistent state.
- For a queue where the SMMU is the producer, the SMMU treats the queue as though it is full while the queue indexes are in an inconsistent state.

Each circular buffer is  $2^n$ -items in size, where  $0 \le n \le 19$ . An implementation might support fewer than 19 bits of index. Each PROD and CONS register is 20 bits in size to accommodate the maximum 19-bit index plus the wrap bit. The actual buffer size is determined by software, up to the discoverable SMMU implementation-defined limit. The position of the wrap bit depends on the configured index size.

Note: For example, when a queue is configured with 128 entries it means:

- The queue indices are 7-bit.
- PROD.WR and CONS.RD fields are 7 bits large. The queue indexes are bits [6:0] of PROD and CONS.
- The wrap bit [7] of PROD and CONS registers. Bits [19:8] are ignored.

The lifecycle of a circular buffer is shown in Figure 3.8.

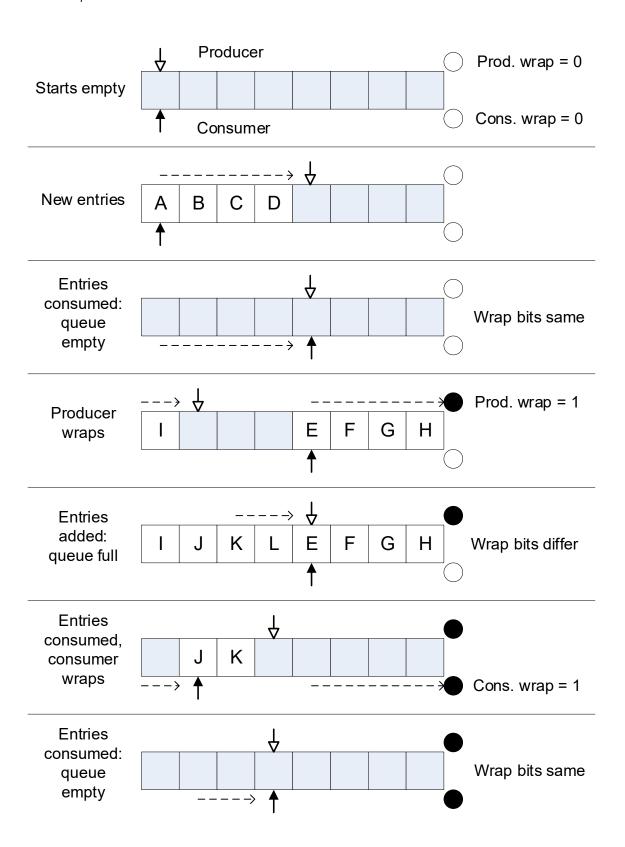


Figure 3.8: Circular buffer/queue operation

When producing or consuming entries, software must only increment an index (except when an increment will cause a wrap to the start). The index must never otherwise be moved backwards. The SMMU makes the same guarantee, only incrementing or wrapping its index values.

There is one Command queue per implemented Security state. The SMMU commands are consumed in order from this queue.

The Event queues receive asynchronous events such as faults recorded from device traffic or configuration errors (which might be discovered only when device traffic causes the SMMU to traverse the structures). On the Non-secure side, there is one global Event queue which receives events from all Non-secure streams and configuration.

When SMMU\_S\_IDR1.SECURE\_IMPL == 1, there is also one Secure Event queue which receives events from all Secure streams and configuration, see section 3.10.2 Secure commands, events and configuration.

All output queues are appended to sequentially.

# 3.5.2 Queue entry visibility semantics

Any producer (whether the SMMU or software) must ensure that if an update to the PROD index value is observable by the consumer, all new queue entries are observable by the consumer. For output queues from the SMMU (Event and PRI queues), the SMMU writes queue data to memory and, when that data becomes visible with respect to the rest of the Shareability domain, the SMMU allows the updated PROD index value to be observed. This is the first point that a new queue entry is visible to the consumer.

A consumer must not assume presence of a new valid entry in a queue through any mechanism other than having first observed an updated PROD index that covers the entry position. If a consumer reads a queue entry beyond the point indicated by the last read of the PROD index, the entry contains UNKNOWN data.

Note: Interrupt ordering rules also exist, see section 3.18 *Interrupts and notifications*. The SMMU makes queue updates observable through the PROD index no later than at the point where it asserts the queue interrupt.

Note: Software must not assume a new queue item is present when an interrupt arrives, without first reading the PROD index. If, for example, a prior interrupt handler consumed all events including those of a second batch (with a second interrupt), the next interrupt handler invocation might find no new queue entries.

### 3.5.3 Event queue behavior

The SMMU might support configurable behavior on *Translation-related* faults, which enable a faulting transaction to be *stalled*, pending later resolution, or *terminated* which immediately aborts the transaction. See section 3.12 *Fault models, recording and reporting* for details on fault behavior.

Events are recorded into the Event queue in response to a configuration error or translation-related fault associated with an incoming transaction. A sequence of faults or errors caused by incoming transactions could fill the Event queue and cause it to overflow if the events are not consumed fast enough. Events resulting from stalled faulting transactions are never discarded if the Event queue is full, but are recorded when entries are consumed from the Event queue and space next becomes available. Other types of events are discarded if the Event queue is full.

Note: Arm expects that the classes of events that might be discarded are generally used for debug. Section 7.4 *Event queue overflow* covers the exact queue behavior upon overflow.

Arm recommends that system software consumes entries from the Event queue in a timely manner to avoid overflow during normal operation.

In all cases in this document, when it is stated that an event is recorded, the meaning is that the event is recorded if room is available for a new entry in the Event queue and the queue is writable. A queue is writable if it is enabled, has no global error flagged and would not otherwise overflow, see section 7.2 Event queue recorded faults and events. Events that are not reported in response to a stalled transaction (for example where there is no Stall field, or Stall == 0) are permitted to be discarded if they cannot be recorded. Stall events are generally not discarded and

are recorded when the Event queue is next writable, see section 7.2 Event queue recorded faults and events for details of exceptions to this rule. Software must consume events from the queue to free up space, otherwise the pending stall events will not be recorded. Stall events are otherwise no different to any other event. The queue is filled in the same circular order and such events do not overwrite existing, unconsumed, events.

Where multiple pending events contend for a write to the Event queue, Arm recommends that an implementation does not unfairly prioritize non-stall events above events with Stall == 1, if it is possible to do so. This helps avoid the case of a steady stream of terminated transactions from a misbehaving device holding back the events of stalled transactions for an indeterminate time.

If an event is generated in response to a transaction that is terminated, there is no requirement for the event to be made visible in the Event queue before a transaction response is returned to the client. See CMD\_SYNC, section 4.6.3 CMD\_SYNC(ComplSignal, MSIAddress, MSIData, MSIWriteAttributes), which enforces visibility of events relating to terminated transactions.

Note: This means that an event generated in response to a terminated transaction might be visible as an SMMU event before the point that the transaction termination is reported at the client device.

#### 3.5.4 Definition of event record write "Commit"

Generation of an event record can be abstracted into these steps:

- 1. A situation that triggers an event occurs, for example a translation fault.
- 2. An event record is assembled internally in the SMMU.
- 3. It is determined that it is possible to write a new queue entry.
- 4. The final event record is committed to be written to the Event queue entry.
- 5. The event record becomes visible in the Event queue:
  - a. The update to the record data location is visible to the required Shareability domain.
  - b. The PROD.WR index is updated to publish the new record to software. In terms of queue semantics, the record is not visible (even if it has been written to memory) until the write index is updated to cover the new entry.

The commit point, 4, represents the conceptual point after which the event will definitely be written to the queue and eventually become visible. Until commit, the event write might not happen (for example, if the queue is full and software never consumes any entries, the event write will never commit).

An event write that has committed is guaranteed to become visible in the Event queue, if the subsequent write does not experience an external abort, see section 7.2 *Event queue recorded faults and events*.

The write of a stall event record must not commit until the queue entry is deemed writable (the queue is enabled and not full). If it is not writable, the stall record is buffered until the queue is next writable, unless one of the exceptions in section 7.2 Event queue recorded faults and events causes the record to be discarded.

### 3.5.5 Event merging

Implementations are permitted to merge some event records together. This might happen where multiple identical events occurred, and can be used to reduce the volume of events recorded into the Event queue where individual events do not supply additional useful information.

Events can be merged where all of the following conditions are upheld:

- The event types and all fields are identical, except fields explicitly indicated in section 7.3 Event records.
- If present, the Stall field is 0. Stall fault records are not merged, see section 3.12.2 Stall model.

An implementation is not required to merge any events, but one that does is required to support the STE.MEV flag to enable or inhibit merging of events relating to a given stream.

Note: For debugging purposes, merging of some events can be disabled on a per-stream basis using the STE.MEV flag.

Software implementations (for example a virtual emulation of an SMMU) are not required to respect STE.MEV. A hypervisor might cause events to continue to be merged after a guest requests merging to be disabled, for example if it determines a misbehaving guest to be causing too many debug events.

See section 7.3.1 Event record merging for details.

# 3.5.6 Enhanced Command queue interfaces

An SMMU can implement multiple Command queues for the Non-secure or Secure SMMU programming interfaces. This is advertised in SMMU\_IDR1.ECMDQ and SMMU\_S\_IDR0.ECMDQ.

The components of the Enhanced Command queue feature are:

- Up to 256 Command queue control pages.
- Each Command queue control page contains the control interface for up to 256 queues.
- Each Command queue control page is implemented in registers in the SMMU.

The interface for each queue in a control page is similar to the SMMU\_CMDQ\_{BASE, CONS, PROD} registers.

The presence of Enhanced Command queue interfaces does not imply removal of the SMMU\_(S\_)CMDQ\_\* interfaces.

A Command queue control page contains multiple instances of the base, producer and consumer controls for a Command queue. Each instance is referred to as an Enhanced Command queue, ECMDQ.

An implementation might have more than one Command queue control page. The number of Command queue control pages available to Non-secure state is advertised in <a href="mailto:SMMU\_IDR6.CMDQ\_CONTROL\_PAGE\_LOG2NUMP">SMMU\_IDR6.CMDQ\_CONTROL\_PAGE\_LOG2NUMP</a>.

The Secure equivalent is SMMU\_S\_IDR6.CMDQ\_CONTROL\_PAGE\_LOG2NUMP.

The registers for each Command queue control page are:

- SMMU CMDQ CONTROL PAGE BASEn
- SMMU CMDQ CONTROL PAGE CFGn
- SMMU\_CMDQ\_CONTROL\_PAGE\_STATUSn

Within each Command queue control page are many ECMDQ controls. The ECMDQ is similar to the register interface for the Command queue in SMMUv3. Each ECMDQ occupies 16 bytes of address space.

| Offset | Field            | Size     | Description                               |
|--------|------------------|----------|---|
| 0x00   | SMMU_ECMDQ_BASEn | 64b / 8B | Pointer to queue base address, queue size |
| 0x08   | SMMU_ECMDQ_PRODn | 32b / 4B | Queue producer write index                |
| 0x0C   | SMMU_ECMDQ_CONSn | 32b / 4B | Queue consumer read index, error status   |

The SMMU reacts to updates of each SMMU\_ECMDQ\_PRODn in finite time.

For more information on the layout of the Command queue control pages, see:

- Section 6.1 Memory map
- Section 6.2.5 Registers in a Command queue control page

#### 3.5.6.1 Behavior

The SMMU accesses the Command queues using the attributes configured in SMMU\_(S\_)CR1.{QUEUE\_SH, QUEUE\_OC, QUEUE\_IC}, and the MPAM attributes configured in SMMU\_(S\_)GMPAM.

If any Enhanced Command queue interface is enabled such that SMMU\_(S\_)CR1.{QUEUE\_SH, QUEUE\_OC, QUEUE\_IC} could be used when generating an access, then SMMU\_(S\_)CR1.{QUEUE\_SH, QUEUE\_OC, QUEUE\_IC} are read-only.

The conditions for a queue being *empty*, *full* and *non-empty* are the same as for the SMMU\_(S\_)CMDQ\_CONS and SMMU\_(S\_)CMDQ\_PROD registers as specified in section 3.5.1 SMMU circular queues.

The SMMU consumes commands from a queue if the queue is non-empty.

A CMD\_SYNC consumed from an ECMDQ in a Command queue control page guarantees that the effects of commands previously-consumed on that queue are complete, including the reporting of events relating to configuration and translation information invalidated by those commands.

The rules for consumption of commands other than CMD\_SYNC are the same as for the Command queue controlled by SMMU\_(S\_)CMDQ\_{PROD, CONS}.

The rules for consumption a CMD\_SYNC issued to the Command queue via SMMU\_(S\_)CMDQ\_PROD are independent of EMDQ state. It is not required to synchronize commands and events relating to ECMDQ queues.

The SMMU is permitted to consume from many queues in parallel.

The SMMU does not give a guaranteed serialization or total order of Commands consumed across different queues.

For example, an implementation might consume from many queues in a round-robin or weighted round-robin schedule.

If SMMU\_IDR0.SEV == 1, the SMMU triggers a WFE wake-up event when any ECMDQ becomes non-full.

### 3.5.6.2 Enabling and disabling an ECMDQ interface

An ECMDQ interface is enabled when SMMU\_ECMDQ\_PRODn.EN == SMMU\_ECMDQ\_CONSn.ENACK == 1.

An ECMDQ interface is disabled when SMMU\_ECMDQ\_PRODn.EN == SMMU\_ECMDQ\_CONSn.ENACK == 0.

The same guarantees around being enabled, disabled and completing transitions between the two states apply as for SMMU\_(S\_)CR0.CMDQEN/SMMU\_(S\_)CR0ACK.CMDQEN.

In the transition from enabled to disabled, once the SMMU has updated SMMU\_ECMDQ\_CONSn.ENACK to 0, it is guaranteed that errors have been reported and consumption of commands has stopped, and therefore that SMMU\_ECMDQ\_CONSn.{ERR\_REASON, ERR, RD\_WRAP, RD} are stable.

The SMMU updates SMMU\_ECMDQ\_CONSn.ENACK even if SMMU\_ECMDQ\_PRODn.ERRACK != SMMU ECMDQ CONSn.ERR.

## 3.5.6.3 Errors relating to an ECMDQ interface

If the SMMU encounters any error while fetching or processing a command, it toggles the value of SMMU\_ECMDQ\_CONSn.ERR and updates the reason in SMMU\_ECMDQ\_CONSn.ERR\_REASON.

The SMMU updates SMMU\_ECMDQ\_CONSn.RD and SMMU\_ECMDQ\_CONSn.RD\_WRAP to point at the command that produced ERR\_REASON, in the same manner as SMMU\_(S\_)CMDQ\_CONS.RD points at a failed command.

If SMMU\_ECMDQ\_PRODn.ERRACK != SMMU\_ECMDQ\_CONSn.ERR as the result of an error, the SMMU does not consume commands.

If software inappropriately configures SMMU\_ECMDQ\_PRODn.ERRACK to mismatch SMMU\_ECMDQ\_CONSn.ERR, it is CONSTRAINED UNPREDICTABLE whether the SMMU consumes commands from that ECMDQ and whether a subsequent error is correctly reported. This CONSTRAINED UNPREDICTABLE behavior additionally applies in the case when software transitions an ECMDQ from disabled to enabled while SMMU\_ECMDQ\_PRODn.ERRACK != SMMU\_ECMDQ\_CONSn.ERR.

Disabling the ECMDQ, making SMMU\_ECMDQ\_PRODn.ERRACK and SMMU\_ECMDQ\_CONSn.ERR consistent, then enabling the ECMDQ is sufficient to restore predictable behavior.

If the update of SMMU\_ECMDQ\_CONSn.ERR is visible then the updates of ERR\_REASON, RD and RD\_WRAP are visible, and fetches from the corresponding queue have completed.

The SMMU updates SMMU\_ECMDQ\_CONSn.ENACK even if SMMU\_ECMDQ\_PRODn.ERRACK != SMMU\_ECMDQ\_CONSn.ERR.

Errors relating to ECMDQs are additionally reported in SMMU\_GERROR.CMDQP\_ERR for Non-secure state. ECMDQ errors for Secure state are similarly also reported in SMMU\_S\_GERROR.CMDQP\_ERR.

ECMDQs operate independently of the error status of SMMU\_(S\_)GERROR.CMDQ\_ERR.

If an error to be reported in any Non-secure SMMU\_ECMDQ\_CONS.ERR field occurs, and SMMU\_GERROR.CMDQP\_ERR is currently inactive, the error is additionally reported in SMMU\_GERROR.CMDQP\_ERR. The equivalent is true for Secure state, reporting in SMMU\_S\_GERROR.CMDQP\_ERR.

The activation, deactivation and state of SMMU\_(S\_)GERROR.CMDQP\_ERR have no effect on the Command queue control page or ECMDQ interfaces reached through it.

If the activation of SMMU\_(S\_)GERROR.CMDQP\_ERR is observable then the SMMU\_ECMDQ\_CONSn.ERR field indicating the reason for the activation is observable.

When the SMMU activates SMMU\_(S\_)GERROR.CMDQP\_ERR, the GERROR interrupt is triggered, in the same manner as other GERROR conditions in SMMUv3.

If the MSI from a CMD\_SYNC issued through a Command queue control page experiences an external abort, the abort is reported in SMMU\_(S\_)GERROR.MSI\_CMDQ\_ABT\_ERR in the same manner as for a CMD\_SYNC issued through the SMMU\_CMDQ\_\* interface.

# 3.6 Structure and queue ownership

Arm expects that the Non-secure Stream table, Command queue, Event queue and PRI queue are controlled by the most privileged Non-secure system software.

If present, Arm expects that the Secure Stream table, Secure Command queue and Secure Event queue are controlled by Secure software. For example, these would be controlled by software in EL3 if a separation in control between Secure EL1 and EL3 is required.

Arm expects that the stage 2 translation tables indicated by all STEs are controlled by a hypervisor.

The ownership of stage 1 CDs and translation tables depends on the configuration in use. If pointed to by a Secure STE, they are controlled by Secure software (one of EL3, S-EL2 or S-EL1). If pointed to by a Non-secure STE, they are controlled by Non-secure software (either NS-EL2 or NS-EL1).

Note: For example, the context might be one of the following:

- · Used by a bare-metal OS, which controls the descriptor and translation tables and is addressed by PA.
- Used internally by a hypervisor, which controls the descriptor and translation tables and is addressed by PA.
- Used by a guest, in which case Arm expects that the CD and translation tables are controlled by the guest, and addressed by IPA.

Note: When a hypervisor is used in a given Security state, Arm expects that the Event queue for that Security state is managed by the hypervisor, which forwards events into guest VMs as appropriate. StreamIDs might be mapped from physical to virtual equivalents during this process.

In virtualized scenarios, Arm expects a hypervisor to:

- · Convert guest STEs into physical SMMU STEs, controlling permissions and features as required.
  - Note: The physical StreamIDs might be hidden from the guest, which would be given virtual StreamIDs, so a mapping between virtual and physical StreamIDs must be maintained.
- Read and interpret commands from the guest Command queue. These might result in commands being issued to the SMMU or invalidation of internal shadowed data structures.
- Consume new entries from the PRI and Event queues, mapping from host StreamIDs to guest, and deliver appropriate entries to guest Event and PRI queues.

# 3.7 Programming registers

The SMMU registers occupy a set of contiguous 64K pages of system address space that contain mechanisms for discovering capabilities and configuring pointers to in-memory structures and queues. After initialization, runtime access to the registers is generally limited to maintenance of the Command, Event and PRI queue pointers and interaction with the SMMU is performed using these in-memory queues.

Optional regions of IMPLEMENTATION DEFINED register space are supported in the memory map.

See section 6.1 *Memory map* for register definitions and layout.

# 3.8 Virtualization

Devices can be put under direct guest control with stage 2-only mappings, without requiring guest interaction with the SMMU. To the guest OS, they appear as though the device is directly connected and might request DMA to PAs (IPAs) directly.

The SMMU does not provide programming interfaces for use directly by virtual machines. Arm expects that, where stage 1 facilities are required for use by a guest in virtualization scenarios, this is supported using hypervisor emulation of a virtual SMMU, or a similar interface for use by a virtual machine.

Implementations might provide an IMPLEMENTATION DEFINED number of extra hardware interfaces that are located in an IMPLEMENTATION DEFINED manner but are otherwise compatible with the SMMUv3 programming interface. Each interface might be mapped through to a guest VM for it to use directly, for example appearing as a stage 1-only interface to the guest while the hypervisor interface appears as stage 2-only. The management of such an implementation is beyond the scope of this document.

# 3.9 Support for PCI Express, PASIDs, PRI and ATS

A PCI RequesterID maps directly to the low-order bits of a StreamID, therefore maps to one STE, see section 3.2 Stream numbering. A PCIe Function is then the minimum granularity that can be assigned to a VM. The PCIe PASID prefix allows a Function to be subdivided into parts, each of which is intended to be assigned to a different user space process at stage 1. The prefix is optional. Transactions from one StreamID might be supplied with a SubstreamID or not, on a per-transaction basis. Because the prefix just identifies a portion of a Function, the Function remains otherwise indivisible and remains the granularity at which assignments to VMs are made. Therefore, in PCI terms:

- Stage 2 is associated with a RequesterID (identifying a Function). The Function is assigned to a VM.
- Stage 1 is associated with a (RequesterID, PASID) tuple. That is, the PASID differentiates between different stage 1 translation contexts.
- The PASID identifies which of the parts or contexts of the Function are assigned to which process or driver at stage 1.
- If transactions from a Function are translated using stage 2 but stage 1 is unused and in bypass, there are no stage 1 translation contexts to differentiate with a PASID. Supply of a PASID or SubstreamID to a configuration without stage 1 translation causes the translation to fail. Such transactions are terminated with an abort and C\_BAD\_SUBSTREAMID is recorded.

PASIDs can be up to 20 bits in size. PASIDs are optional, configurable, and of a size determined by the minimum of the endpoint, system software, PCIe Root Complex and the individually-supported substream width of the SMMU.

The SMMU is not required to report an error in the case where an endpoint and Root Complex emit a PASID with a value greater than can be expressed in the SubstreamID width supported by the SMMU. In this scenario, the PASID might be truncated to the SubstreamID size on arrival at the SMMU.

In order to minimize PCIe-specific terms, a RequesterID is referred to using a StreamID (to which the RequesterID maps in a hardware-specific manner). In the SMMU, a PASID is referred to as a SubstreamID. Even when a client device supports SubstreamIDs, it is not mandatory to supply a SubstreamID with all transactions from that device. PCIe permits a PASID to be supplied, or not, on a per-transaction basis. Therefore, where a SubstreamID is input to the SMMU, a validity flag is also provided and this is asserted when a PASID is present.

The PASID tag provides additional permission attributes on top of the standard PCIe read/write attribute. The tag can express an Execute and Privileged state that correspond to the SMMU INST and PRIV attributes. A PCIe transaction without a PASID is considered Data, unprivileged. The mapping between PCIe and SMMU permissions is described in section 13.7 PCIe permission attribute interpretation.

# 3.9.1 ATS Interface

An optional extra hardware interface might be provided by an SMMU implementation to support PCIe ATS [1] and PRI. This interface conveys translation and paging requests and responses to and from the PCIe Root Complex, which bridges requests and responses into the PCIe domain.

Whether the SMMU implements ATS can be discovered from SMMU\_IDR0.ATS. If ATS is implemented, whether the SMMU also implements PRI can be discovered from SMMU\_IDR0.PRI. This support determines the behavior of SMMU-local configuration and commands but does not guarantee that the rest of the system, and all clients of an SMMU, also support ATS and PRI. The ATS and PRI capabilities of dependent PCIe Root Complexes and endpoints thereof are discovered through other means.

PCIe ATS has the following properties:

• Note: ATS aims to improve the performance of a system using an SMMU, known as a *Translation Agent* in PCIe terminology, by caching translations within the endpoint or requester. This can remove contention on a shared TLB, or reduce latency by helping the device to request translation ahead of time.

- The remote endpoint Address Translation Cache (ATC, which is equivalent to a TLB) is filled on-demand by
  making a Translation Request to the Root Complex which forwards it to the SMMU. If the translation exists
  and permission checks pass, a Translation Completion response is given with a Physical Address and the
  ATC caches this response.
- The return of a translated, physical address to an endpoint grants the endpoint permission to access the
  physical address. The endpoint can now make direct access to PAs, which it does by tagging outgoing traffic
  as Translated. The Root Complex is expected to provide this tag to the SMMU. The SMMU might then allow
  such transactions to bypass translation and progress directly into the system.
- If a Translation Request would result in a fault or error, a negative response is returned and the endpoint is not able to access the address using ATS. This denial might be fatal to the endpoint, reported in a device-specific manner, or when PRI is used, initiate a page-in request.
- Page access permission checking is performed at the time of the Translation Request, and takes the form
  of a request for permission to read or to read/write (and, optionally, to execute). The response grants the
  device access to read or to read/write (and, optionally, to execute) as specified in [1]. The response returns
  the permissions that are available, which might consist of a subset of the requested permissions.

Note: For example, a request to read and write a page might succeed, but only permission to read might be granted. The endpoint does not write pages it has not been granted write access to.

- ATS translation failures are reported to the endpoint, which might make an error software-visible, but the SMMU does not record fault events for ATS translation failures.
- Invalidation of the ATC translations is required whenever a translation changes in the SMMU. This is done in software. Broadcast invalidation operations might affect the internal translation caches of the SMMU, but these operations are not forwarded into the PCIe domain.
  - Note: An Arm broadcast TLB invalidation provides an address, ASID and VMID. The SMMU does not
    map this information back to the RequesterID of an endpoint in hardware.
  - Note: When CD.TBI0 or CD.TBI1 are used to enable use of tagged pointers with an endpoint that uses ATS, system software must assume that a given virtual address has been cached by the endpoint's ATC with any value of address bits [63:56]. This means that invalidation of a given virtual address VA[55:12] requires either 256 ATC invalidation operations to invalidate all possible aliases that the ATC might have cached, or an ATC invalidate-all operation.
- ATC invalidation is performed using SMMU commands which the SMMU forwards to the Root Complex.
  The invalidation responses are collected, and the SMMU maintains the ordering semantics upheld by the
  Root Complex in which a transaction that might be affected by an ATC invalidate must be visible before the
  ATC invalidation completes.
- ATS must be disabled at all endpoints before SMMU translation is disabled by clearing SMMU CR0.SMMUEN.
- An ATS Translation Request might be fulfilled using SMMU TLB entries, or cause SMMU TLB entries
  to be inserted. Therefore, after a change of translation configuration, an ATC invalidate must be preceded
  by SMMU TLB invalidation. Software must ensure that the SMMU TLB invalidation is complete before
  initiating the ATC invalidation.

Note: This order ensures that an ATS Translation Request performed after an ATC invalidate cannot observe stale cached translations.

- ATS and PRI are not supported from Secure streams.
  - In Secure STEs, the EATS field is RESO.
  - CMD\_ATC\_INV and CMD\_PRI\_RESP are not able to target Secure StreamIDs.
  - The SMMU terminates any incoming traffic marked Translated on a Secure StreamID, aborting the transaction and recording F\_TRANSL\_FORBIDDEN.
  - It is IMPLEMENTATION DEFINED whether it is possible for ATS Translation Requests with a Secure StreamID to reach the SMMU.

- If it is possible for an implementation to receive an ATS Translation Request from a Secure StreamID, the request is aborted with a UR response and F\_BAD\_ATS\_TREQ is recorded into the Secure Event queue. The check for a Secure ATS Translation Request takes place prior to checking of StreamID or configuration lookup.
- Support for CMD\_ATC\_INV and CMD\_PRI\_RESP on the Secure Command queue is optional and is indicated by SMMU\_S\_IDR3.SAMS.
- The Smallest Translation Unit, (STU, as programmed into the ATS Control Register of the Endpoint) is defined as the smallest granule that the SMMU implements, as discovered from SMMU\_IDR5. Software must program the same STU size for all devices serviced by an SMMU, and must not assume all SMMUs in the system are identical in this respect.

The Page Request Interface (PRI) adds the ability for PCIe functions to target DMA at unpinned dynamically-paged memory. PRI depends on ATS, but ATS does not mandate PRI. Like ATS, PRI can be enabled on a per-function basis. When enabled:

- If an ATS request fails with a not-present result, the endpoint issues a PRI page request to ask software to make the requested pages resident.
- Software receives these PRI Page Requests (PPRs) on the PRI queue and issues a positive PRI response
  command to the SMMU after making pages present. If a requested address is unavailable, a programming
  failure has caused the device to request an illegal address, and software must issue a negative PRI response
  command.
- The net effect is that a hypervisor or OS can use unpinned, dynamically-paged memory for DMA.
- The PRI queue is of a fixed size and PPRs must not be lost. To ensure this, page request credits are issued by
  the most privileged system software (that which controls the PRI queue) to each PCIe endpoint using the PRI
  capability in its configuration space.
- If a guest is allowed to use PRI, it enables PRI (through the configuration space) and sets up its own PRI queue. The hypervisor needs to proxy PPRs from the host PRI queue to the guest PRI queue. However, the total system number of PRI queue entries is limited by the PRI queue size of the hypervisor.
- The PRI queue size is limited up to a per-SMMU maximum, indicated by SMMU\_IDR1.PRIQS. Arm expects that where PRI is used with virtualization then each guest discovers how many PRI queue entries its emulated SMMU supports. The host allocates N from its allocation of L, and ensures that the guest gives out a maximum of N credits (using configuration space) to devices controlled by the guest. L is the total number of PRI queue entries in the PRI queue of the host and is the maximum number of credits actually given out to devices.
- If the PRI queue becomes full because of erroneous behavior in a client device, the SMMU and Root Complex will respond to further incoming Page Request messages by returning a *successful* PRG response. This will not fatally terminate device traffic and a device will simply try ATS, fail, and try PRI again. Arm expects that a system employing this technique would remain functional and free-flowing, if requests were consumed from the PRI queue and space for new requests created, see section 8.1 *PRI queue overflow*.

Note: ATS operation enables an endpoint to issue Translated requests that bypass the SMMU in some configurations. In these cases use of ATS could be a security issue, particularly when considering untrusted, subverted or non-compliant ATS devices. For example, a custom FPGA-based device might mark requests as Translated despite the ATS protocol and translation tables not having granted access.

SMMU\_CR0.ATSCHK controls whether the SMMU allows Translated traffic to bypass with no further checks. If configured as requiring further checks, Translated requests from an endpoint are controlled by the associated STE.EATS field, which provides a per-device control of whether ATS traffic is allowed. When allowed, Translated requests are accepted, otherwise, an abort is reported and a F\_TRANSL\_FORBIDDEN event recorded.

Note: An implementation might perform this traffic interception and checking in a manner that is much quicker than performing full translation, thereby retaining a performance advantage of using ATS while achieving greater safety than permitting all ATS traffic.

STE.EATS also allows a mode in which ATS responses are returned with IPAs, the output from the stage 1 of a stage 1 and stage 2 configuration, so that later Translated requests from the endpoint are considered IPAs and further translated by the SMMU using the stage 2 configuration of the stream. This allows ATS to be used

(for example with PRI) while maintaining stage 2 isolation. This mode is optional in an implementation, and support is discovered through SMMU\_IDR0.NS1ATS. When implemented, this mode can only be used when SMMU\_CR0.ATSCHK forces traffic not to bypass the SMMU, as stage 2 translation needs to be applied.

Note: When ATS is used with nested stage 1 and stage 2 translation, any modification to stage 1 or stage 2 requires an invalidation of ATC entries, which cache information derived from both stages. This also applies to the EATS == 0b10 Split-stage ATS case.

When Translated transactions bypass the SMMU, an incoming address greater than the output address size (OAS) has one of the following CONSTRAINED UNPREDICTABLE behaviors:

- The incoming address is truncated to the OAS. The SMMU does not provide address size error-checking on Translated transactions.
- The transaction is terminated with an abort. No event is recorded.

Note: This situation would not normally arise outside of incorrect ATC invalidation when transitioning between Split-stage ATS mode and regular ATS mode.

Arm expects that a typical implementation connects an SMMU to a PCIe Root Complex so that incoming StreamIDs are generated directly from PCIe RequesterIDs. The ATS Interface requires a simple transformation between RequesterID and StreamID, so that StreamID[15:0] == RequesterID[15:0]. Where multiple Root Complexes are connected to one SMMU, the upper bits of StreamID, StreamID[N:16], correspond to the Root Complex supporting a given endpoint.

Arm expects that most highly-integrated non-PCIe devices requiring translation and paging facilities will use implementation-specific distributed SMMU TLB facilities, rather than using ATS and PRI. Using SMMU facilities allows such devices to participate in broadcast TLB invalidation and use the Stall fault model.

If the translation requested by an ATS request is valid and HTTU is enabled, the SMMU must update Translation Table Dirty/Access flags on receipt of the ATS Translation Request, see 3.13 *Translation table entries and Access/Dirty flags* below An ATS request is either for a read-only translation (in which case the NW flag of the request is set) so only the Access flag is updated, or for a read-write translation (in which case the NW flag of the request is clear) for which both the Access flag and the dirty state of the page are updated.

Note: Because the intention is for the actual traffic to bypass the SMMU, the ATS request is the only opportunity the SMMU will have to note the access in the flags.

A PASID tag can also be applied to an ATS Translation Request to select translation under a specific SubstreamID. A PASID-tagged ATS TR requests that the endpoint be granted access to a given address, according to the Execute and Privileged attributes of the PASID in addition to the existing NW write intention.

When the SMMU returns an ATS Translation Completion for a request that had a PASID, the Global bit of the Translation Completion Data Entry must be zero.

Note: The SMMU differentiates translation contexts intended to be shared with the PE from those not shared, using the CD.ASET mechanism. Whether a global translation matches is also a function of ASET. However, no mechanism exists to indicate that all possible global translations (from all contexts used by an endpoint) share an identical address space layout so that global translations can be used. The ATS Global flag must be cleared because a non-shared context must not match global translations from a shared context (and vice versa).

Note: Arm expects that general-purpose software will require HTTU for use with PRI. See section 3.13.6 ATS, PRI and translation table flag update for more information on flag updates with ATS.

Note: PRI requires ATS to be implemented, but ATS does not require PRI to be implemented.

Note: An SMMU that does not support HTTU can support paged DMA mappings for non-PCI devices using the Stall fault model, see section 3.12 *Fault models, recording and reporting*. PCIe cannot be used with the Stall fault model, so a requirement for paged DMA with PCIe implies a requirement for PRI, which implies a requirement for HTTU.

Transactions that make use of ATS might differ from ordinary PCIe non-ATS transactions in several ways:

- Translation Requests that do not successfully translate, including those that would ordinarily have CD.A == 0 RAZ/WI behavior, cause an error in the endpoint (recorded in an endpoint-defined manner) or a PRI request, instead of an error or fault being recorded using the SMMU Event queue.
- Changes to translations require use of CMD\_ATC\_INV in addition to SMMU TLB invalidation.
- ATS Translated transactions might not represent Instruction/Data and/or Privileged/User marking on the interconnect to memory in the same way as Untranslated transactions.
- Pages with execute-only and no read, writable executable permissions cannot be represented, and are inaccessible when using ATS, see section 13.7 *PCIe permission attribute interpretation*.

## 3.9.1.1 Responses to ATS Translation Requests and Translated transactions

A Translation Request made from a StreamID for which ATS is explicitly or implicitly disabled (because of SMMU\_CR0.SMMUEN == 0, or the effective EATS == 0b00 including where this is because of a Secure STE, or STE.Config == 0b000) results in an ATS Translation Completion with Unsupported Request (UR) status.

| Configuration or scenario   | For an ATS Translation Request, leads to               |
|---|--|
| SMMUEN == 0   | Terminated with UR status and F_BAD_ATS_TREQ generated |
| Using a Secure StreamID   | Terminated with UR status and F_BAD_ATS_TREQ generated |
| STE.Config == 0b000   | Terminated with UR status                              |
| STE.Config == 0b100   | Terminated with UR status and F_BAD_ATS_TREQ generated |
| Effective STE.EATS == 0b00 (Note: Includes EATS == 0b10 when ATSCHK == 0) | Terminated with UR status and F_BAD_ATS_TREQ generated |

A Translation Request that encounters an Address Size, Access or Translation fault arising from the translation process for a page, at either stage, results in an ATS Translation Completion with Success status and R = W = 0 in the Completion Data Entry for that page and no fault is recorded in the SMMU. If the R = W = 0 Translation Completion Data Entry is the first or only entry in the Translation Completion, its translation size is equal to the STU size. A Permission fault can also lead to this response, but other cases that would cause a Permission fault for an ordinary transaction might result in some, but not all, permissions being granted to the endpoint. See 13.7 PCIe permission attribute interpretation for information on permission calculation for ATS.

Consistent with Armv8-A, in a two-stage translation, the IPA to PA translation of the output address of a stage 1 Table, Block, or Page descriptor is not architecturally performed unless the descriptor is valid and no fault would arise from the descriptor. This behavior applies to a two-stage translation that is performed for an ATS Translation Request, which means that translation stops if stage 1 leads to an Address Size, Access, or Translation fault, or evaluates to a Translation Completion that grants no permissions. If the final IPA for stage 1 is valid, but does not provide any access permissions for the Translation Request, the IPA is not translated at stage 2, and no faults from stage 2 are visible. For example, this might happen if the translation tables do not grant any Unprivileged access permissions at stage 1 and the Translation Request has an effective Priv value of 0. See 13.7.1 Permission attributes granted in ATS Translation Completions.

Note: The case of Split-stage ATS is included, because permissions are determined from both stages. For more information, see section 13.6.3 *Split-stage (STE.EATS* == 0b10) *ATS behavior and responses*.

A Translation Request that encounters any configuration error (for example ILLEGAL structure contents, or external abort on structure fetch) results in an ATS Translation Completion with Completer Abort (CA) status:

| If an ordinary transaction were to trigger a  | an ATS Translation Request with the same properties leads to:   |
|---|---|
| C_BAD_STREAMID  | Terminate with CA status.  If SMMU_CR2.REC_CFG_ATS == 1 and SMMU_CR2.RECINVSID == 1, the event is recorded. Otherwise, no event is recorded.  |
| F_STE_FETCH C_BAD_STE F_VMS_FETCH F_CFG_CONFLICT F_TLB_CONFLICT C_BAD_SUBSTREAMID F_STREAM_DISABLED F_WALK_EABT F_CD_FETCH C_BAD_CD | Terminate with CA status.  If SMMU_CR2.REC_CFG_ATS == 1, the event is recorded. Otherwise, no event is recorded.  |
| F_ADDR_SIZE<br>F_ACCESS<br>F_TRANSLATION  | Success: R == W == 0 (access denied) This includes stage 2 faults for a CD fetch or stage 1 translation table walk.   |
| F_PERMISSION  | Success. R, W and Exe permission is granted, where requested, from available translation table permissions. In the extreme case, a translation with no access permission gives $R == W == 0$ . Where F_PERMISSION arises at stage 2 for a CD fetch or stage 1 translation table walk, the response of Success and $R == W == 0$ is given. |
| GPF on output address   | Terminate with CA status.  Note: See Interactions with PCIe ATS for details of when Granule Protection Checks are performed on the output address for ATS Translation Requests.   |

For Event records that are recorded for ATS Translation requests when SMMU\_CR2.REC\_CFG\_ATS == 1, the RnW field is UNKNOWN.

Note: In an SMMU for RME, F\_STE\_FETCH, F\_CD\_FETCH, F\_VMS\_FETCH and F\_WALK\_EABT can be generated as the result of a GPC fault. See 3.24.2 *Interactions with PCIe ATS*.

Translated transactions generally pass through the SMMU unless the Non-secure SMMUEN is disabled, a Secure stream is used, or if ATSCHK == 1 and therefore additional configuration checks are performed.

| Configuration or scenario   | For a Translated Transaction, leads to:  |
|-----------------------------|--|
| SMMUEN == 0                 | F_TRANSL_FORBIDDEN and aborted.  |
| Using a Secure StreamID     | F_TRANSL_FORBIDDEN and aborted.  |
| STE.Config == 0b000         | If ATSCHK == 1, aborted.   |
| STE.Config == 0b100         | If ATSCHK == 1, F_TRANSL_FORBIDDEN and aborted.  |
| Effective STE.EATS == 0b00  | If ATSCHK == 1, F_TRANSL_FORBIDDEN and aborted.  |
| GPC fault on output address | Terminated with CA status. The GPC fault is reported as described in 3.24.4 <i>Reporting of GPC faults</i> . |

| If an ordinary transaction were to trigger a                    | a Translated transaction with the same properties leads to:  |
|---|--|
| F_UUT   | Aborted. No event is recorded.   |
| C_BAD_STREAMID F_STE_FETCH F_VMS_FETCH C_BAD_STE F_CFG_CONFLICT | If ATSCHK == 1, aborted. If ATSCHK == 1 and SMMU_CR2.REC_CFG_ATS == 1, the event is recorded in the Event queue. Otherwise, no event is recorded.  Note: If ATSCHK == 0, the SMMU does not check configuration for Translated transactions, so does not detect these conditions.  Note: Reporting of C_BAD_STREAMID is not affected by SMMU_CR2.RECINVSID. |

If a Translated transaction experiences a second stage 2 translation because of an STE.EATS == 0b10 configuration, and if a fault occurs during that stage 2 translation, then the transaction is terminated with an abort and an event is recorded in the same way as for an ordinary transaction.

Note: Since a Translated transaction does not have a PASID, it is presented to the SMMU with PnU == 0, InD == 0 and SSV == 0. A resulting fault is reported as Stage 2, with the input address as given by the Translated transaction.

If STE.S1DSS causes a stage 1 skip, and STE.Config == 0b101 (stage 1-only), the response is Success, U == 0, R == W == 1, identity-mapping (see 13.6 PCIe and ATS attribute/permissions handling).

#### 3.9.1.2 ATC invalidation timeout

A CMD\_ATC\_INV causes an ATS Invalidate Request to be sent to an endpoint and, in the case that a response is not received within the timeout period specified by ATS, Arm strongly recommends the following behavior:

- The Root Complex isolates the endpoint in a PCI-specific manner, if it is possible to do so.
- A CMD\_SYNC that waits for completion of one or more prior CMD\_ATC\_INV operations causes a CERROR\_ATC\_INV\_SYNC command error if any of the CMD\_ATC\_INV operations have not successfully completed. See 7.1 Command queue errors.
  - Note: Command processing stops and this situation is differentiated from a normal completion of a CMD\_SYNC, which avoids the potential re-use and corruption of a page that has been unmapped but whose translation was incorrectly invalidated.
- If it is not possible for an implementation to cause CERROR\_ATC\_INV\_SYNC for a CMD\_SYNC that waits for the completion of failed CMD\_ATC\_INV operations, Arm recommends that the CMD\_SYNC does not complete.
  - Note: This scenario is not recoverable but prevents the invalidation from appearing to have completed, leading to potential data corruption (the error is contained and propagation is avoided).
- In the event of a failed CMD\_ATC\_INV, Arm strongly recommends that a related CMD\_SYNC does not
  complete without raising a command error. An IMPLEMENTATION DEFINED error mechanism asynchronous
  to the completion of the CMD\_SYNC must record information of the failure.
  - Note: A completion of a CMD\_SYNC without completing an invalidation might lead to corruption of a
    page that is subsequently re-used by different mappings.

#### 3.9.1.3 ATC invalidation errors

A CMD\_ATC\_INV that generates an ATS Invalidate Request that causes a UR response from an endpoint completes without error in the SMMU. An invalidation might not have been performed in response to the command.

Note: A UR response to an invalidation can occur in several circumstances as specified by [1], including where an invalidation is sent with an out-of-range PASID value.

# 3.9.2 Changing ATS configuration

The ATS behavior of an endpoint is dependent on the STE.EATS field that is associated with the endpoint and on SMMU\_CR0.ATSCHK. In addition to enabling extra checks on Translated transactions, ATSCHK changes the interpretation of the EATS == 0b10 encoding, and because ATSCHK is permitted to be cached in configuration caches, this means that a change to ATSCHK must be followed by invalidation of any STEs that are required to heed the new value.

Note: The EATS encodings of 0b01 and 0b10 will respond to Translation Requests and interpret Translated transactions using different address spaces. A direct transition between these encodings might cause IPAs to be interpreted as PAs or vice-versa, which might lead to data corruption.

To enable ATS on an existing valid STE with EATS == 0b00:

- 1. EATS is set to 0b01 or 0b10 and caches of the STE are invalidated (including CMD\_SYNC to ensure completion of the invalidation)
- 2. ATS is enabled at the endpoint.

To disable ATS on an existing STE with EATS != 0b00:

- 1. ATS must be disabled at the endpoint, the ATCs invalidated, and CMD\_SYNC used to ensure visibility of prior transactions using ATS that are in progress.
- 2. EATS is then set to 0b00.
- 3. Caches of the STE are then invalidated.

EATS must not be transitioned between 0b01 and 0b10 (in either direction) without first disabling ATS with the procedure described in this section, transitioning through EATS == 0b00.

EATS == 0b10 is valid only when SMMU\_CR0.ATSCHK == 1. ATSCHK must not be cleared while STE configurations (and the possibility of caches thereof) exist with EATS == 0b10. Before clearing ATSCHK, all STE configurations with EATS == 0b10 must be re-configured to use EATS == 0b00 or EATS == 0b01, using the procedures described in this section.

Note: This ensures that Translated traffic using IPA addressing (originating from Translation Requests handled by a stage 1-only EATS == 0b10 configuration) does not encounter an SMMU with ATSCHK == 0, which would pass the traffic into the system with a PA.

Although ATSCHK == 0 causes EATS == 0b10 to be interpreted as 0b00 (ATS disabled), ATSCHK must not be used as a global ATS disable.

## To set ATSCHK to 1:

- 1. Set SMMU\_CR0.ATSCHK == 1 and wait for Update procedure to complete.
- 2. STEs (pre)fetched after this point will interpret STE.EATS according to the new ATSCHK value.
- 3. Unexpected Translated traffic that is associated with an STE with EATS == 0b00 will now be terminated.
- 4. ATS can be enabled on an STE as described here:
  - a. Note: The STE update procedure invalidates the STE, which will invalidate any old ATSCHK value cached with it.

#### To clear ATSCHK to 0:

- 1. Ensure that the ATS is disabled for all STEs that were using EATS == 0b10, flushing ATCs and transitioning through EATS == 0b00.
  - a. Note: After this point, there will be no relevant caches of ATSCHK.
- 2. Set SMMU\_CR0.ATSCHK == 0 and wait for the Update procedure to complete.
- 3. STEs (pre)fetched after this point will interpret STE.EATS according to the new ATSCHK value.
- 4. Translated traffic now bypasses the SMMU without additional checks.

5. Split-stage ATS cannot be enabled on an STE, meaning EATS == 0b10 must not be used.

Referring to section 13.6.3 *Split-stage (STE.EATS* == 0b10) *ATS behavior and responses* and 13.6.4 *Full ATS skipping stage 1*, it is possible to configure ATS for a stream where only requests made from substreams (PASIDs) return actual translations, and non-substream Translation Requests return an identity-mapped response that might be cached at the endpoint. Substream configuration (STE.S1DSS and STE.S1CDMax) therefore affects the contents of ATS Translation Completion responses and any change of this configuration must also invalidate endpoint ATCs.

### 3.9.3 SMMU interactions with CXL

The Compute Express Link Specification (CXL) [6] introduces some new features to ATS.

An SMMU implementation intended to be used with Type 1 or Type 2 CXL devices (those that issue CXL.cache transactions) must support ATS (SMMU\_IDR0.ATS == 1).

An SMMU implementation is permitted to not check CXL.cache transactions against STE.EATS, even if SMMU\_CR0.ATSCHK = 1.

It is a software error to configure STE.EATS = 0b10 for a StreamID associated with a CXL device that issues CXL.cache transactions.

If the SMMU receives an ATS Translation Request that has the Source-CXL bit set, for a StreamID that has STE.EATS = 0b10, the ATS Translation Completion has the CXL.io bit set.

If the translation for an ATS Translation Request with the Source-CXL bit set returns a memory type other than Inner Write-Back Cacheable, Outer Write-Back Cacheable, Shareable, the CXL io bit is set in the ATS Translation Completion.

If the memory attributes for a translation request cannot be determined, for example if both stages of translation are disabled, by setting STE.S1DSS=0b01 and STE.Config=0b101, and STE.SHCFG or STE.MTCFG are configured to Use incoming, then the SMMU uses default attributes of Inner Write-Back Cacheable, Outer Write-Back Cacheable, Shareable when issuing an ATS Translation Completion.

## 3.10 Support for Secure state

The Arm architecture provides support for two Security states, each with an associated physical address space (PA space):

| Security state   | PA space             |
|------------------|----------------------|
| Secure state     | Secure (NS == 0)     |
| Non-secure state | Non-secure (NS == 1) |

SMMU\_S\_IDR1.SECURE\_IMPL indicates whether an SMMU implementation supports the Secure state.

The SMMU always supports the Non-secure state and programming interface.

When  $SMMU_S_IDR1.SECURE_IMPL == 0$ :

- The SMMU does not support the Secure state.
- SMMU\_S\_\* registers are RAZ/WI to all accesses.
- Support for stage 1 translation is OPTIONAL.

When **SMMU\_S\_IDR1**.SECURE\_IMPL == 1:

- The SMMU supports the Secure state.
- SMMU\_S\_\* registers configure Secure state, including a Secure Command queue, Secure Event queue and a Secure Stream table.
- The SMMU supports stage 1 translation and might support stage 2 translation.
- The SMMU can generate transactions to the memory system, to Secure PA space (NS == 0) and Non-secure PA space (NS == 1) where permitted by SMMU configuration.

With the exception of SMMU\_S\_INIT, SMMU\_S\_\* registers are Secure access only, and RAZ/WI to Non-secure accesses.

Note: Arm does not expect a single software driver to be responsible for programming both the Secure and Non-secure interface. However, the two programming interfaces are intentionally similar.

When a stream is identified as being under Secure control according to SEC\_SID, see 3.10.1 *StreamID Security state (SEC\_SID)*, its configuration is taken from the Secure Stream table or from the global bypass attributes that are determined by SMMU\_S\_GBPA.

Otherwise, its configuration is taken from the Non-secure Stream table or from the global bypass attributes that are determined by SMMU\_GBPA.

The Secure programming interface and Non-secure programming interface have separate global SMMUEN translation-enable controls that determine whether bypass occurs.

A transaction that belongs to a Stream that is under Secure control can generate transactions to the memory system that target Secure (NS == 0) and Non-secure (NS == 1) PA spaces. A transaction that belongs to a Stream that is under Non-secure control can only generate transactions to the memory system that target Non-secure (NS == 1) PA space.

| Security state | Permitted target PA spaces |
|----------------|----------------------------|
| Secure         | Secure, Non-secure         |
| Non-secure     | Non-secure                 |

#### 3.10.1 StreamID Security state (SEC\_SID)

StreamID Security state (SEC\_SID) determines whether a given transaction stream is under the control of the Secure or the Non-secure programming interface.

The association between a device and the Secure or Non-secure programming interface is a system-defined property.

If SMMU S IDR1.SECURE IMPL == 0, then incoming transactions have a StreamID, and either:

- A SEC\_SID identifier with a value of 0.
- No SEC\_SID identifer, and SEC\_SID is implicitly treated as 0.

If SMMU\_S\_IDR1.SECURE\_IMPL == 1, incoming transactions have a StreamID, and a SEC\_SID identifier.

| SEC_SID | Meaning  |
|---------|--|
| 0       | The StreamID is a Non-secure stream, and indexes into the Non-secure Stream table. |
| 1       | The StreamID is a Secure stream, and indexes into the Secure Stream table.         |

The Non-secure StreamID namespace and the Secure StreamID namespace are separate namespaces. The assignment of a client device to either a Secure StreamID or a Non-secure StreamID, and reassignment between StreamID namespaces, is system-defined.

In this document, the terms Secure StreamID and Secure stream refer to a stream that is associated with the Secure programming interface, as determined by SEC\_SID.

The terms Non-secure StreamID and Non-secure stream refer to a stream that is associated with the Non-secure programming interface, which might be determined by SEC\_SID or the absence of the SEC\_SID identifier.

Note: Whether a stream is under Secure control or not is a different property to the target PA space of a transaction. If a stream is Secure, it means that it is controlled by Secure software through the Secure Stream table. Whether a transaction on that stream results in a transaction targeting Secure PA space depends on the translation table attributes of the configured translation, or, for bypass, the incoming NS attribute.

#### 3.10.2 Secure commands, events and configuration

In this document, the term Event queue and the term Command queue refer to the queue that is appropriate to the Security state of the relevant stream. Similarly, the term Stream table and Stream Table Entry (STE) refer to the table or table entry that is appropriate to the Security state of the stream as indicated by SEC SID.

For instance:

- An event that originates from a Secure StreamID is written to the Secure Event queue.
- An event that originates from a Non-secure StreamID is written to the Non-secure Event queue.
- Commands that are issued on the Non-secure Command queue only affect streams that are configured as Non-secure.
- Some commands that are issued on the Secure Command queue can affect any stream or data in the system.
- The stream configuration for a Non-secure StreamID X is taken from the X<sup>th</sup> entry in the Non-secure Stream table.
- Stream configuration for a Secure StreamID Y is taken from the Y<sup>th</sup> entry in the Secure Stream table.

The Non-secure programming interface of an SMMU with SMMU\_S\_IDR1.SECURE\_IMPL == 1 is identical to the interface of an SMMU with SMMU\_S\_IDR1.SECURE\_IMPL == 0.

Note: To simplify descriptions of commands and programming, this document refers to the Non-secure programming interface registers, Stream table, Command queue and Event queue even when SMMU\_S\_IDR1.SECURE\_IMPL == 0.

The register names associated with the Non-secure programming interface are of the form  $SMMU_x$ . The register names associated with the Secure programming interface are of the form  $SMMU_s$ . In this document, where reference is made to a register but the description applies equally to the Secure or Non-secure version, the register name is given as  $SMMU_s$ . Where an association exists between multiple Non-secure, or multiple Secure registers and reference is made using the  $SMMU_s$  syntax, the registers all relate to the same Security state unless otherwise specified.

The two programming interfaces operate independently as though two logical and separate SMMUs are present, with the exception that some commands issued on the Secure Command queue and some Secure registers might affect Non-secure state, as indicated in this document. This independence means that:

- The Command and Event queues that are associated with a programming interface operate independently of the Command and Event queues that are associated with the other programming interface. The operation of one does not affect the other programming interface, for example when:
  - The queues are full.
  - The queues overflow.
  - The queues experience an error condition, for example a Command queue that stops processing because of a command error, or an abort on queue access.
- Translation through each programming interface can be separately enabled and disabled using the SMMUEN
  field that is associated with the particular programming interface. This means that one interface might bypass
  transactions in which case the behavior is governed by the respective SMMU\_(S\_)GBPA and the other
  programming interface might translate transactions.
- Error conditions in SMMU\_(S\_)GERROR apply only to the programming interface with which the register
  is associated.
- Each interface has its own ATOS interface, where ATOS is implemented.
- Interrupts are configured and enabled separately for the Secure and Non-secure programming interface interrupt sources.

When SMMU\_S\_IDR1.SECURE\_IMPL == 1, Arm expects that the SMMU will be controlled by a PE that also implements Secure state. The host PE might:

- Implement Armv7-A.
- Implement Armv8-A, with EL3 using AArch64 state.
- Implement Armv8-A, with EL3 using AArch32 state.

StreamWorld differentiates the Secure EL1 translation regime from the EL3 translation regime, allowing TLB entries to be maintained separately for each of these two translation regimes. Secure EL1 TLB entries might be tagged with an ASID, whereas EL3 TLB entries are not. In this case, Arm expects that the Secure SMMU interface is either:

- Managed by Secure EL1, with no SMMU usage by EL3.
- Managed by EL3 with any EL1 usage brokered to EL3 using a software interface, which is outside the scope
  of this document.

Arm recommends that Secure EL1 and EL3 do not attempt to both access the Secure Command queue. Arm further recommends that Secure EL1 does not configure streams to cause TLB entries to be marked as EL3.

For a PE that implements Armv8-A and uses AArch32 state in EL3 or a PE that implements Armv7-A, there is only one privileged Secure translation regime. No separation is made between TLB entries inserted for Secure OS and Secure monitor software. When a client device is associated with this type of Secure system, Arm recommends that the StreamWorld is configured as Secure so that resulting TLB entries that are associated with this Secure translation regime are ASID-tagged. In this case, Arm recommends that StreamWorld is not configured to insert EL3 TLB entries, because broadcast TLB invalidation from the PE would not be able to affect these TLB entries. For more information, see section 3.17 TLB tagging, VMIDs, ASIDs and participation in broadcast TLB maintenance.

A client device with a Secure StreamID provides an input attribute called NS that indicates whether an access is intended to be to a Secure or Non-secure address. A Secure STE might override the input NS attribute of a Secure stream.

In bypass configurations of a Secure stream, overriding the input NS attribute allows a client device to issue Secure accesses even if the device is not able to control the input NS attribute. If the input NS attribute is not overridden, the client device can control whether it makes accesses to the Secure or Non-secure PA spaces. In the case where Secure stage 1 is disabled and Secure stage 2 translation is enabled, the input NS attribute distinguishes between Secure and Non-secure IPA spaces.

When a Secure STE is configured for stage 1 only translation, the stage 1 translation table descriptor (in conjunction with intermediate NSTable bits) determines the output NS attribute if the translation table descriptor is fetched from Secure memory, in the same way as in a PE and in the SMMUv2 architecture [4]. See Chapter 13 Attribute Transformation. A Secure STE can also be configured for stage 2 translation, if supported. See section 3.10.3 Secure EL2 and support for Secure stage 2 translation,

A Non-secure STE does not override the input NS attribute, which is treated as Non-secure for all transactions belonging to a Non-secure stream.

Access to the Secure Stream table, the Secure Event queue and the Secure Command queue are always made to the Secure PA space.

For access to L1CDs and CDs, then the use of Secure IPA or PA space applies at the appropriate stage:

- If Secure stage 2 is not in use, L1CD and CD addresses are treated as Secure physical addresses.
- If Secure stage 2 is enabled, L1CD and CD addresses are translated through the Secure IPA space. See section 3.10.3 Secure EL2 and support for Secure stage 2 translation.

Some SMMU commands take a StreamID parameter. When issued to the Secure Command queue, an additional parameter, SSec, indicates whether the SMMU interprets the command as applying to a Secure or a Non-secure StreamID.

The SMMU\_S\_CR0.SIF flag provides a mechanism to terminate instruction fetches from Secure streams that target Non-secure PAs or Non-secure IPAs in some configurations. See section 6.3.53.2 SIF for details.

#### 3.10.3 Secure EL2 and support for Secure stage 2 translation

SMMUv3.2 introduces support for a Secure EL2 translation regime, corresponding with that in an Armv8.4 PE.

A Secure STE can be configured with Config[1] set to 1 to enable stage 2 translation if Secure stage 2 is implemented.

Support for Secure EL2 and Secure stage 2 is optional for implementations supporting SMMUv3.2 or later. An implementation might support Secure EL2 and Secure stage 2, if the implementation also supports both stage 1 and stage 2. The following implementation options are supported:

| SMMU_S_IDR1.SECURE_IMPL | SMMU_S_IDR1.SEL2 | Result  |
|-------------------------|------------------|---|
| 0                       | X                | Secure programming interface absent. Secure state is not supported.           |
| 1                       | 0                | Secure EL2 is not supported. Secure stage 2 is not supported.                 |
| 1                       | 1                | Secure EL2 is supported. Secure stage 2 is supported for use by a Secure STE. |

In the same way as described in Armv8.4, the result of a Secure stage 1 translation is an address in one of

two address spaces, for Secure IPA and a Secure stream Non-secure IPA. The Secure stream Secure IPA space corresponds to a stage 1 output targeting Secure IPA space. The Secure stream Non-secure IPA space corresponds to a stage 1 output of a Secure stream targeting Non-secure IPA space. A Secure stream Non-secure IPA space is translated differently to a Non-secure stream IPA space. A Secure stage 2 supports two translation tables, corresponding to input from each of the two IPA spaces.

For a Secure stream with stage 2 translation enabled, the final transaction PA space is determined at stage 2 from the S2SW, S2SA, S2NSW and S2NSA configuration of the selected Secure stream IPA spaces as follows:

- If the input into stage 2 is a Secure IPA, the Secure stream Secure IPA space is used for translation. The translation table configured in STE.S\_S2TTB is used. The translation table accesses are made to the Secure or Non-secure PA space configured in STE.S2SW. If STE.S2SW == 0, then the final output PA space is determined by by STE.S2SA, otherwise the final output PA space is Non-secure.
- If the input into stage 2 is a Non-secure IPA, the Secure stream Non-secure IPA space is used for translation. The translation table configured in STE.S2TTB is used. The translation table accesses are made to the Secure or Non-secure PA space configured in STE.S2NSW. If STE.S2SW == 0 and STE.S2SA == 0 and STE.S2NSW == 0, then the final output PA space is determined by STE.S2NSA. Otherwise the final output PA space is Non-secure.

For a Non-secure stream, translation table accesses and final output PA space is always Non-secure.

A Secure translation regime with stage 1 and stage 2 configured fetches the L1CD and CD using a Secure IPA.

For a Secure stage 2-only translation (resulting from STE.Config == 0b110 or from STE.S1DSS causing stage 1 to be skipped), the choice of whether the IPA is in Non-secure or Secure IPA space after stage 1 bypass is determined from the result of the STE.NSCFG field.

For a Secure EL2 translation table walk, the target PA space of the initial level of walk is given by CD.NSCFG{0,1}, depending on the translation table used.

Note: An S-EL2 StreamWorld uses one translation table, CD.TTB0 and an S-EL2-E2H StreamWorld might use two translation tables, CD.TTB0 and CD.TTB1.

The S-EL2 and S-EL2-E2H translation regimes are only used in STE.S2AA64 == 1 configuration. A Secure STE with stage 2 translation enabled is not permitted to have STE.S2AA64 == 0.

When stage 2 translation is disabled, all Secure IPA accesses become Secure PA accesses, and all Secure stream Non-secure IPA accesses become Non-secure PA accesses.

A Secure translation regime that supports Secure stage 2 configuration uses a VMID tag for TLB entries. This is a Secure VMID and is a distinct namespace from the Non-secure VMID namespace. When Secure stage 2 is implemented then TLB entries inserted from StreamWorld == Secure configurations are:

- Tagged with the VMID from STE.S2VMID when stage 2 is enabled.
- Tagged with VMID 0 when stage 2 is not enabled.
  - Note: These entries are affected by corresponding TLB invalidation operations that target VMID 0. See section 3.17 TLB tagging, VMIDs, ASIDs and participation in broadcast TLB maintenance.
  - Note: This behavior differs from that of the Non-secure S2VMID field because the STE.S2VMID field was IGNORED in Secure STEs before SMMUv3.2.

Consistent with Armv8.4, a translation table entry fetched for a Secure stream is treated as non-global if it is read from the Non-secure IPA space. That is, these entries are treated as if nG == 1, regardless of the value of the nG bit in the descriptor. See section 3.17.1 The Global flag in the translation table descriptor.

### 3.11 Reset, Enable and initialization

The SMMU can reset to a disabled state in which traffic bypasses the SMMU without translation or checking of any kind. The SMMU appears transparent to transactions from client devices, which are given attributes according to the disabled bypass configuration (see Chapter 13 Attribute Transformation). The SMMU can also optionally reset to a disabled state that aborts all transactions for a Security state. This behavior is controlled by the reset state of SMMU GBPA.ABORT or SMMU S GBPA.ABORT.

Note: When an SMMU resets to a bypass configuration, it enables client devices that are connected to an SMMU to be used by legacy system software that lacks awareness of the SMMU.

Translation of Non-secure Streams is enabled using SMMU\_CR0.SMMUEN. When SMMU\_S\_IDR1.SECURE\_IMPL == 1, the Secure programming interface also contains an enable flag, SMMU\_S\_CR0.SMMUEN, which controls translation of Secure streams.

When translation is not enabled for a Security state, an SMMU:

- When SMMU\_(S\_)GBPA.ABORT == 1, aborts all transactions:
- When SMMU\_(S\_)GBPA.ABORT == 0, applies attributes to a transaction as determined by SMMU\_(A)GBPA or SMMU\_S\_(A)GBPA. See section 13.2 SMMU disabled global bypass attributes.
- Never accesses the Stream table so SMMU\_(S\_)STRTAB\_\* register content is ignored.
- Denies PRI Page Requests as though SMMU\_CR0.PRIQEN == 0, regardless of the value of SMMU\_CR0.PRIQEN. See Chapter 8 Page request queue.
- Does not perform ATOS operations. See SMMU\_GATOS\_CTRL.
- Does not perform ATS translations. See section 3.9.1.1 Responses to ATS Translation Requests and Translated transactions.
- Allows registers to be accessed and updated in the normal manner.
- Can process commands after the relevant queue pointers are initialized and SMMU\_(S\_)CR0.CMDQEN is enabled.
- Does not record new translation events. However, if SMMU\_(S\_)CR0.EVENTQEN is enabled and the queue
  pointers are set up, the SMMU might continue to write out buffered events that were generated by earlier
  translations from when translation was still enabled.

See section 6.3.9.6 *SMMUEN* for a full description of the operation of, and the effect of changes to, the SMMUEN flag.

The SMMU\_(S\_)STRTAB\_BASE register and the SMMU\_(S\_)CR1 table attributes must be configured before enabling an SMMU interface using SMMU\_(S\_)CR0.SMMUEN.

Note: This avoids the possibility of incoming traffic attempting a lookup through uninitialized configuration structure pointers.

When translation is disabled for a Security state, transactions on streams that are associated with that Security state are not translated, and take attributes from the appropriate Global Bypass Attribute registers, SMMU\_(A)GBPA or SMMU\_S\_(A)GBPA.

When translation is enabled for a Security state, transactions on streams that are associated with that Security state follow the SMMU translation flow determined by the appropriate Stream Table Entry.

| SMMU_CR0.SMMUEN | SMMU_S_CR0.SMMUEN | Traffic  |
|-----------------|-------------------|--|
| 0               | Unimplemented     | All traffic bypasses SMMU/aborts (as determined by SMMU_GBPA.ABORT). Always targets Non-secure PA space. |
| 1               | Unimplemented     | Traffic follows the SMMU translation flow. Always targets Non-secure PA space.                           |

| SMMU_CR0.SMMUEN | SMMU_S_CR0.SMMUEN | Traffic  |
|-----------------|-------------------|--|
| 0               | 0                 | Secure and Non-secure streams are controlled by SMMU_(S_)(A)GBPA. SEC_SID determines the Security state of a given stream. Bypass/abort configuration and attributes, including input NS attribute, are provided by the Global Bypass Attribute register (GBPA) appropriate to the Security state. |
| 0               | 1                 | <ul> <li>SEC_SID determines the Security state:</li> <li>Secure traffic follows SMMU translation flow.</li> <li>Non-secure traffic bypasses the SMMU (attributes taken SMMU_GBPA), or aborts.</li> </ul>   |
| 1               | 0                 | <ul> <li>SEC_SID determines Security state:</li> <li>Secure traffic bypasses the SMMU (attributes taken from SMMU_S_GBPA), or aborts.</li> <li>Non-secure traffic follows the SMMU translation flow.</li> </ul>  |
| 1               | 1                 | SEC_SID determines the Security state, follows usual SMMU translation flow.  |

The state of the caches and TLBs at reset is implementation specific.

To avoid UNPREDICTABLE behavior, software must perform the following steps before enabling translation:

- Invalidate all configuration and TLB caches.
- When SMMU\_S\_IDR1.SECURE\_IMPL == 1, ensure Secure software fully invalidates any Secure cached configuration or TLB entries in the SMMU through the Secure programming interface before handover to Non-secure software.

The SMMU is not required to invalidate cached configuration or TLB entries when a change to SMMU\_(S\_)CR0.SMMUEN occurs.

Arm recommends that software initializing the SMMU performs the following steps:

- 1. Allocate and initialize Stream table memory and base pointers.
- 2. Allocate and initialize Command queue and Event queue memory, base pointers and indexes.
- 3. Enable command processing through SMMU\_(S\_)CR0.CMDQEN, and if applicable, Event queue through the relevant EVENTQEN.
- 4. Issue commands to invalidate all cached configuration and TLB entries (see sections 4.3 *Configuration structure invalidation* and 4.4 *TLB invalidation*).
- 5. Enable translation by setting SMMU\_(S\_)CR0.SMMUEN.

Note: These steps are a summary, and do not show the required register update procedure or DSB operations ensuring correct memory and register access ordering.

SMMU\_S\_INIT invalidates SMMU caches and TLBs without issuing commands using the Command queue. Caches and TLBs are invalidated using this register with the following sequence:

- Perform a write to SMMU\_S\_INIT, setting INV\_ALL.
- Poll SMMU\_S\_INIT.INV\_ALL until it returns to 0, at which point the invalidation is complete.

When SMMU\_S\_IDR1.SECURE\_IMPL == 1, Arm expects Secure software to initialize the SMMU using the steps above. If Secure software is not guaranteed to initialize the SMMU in accordance with the steps above, Arm recommends that the system provides an IMPLEMENTATION DEFINED mechanism to allow Non-secure software to access SMMU\_S\_INIT. This is an exception to the general rule that only Secure software can access SMMU\_S\_\* registers.

Note: For example, a system might allow Non-secure access to SMMU\_S\_INIT from reset, but might provide a means for Secure software to disable this access.

Note: Arm expects Non-secure initialization to use SMMU commands to perform configuration cache and TLB invalidation. Non-secure access to SMMU\_S\_INIT is not guaranteed, so the INV\_ALL feature must not be relied on by the Non-secure state.

Note: Invalidation of all Non-secure TLB information can be achieved by issuing CMD\_TLBI\_EL2\_ALL and CMD\_TLBI\_NSNH\_ALL commands.

If an SMMU implementation creates TLB entries when bypass is selected with SMMUEN == 0, these entries are not visible to software. An implementation does not require TLB entries inserted to support transaction bypass to be explicitly invalidated by software, such as when SMMUEN is transitioned from 0 to 1.

## 3.12 Fault models, recording and reporting

An incoming transaction goes through several logical stages before continuing into the system. If the transaction is of a type or has a property that an SMMU cannot support for IMPLEMENTATION DEFINED reasons, an Unsupported Upstream Transaction fault event is recorded and the transaction is terminated with an abort.

Otherwise, configuration is located for the transaction, given its StreamID (and SubstreamID, if supplied). If all of the required STE and CD structures cannot be located or are invalid, a configuration error event is recorded, if there is a free location in the Event queue, and the transaction is terminated with an abort.

If a valid configuration is located so that the translation tables can be accessed, the translation process begins, other faults can occur during this phase. See section 7.2 *Event queue recorded faults and events* for more information about the individual events that are recorded for configuration errors and faults.

When a transaction progresses as far as translation, or during the process of fetching a CD from IPA space through stage 2 translation, the behavior on encountering a fault becomes configurable, if this is supported by the implementation.

There are four fault types that constitute Translation-related faults when they are generated at either stage 1 or stage 2:

- F TRANSLATION
- F\_ADDR\_SIZE
- F\_ACCESS
- F PERMISSION

Behavior for these faults can be switched between the Terminate and Stall model as determined by the CD.{A,R,S} flags for stage 1 and the STE.{S2R,S2S} flags for stage 2.

All other faults (including F\_WALK\_EABT and F\_TLB\_CONFLICT) and configuration errors terminate the transaction with an abort.

Note: An F\_ADDR\_SIZE can also arise from a transaction that bypassed stage 1 but that has an out-of-range IPA, see section 3.4 *Address sizes*. In this case the transaction is always terminated with an abort.

Note: An F\_PERMISSION can also arise as a result of an instruction fetch transaction on a Secure stream that bypasses stage 1, is determined to be Non-secure and that is prevented with SMMU\_S\_CR0.SIF == 1, see section 6.3.53.2 SIF. In this case the transaction is always terminated with an abort.

The fault behavior configuration at stage 1 is at a per-substream granularity when substreams are used, that is where an STE points to multiple CDs. When substreams are not configured, that is where an STE points to one CD, the fault behavior configuration at stage 1 is at a per-stream granularity. Use of the Stall model at stage 1 can be disabled by setting STE.S1STALLD == 1.

The stage 2 fault behavior is configured using STE.{S2R,S2S}; that is, at a per-stream granularity.

When a fault occurs at either stage 1 or stage 2, then when the fault is detected it is known at which stage it occurred, and the SMMU performs the action configured for that stage. For example:

- A two-stage configuration that encounters a translation fault in the stage 1 translation tables is a stage 1 fault.
- A transaction that progresses through stage 1 to an IPA and then faults when it is translated using the stage 2 translation tables is a stage 2 fault.
- A stage 2 translation fault that occurs during a stage 1 translation table walk counts as a stage 2 fault. The event that is recorded differentiates this access from a transaction that access a faulting IPA post-stage 1 translation table walk, so that hypervisor software can inform the VM of the correct event type (a simulated external abort on translation table walk).
- A Stage 2 translation fault that occurs fetching a CD from an IPA address is a stage 2 fault. The event that is recorded shows that a CD was being fetched.

Note: The Hypervisor might fix the cause of the fault and retry the stalled transaction, or if the transaction is terminated, inform the VM of the correct event type (a simulated external abort on CD fetch).

After a transaction progresses through the SMMU into the system, certain system-specific transaction aborts might occur on the path to the memory system. Whether, and how, these are reported to the client device is interconnect-specific. The SMMU does not record any faults for these events. The SMMU only records fault events that are generated by its own accesses or by client device accesses that encounter an internal translation issue.

When an incoming transaction is immediately terminated, for any reason, an order is not enforced between the response to the client device and the event that is recorded into the Event queue. However, if an event is to be recorded, a CMD\_SYNC ensures that the event record is visible in the Event before the CMD\_SYNC is considered complete. See section 4.6.3 CMD\_SYNC(ComplSignal, MSIAddress, MSIData, MSIWriteAttributes).

The SMMU treats a transaction as being independent of all other transactions (regardless of whether the transaction originates from the same traffic stream or from different streams) and the fault behavior of one transaction has no direct effect on any other transaction. Section 3.12.2 *Stall model* below describes interconnect ordering issues and recommendations for the presentation of grouped fault information to software. Whether an external agent makes an association between different transactions is outside the scope of the SMMU architecture.

When a transaction causes a Translation related fault at stage 1, the transaction might be:

- Terminated with an abort (CD.S == 0 and CD.A == 1)
- Terminated with RAZ/WI behavior (CD.S == 0 and CD.A == 0)
- Stalled (CD.S == 1 and STE.S1STALLD == 0)

When a transaction Translation related fault at stage 2, the transaction might be:

- Terminated with an abort (STE.S2S == 0)
- Stalled (STE.S2S == 1)

Support for stalling or terminating a transaction is IMPLEMENTATION DEFINED, indicated by SMMU\_(S\_)IDRO .STALL\_MODEL.

When SMMU\_S\_IDR1.SECURE\_IMPL == 1:

- SMMU\_S\_IDR0.STALL\_MODEL indicates the physical capabilities of the SMMU implementation,
- SMMU\_IDR0.STALL\_MODEL indicates the capabilities that Non-secure software is permitted to use.
  - This field is generated from SMMU\_S\_IDR0.STALL\_MODEL and affected by the SMMU\_S\_CR0.NSSTALLD flag which, when set on an SMMU implementation supporting both the Stall model and the Terminate model, prevents Non-secure use of stalling faults.
  - Note: This can be used to guarantee Non-secure software cannot stall transactions where doing so might cause external problems in certain system topologies.

When  $SMMU_S_IDR1.SECURE_IMPL == 0$ ,  $SMMU_IDR0.STALL_MODEL$  reflects the physical capabilities of the SMMU implementation.

| SMMU_S_IDR0<br>.STALL_MODEL                 | SMMU_S_CR0<br>.NSSTALLD           | SMMU_IDR0<br>.STALL_MODEL                         | Notes:  |
|---|-----------------------------------|---|---|
| 0b00 (Stall and Terminate models supported) | 0 (do not filter NS use of stall) | 0b00 (Stall and Terminate model supported for NS) | NS usage reflects physical reality  |
| 0b00 (Stall and Terminate models supported) | 1 (NS cannot use stall)           | 0b01 (Terminate model supported for NS)           | NS usage limited to<br>terminate-only, even<br>though physically the<br>SMMU supports stall<br>too. |

| SMMU_S_IDR0<br>.STALL_MODEL      | SMMU_S_CR0<br>.NSSTALLD     | SMMU_IDR0<br>.STALL_MODEL        | Notes:  |
|----------------------------------|-----------------------------|----------------------------------|---|
| 0b01 (Terminate model supported) | X (No stall to filter)      | 0b01 (Terminate model supported) | NSSTALLD irrelevant, no stall to prevent.                       |
| 0b10 (Stall model supported)     | X (No alternative to stall) | 0b10 (Stall model supported)     | NSSTALLD irrelevant, no alternative to stall so cannot disable. |

The SMMU\_IDR0.TERM\_MODEL field indicates the termination models provided by an implementation, globally. An implementation might, for a stage 1 fault, offer the choice of terminate with abort or RAZ/WI behavior, or an implementation might only allow termination by abort, in which case the CD.A bit must be set.

Note: A transaction faulting at stage 2 is, when terminated, always aborted.

It is optional whether an SMMU implementation supports the Stall model, the Terminate model, or both. Where system usage cannot be anticipated, Arm recommends that both fault models (SMMU\_IDR0.STALL\_MODEL == 0) and both termination models (SMMU\_IDR0.TERM\_MODEL == 0) are implemented.

If there is a risk that the stability of the system is compromised when the stall configuration is used for a set of client devices you can consider the following countermeasures:

- An implementation that supports both the Stall and Terminate models is permitted, but not required, to treat a stalling configuration for these devices as a terminating configuration.
  - When stalling is configured for these devices, faulting transactions are terminated instead of stalled.
  - The faults are reported with Stall == 0.
  - The transaction is terminated with Abort.
- These devices are not required to be defined by the SMMU implementation, but are an IMPLEMENTATION DEFINED system property.

Note: For faulting transactions that are associated with client devices that have been configured to stall, but where the system has not explicitly advertised the client devices to be usable with the stall model, Arm recommends for software to expect that events might be recorded with Stall == 0.

#### 3.12.1 Terminate model

When stage 1 is configured to terminate faults, a transaction that faults at stage 1 is either terminated with an abort reported to the client device that is making the access, or the transaction completing successfully with reads returning 0 and writes being ignored (RAZ/WI), depending on the setting of CD.A and SMMU IDRO.TERM MODEL. See section 5.5 Fault configuration (A, R, S bits).

When stage 2 is configured to terminate faults, a transaction that faults at stage 2 is terminated with an abort.

The behavior of the client device after termination is specific to the device.

If a stage that is configured to terminate faults is also configured with CD.R == 1 or STE.S2R == 1, as appropriate to the stage of the fault, the SMMU records the details of the access into one Event record in the Event queue, supplying information including:

- Address
- Syndrome
- Attributes (Read/Write, Inst/Data, Privileged/Unprivileged, NS)
- Type (S1/S2 Translation, Permission, Address Size, Access flag fault)

If the Event queue is full, the event record is lost.

Note: In some interconnects, stalling the transaction until its fault can be recorded might trigger interconnect timeouts or deadlocks from which it might be more difficult to recover than from a lost fault record. Arm expects that such fault records arise from programming errors and that software will not implement any mechanism that depends on the delivery of terminate fault records.

Streams that originate from PCIe subsystems must not stall and must be configured to use the Terminate model at all enabled stages of translation. This is enforced at stage 1 through the STE.S1STALLD flag, see section 16.4 *System integration*.

#### 3.12.2 Stall model

When a stage is configured to stall transactions on a fault, and a transaction experiences a Translation-related fault as described in 3.12 *Fault models, recording and reporting*, the faulting transaction does not progress and no response is reported to the client device. The transaction is buffered in a stalled state until subsequent resolution. The SMMU always records the details of the access into the Event queue. A stalled transaction is retried or terminated by issuing a CMD\_RESUME or CMD\_STALL\_TERM command.

If retry is chosen, the transaction is handled as though it had just arrived at the SMMU. This means that the transaction will be affected by any configuration or translation changes that occurred since it originally stalled.

Note: This means a transaction can stall and later when it is retried, use a configuration that causes it to immediately terminate, for example, a change to stall configuration in the meantime. This property can safely clean up stalled transactions on a stream by ensuring that a new configuration for transactions that are retried causes them to be terminated.

If a stalled transaction is terminated by a CMD\_RESUME command, a command parameter determines whether an abort is reported, or if SMMU\_IDR0.TERM\_MODEL == 0, whether the transactions completes with RAZ/WI behavior.

To ensure that no transaction is stalled indefinitely, software must ensure that every stall event has a corresponding CMD\_RESUME command, is subject to a CMD\_STALL\_TERM command, or that stalled transactions are terminated because translation is disabled by clearing SMMU (S) CR0.SMMUEN to 0.

When an event record is generated for a stalled transaction, a Stall Tag (STAG) is supplied by the SMMU as part of the record to uniquely identify the transaction. The SMMU uses the combination of StreamID and STAG parameters to CMD\_RESUME to identify the stalled transaction. A CMD\_RESUME command has no effect on any stalled transaction other than on the transaction that is uniquely identified by the combination of STAG and StreamID.

Note: This identification is required for virtualization correctness, where a CMD\_RESUME from a guest VM is trapped and reinterpreted by a hypervisor and generates a CMD\_RESUME to the SMMU. The hypervisor validates the correctness of the StreamID parameter, but the STAG parameter is passed directly from the guest, and cannot be trusted to be correct and cannot be the sole selector of a stalled transaction.

The format of the STAG field is implementation specific, with the restriction that a value cannot be re-used until the transaction it was last associated with has been acknowledged through a CMD\_RESUME or a CMD\_STALL\_TERM command, or translation is disabled by clearing SMMU\_(S\_)CR0.SMMUEN to 0.

If the Event queue is not writable at the time when the fault record of a stall is to be written, the stalled transaction is retried as though it had just arrived when the queue is next writeable and a new fault record is generated. For more information about recording faults and events, see section 7.2 Event queue recorded faults and events.

Note: For software to be notified of stalled transactions, it must enable the Event queue using SMMU\_(S\_)CR0.EVENTQEN.

Software can depend on the delivery of fault records from stalled transactions, see section 3.12.4 *Virtual Memory paging with SMMU*.

Note: Retrying the stalled transaction when the queue becomes writable might lead to the transaction succeeding or experiencing a different type of fault, if the configuration or translations were changed before the queue became writable. Therefore, an event can be written that is different to the originally-attempted event.

If the client device and interconnect rules allow it, a later transaction might pass through the SMMU and complete before an earlier stalled transaction that is associated with the same stream. The SMMU does not require any additional ordering between transactions from different streams beyond that required by the interconnect rules.

Note: The following cases are all considered to be from different streams:

- Transactions with different StreamIDs,
- Transactions with the same StreamID but different SubstreamIDs,
- Two transactions with the same StreamID but where only one transaction has a SubstreamID.

#### 3.12.2.1 Suppression of duplicate Stall event records

If a transaction faults and then stalls, and a subsequent transaction belonging to the same stream also faults and then stalls, the SMMU is permitted but not required to suppress the generation of a new stall fault record for the new transaction if all of the following apply:

- The transactions require access to the same page.
- The transactions have the same privilege.
- The transactions have the same data/instruction attribute.
- The transactions have the same type, that is they are both reads or both writes.
- The transactions are associated with the same SubstreamID, if present.
- The first stalled transaction is still stalled when a subsequent transaction stalls.

Arm recommends that an implementation suppresses additional fault records where possible.

Note: It is not guaranteed that event records are suppressed in all possible scenarios. Software must ensure correctness where a transaction records a fault that duplicates a previous fault that was recorded for an earlier transaction.

When a stall fault record is acknowledged by a CMD\_RESUME command, any related suppressed stalled transaction are retried by the SMMU as though they had just arrived.

Note: A series of faults for one page might result in a single stall fault record, with a single CMD\_RESUME command enabling all stalled transactions for that page to progress. If the CMD\_RESUME command terminates the stalled transaction that is specified by the stall fault record, the re-trying of the other stalled transactions might cause new fault records to be recorded.

Note: For example, transactions A, B, C, D from the same stream that fault for the same reason might cause a single stall record for A to be recorded, and those for B, C, D to be suppressed. If software decides that the address was an error and terminates A, transactions B, C, D retry and fault again. A stall for B is recorded (and C, D might be suppressed). Software terminates B and the process repeats. Ultimately, A, B, C, D are all visible to software (rather than some being silently terminated), which can aid debug.

Stall fault records are not merged, see section 7.3.1 Event record merging.

Note: The suppression of identical stall fault records as described in this section is not the same as non-stall events being merged. When a stall record is suppressed, a stalled transaction still might exist and can affect future behavior, whereas the act of merging non-stall events completes the delivery of those events.

If a new transaction stalls for a reason that is unrelated to that of an existing stalled transaction, a new fault is recorded, – that is, it is not suppressed by dissimilar prior stalls even for the same StreamID and SubstreamID. Arm recommends that the new fault is recorded without being delayed by prior unrelated faults or CMD\_RESUME activities where possible.

The SMMU does not record more than one fault for each incoming transaction, with the exception of the scenario in which a transaction stalls, and is explicitly retried with CMD\_RESUME(Retry). After this command it is considered to be a new transaction and might again encounter a fault.

#### 3.12.2.2 Early retry of Stalled transactions

The SMMU is permitted to speculatively retry a stalled transaction without first receiving a CMD\_RESUME(Retry) command that matches the stalled transaction, this is referred to as *early retry*. If this occurs:

- An early retry is similar in function to the retry caused by an explicit CMD\_RESUME(Retry). The transaction
  undergoes the full translation procedure and does not use any stale cached configuration or translation data
  that was invalidated since the time of the stall.
- A recorded stalled transaction causes a single fault record. An early retry of the stalled transaction does not
  cause additional faults to be recorded. When a retry is directly caused by a matching CMD\_RESUME that
  indicates a retry, it is not considered to be an early retry, and this rule does not apply. This rule is in keeping
  with the behavior that an explicit retry command causes the transaction to be retried as though it had just
  arrived at the SMMU.

Note: This rule includes the case where configuration has been changed to terminate faults after the transaction stalls then, under the new configuration, the transaction retries successfully by termination. Alternatively, if a retry occurs under stall fault configuration, the transaction remains stalled. Neither of these cases result in the reporting of a new event record.

- The progress of a transaction and the device-specific behavior are the only indications that an early retry has
  occurred that is visible to software.
- A successful early retry does not remove the requirement for software to acknowledge the stall fault record, see section 3.12.2 Stall model. A successful early retry does not remove the restriction on re-using STAG values, see section 3.12.2 Stall model. If targeted by CMD\_RESUME(Terminate) or CMD\_STALL\_TERM, a stalled transaction is eventually terminated, if the transaction does not early-retry and successfully progress into the system before the termination can take place. If the transaction early-retries and fails to successfully translate, it remains stalled until the termination action takes effect, or a successive early-retry enables the transaction to progress successfully.

A CMD\_RESUME(Retry) guarantees that the stalled transaction will be retried at a future point, unless it is terminated by CMD\_STALL\_TERM command or an SMMUEN transition before the retry. A stalled transaction is only guaranteed to be retried by the use of a CMD\_RESUME(Retry) command.

A CMD\_RESUME(Terminate) does not prevent a stalled transaction from being retried after the CMD\_RESUME is consumed by the SMMU, but guarantees that the transaction will be terminated if the transaction cannot successfully early-retry. Note: For example, if translations have not changed from the time that a fault was generated, a transaction cannot successfully early-retry.

Note: Arm does not expect software to modify a translation table descriptor from a faulting or invalid state into a valid state, and then terminate a transaction that has previously stalled because of the initial state of the descriptor. The transaction could early-retry, observe the valid state and then progress into the system.

If the SMMU is able to successfully early-retry a stalled faulting transaction before the original stall event is committed to be written to the Event queue, the SMMU is permitted to discard the fault event or to continue on and commit to the event write.

Note: To software, this race condition is indistinguishable from a temporally-later transaction that translates successfully the first time so a stall event record is not required. If an implementation records the event, the behavior described in this section applies.

If a stalled faulting transaction is retried before the original stall event is committed to be written to the event queue and experiences a fault that is different to the previous fault, the most recent fault is recorded, provided that it is possible to do so and that the previous fault is invisible.

Note: This scenario is permitted to occur when the Event queue is writable.

See section 7.2.1 *Recording of events and conditions for writing to the Event queue* for retry behavior requirements when the Event queue is not writable.

#### 3.12.2.3 Miscellaneous Stall considerations

The number of transactions that can be stalled before the ingress port cannot accept any more transactions, from the same stream or from other streams, is implementation specific. Stalling traffic can therefore cause backpressure that affects the flow of traffic for other devices behind the SMMU.

If a stall blocks other traffic and resolving the fault condition that caused the stall involves transferring data using another device, the system architecture must ensure that the act of fetching the data will not itself stall behind the original transaction.

Note: STE.S1STALLD == 1 prevents a guest VM from using the Stall model. This guarantees that stalled transactions cannot affect other parts of the system, such as a different guest VM, where stalls could cause deadlocks. Arm expects that hypervisor software uses the virtualization of SMMU\_IDR0.STALL\_MODEL to report to the guest VM that the Stall model was not supported.

If a transaction experiences a fault during an IPA to PA translation of a stage 1 translation table walk or CD fetch, it is not required to be terminated and might stall, depending on the stage 2 fault configuration provided by STE.S2S. Software might address the cause of the stage 2 fault and retry the transaction, which will re-fetch the configuration and translation structures as necessary.

#### 3.12.3 Considerations for client devices using the Stall fault model

If a transaction from a client device experiences a fault that stalls and is terminated by software issuing CMD\_RESUME(Terminate), the transaction is marked and guaranteed to terminate at some point in the future if translations do not change so as to allow an early-retry to succeed in the meantime. The SMMU does not guarantee when a stalled transaction is terminated.

Note: A situation might arise in which software is required to reconfigure translations so that a previously-marked stalled transaction might now succeed if it were to retry. For example, a transaction that is made to an unmapped address causes an initial fault, and then a terminate operation is performed. Later software creates a legitimate mapping at that address and, if the original transaction was a write that retries and now succeeds, data corruption might result. Software might need a mechanism to ensure that previous transactions have all completed, both terminated stalls and transactions that are progress that the SMMU is not yet aware of.

The system, or client devices, must provide a mechanism to enable software to wait for these previous transactions to complete before changing configuration to a state that might let them proceed. This might be an explicit indication from the client device that its outstanding transactions have all been terminated or completed, an interconnect ordering guarantee that prior transactions are all visible, or another mechanism.

#### 3.12.4 Virtual Memory paging with SMMU

The SMMU architecture supports three models of usage with respect to translation-related faults that occur during translation of client device accesses:

- A fault that occurs due to a device access might always be considered to be an error by the system and is terminated.
  - Note: This might be the result of a programming error.
- 2. A fault that occurs due to a device access might be considered permanent due to a programming error, or temporary due to particular page state resulting from use of virtual memory with the address space, and one of the following is configured to occur:
  - a. The device transaction is stalled, the fault is reported to software and then the transaction is resumed after the virtual memory system resolves the cause of the fault. Or, if the virtual memory system determines that the access was invalid, the transaction is terminated. This model can only be used with a device and interconnect that can support stalls.

b. For PCIe devices, for which transactions cannot safely be stalled, the PCIe specification provides ATS and PRI. ATS enables an endpoint to ascertain whether a page can be accessed without causing a fault in the SMMU before accessing it. PRI provides a mechanism for a page fault to be resolved if the prior ATS step indicates a fault would otherwise occur.

#### 3.12.4.1 Page-in request event

When non-PCIe devices are used with the Stall fault model to access paged virtual memory spaces, the Stall fault record itself is the notification to software that a page miss occurred and that software intervention is required.

Note: Devices used with, or integrating, an SMMU will generally emit transactions when the access is required. Although read speculation is permitted, writes cannot be emitted speculatively to trigger a page fault early, see section 3.14 *Speculative accesses*. In particular, stall fault records do not arise from accesses marked speculative.

An optional hint event record, E\_PAGE\_REQUEST, can be provided by an implementation to request that software initiates any costly page-in operations early. An implementation might provide an IMPLEMENTATION DEFINED mechanism to convey this message from client devices. This message:

- Is a hint, and can be ignored or dropped by the SMMU or software.
- Can be issued speculatively.
- Requires no response.

Note: A stall fault record is generated in response to a non-speculative transaction. A speculative transaction generates no software-visible record. E\_PAGE\_REQUEST allows a software-visible record to make an early start on fetch of pages from secondary storage and can be used to hide latency.

#### 3.12.5 Combinations of fault configuration with two stages

When the Stall model and the Terminate model are used differently at different stages of translation, the resulting behavior of depends on the stage at which the transaction faulted and the type of fault. For Translation-related faults that can stall the following scenarios arise:

| Stage 1 config | Stage 2 config | Fault at | Transaction result | Event parameters | Hypervisor behavior  |
|----------------|----------------|----------|--------------------|------------------|--|
| Terminate      | Terminate      | Stage 1  | Terminated         | VA               | Event passed to guest as stage 1-only event.   |
|                |                | Stage 2  | Terminated         | VA, IPA          | Might log IPA of fault for debug purposes. (1)Might pass event to guest if terminated.   |
| Terminate      | Stall          | Stage 1  | Terminated         | VA               | Event passed to guest as S1-only event.  |
|                |                | Stage 2  | Stalled            | VA, IPA          | May terminate with CMD_RESUME (Terminate) and log IPA of fault for debug purposes. Or, correct the translation fo IPA then CMD_RESUME(Retry). (1) Might pass event to guest if terminated. |
| Stall          | Terminate      | Stage 1  | Stalled            | VA               | Event passed to guest as S1-only event with stall. Guest must CMD_RESUME(Retry/Terminate).   |

| Stage 1 config | Stage 2 config | Fault at | Transaction result     | Event parameters  | Hypervisor behavior   |
|----------------|----------------|----------|------------------------|---|---|
|                |                | Stage 2  | Terminated             | VA, IPA   | Might log IPA of fault for debug purposes. (1)Might pass event to guest if terminated.  |
| Stall          | Stall          | Stage 1  | with stall. Guest must | Event passed to guest as S1-only event with stall. Guest must CMD_RESUME(Retry/Terminate) |   |
|                |                | Stage 2  | Stalled                | VA, IPA   | Might terminate with CMD_RESUME (Terminate) and log IPA for fault or debug purposes. Or, correct translation for IPA then CMD_RESUME(Retry). (1) Might pass event to guest if terminated. |

1. Might pass event to guest: Anything that is terminated at stage 2 is equivalent to a stage 1 external abort. A successful stage 1 translation that outputs an incorrect IPA that leads to a stage 2 fault would not ordinarily be reported to the guest through its SMMU interface, because its stage 1 translation succeeded and the error arises outside of the (stage 1) domain of the SMMU interface. Arm expects that a stage 1 translation table walk that faults at stage 2 is reported to the guest as F\_WALK\_EABT by the hypervisor.

All other fault types cause the transaction to be aborted. For example, a failure to locate a valid STE (F\_BAD\_STE) or CD (F\_BAD\_CD) terminate the transaction with an abort.

Note: When both stage 1 and stage 2 are enabled, a CD or stage 1 translation table descriptor fetch might cause a stage 2 Translation-related fault, and might therefore stall the transaction. Regardless of the reason for making the IPA access, the fault can be resolved at stage 2 and restarted. This is the same behavior as with a faulting IPA access for the transaction address after stage 1 translation.

### 3.13 Translation table entries and Access/Dirty flags

The SMMU might support Hardware Translation Table Update (HTTU) of the Access flag and the dirty state of the page for AArch64 translation tables.

Some Armv8-A PEs might support *Hardware Update to Access flag and dirty state* [2]. SMMU support of HTTU can coexist with both hardware and software flag update from the PEs. The SMMU update of descriptors behaves in an identical manner to those described in [2], with the additional SMMU-specific behavior in section 3.13.4 *HTTU behavior summary*, although its configuration method differs.

HTTU increases the efficiency of maintaining Access flag and dirty state in translation tables. A single translation table can be shared between any combination of agents that perform software updates of flags, and other agents that perform HTTU. Agents supporting HTTU update the flags atomically. Software must also use atomic primitives to perform its own updates on translation tables when they are shared with another agent that performs HTTU.

Note: In general, an update of the Access flag and the dirty state of the page in a system is associated with the use of dynamic paging and, in the context of the SMMU, associated with DMA targeting paged memory. Arm does not expect applications that constrain DMA access to static, pinned or non-paged mappings to perform or require dynamic update to the Access or to the dirty state of the page.

Support for HTTU is indicated by SMMU\_IDR0.HTTU, and can be one of the following:

- No flag updates are supported.
- Only Access flag updates are supported.
- Update of both the Access flag and the dirty state of the page is supported.

If HTTU is supported, separate enable bits in the CDs and STEs determine whether a particular stage 1 or stage 2 translation table (referenced from the CD or STE) is updated in this manner, and the scope of the updates.

Note: It is possible for several CDs to reference the same translation table, or for several STEs to reference the same CD. Where translation tables are shared between CDs that contain the same ASID (within a translation regime), the CD HA and HD fields must be identical. See section 5.4.1 *CD notes*.

Note: Accessed means a translation to which an access has been made. Software might attempt to detect a working set by clearing the Access flags and observing which flags are set again. Dirty state of the page means a writable translation to which a write access or other modification has been made. When reclaiming or repurposing a Dirty page, software might preserve the modifications to storage. Clean means a writable translation to which a modification has not been made. When reclaiming or repurposing a Clean page, software might simply discard the page contents (as another up-to-date copy might be available in storage elsewhere).

#### 3.13.1 Software update of flags

Note: In the context of a PE that does not support HTTU, software is generally expected to maintain the Access flag and the dirty state of a page, where required, as follows:

- A read or write that fetches a translation table descriptor with AF == 0 causes an Access fault, if AFFD == 0. An exception handler marks the descriptor as AF == 1 and retries the instruction that caused the access. Agents are not permitted to cache such entries in TLBs. No TLB invalidation is required when setting AF to
- A Dirty flag is usually implemented in software by write-protecting a translation. A write access to such a translation generates a Permission fault, at which point the exception handler might rewrite the descriptor to mark it writable. The exception handler might use additional software structures or a software-defined descriptor flag to differentiate a genuinely non-writable page from a page that is only temporarily non-writable in order to generate the Permission fault. In this arrangement, a descriptor that has write permission is considered to be *Writable*, *Dirty* and a descriptor that has no write permission but is marked as temporarily unwritable is considered to be *Writable*, *Clean*.

- A write to a genuinely non-writable page is an error. A write to a Writable Clean (temporarily non-writable)
  page causes the page to become Writable Dirty. A write to a Writable Dirty page causes no additional state
  change.
- An Access fault takes priority over a Permission fault. That is, a write to a Writable Clean page with AF == 0 and AFFD == 0 causes an Access fault, and only after AF == 1 does a Permission fault occur.

When pinned DMA translations are used with an SMMU, software can update the translation flags as appropriate to the expected access. Arm does not expect faults to be generated when pinned translations are used, and such faults represent a programming error. Arm expects software to use the Terminate model for such scenarios, so that faulting transactions are terminated.

An SMMU can operate in a similar manner to the PE example when using unpinned DMA translations, so that transactions that are translated by the SMMU cause faults to be recorded and the SMMU driver software sets descriptor state in response to these records. For more information about faults, see section 3.12 Fault models, recording and reporting.

Where this is the case, Arm recommends that this is implemented using the Stall model. Arm expects that the SMMU driver maintains software Access or dirty state by doing one of the following:

- Responding to an F\_ACCESS fault by setting AF to 1 in the relevant translation table descriptor.
- Responding to an F\_PERMISSION fault for write to a Writable Clean page by marking the page as Writable Dirty.
- Finally, issuing a CMD\_RESUME to the SMMU to retry the transactions held up due to the fault

Note: The AFFD field in a stage 1 and stage 2 configuration modifies the behavior of the AF flag of a descriptor. A descriptor, at a translation stage with AFFD == 1, and AF == 0 does not cause an  $F_ACCESS$  to be generated. Instead, the translation is used as though AF == 1. This configuration is only relevant where HTTU is not used.

A translation table can be shared between multiple agents, if all agents that update the Access flag and the dirty state of the page use the same semantics to differentiate a descriptor marked non-writable from one marked temporarily non-writable. Usually, this is a software-defined bit that flags a page as potentially writable as opposed to a page that is intended to always be non-writable.

HTTU removes the fault record and software handling from the path of updating translation table flags. An agent is permitted to perform HTTU on a translation table that might be shared with an agent performing software update. The Dirty Bit Modifier field has been added in Armv8.1-A to differentiate non-writable and Writable Clean states. For more information about the Dirty Bit Modifier, see section 3.13.3 *Dirty flag hardware update*. Software intending to provide software-updated translation table descriptor flags from one agent (for example a PE without HTTU) while sharing translations with another agent that uses HTTU must use the DBM flag convention, and perform atomic updates.

#### 3.13.2 Access flag hardware update

When HTTU is supported and enabled for a stream, a translation that causes an SMMU fetch of a descriptor with AF == 0 that would, without HTTU and with AFFD == 0, have caused an Access fault performs an atomic update to set AF == 1 in the descriptor. Note: This includes stage 2 translation for the fetch of an L1CD or CD.

The SMMU never clears AF.

If access to a descriptor causes a permission fault, it is UNKNOWN whether the AF flag of the descriptor is updated to 1

When HTTU is disabled, or not supported by the SMMU, a transaction that leads to access of translations with AF == 0 and AFFD == 0 causes F\_ACCESS.

If the update of the dirty state of the page takes place, the final translation table descriptor will also have AF == 1.

#### 3.13.3 Dirty flag hardware update

In order to coexist with an agent that is not using hardware update, HTTU defines a new flag, at bit[51] of Block and Page descriptors, called the *Dirty Bit Modifier* (DBM). The DBM bit marks the overall intention of a translation as ultimately writable, to differentiate a non-writable page from a Writable Clean page in the same way as a software-maintained mechanism would.

Note: The Armv8-A stage 1 descriptor field AP[2:1] has no bit[0]. The stage 2 equivalent is named S2AP[1:0].

When HTTU of the dirty state of a page is supported and enabled for the stream, a non-writable descriptor is automatically marked as writable by the SMMU when a translation for a write occurs, if it is a descriptor with DBM == 1. A Permission Fault is not generated, and the translation continues.

Specifically, if a descriptor is read-only only as a result of AP[2:1] == 0b1x at stage 1, or non-writable using S2AP[1:0] == 0b0x at stage 2, then if DBM == 1 and a translation for write occurs, the SMMU atomically sets AP[2] to 0 in the descriptor held in memory, in a coherent manner if appropriate. If DBM == 0, the page has no write permission and a write translation results in a Permission fault.

Note: HTTU of the dirty state of a page is not applicable to a descriptor that is made effectively read-only because of the hierarchical control of access permissions using APTable. All references to page or block permissions in this section are made on the assumption that the page or block is otherwise accessible, will not generate a Permission fault for other reasons, such as PAN or the APTable having removed access, and that a page is only read-only (or otherwise non-writable) because of the page or block AP/S2AP permissions.

When the APTable does not remove write access:

• A read-only stage 1 descriptor has DBM == 0 and AP[2:1] == 0b1x. A non-writable stage 2 descriptor has DBM == 0 and S2AP[1:0] == 0b0x.

A write causes a Permission fault as the page has no write permission.

The software fault handler invokes an error-handling routine. Because DBM == 0, the software handler can determine that the page is not allowed to be written. In the case of an SMMU stalled fault, software can use CMD\_RESUME to terminate an erroneous transaction.

• A Writable Clean translation table descriptor has DBM == 1 and AP[2:1] == 0b1x/S2AP[1:0] == 0b0x.

Without HTTU, this descriptor is non-writable and a write causes a Permission fault. Because DBM == 1, the page is intended to be writable and the software fault handler can mark the page as dirty by setting AP[2] == 0/S2AP[1] == 1 and performing the appropriate TLB invalidation. The page is now marked Writable Dirty. In the case of an SMMU stalled fault, software can use CMD\_RESUME to retry the transaction, which might then continue without fault.

When HTTU is enabled, a write transaction causes the SMMU to atomically set AP[2] == 0 or S2AP[1] == 1 as appropriate, and then allows the write to proceed.

• A Writable Dirty descriptor has AP[2] == 0/S2AP[1:0] == 0b1x.

With or without HTTU, this page is writable and will not generate a Permission fault on a write.

Note: Although DBM is ignored by hardware in this state, it might be useful for software to use the convention of leaving DBM == 1 when a page AP[2] transitions from non-writable to writable. This allows the DBM bit to be used as a one-bit flag to indicate that, overall, a page is intended to be written regardless of its current Clean or Dirty state.

- The SMMU never sets or clears DBM.
- The SMMU never clears S2AP[1].
- The SMMU never sets AP[2]. A descriptor is never made writable by the SMMU unless DBM == 1.

The SMMU never sets S2AP[1] == 1 for the stage 2 translation for the fetch of an L1CD or CD.

#### 3.13.4 HTTU behavior summary

SMMU HTTU operation has the same behavior as described in *Hardware Updates to Access Flag and dirty state* in the Armv8.1-A architecture [2].

The following HTTU behavior is specific to the SMMU:

- A descriptor update that occurred because of a completed ATOS translation is made visible to the required Shareability domain, as specified by the translation table walk attributes, by completion of a CMD\_SYNC that was submitted after the ATOS translation began.
- A descriptor update that occurred because of a completed incoming transaction is made visible to the required Shareability domain (as specified by the translation table walk attributes) by completion of a CMD\_SYNC that was submitted after the completion of the incoming transaction.
  - In addition, the completion of a TLB invalidation operation makes descriptor updates that were caused
    by transactions that are themselves completed by the completion of the TLB invalidation visible. Both
    broadcast and explicit CMD\_TLBI\_\* invalidations have this property.

Note: The SMMU HTTU behavior follows the same rules as Armv8.1-A [2], including all TLB invalidation completion requirements on HTTU visibility from VMSA.

#### 3.13.5 HTTU with two stages of translation

When two stages of translation exist, multiple translation table descriptors determine the translation, that is the stage 1 descriptor, the stage 2 descriptors mapping all steps of the stage 1 walk, and finally the stage 2 descriptor mapping the IPA output of stage 1. Therefore one access might result in several descriptor updates. Figure 3.9 shows an example:

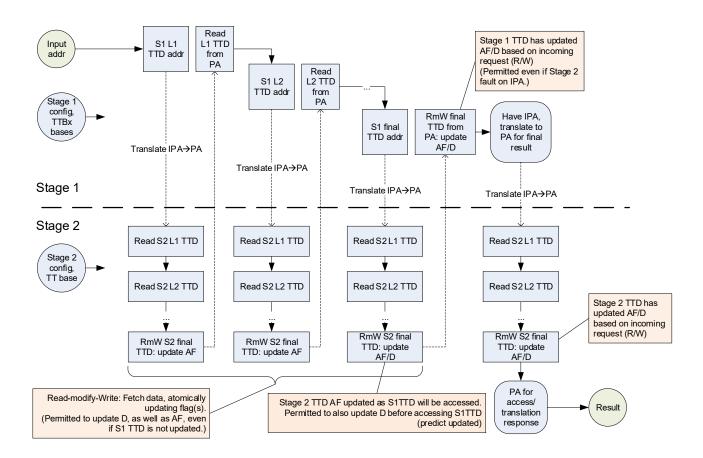


Figure 3.9: Example Hardware flag update with nested translation

Note: Figure 3.9 is an example procedure and does not depict all permitted ways of performing a nested translation walk with HTTU enabled.

Because a stage 1 descriptor hardware update is a write, the stage 2 mapping for its IPA must allow writes for the update to succeed.

#### 3.13.6 ATS, PRI and translation table flag update

When ATS and PRI are used to support device access to dynamically paged memory, the Access state and the dirty state of the page need to be maintained. This section describes the SMMU page flag maintenance behavior in a system using ATS with PRI targeting dynamically paged memory.

Note: Maintenance of the Access flag and the dirty state of the page is primarily of importance to DMA to unpinned or paged memory, because use-cases with DMA to pinned memory would normally statically initialize page state.

#### 3.13.6.1 Hardware flag update for ATS & PRI

Because the purpose of ATS is to cache translations outside the SMMU and to avoid subsequent translation interaction with the SMMU, if HTTU is enabled it is performed at the time of the ATS Translation Request (TR).

When an ATS TR is made, it must be assumed that a device will subsequently access the page. If the page is otherwise valid and an ATS response will be returned, AF is set to 1 in the descriptor in the same way as a direct transaction access through the SMMU.

In addition to the behavior that is described earlier in this section, if hardware-management of dirty state is enabled and an ATS request for write access (with NW == 0) is made to a page that is marked Writable Clean, the SMMU assumes a write will be made to that page and marks the page as Writable Dirty before returning the ATS response that grants write access. When this happens, the modification to the page data by a device is not visible before the page state is visible as Writable Dirty. If HTTU is only enabled for Access, an ATS request for a write to a Writable Clean or Read Only page results in an ATS Translation Completion with W == 0, and write access is denied.

If an ATS Translation Request is made for a write (NW == 0) to a nested translation configuration and the associated stage 1 translation is read-only (not Writeable), the dirty state is not updated in either of the stage 1 descriptor, or the stage 2 descriptor that is used to translate the output address from the stage 1 descriptor.

Note: This also applies if the stage 2 translation of the stage 1 output address is Writable-Clean.

When HTTU is enabled for stage 1 and stage 2 and Split-stage ATS is used (STE.EATS == 0b10), the ATS TR performs HTTU at stage 1, and updates for the stage 2 descriptors that are used to fetch and update the stage 1 descriptors are made. The following applies to the stage 2 descriptor for the final IPA:

- The AF in the stage 2 descriptor for the final IPA is permitted to be speculatively set to 1 by the ATS TR.
- If write permission is granted in the ATS Translation Completion, a Writable Clean stage 2 descriptor for the final IPA is permitted to be marked as Writable Dirty by the ATS TR.
  - When a subsequent Translated access to the IPA is translated, this choice does not affect the HTTU behavior of stage 2.
  - This choice does not affect the permissions that are returned in the Translation Completion, which reflect whether a write transaction is permitted by the combined permissions of both stages and treat a Writable Clean stage 2 descriptor as writable. See section 13.6.3 Split-stage (STE.EATS == 0b10) ATS behavior and responses.
- The stage 2 translation of a subsequent Translated access marks the stage 2 descriptor as Accessed and might mark the descriptor as Writable Dirty, provided that the ATS TR has not already performed this action.

#### 3.13.6.2 Behavior with respect to flag maintenance for ATS & PRI without HTTU

If HTTU is not enabled for the Access flag, an ATS request to a page with AF == 0 and AFFD == 0 is denied. For this address a response granting R == W == 0, that is no access, is returned. The client device might then raise an error in a device-specific manner, or might issue a PRI page request, if supported and configured, to request that software makes the page available. Software can manually set AF == 1 on receipt of the PRI page request in anticipation of the device access.

An ATS request to any read-only page does not grant write access, that is it returns W == 0, if hardware update of dirty state of the page is not enabled. Read access might be granted in the response, if the conditions for the Access flag set out in this section are satisfied. The client device might raise an error in a device-specific manner, or might issue a PRI page request to request write access to the address. On receipt of a PRI request, software could assume that a request issued for write was initiated because data will shortly be written and mark the page Writable Dirty before responding to the PRI request.

An ATS request for write to a page marked writable might grant write access, that is it returns W == 1 in the response. Software must consider writable pages as potentially dirty.

Note: PCIe PRI requests can be issued speculatively by an Endpoint. This implies speculatively marking the page as Dirty. This is not permitted by the Armv8-A architecture [4] and might be problematic for some software systems.

Because pages cannot speculatively be marked as Dirty, Arm recommends that a system designed for general-purpose software supports HTTU when PRI is used, so that the state of the page is marked Dirty only when a request for write access is made using ATS.

#### 3.13.7 Hardware flag update for Cache Maintenance Operations and Destructive Reads

HTTU for Dirty bit update is not performed for the following operations:

- Invalidate Cache Maintenance Operations. See section 16.7.2.2 *Permissions model for Cache Maintenance Operations* for more information.
- Destructive Reads. See section 3.22.2 Permissions model for more information.

When these operations are performed to a Writable Clean translation table descriptor, the descriptor is not updated to be Writable Dirty. If the required Read or Execute permissions are available, but the descriptor is not Writable Dirty, the operations are downgraded as described in the corresponding section.

This rule does not affect HTTU of the Access flag, which occurs if required.

Note: For the purposes of determining execute permission, a Writable Clean descriptor is considered to be writable when HTTU is enabled, which is consistent with the Armv8-A architecture. As described in this section, this principle applies even when the descriptor is not updated to Writable Dirty for an Invalidate or DR.

## 3.14 Speculative accesses

An implementation might allow incoming transactions to be marked as speculative in an IMPLEMENTATION DEFINED manner. Only read transactions are allowed to be marked as speculative. The behavior of a write transaction that is marked as speculative is always to terminate the transaction with an abort, and no event is recorded to software.

The behavior of a read transaction that is marked as speculative depends on two things:

- 1. If the translation occurs successfully without faulting, the read transaction continues into the system and returns data. Otherwise if any kind of fault or configuration error occurs, the transaction is terminated with an abort; no event is recorded to software for any speculative transaction. The determination of a fault is no different to non-speculative read transactions, including Access flag faults.
- 2. If HTTU is enabled and translation succeeds without fault, the read transaction updates the Access flags of relevant translation table descriptors.

The SMMU HTTU rules match those set out for Armv8.1-A [2], with respect to hardware update of Access flag and dirty state, including update of stage 2 translation table flags for both speculative accesses made at stage 1 and writes of stage 1 descriptors due to the setting of Access flags.

An implementation might provide translation services to a client device, and might support speculatively-issued Translation Requests. An IMPLEMENTATION DEFINED mechanism must be used to differentiate speculative Translation Requests from non-speculative Translation Requests.

Note: This mechanism might arise as an implementation-specific service provided to another device. PCIe ATS Translation Requests are always non-speculative.

If a received Translation Request is marked as speculative, behavior is dependent on the read/write property of the request:

- Translation Requests for an address to be written grant write in the response only if the translation table
  descriptors that translate the address are all marked Writable Dirty. If hardware management of the Access
  flag is enabled, such a request updates AF. If hardware management of dirty state is enabled, speculative
  Write Translation Requests do not mark any Writable Clean descriptor in the first or only stage of translation
  as Writable Dirty. If the descriptor is marked Writable Clean, the response does not grant write access.
- Translation Requests for an address to be read return a successful response, if appropriate, and if hardware management of the Access flag is enabled updates AF.
- In both cases, if hardware management of Access flag and dirty state is enabled in a nested translation then an update of a stage 1 descriptor to set AF or the Dirty state of the page might cause the stage 2 descriptors related to the updated stage 1 descriptor to be marked as Dirty as required.

The response to a Translation Request indicates whether a translation request was denied because of a page fault or otherwise missing translation, or whether a valid translation existed but the request failed because the translation was Writable Clean.

Note: A device might use this information to determine whether to stop making requests or whether to subsequently try again with a non-speculative write.

For speculative accesses of SMMU structures and translations, see section 3.21.1 *Translation tables and TLB invalidation completion behavior* and 3.21.3 *Configuration structures and configuration invalidation completion.* 

## 3.15 Coherency considerations and memory access types

Arm anticipates that the SMMU will access all in-memory structures and queues in a manner that does not require software cache maintenance of the PE caches. Arm expects that this be IO-coherent access to normal shared memory, but in implementations that cannot support cache coherency, this might be non-cached access. Some embedded implementations might require use of memory mapped as non-cached by the PEs, see section 3.16 *Embedded implementations* below. The degree to which the different memory access types and attributes are supported is IMPLEMENTATION DEFINED.

All in-memory structures and queues are accessed using Normal memory types. Configuration fields exist for Stream table, Context Descriptor and translation table fetches to govern Cacheability and Shareability of such accesses. MSI writes can be configured to make Device-type accesses.

If hardware update of the Access flag or the dirty state of a page is supported, atomic access is required to update translation tables that are shared between the PE and SMMU. Support for atomic access using local monitors requires a fully-coherent interconnect port.

If the memory system supports Armv8.1 [2] atomic operations, the SMMU might support atomic updates without local monitors, and not require a fully-coherent port. Because different SMMU implementations might use different mechanisms for atomic update of the flags, and because local monitors require coherent cacheable access, behavior is IMPLEMENTATION DEFINED if hardware flag updates are enabled on translation tables configured to be accessed as Non-cacheable.

To limit complexity, the SMMU might respond to snoops from the system only as much as required for atomic updates to translation tables with local monitors, if required. This means that all other memory access by the SMMU might be IO-coherent. That is, SMMU configuration caches are not required to be snooped by PE accesses. When configuration data structures are changed, software is required to issue invalidation commands to the SMMU.

The SMMU respects the same single-copy atomicity rules as PEs regarding 64-bit translation table descriptor accesses.

When configured by software, that is when not fixed in embedded implementations, Arm recommends that the in-memory data structures and queues are treated as Normal memory cached by the PE when the SMMU implementation is able to access them IO-coherently.

Note: This might be useful to avoid explicit cache maintenance on the PE side. When an SMMU is not able to make IO-coherent access, a similar programming model might be achieved using normal non-cached mappings from the PE.

Note: The configuration structure invalidation commands might be used by a hypervisor to maintain coherency between guest and shadow structures that it might use.

When a system supports IO-coherent accesses from the SMMU for access to configuration structures, translation tables, queues and CMD\_SYNC, GERROR, Event queue and PRI queue MSIs, this is presented to software using SMMU\_IDR0.COHACC == 1. If a system does not support IO-coherent access from the SMMU, SMMU\_IDR0.COHACC must be 0.

#### 3.15.1 Client devices

SMMU translation of coherency traffic for client devices is not supported. Cache and TLB-maintenance operations sent from client devices into the system are not supported. These operations terminate in the SMMU.

Devices connected behind an SMMU cannot contain caches that are fully-coherent with the rest of the system because snoops relate to physical cache lines. Devices might contain caches that do not support hardware coherency and which might be filled using non-physical addresses through an SMMU.

However, a client device that contains a TLB filled from the SMMU might maintain a fully-coherent physically-addressed cache, using the TLBs to translate internal addresses to physical addresses before performing cache accesses. Such a case might arise where an SMMU is implemented as part of a complex device.

3.15. Coherency considerations and memory access types

In distributed systems, different client devices might have different paths through the SMMU into the system, and these can differ in their ability to perform IO-coherent access. These paths might also differ from those used by the SMMU for its own configuration access, hence SMMU\_IDR0.COHACC does not indicate whether client devices can also make IO-coherent accesses. Arm recommends that whether a given client device is capable of performing IO-coherent access is described to system software in a system-specific manner.

## 3.16 Embedded implementations

Some implementations might support the use of on-chip or internal storage for one or more of the Stream table structures, the Command queue, or the Event queue. This manifests itself as register base pointers and properties that are hard-wired to point to the on-chip storage. Such queues and structures are of a fixed size and configuration and in all cases are discoverable by system software. Software must not assume that it is necessary to allocate tables in RAM and set up pointers. It must initially probe for an existing configuration. SMMU\_IDR1.TABLES\_PRESET and SMMU\_IDR1.QUEUES\_PRESET indicate that the Stream table base address and queue base addresses are hardwired to indicate pre-existing storage for the tables or queues, or both. When SMMU\_IDR1.REL is set, the base addresses are given relative to the start of the SMMU register memory map, rather than as absolute addresses.

An implementation using internal storage for configuration and queues is not required to access this storage through the coherency domain of the PEs. Data accesses from the PE require manual cache maintenance or use of a non-cached memory type for these addresses.

For an implementation using internal storage for configuration and queues, it is required that all address regions for those configuration structures and queues do not overlap. This requirement applies both within the same physical address space, and across Non-secure and Secure PA spaces.

#### 3.16.1 Changes to structure and queue storage behavior when fixed/preset

Non-preset tables/queues are stored in normal memory. When an embedded implementation contains a preset structure or queue in internal storage it is not required that all bits of all structures/queue entries are accessible exactly as they would be in normal memory. For example, an implementation might not provide storage for fields in structures and queues that would not be used by architected behavior.

#### 3.16.1.1 Event Queue and PRI Queue

All entries in an embedded Event queue or PRI queue, that is where <u>SMMU\_IDR1.QUEUES\_PRESET</u> == 1, are permitted to have read-only/write-ignored behavior with respect to software accesses.

#### 3.16.1.2 Command Queue

Entries in an embedded Command queue, that is where SMMU\_IDR1.QUEUES\_PRESET == 1, are readable and writable, but are not required to provide storage outside of the union of all defined fields for all implemented commands. In addition, referring to the Command encodings in Chapter 4 Commands, storage is not required to be provided for:

- · Reserved and undefined fields.
- High-order bits of StreamID fields beyond the implemented range of StreamIDs.
- High-order bits of SubstreamID fields beyond the implemented range of SubstreamIDs (including the entire field if SubstreamIDs are not implemented).
- SSV fields, if SubstreamIDs are not implemented.
- STAG bits that are always generated as '0' to software.

Note: An implementation might choose to use fewer than 16 bits of STAG when communicating stalled faults to software.

- SSec, if only Non-secure state is supported.
- CMD\_SYNC MSIData, MSIAddress and MSIWriteAttributes if MSIs are not supported by the Security state
  of the Command queue.
- ASID[15:8] if SMMU\_IDR0.ASID16 == 0, or VMID[15:8] if SMMU\_IDR0.VMID16 == 0.

- CMD\_CFGI\_STE Leaf parameter (embedded Stream tables are single-level).
- Fields in any command type that gives rise to CERROR\_ILL.

A bit that is not stored due to these rules has RAZ/WI behavior.

Note: An implementation determines the set of required storage bits from implementation-specific configuration options and values.

Software must not assume that it can write an arbitrary 16-byte sequence to a Command queue entry and read back the sequence unmodified. However, functional fields that form valid command parameters must be readable by software for debug and read-modify-write construction of commands (the queue is not considered write-only).

#### 3.16.1.3 Stream Table Entry

Entries in an embedded Stream table are freely read/write accessible, but storage is not required to be provided for:

- Undefined fields.
- Reserved/ RESO fields.
- Fields that are IGNORED in all possible configurations that an implementation supports.
- Fields permitted to have RAZ/WI behavior.

As an example, storage is not required for STE.S1ContextPtr on an SMMU that has an embedded Stream table but does not support stage 1.

Note: Fields Reserved for software use do not alter SMMU function but must be stored in their entirety.

# 3.17 TLB tagging, VMIDs, ASIDs and participation in broadcast TLB maintenance

Cached translations within the SMMU are tagged with:

- A translation regime, given by the STE's StreamWorld and derived in part from STE.STRW. This applies to all cached translations.
- An ASID, if the translation regime supports ASIDs.
- A VMID, if stage 2 is implemented by the SMMU and if the translation regime supports VMIDs.

This is summarized in the table below:

| StreamWorld                | Address Type | Tags                |                    |                    |
|----------------------------|--------------|---------------------|--------------------|--------------------|
|                            |              | ASID                | ASET               | VMID               |
| NS-EL1                     | VA           | Yes, if TTD.nG == 1 | Yes <sup>(2)</sup> | Yes <sup>(1)</sup> |
| NS-EL1                     | IPA (1)      | No                  | No <sup>(3)</sup>  | Yes <sup>(1)</sup> |
| any-EL2 <sup>(4)</sup>     | VA           | No                  | No <sup>(3)</sup>  | No                 |
| any-EL2-E2H <sup>(4)</sup> | VA           | Yes, if TTD.nG == 1 | Yes <sup>(2)</sup> | No                 |
| Secure                     | VA           | Yes, if TTD.nG == 1 | Yes <sup>(2)</sup> | Yes <sup>(5)</sup> |
| EL3                        | VA           | No                  | No <sup>(3)</sup>  | No                 |

 $<sup>^{(1)}</sup>$  If SMMU\_IDR0.S2P == 1.

This is consistent with TLB tagging in PEs.

Note: In this document, the term cached translations refers to the contents of a PE-style ASID/VMID/Address TLB. Any cached configuration structures are considered architecturally separate from the translations that are located from the configuration. Configuration caches are not required to be tagged as described in this section.

Use of these tags ensures that no aliasing occurs between different translations for the same address within different ASIDs, or between the same ASID under different VMIDs, or between the same ASID within different translation regimes, or between different translation regimes without ASIDs (for example any-EL2 and EL3). For both lookup and invalidation purposes, ASID values can be considered to be separate namespaces within each VMID and translation regime.

Note: For example, TLB entries tagged as ASID 3 in a Secure stage 1 cannot be matched by lookups for ASID 3 in an NS-EL1 stage 1 configuration. Similarly, a TLB entry that is tagged as either of S-EL2 or NS-EL2 can never be matched by a lookup from an EL3 context, even if the address matches.

<sup>(2)</sup> ASET is required to be included in TLB records when the nG bit in the descriptor is 0. Arm expects, but does not require, ASET to be included in TLB records when the nG bit in the descriptor is 1 to support the limitation of broadcast invalidation feature of ASET.

<sup>(3)</sup> Arm permits but does not require the inclusion of ASET in TLB records for EL3 and EL2.

<sup>(4)</sup> Applies to both NS-EL2 and S-EL2, if supported.

<sup>(5)</sup> When Secure stage 2 is supported.

In a regime that lacks ASIDs to differentiate address spaces, all CDs are considered equivalent (similar to two CDs with the same ASID value) even if referenced using different STEs. This implies that SubstreamIDs cannot differentiate address spaces in any-EL2/EL3 StreamWorlds. See section 5.4.1 *CD notes* for restrictions on permitted differences between CDs in such StreamWorlds.

EL3 tags TLB entries as EL3 without an ASID and Arm expects this StreamWorld to be selected for Secure streams used by EL3 software on an Armv8-A host PE whose EL3 runs in AArch64. There are no ASIDs in an AArch64 EL3 translation regime.

When  $SMMU\_IDR0.S1P == 1$ , the SMMU supports 16-bit ASIDs if  $SMMU\_IDR0.ASID16 == 1$ .

When SMMU\_IDR0.S2P == 1, the SMMU supports 16-bit VMIDs if SMMU\_IDR0.VMID16 == 1.

Consistent with PEs, all TLB entries inserted using NS-EL1 configurations are tagged with VMIDs when stage 2 is implemented, regardless of whether configuration is stage 1-only, stage 2-only or stage 1+stage 2 translation. When stage 2 is configured, with or without stage 1, or if stage 1-only translation is configured, the VMID is taken from the STE.S2VMID field. When stage 2 is not implemented, no VMID tag is required on TLB entries.

Note: Some implementations and interconnects might support the transmission of VMID value onwards into the system, so that Completer devices might further arbitrate access on a per-transaction basis. Where SMMU bypass is enabled (SMMU\_(S\_)CR0.SMMUEN == 0) so that STE structures are unused, the SMMU\_(S\_)GBPA.IMPDEF field might be used. Otherwise, the STE.S2VMID field might be used. Details of these use cases are outside of the scope of this specification.

SMMU support for TLB maintenance messages that are broadcast from the PE is optional, but Arm recommends that support is implemented. These messages convey TLB invalidations from certain TLBI instructions on PEs. The Armv8.0 architecture [2] requires invalidation broadcasts to affect other PEs or agents in the same Inner Shareable domain. Armv8.4 [2] adds support for a PE to issue broadcast TLB invalidation operations to the Outer Shareable domain as well as the existing behavior of issuing to the existing Inner Shareable domain. Broadcast TLB invalidate messages convey one or more of an address, an ASID or a VMID as required for a given invalidation operation, the scope defined by a translation stage to be affected and the translation regime in which the TLB entries are tagged. Support for broadcast invalidation is indicated by SMMU\_IDR0.BTM.

Note: The Shareability domain of the SMMU is a property of the system. When broadcast TLB invalidation is implemented then an implementation of any SMMUv3 version responds to the broadcast invalidation scope corresponding to its assigned Shareability domain.

Where SMMU\_IDR0.BTM == 1, setting SMMU\_(S\_)CR2.PTM == 1 causes the SMMU to ignore broadcast TLB invalidation operations for the corresponding Security state. Broadcast TLB invalidation messages that would invoke an illegal operation, such as an invalidation that applies to a stage or Security state that is not implemented in the SMMU, are silently ignored, with the exception that messages that have a combined effect must affect the implemented stages and ignore any unimplemented stage. When SMMU\_IDR0.S2P == 0, the SMMU matches VMID 0 for incoming broadcast TLB invalidation messages for a regime that uses VMIDs. When SMMU\_IDR0.S2P == 1, a broadcast TLB invalidation message for a regime that uses VMIDs is treated as having VMID 0 if it is sent from a PE that does not implement EL2.

Note: On PEs that implement EL2 but have stage 2 disabled, Arm expects software to configure VTTBR\_EL2.VMID to 0. This ensures that for broadcast TLBI operations that include a VMID the VMID is set to 0.

Note: If, in a translation regime that uses VMIDs, stage 1-only translations coexist with stage 1 and stage 2 translations, then different VMID values must be used in each configuration to avoid the stage 1-only translations matching lookups that use stage 1 and stage 2 configurations.

Note: Arm expects broadcast invalidation from PEs to be used where address spaces are shared with the SMMU and common translations are maintained, such as Shared Virtual Memory applications, or stage 2 translations that share a common stage 2 translation table between VMs and the SMMU. When an address space is not shared with PE processes, broadcast TLB invalidations from the PEs to the SMMU have no useful effects and might over-invalidate unrelated TLB entries. Non-shared address spaces arise when a custom address space is set up for

a particular device – for example, scatter-gather or DMA isolation use cases. Arm expects that both shared and non-shared stage 1 translations might be in use simultaneously.

Stage 1 CDs contain an ASET flag, that represents the shared or non-shared nature of the ASID and address space. The set of ASIDs for non-shared address spaces might opt out of broadcast invalidation.

Note: Arm expects that SMMU stage 2 address spaces are generally shared with their respective PE virtual machine stage 2 configuration. If broadcast invalidation is required to be avoided for a particular SMMU stage 2 address space, Arm recommends that a hypervisor configures the STE with a VMID that is not allocated for virtual machine use on the PEs.

For a stage 1 configuration with a StreamWorld that has ASIDs, when CD.ASET == 1, the address space and ASID are non-shared. TLB entries that belong to that StreamWorld are not required to be invalidated by the broadcast invalidation operations that match with an ASID. These operations are VA{L}ExIS and ASIDEXIS in the appropriate translation regime. All other matching broadcast invalidations are required to affect these entries. Where CD.ASET == 0, the ASID is considered shared with PE processes. TLB entries that belong to that StreamWorld are required to be affected by all matching broadcast invalidates. The definition of matching is identical to that of Armv8-A PE TLBs [2]. CD.ASET does not affect the invalidation of stage 2 translation information.

For translation lookup of non-global TLB entries and command-based invalidation purposes, ASID values with CD.ASET == 0 are considered equivalent to ASID values with CD.ASET == 1. CMD\_TLBI\_\* commands invalidate all matching TLB entries regardless of their ASET value. CD.ASET affects translation lookup of global TLB entries. For information about global TLB entry matching, see section 3.17.1 The Global flag in the translation table descriptor.

A stage 1 configuration in a translation regime that does not have ASIDs, that is where StreamWorld == any-EL2 or StreamWorld == EL3, ignores the ASID field and is permitted but not required to tag TLB entries using ASETs. An equivalent semantic applies, in that ASET == 0 entries are affected by broadcast invalidation and ASET == 1 entries are not required to be invalidated by certain operations. EL2 TLB entries with ASET == 1 are not required to be invalidated by VA $\{L\}$ EXIS or VAA $\{L\}$ EXIS but must be invalidated by ALLE2IS. EL3 TLB entries with ASET == 1 are not required to be invalidated by VA $\{L\}$ EXIS but must be invalidated by ALLE3IS.

Note: Arm does not anticipate that ASET == 1 has an effect on EL2 and EL3 contexts, however the behavior described here is consistent with other StreamWorld configurations.

In a regime that lacks ASIDs to differentiate address spaces, all CDs are considered equivalent (similar to two CDs with the same ASID value) even if referenced using different STEs. This implies that SubstreamIDs cannot differentiate address spaces in any-EL2/EL3 StreamWorlds. See section 5.4.1 *CD notes* for restrictions on permitted differences between CDs in such StreamWorlds.

Note: A broadcast invalidation operation that originates from a PE in any-EL2-E2H mode is not required to invalidate SMMU TLB entries that were inserted with StreamWorld == any-EL2, see section 3.17.5 *EL2 ASIDs* and TLB maintenance in EL2 Host (E2H) mode.

Note: See section 16.7.7 AMBA DVM messages with respect to CD.ASET == 1 TLB entries for AMBA interconnect DVM behavior with respect to ASET == 1.

Note: The ASID namespace might be affected by ASID rollover on the PE. These situations might be handled by:

- Refreshing the ASID namespace on the PE side and reallocating free ASIDs to new processes, but leaving ASIDs that are shared with SMMU contexts untouched.
- Swapping the ASID that is used in a CD, so that the old ASID is removed from the SMMU, and future traffic uses a freshly-allocated ASID. This can be achieved with an overlap in which both the old ASID and new ASID are active as the old ASID is updated in the CDs. This is followed by invalidation commands to the affected CDs (causing the SMMU to use the new ASID), and a CMD\_SYNC. These steps are followed by TLB invalidation commands and a CMD\_SYNC to remove all usage of the old ASID. When the final CMD\_SYNC has ensured that these commands are complete, the old ASID can be considered free and the system can re-use it for a different address space.

#### 3.17.1 The Global flag in the translation table descriptor

For translation regimes that have an ASID, Armv8-A [2], defines an nG bit in the the Block and Page descriptors that allows them to be marked as either global or non-global. A translation that is performed for a Secure stream is treated as non-global, regardless of the value of the nG bit in the descriptor, if the descriptor is fetched from Non-secure memory. The any-EL2 and EL3 StreamWorlds do not support ASIDs, and the nG bit in the descriptor has no effect on these regimes.

Note: A translation table descriptor fetch from Non-secure memory might happen for several different reasons, for example because of the effective NS bit at that level of the translation table walk, or because the fetch uses the Non-secure IPA space which is implicitly Non-secure. See section 3.10.3 Secure EL2 and support for Secure stage 2 translation.

When entries are global, an ASID is not required to be recorded in any resulting TLB entry. During lookup, a TLB entry marked as global can match regardless of the ASID that is provided with the lookup. The nG bit in the descriptor does not allow a TLB entry to match a lookup from a StreamWorld that is not the same as the one from which the TLB entry was created.

Note: Global translations are used across address spaces with identical layout conventions, OS kernel addresses might be common across all process address spaces, and so they might be marked global. However, an SMMU might be used with many custom address spaces that are laid out in a manner convenient to the client device they serve, without common mappings.

The SMMU only matches global TLB entries, that is where the nG bit in the descriptor is zero, against lookups from the same StreamWorld and ASID set (ASET). Global TLB entries with ASET == 0 do not match lookups through configurations with ASET == 0. Global TLB entries with ASET == 0 do not match lookups through configurations with ASET == 0.

Invalidation rules for non-locked global mappings are identical to those in Armv8-A, where the ASIDE1 and ASIDE2 scopes are not required to invalidate global mappings.

#### 3.17.2 Broadcast TLB maintenance from Army8-A PEs with EL3 in AArch64

When the Secure Stream table is controlled by an Armv8-A PE where EL3 is using AArch64 state, software has the option of marking an STE as Secure, S-EL2, S-EL2-E2H or EL3 using the StreamWorld field, STE.STRW.

When the StreamWorld is Secure, the stream is configured on behalf of Secure-EL1 software and the resultant TLB entries are tagged as Secure, including an ASID if non-global. Such entries must be invalidated by:

- PE broadcast TLB invalidations (where supported and if CD.ASET allows) from Secure EL1 instructions with the following scope:
  - VA{L}E1
  - $VAA\{L\}E1$
  - ASIDE1, for non-global entries
  - ALLE1
- SMMU invalidation commands on the Secure Command queue. These commands are:
  - CMD\_TLBI\_NH\_ALL
  - CMD\_TLBI\_NH\_ASID, for non-global entries
  - CMD\_TLBI\_NH\_VAA
  - CMD\_TLBI\_NH\_VA

When StreamWorld is EL3, the stream is configured on behalf of EL3 software and resultant TLB entries are tagged as EL3, without ASID, which differentiates them from the Secure case above. Such entries are invalidated by:

• PE broadcast TLB invalidations (where supported and if CD.ASET allows) from EL3 instructions with scope of VA{L}E3, ALLE3.

- SMMU invalidation commands on the Secure Command queue:
  - CMD TLBI EL3 VA
  - CMD TLBI EL3 ALL

An SMMU with SMMU\_IDR0.RME\_IMPL == 1 is not required to perform any invalidation on receipt of a broadcast TLBI for EL3 as EL3 StreamWorld is not supported.

#### 3.17.2.1 Broadcast TLB maintenance when Secure EL2 is implemented

The Secure EL2 and Secure stage 2 facilities introduced in SMMUv3.2 interoperate with the corresponding facilities on a PE. Broadcast TLB maintenance from a PE affects SMMU TLB entries of the same scope where supported and if CD.ASET allows.

For broadcast TLB maintenance with Secure EL1 scope from a PE that does not implement Secure EL2, or a PE that implements Secure EL2 and has SCR EL3.EEL2 == 0, the following rules apply:

- When SMMU\_S\_IDR1.SEL2 == 0, invalidation scope is not determined by VMID and invalidation occurs as described in 3.17.2 *Broadcast TLB maintenance from Armv8-A PEs with EL3 in AArch64* and in [2].
- When SMMU\_S\_IDR1.SEL2 == 1, the invalidation operations are interpreted as though they have VMID 0.
  - Note: When Secure EL2 is implemented, StreamWorld=Secure TLB entries that are inserted from configuration with stage 2 disabled are tagged with VMID 0. See section 3.10.3 Secure EL2 and support for Secure stage 2 translation.

Note: When a PE that does not implement Secure EL2 executes VMALLS12, it is only guaranteed to emit a broadcast TLBI with scope of stage 1 and VMID==0.

For broadcast TLB maintenance with Secure EL1 scope from a PE that has SCR\_EL3.EEL2 == 1, the following rules apply:

- When SMMU\_S\_IDR1.SEL2 == 0, SMMU TLB entries are not required to be affected.
- When SMMU\_S\_IDR1.SEL2 == 1, TLB entries that are in scope of both the invalidation operation and the supplied VMID are invalidated.

Note: Arm recommends that care is taken when integrating an SMMU implementation of SMMUv3.1 or earlier into a system that supports broadcast TLB maintenance from PEs implementing Secure EL2. Arm recommends that broadcast TLB maintenance from a PE that has SCR\_EL3.EEL2 == 1 does not affect Secure SMMU TLB entries, and that steps are taken to ensure that malfunction is avoided if the SMMU receives new Secure broadcast TLB maintenance operations that contain a VMID.

## 3.17.3 Broadcast TLB maintenance from ARMv7-A PEs or Armv8-A PEs with EL3 using AArch32

When the Secure Stream table is controlled by an ARMv7-A PE or an Armv8-A PE where EL3 is using AArch32 state, Arm expects software to mark the StreamWorld of an STE as Secure. The resultant TLB entries are tagged as Secure, including an ASID if non-global. Such entries are invalidated by:

- PE broadcast TLB invalidations (where supported and if CD.ASET allows) from Secure instructions with the following scope:
  - MVA $\{L\}$
  - $MVAA\{L\}$
  - ASID, for non-global entries
  - ALL
  - Note: VA{L}E3 and ALLE3 are AArch64-only and unavailable in this scenario.
- SMMU invalidation commands on the Secure Command queue. These commands are:
  - CMD\_TLBI\_NH\_ALL

- CMD\_TLBI\_NH\_ASID, for non-global entries
- CMD TLBI NH VAA
- CMD\_TLBI\_NH\_VA

Note: Broadcast invalidations from ARMv7-A PEs or Armv8 PEs where EL3 is using AArch32 might fail to invalidate SMMU TLB entries that are tagged with StreamWorld == EL3.

## 3.17.4 Broadcast TLB maintenance in mixed AArch32 and AArch64 systems and with mixed ASID or VMID sizes

Broadcast TLB maintenance instructions that are executed from Armv7-A and Armv8-A PEs using AArch32 and AArch64 Exception levels affect SMMU TLB entries (if broadcast TLB invalidation is supported and participation enabled), when the addresses, ASIDs, VMIDs and StreamWorlds match as appropriate.

The exceptions are:

- If a PE where EL3 uses AArch32 state issues an AArch32 TLBI that affects Secure entries, the TLBI is not required to affect SMMU TLB entries that were created with StreamWorld == EL3.
- If a PE where EL3 uses AArch64 state issues an AArch64 or AArch32 TLBI that affects Secure EL1 entries, the TLBI is not required to affect SMMU TLB entries created with StreamWorld == EL3.
- If a PE where EL3 uses AArch64 state issues an AArch64 TLBI that affects EL3 entries, the TLBI is not required to affect SMMU TLB entries created with StreamWorld == Secure.

ARMv7-A PEs have 8-bit ASIDs and VMIDs. Armv8-A PEs might have 16-bit ASIDs or VMIDs or both. An SMMU implementation supports 8-bit or 16-bit ASIDs and VMIDs, as indicated by SMMU\_IDR0.{ASID16,VMID16}.

A difference in ASID or VMID size between the originator of the broadcast TLB maintenance instruction and the SMMU is resolved as follows. For each of ASID and VMID:

- An SMMU that supports a 16-bit ASID or VMID compares the incoming 16-bit broadcast value to its TLB tags directly and matches if the values are equal.
  - The incoming 16-bit value is constructed by the system from an originator with an 8-bit ASID or VMID by zero-extending the value to 16 bits.
- An SMMU that supports an 8-bit ASID or VMID compares the bottom 8 bits of the incoming broadcast values to its TLB tags:
  - The comparison is required to match if the bottom 8 bits are equal and the top 8 bits are zero.
  - The comparison is not required to, but might, match if the bottom 8 bits are equal but the top 8 bits are non-zero.

When the SMMU supports 16-bit ASIDs, that is when SMMU\_IDR0.ASID16 == 1, it does so for all StreamWorlds that use ASIDs (NS-EL1, Secure, any-EL2-E2H). The SMMU does not differentiate ASID size by AArch32 state contexts, as does an Armv8-A PE and, if supported by an implementation, 16-bit ASIDs can be used in CDs where CD.AA64 == 0. Arm expects that legacy software will continue to write zero-extended 8-bit values in the ASID field in this case. The same behavior applies for 16-bit VMIDs, when SMMU\_IDR0.VMID16 == 1, the behavior of which is not modified by STE.S2AA64 == 0.

#### 3.17.5 EL2 ASIDs and TLB maintenance in EL2 Host (E2H) mode

The Non-secure programming interface supports StreamWorlds NS-EL2 and NS-EL2-E2H that correspond to PE Exception level EL2 in Non-secure state with and without E2H mode. When Secure EL2 is supported, the Secure programming interface supports StreamWorld S-EL2 and S-EL2-E2H that correspond to PE Exception level EL2 in Secure state with and without E2H mode.

The EL2 translation regime consists of:

- A stage 1 translation with one translation table without user permission checking.
- TLB entries that are not tagged with an ASID.

In E2H mode, the EL2 translation regime remains stage 1-only, but consists of two stage 1 translation tables that function the same way as those for an EL1 stage 1 translation. The resulting TLB entries are tagged as EL2, and might include an ASID. Non-secure EL2-E2H mode can be configured for Non-secure STEs using STE.STRW when SMMU\_IDR0.Hyp == 1 and SMMU\_CR2.E2H == 1. Secure EL2-E2H mode can be configured for Secure STEs using STE.STRW when SMMU\_S\_IDR1.SEL2 == 1 and SMMU\_S\_CR2.E2H == 1.

Note: In the Armv8.1-A architecture [2], EL2-E2H mode is referred to as the Virtualization Host Extensions.

Broadcast TLB maintenance from a PE affects SMMU TLB entries when the whole system uses EL2 or EL2-E2H mode. Broadcast messages from a PE running in EL2-E2H supply an EL2 scope, and also supply an ASID to match. In addition, EL2-E2H mode extends the set of EL2 broadcast invalidations to the following operations:

- Invalidate all, for EL2-tagged entries.
- Invalidate by VA and ASID, for EL2.
- Invalidate by VA in all ASIDs, for EL2.
- Invalidate all by ASID, for EL2.

If a PE running at EL2 uses E2H mode, but an SMMU contains TLB entries that were inserted with StreamWorld == any-EL2 configuration, the EL2-E2H broadcast invalidations from the PE are not required to invalidate these TLB entries.

If a PE running at EL2 does not use E2H mode, but an SMMU contains TLB entries that were inserted with StreamWorld == any-EL2-E2H configurations, EL2 broadcast invalidations from the PE are not required to invalidate these TLB entries.

Note: For each Security state, if broadcast invalidation is required for translations controlled by EL2 software, Arm recommends that StreamWorld == any-EL2 is used when the corresponding Security state in host PEs does not use E2H mode, and that StreamWorld == any-EL2-E2H is used when the corresponding Security state in host PEs use the E2H mode.

An implementation is not required to differentiate TLB entries with StreamWorld == any-EL2 from those with StreamWorld == any-EL2-E2H. Arm expects that, for a given Security state, the SMMU is programmed in a way that ensures that TLB entries of both of these StreamWorlds never coexist in translation caches. Therefore:

- A change to SMMU\_CR2.E2H must be accompanied by an invalidation of all TLB entries that could have been created from a Non-secure STE with StreamWorld == NS-EL2 or StreamWorld == NS-EL2-E2H. See 6.3.12.3 *E2H* for details.
- A change to SMMU\_S\_CR2.E2H must be accompanied by an invalidation of all TLB entries that could have been created from a Secure STE with StreamWorld == S-EL2 or StreamWorld == S-EL2-E2H.
- The behavior of TLB invalidation commands CMD\_TLBI\_EL2\_VAA and CMD\_TLBI\_EL2\_VA might change depending on SMMU\_CR2.E2H, see the individual commands for details.
- The behavior of TLB invalidation commands CMD\_TLBI\_S\_EL2\_VAA and CMD\_TLBI\_S\_EL2\_VA might change depending on SMMU\_S\_CR2.E2H, see the individual commands for details.

Note: A TLB lookup through a configuration with StreamWorld == any-EL2-E2H matches the ASID of the configuration with the ASID tag of the EL2 TLB entry, unless the entry is marked Global. A TLB insertion through the same configuration inserts a TLB entry tagged with the ASID of the configuration unless the translation is Global. When StreamWorld == any-EL2 a TLB lookup does not match the ASID tag of EL2 TLB entries, nor does a TLB insertion tag the entry with a known ASID value. A change to SMMU\_CR2.E2H or SMMU\_S\_CR2.E2H can cause unexpected TLB entries to match.

Note: SMMU\_CR2.E2H and SMMU\_S\_CR2.E2H may also be cached in a Configuration Cache.

#### 3.17.6 VMID Wildcards

Some virtualization use cases involve the presentation of different views of page permissions in the same address space to different device streams. The mechanism by which one address space is split into more than one view is outside the scope of this document.

Note: STEs in the same Security state and with different translation table pointers must have different VMIDs. TTBs in the same VMID are considered equivalent within a Security state.

In the SMMU, SMMU\_CR0.VMW controls a VMID wildcard function that enables groups of Non-secure VMIDs to be associated with each other for the purposes of invalidation. An invalidation operation that matches on Non-secure VMID matches one exact VMID or ignores a configured number of VMID LSBs, as configured by SMMU\_CR0.VMW.

Note: For example, SMMU\_CR0.VMW might configure 1 LSB of VMID to be ignored so an incoming broadcast invalidate for VMID 0x0020 matches TLB entries tagged with VMID 0x0020 or 0x0021. This configuration allows VMIDs to be allocated in groups of adjacent or contiguous values, using one VMID in the PEs for the VM and one or more of the others to support different IPA address space views in different device stage 2 configurations.

Both broadcast TLB invalidation and explicit SMMU TLB invalidation commands, whether for stage 1 within the guest or at stage 2, affect all Non-secure VMIDs that match the group wildcard when SMMU\_CR0.VMW != 0.

Note: The broadcast TLB invalidation mechanisms that might exist on a PE and interconnect are not modified by this feature. The VMW field modifies the internal behavior of the SMMU on receipt of such a broadcast invalidation.

The VMID wildcard controlled by SMMU\_CR0.VMW only affects a VMID that matches on invalidation. The SMMU continues to store all bits of VMID in the TLB entries that require them, and does not allow dissimilar VMID values to alias on lookup.

The SMMU\_S\_CR0.VMW field provides a second Secure VMID wildcard feature that works in a similar way as described in this section, except affects Secure VMIDs only.

## 3.17.7 Broadcast TLB maintenance for GPT information

An SMMU with RME and SMMU\_ROOT\_IDR0.BGPTM == 1 participates in broadcast TLBI \*PA\* instructions from PEs that are executing in EL3.

Consistent with the definition in the RME specification [5], a TLBI \*PA\* to the Outer Shareable shareability domain affects the SMMU.

This applies to all SMMUs with RME and SMMU\_ROOT\_IDR0.BGPTM == 1, regardless of the values of SMMU\_IDR0.BTM and SMMU\_(S\_)CR2.PTM.

Note: The behavior of SMMU\_IDR0.BTM and SMMU\_(S\_)CR2.PTM applies only to broadcast invalidations relating to stage 1 and stage 2 translation.

Note: An SMMU with RME does not have to receive the other broadcast TLBI operations. Support for broadcast operations is indicated in SMMU\_IDR0.BTM and configured in SMMU\_(S\_)CR2.PTM.

Note: The SMMU guarantees the same rules around observability and completion of TLBI \*PA\* and DSB instructions as defined in the RME specification.

# 3.18 Interrupts and notifications

Events that are recorded to the Event queues, PRI requests and Global errors have associated interrupts to allow asynchronous notification to a PE.

An implementation might support *Message Signaled Interrupts* (MSIs) which take the form of a 32-bit data write of a configurable value to a configurable location, typically, in GICv3 systems, the GITS\_TRANSLATER or GICD\_SETSPI\_NSR registers. For more information, see [7]. When SMMU\_S\_IDR1.SECURE\_IMPL == 1, Arm expects notifications that were generated by Secure events to set Secure SPIs using the GICD\_SETSPI\_SR register in systems that implement the GICv3 architecture.

An implementation must support one of, or optionally both of, wired interrupts and MSIs. Whether an implementation supports MSIs is discoverable from SMMU\_IDR0.MSI and SMMU\_S\_IDR0.MSI. An implementation might support wired interrupt outputs that are edge-triggered. The discovery of support for wired interrupts is IMPLEMENTATION DEFINED.

Support for MSIs is independent for Non-secure and Secure states. Arm recommends that an implementation does not support Secure MSIs without also supporting Non-secure MSIs.

It is not permitted for an interrupt notification of the presence of new information to be observable before the new information is also observable. This applies to MSI and wired interrupts, when:

- A Global error condition arises. The change to the Global error register, GERROR, must be observable if the interrupt is observable.
- New entries are written to an output queue. The presence of the new entries must be observable to reads of the queue index registers if the interrupt is observable. See section 3.5.2 *Queue entry visibility semantics*.
- A CMD\_SYNC completes. The consumption of the CMD\_SYNC must be observable to reads of the queue index registers if the interrupt is observable.

Each MSI can be independently configured with a memory type and Shareability. This makes it possible to target a Device MSI target register or a location in Normal memory (that might be cached and shareable). See the SMMU\_IDR0.COHACC field, which indicates whether the SMMU and the system support coherent accesses, including MSI writes.

Note: A PE might poll this location or might, for example in Armv8-A PEs, wait for loss of an exclusive reservation that covers an address targeted by the notification. In this example, an Armv8-A PE with an SMMU that is capable of making shared cacheable accesses can achieve the same behavior as a WFE wake-up event notification (see CMD\_SYNC) without wired event signals, using MSIs that are directed at a shared memory location.

Note: If the destination of an MSI write is a register in another device, Arm recommends that it is configured with Device-nGnRnE or Device-nGnRE attributes.

The SMMU does not output inconsistent attributes as a result of misconfiguration. Outer Shareable is used as the effective Shareability when Device or Normal Inner Non-cacheable Outer Non-cacheable types are configured.

MSIs that are generated by Secure sources are performed with Secure accesses and target the Secure PA space. MSIs from Non-secure sources are performed with Non-secure accesses and they target the Non-secure PA space. Apart from the memory type, Shareability and NS attributes of MSIs, all other attributes of the MSI write are IMPLEMENTATION DEFINED.

A GICv3 Interrupt Translation Service (ITS) differentiates interrupt sources using a DeviceID. To support this, the SMMU does the following:

- a) Passes StreamIDs of incoming client device transactions. These generate DeviceIDs in a system-specific manner.
- b) Produces a unique DeviceID of its own, one that does not overlap with those produced for client devices, for outgoing MSIs that originate from the SMMU. As with any other MSI-producing Requester, this is set statically in a system-defined manner.

E.a

SMMU MSIs are configured with several separate pieces of register state. The MSI destination address, data payload, Shareability, memory type and enables in combination construct the MSI write, onto which the unique DeviceID of the SMMU is attached.

Edge-triggered interrupts can be coalesced within the system interrupt controller. The SMMU can internally coalesce events and identical interrupts so that only the latest interrupt is sent, but any coalescence must not significantly delay the notification. This applies to both MSIs and edge-triggered wired interrupts.

When MSIs are not supported, the interrupt configuration register fields that would configure MSI address and data are unused. Only the interrupt Enable field is used.

# 3.18.1 MSI synchronization

The SMMU ensures that previously-issued MSI writes are completed at the following synchronization points:

- For register-based MSI configuration, the act of disabling an MSI through SMMU\_(S\_)IRQ\_CTRL, see Chapter 6 *Memory map and registers*.
- A CMD\_SYNC ensures completion of MSIs that originate from the completion of prior CMD\_SYNC commands that were consumed from the same Command queue.

Completion of an MSI guarantees that the MSI write is visible to its Shareability domain or, if an abort response was returned, ensures that the abort is visible in GERROR with the appropriate SMMU\_(S\_)GERROR.MSI\_\*\_ABT\_ERR flag.

Note: Completion of an MSI terminated with abort sets a GERROR flag but does not guarantee completion of a subsequent GERROR interrupt that might be raised to signal the setting of the flag.

The two synchronization points define a point in time, t, for the respective interrupt sources. If MSIs are related to occurrences before this point t, they do not become visible after point t.

In the case of register-based MSI configurations, the additional guarantee is made that MSIs triggered after the MSI is re-enabled will use the new configuration.

For more information on interrupt enable and synchronization, see SMMU\_IRQ\_CTRL.

#### 3.18.2 Interrupt sources

The SMMU has the following interrupt sources. Depending on the implementation, each interrupt source asserts a wired interrupt output that is unique to the source, or sends an MSI, or both.

| Source                 | Trigger reason                     | Notes                            |
|------------------------|------------------------------------|----------------------------------|
| Event queue            | Event queue transitions from empty | -                                |
| Secure Event queue     | to non-empty                       | -                                |
| PRI queue              | PRI queue interrupt condition, see | -                                |
|                        | SMMU_PRIQ_IRQ_CFG2                 |                                  |
| Command queue CMD_SYNC | Sync complete, with option of      | MSI configuration (desitination, |
| Secure Command queue   | generated interrupt                | data) present in command         |
| CMD_SYNC               |                                    |                                  |
| GERROR                 | Global error activated in          | -                                |
|                        | SMMU_GERROR registers              |                                  |

| S_GERROR | Secure Global Error activated | - |
|----------|-------------------------------|---|
|          | in SMMU_S_GERROR registers    |   |

Each interrupt source can be enabled individually through SMMU\_IRQ\_CTRL and SMMU\_S\_IRQ\_CTRL if present. If enabled, a pulse is asserted on a unique wired interrupt output, if this is implemented. If enabled, an MSI is sent if MSIs are supported and if the MSI configuration of the source enables the sending of an MSI by using an ADDR value that is not zero.

This allows an implementation that supports both MSIs and wired interrupts to use both types concurrently. For example, the Secure programming interface might use wired interrupts (whose source would be enabled, but with the MSI ADDR == 0 to disable MSIs) and the Non-secure programming interface might use MSIs (whose source would be enabled and have MSI address and data configured).

The conditions that cause an interrupt to be triggered are all transient events and interrupt outputs are effectively edge-triggered. There is no facility to reset the pending state of the interrupt sources.

Where an implementation supports RAS features, additional interrupts might be present. The operation, configuration and assertion of these interrupts has no effect on any of the interrupts listed in this section for normal SMMU usage. See Chapter 12 *Reliability, Availability and Serviceability (RAS)* for more information on RAS features.

An SMMU with RME has two additional wired interrupts. See section 3.24.5 SMMU behavior if a GPC fault is active for details.

## 3.19 Power control

An implementation might support implementation specific automatic power saving techniques, for example, power and clock gating, retention states during idle periods of normal operation. All use of these techniques is functionally invisible to devices and software. If implemented, these automatic powerdown or retention states:

- Might retain all valid cache contents or might cause loss of cached information.
- Do not allow undefined cache contents to become valid, valid cache contents to change, or otherwise corrupt any SMMU state.
- Seamlessly operate with wake on demand behavior in the event of incoming device transactions.

Alternatively, a system might allow an SMMU to be powered off at the request of system software, in an IMPLEMENTATION DEFINED manner. This state is requested when no further SMMU operation is required by the system. Software must not make accesses to the SMMU programming interface in this state. If more than one Security state is supported, this power off state is not entered unless privileged software from all Security states which either configure or use the SMMU request for or agree to a powerdown.

Because such a power off represents a complete loss of state and functionality, this state must only be used when all client devices and interconnect are quiescent. Software must disable client device DMA and ensure any SMMU commands, invalidations and transactions from client devices that are in progress are complete before requesting powerdown. If any existing transactions are in a stalled state at the time of the powerdown, they must be terminated with an abort. The behavior when a transaction arrives at the SMMU after the powerdown state is entered is UNPREDICTABLE.

On an IMPLEMENTATION DEFINED wakeup event, the SMMU must be reset and the return of the SMMU to software control is signaled through an IMPLEMENTATION DEFINED mechanism. The SMMU is then in a state consistent with a full reset and the SMMU registers are required to be re-initialized before client devices can be enabled.

#### 3.19.1 Dormant state

Implementations might provide automatic powerdown modes during idle periods in which SMMU registers are accessible but internal structures might be powered down. An implementation might provide a hint to software, through the SMMU\_STATUSR.DORMANT flag, that it contains no cached configuration or translation information, possibly because of cache powerdown. Software can use this flag to determine that no structure or TLB invalidation is required and avoid issuing maintenance commands.

When SMMU\_STATUSR.DORMANT == 1, the SMMU guarantees that:

- No caches of any structures or translations are present.
- Any required configuration or translation information will access the information in the configuration structures or translation tables in memory.
- No pre-fetch of any configuration or translation data is in progress.
- If any structures or translations were altered in memory, no stale version will be used by the SMMU.

Software can make use of this flag by:

- 1. Altering translations or configuration structure data.
- 2. Testing the flag
  - If the flag is 0, issuing invalidation commands or broadcast invalidation messages to invalidate any potentially-cached copies.
  - If the flag is 1, avoiding invalidation of the altered structure.

An implementation is not required to support this hint, and software is not required to take note of this hint.

# 3.20 TLB and configuration cache conflict

#### 3.20.1 TLB conflict

A programming error might cause overlapping or otherwise conflicting TLB entries to be generated in the SMMU. When an incoming transaction matches more than one TLB entry, this is an error. An implementation is not required to detect any or all TLB conflict conditions, but Arm recommends that an implementation detects TLB conflict conditions wherever possible.

If an implementation detects a TLB conflict, all of the following apply:

- It aborts the transaction that caused the lookup that resulted in conflict.
- It attempts to record a F\_TLB\_CONFLICT event. The F\_TLB\_CONFLICT event contains IMPLEMENTATION DEFINED fields that might include diagnostic information that exposes implementation specific TLB layout.

If an implementation does not detect a TLB conflict experienced by a transaction, behavior is UNPREDICTABLE, with the restriction that a transaction cannot access a physical address to which the configuration of a stream does not explicitly grant access.

A TLB conflict never enables transactions to do any of the following:

- Match a TLB entry tagged with a different VMID to that under which the lookup is performed.
- Match a TLB entry tagged with a different Security state to that under which the lookup is performed.
- Match a TLB entry tagged with a different StreamWorld to that under which the lookup is performed.
- When stage 2 is enabled, access any physical address outside of the set of PAs configured in the stage 2 translation tables that a given transaction is configured to use.

Any failure to invalidate the TLB by code running at a particular level of privilege does not give rise to the possibility of a device under control of that level of privilege accessing regions of memory with permissions or attributes that could not be achieved at that same level of privilege.

Note: For example, a stream configured with StreamWorld == NS-EL1 must never be able to access addresses using TLB entries tagged with a different VMID, or tagged as Non-secure EL2, Secure EL2, EL3, or Secure.

A TLB conflict caused by a transaction from one stream must not cause traffic for different streams with other VMID, StreamWorld, or Security configurations to be terminated. Arm recommends that an implementation does not cause a TLB conflict to affect traffic for other ASIDs within the same VMID configuration.

## 3.20.2 Configuration cache conflicts

All configuration structures match a fixed-size lookup span of one entry with the exception of the STE, which contains a CONT field allowing a contiguous span of STEs to be represented by one cache entry.

A programming error might cause an STE to be cached with a span that covers an existing cached STE, which results in an STE lookup matching more than one STE.

An implementation is not required to detect any or all configuration cache conflict conditions but Arm recommends that an implementation detects conflict conditions wherever possible.

If an implementation detects a configuration cache conflict, all of the following apply:

- The transaction that caused the lookup that resulted in conflict is aborted.
- The SMMU attempts to record a F\_CFG\_CONFLICT event. The F\_CFG\_CONFLICT event contains IMPLE-MENTATION DEFINED fields that might include diagnostic information that exposes implementation-specific cache layout.

If an implementation does not detect a conflict experienced by a transaction, behavior is UNPREDICTABLE.

Chapter 3. Operation 3.20. TLB and configuration cache conflict

> A configuration cache conflict cannot cause an STE to be treated as though it is associated with a different Security state.

# 3.21 Structure access rules and update procedures

## 3.21.1 Translation tables and TLB invalidation completion behavior

Translation table walks, caching, TLB invalidation, and invalidation completion semantics match those of Armv8-A [2], including rules on prefetch and caching of valid translations only. If intermediate translation table data is cached in the SMMU (a walk cache) this is invalidated during appropriate TLB maintenance operations in the same way as it would be on a PE.

Explicit TLB invalidation maintains TLB entries when the translation configuration has changed, to ensure visibility of the new configuration. Translation configuration is the collective term for translation table descriptors and the set of SMMU configuration information that is permitted to be cached in the TLB. This maintenance is performed from a PE using TLBI broadcast invalidation or using explicit CMD\_TLBI\_\* commands.

A broadcast TLB invalidation operation becomes visible to the SMMU after a Shareable TLBI instruction is executed by a PE in a common Shareability domain. A command TLB invalidation operation becomes visible to the SMMU after it is consumed from the Command queue.

A TLB invalidation operation is complete after all of the following become true:

- All TLB entries targeted by the scope of the invalidation have been invalidated.
- Any relevant HTTUs are globally visible to their Shareability domain as set out in section 3.13.4 HTTU behavior summary.
- No accesses can become visible to their Shareability domain using addresses or attributes that are not described by the translation configuration, as observed after the invalidation operation became visible. This means that invalidation completes after:
  - All translation table walks that could, prior to the start of the invalidation, have formed TLB entries that
    were targeted by the invalidation are complete, so that all accesses to any fetched levels of the translation
    table are globally visible to their Shareability domain. This applies to a translation table walk performed
    for any reason, including:
    - \* A translation table walk that makes use of walk caches that are targeted by the invalidation.
    - \* A stage 2 translation table walk that are performed because of a stage 1 descriptor fetch, CD fetch or L1CD fetch.

Note: To achieve this, a translation table walk might be stopped early and the partial result discarded.

- SMMU-originated accesses that were translated using TLB entries that were targeted by the invalidation
  are globally visible to their Shareability domain. These accesses are stage 1 descriptor accesses, CD
  fetches or L1CD fetches.
- Where a stage 2 invalidation targets TLB entries that might have translated a stage 1 descriptor access, the stage 1 descriptor access is required to be globally visible by the time of the invalidation completion, but neither the overall stage 1 translation table walk or the operation that caused the stage 1 translation table walk are required to be globally visible. Otherwise, for stage 1 and stage 1 and stage 2 scopes of invalidation, all client device transactions that were translated using any of the TLB entries that were targeted by the invalidation are globally visible to their Shareability domain.
- The result of an ATOS operation cannot be based on addresses or attributes that are not described by translation configuration that could have been observed after the invalidation operation became visible.

Note: An in-progress translation table walk (performed for any reason, including prefetch) can be affected by a TLB invalidation, if the TLB invalidation could have invalidated a cached intermediate descriptor that was previously referenced as part of the walk. The completion of a TLB invalidation ensures that a translation table walk that could have been affected by the TLB invalidate is either:

• Fully complete by the time the TLB invalidation completes.

• Stopped and restarted from the beginning.

Note: This ensures that old or invalid pointers to translation sub-tables are never followed after a TLB invalidation (whether broadcast or CMD\_TLBI\_\*) is complete. Completion of a TLB invalidation means the point at which a broadcast invalidation sync completion is returned to the system (for example, on AMBA interconnect, completion of a DVM Synch), or, for CMD\_TLBI\_\* invalidations, the completion of a later CMD\_SYNC command.

Note: The architecture states that where a translation table walk is affected by a TLB invalidation, one option is that the walk is stopped by the completion of the invalidation. An implementation must give this appearance, which means no observable side-effects of doing otherwise could ever be observed. However, after an invalidation completion that affects prior translation table reads made before the invalidation, an implementation is permitted to make further fetches of a translation table walk if, and only if, it is guaranteed that these reads have no effect on the SMMU or the rest of the system, are not made to addresses with read side-effects and will not affect the architectural behavior of the system.

Translation cache entries (pertinent to a Security state) are not inserted when SMMU\_(S\_)CR0.SMMUEN == 0.

# 3.21.1.1 Translation tables update procedure

When altering a translation table descriptor, the Armv8-A VMSA [2] before v8.4-A, and SMMUv3 architectures before SMMUv3.2, require a break-before-make procedure for:

- Changes to memory type.
- Changes to Cacheability attributes.
- · Changes to output address.
- Changes to block or page size.
- Creating a global entry where there might be non-global entries in a TLB that overlap the global entry.

Note: For example, to split a block into constituent granules (or to merge a span of granules into an equivalent block), VMSA requires the region to be made invalid, a TLB invalidate performed, then to make the region take the new configuration.

Note: The requirement for a break-before-make sequence can cause problems for unrelated I/O streams that might use addresses overlapping a region of interest, because the I/O streams cannot always be conveniently stopped and might not tolerate translation faults. It is advantageous to perform live update of a block into smaller translations, or a set of translations into a larger block size.

The Armv8.4 [2] architecture offers 3 levels of support when changing block size without changing any other parameters that are listed as requiring use of break-before-make. These are described as Level 0, 1 and 2, where Level 0 is equivalent to the pre-Armv8.4 requirements.

Implementations of SMMUv3.2 or later are required to support Level 1 or Level 2 behavior, as indicated by SMMU\_IDR3.BBML.

Note: Arm recommends that an implementation supports Level 2 behavior for performance reasons.

Note: Armv8.4 permits the PE to report a TLB conflict abort in a wider range of scenarios than are permitted by SMMUv3.2.

Note: The requirement for support of Level 1 or 2 and the stricter requirements regarding TLB conflict abort means that an implementation of SMMUv3.2 or later guarantees that a mechanism is available to change block or page size without interrupting I/O streams with a fault.

The Armv8.4 VMSA adds a new bit, 'nT', at bit [16] in Block translation descriptors, which is supported by an implementation of SMMUv3.2 or later in the same way as for the PE, depending on the BBML level as described below. The nT bit allows a valid Block descriptor to be used for translation but prevents it from being cached in a way that can cause a TLB conflict with existing TLB entries.

The SMMUv3 architecture requirements in a TLB conflict scenario are not affected by BBML level.

Note: When multiple system components, whether SMMU, PE or other, are sharing one translation table then behavior according to the lowest common break-before-make Level must be used when updating the table.

## 3.21.1.2 When SMMU\_IDR3.BBML == 1 (Level 1)

The implementation requires software to use the nT bit when changing translation size without using a break-before-make procedure. An F\_TLB\_CONFLICT fault might occur if a translation table update is made without using break-before-make or the nT bit.

Setting nT == 1 does not cause a fault.

Note: A Translation Fault is a permitted behavior for a level 1 Armv8.4 PE with nT == 1, but this is prohibited in a level 1 SMMU.

A Block descriptor having nT == 1 is not cached in a way that will cause a TLB conflict.

Note: One interpretation of the nT bit is to prevent the caching of a translation when nT == 1. This might significantly impact translation performance for the lifetime of the translation table entry.

In a Level 1 SMMU a change to only the Contiguous bit, bit 52 in the descriptor, at either block or page level and with other properties unchanged, does not lead to a TLB conflict fault. When the Armv8-A requirements for use of the Contiguous bit are followed, a change to the Contiguous bit can be performed without using a break-before-make procedure and without using the nT bit in the case of a Block descriptor.

Note: Example implementation styles include ignoring the Contiguous bit at all levels, or reconciling the output of any overlapping TLB entries that might result.

Note: A change from a block translation to an equivalent span of page translations can be performed by changing the nT bit of the Block descriptor from 0 to 1, followed by TLB invalidation of the block, followed by replacement of the Block descriptor with a Table descriptor to a next-level table containing equivalent page translations, followed by TLB invalidation of the affected range.

Note: A change from a span of page translations to an equivalent block translation can be performed by changing a mid-level Table descriptor to a Block descriptor having nT == 1, followed by TLB invalidation of the affected range, followed by an update of the nT bit of the Block descriptor from 1 to 0, followed by TLB invalidation of the block

Note: The use of the nT bit in these procedures ensures that a TLB multi-match scenario cannot arise.

## 3.21.1.3 When SMMU\_IDR3.BBML == 2 (Level 2)

The implementation ignores the nT bit in the Block descriptor and a change to a translation size can be performed without using break-before-make and without using the nT bit. The implementation automatically resolves any TLB multi-hit scenarios and an F\_TLB\_CONFLICT fault does not occur.

If a change is made to the size of a valid translation without first making the translation invalid, then:

- A TLB conflict does not occur and F\_TLB\_CONFLICT is never reported.
- All of the following apply for translations that might discover multiple matching TLB entries for an address:
  - They are translated using information from at most one of the matching entries.
  - They do not experience a fault that would not otherwise be possible using the translation table descriptor state from either before or after the update.
- The result of a translation:
  - Does not combine information from multiple matching TLB entries.
  - Does not combine information from the state of a descriptor both before and after the update.
  - Does not contain information that was not present in a valid tdescriptor.

Note: An implementation might achieve this behavior by resolving a TLB lookup that has multiple matches by choosing zero or one of the results, or by causing an invalidation of all of the matching entries followed by a re-fetch of the translation.

A TLB invalidation operation removes all matching TLB entries even if overlapping entries exist for a given address.

The rules on TLB invalidation or the atomicity of a descriptor are not affected by BBML level.

The behavior and usage requirements of the Contiguous bit in a Level 2 implementation is the same as in a Level 1 implementation. A change to the Contiguous bit can be performed without using break-before-make and without using the nT bit, and does not lead to a TLB conflict fault.

Note: Arm expects that a Level 2 implementation will also automatically resolve TLB multi-hit scenarios that might arise from a change to a Contiguous bit and recommends that the Contiguous bit is not ignored.

Note: Arm expects that the only change that is made to a valid translation table descriptor is that of changing the page or block size of a range of addresses. A change to memory type, Cacheability, nG or output address might impair coherency or ordering semantics of accesses using the translation.

Note: A change from one set of translations to another equivalent set by changing the translation size can be performed by replacing a block or range of pages with equivalent translations of a different size, followed by TLB invalidation of the affected range.

#### 3.21.2 Queues

The SMMU does not write to the Command queue. The SMMU writes to the PRI and Event queues. Arm expects the PRI queue and Event queue to be read but not modified by the agent controlling the SMMU. Writes to the Command queue do not require any SMMU action to ensure that the SMMU observes the values written, other than a write of the PROD register of the Command that causes the written command entries to be considered valid for SMMU consumption. If the SMMU internally caches Command queue entries, no other explicit maintenance of this cache is required. Arm expects that the SMMU is configured to read the queue from the required Shareability domain in at least an IO-coherent manner, or that both the SMMU and other entities make non-cached accesses to the queue so that Cache Maintenance Operations are not required.

To issue commands to the SMMU, the agent submitting the commands:

- 1. Determines (using PROD/CONS indexes) that there is space to insert commands.
- 2. Writes one or more commands to the appropriate location in the queue.
- 3. Performs a DSB operation to ensure observability of data written in step (2) before the update in step (4).
- 4. Updates the Command queue's PROD index register to publish the new commands to the SMMU.

Software is permitted to write any entry of the Command queue that is in an empty location between CONS and PROD indexes.

The SMMU might read and internally cache any command that is in a full location between PROD and CONS indexes If a command is cached, the cache is not required to be coherent with PE caches but if it is not coherent the following rules apply:

- When the SMMU stops processing commands because of a Command queue error, or when the queue is disabled, the SMMU invalidates all commands that it might have cached.
- A cached command must only be consumed one time and no stale cached value can be used instead of a new value when the queue location is later reused for a new command.

Note: The first rule means software can fix up or replace commands in the queue after an error, or while the queue is disabled, without performing any other synchronization other than re-starting command processing.

Software must not alter memory locations representing commands previously submitted to the queue until those commands have been consumed, as indicated by the CONS index, and must not assume that any alteration to a command in a full location will be observed by the SMMU.

Software must only write the CONS index of an output queue (Event queue or PRI queue) in a consistent manner, with the appropriate incrementing and wrapping, unless the queue is disabled. If this rule is broken, for example by writing the CONS index with a smaller value, or incorrectly-wrapped index, the queue contents are UNKNOWN.

Software must only write the PROD index of the Command queue in a consistent manner, with the appropriate incrementing and wrapping, unless the queue is disabled or a command error is active, see section 7.1 *Command queue errors*. If this rule is broken, one of the following CONSTRAINED UNPREDICTABLE behaviors occurs:

- The SMMU executes one or more UNPREDICTABLE commands.
- The SMMU stops consuming commands from the Command queue until the queue is disabled and re-enabled.

## 3.21.3 Configuration structures and configuration invalidation completion

The entries of the configuration structures, the Stream table and Context Descriptors, all contain fields that determine their validity. An SMMU might read any entry at any time, for any reason.

STEs and CDs contain a valid flag, V. A structure is considered valid only when the SMMU observes it contains V == 1 and no configuration inconsistency in its fields causes it to be considered ILLEGAL.

Some structures contain pointers to subsequent tables of structures (STE.S1ContextPtr, (L1STD.L2Ptr) and L1CD.L2Ptr). If a structure is invalid, the pointers within it are invalid. The SMMU does not follow invalid pointers, whether speculatively or in response to an incoming transaction.

STEs in a linear Stream table and L1ST descriptors in a multi-level Stream table are located through the SMMU\_(S\_)STRTAB\_BASE address. Entries in these tables are not fetched if SMMU\_(S\_)CR0.SMMUEN == 0, because the base pointer is not guaranteed to be valid. These base pointers must be valid when the corresponding SMMUEN == 1. Configuration cache entries associated with a Security state are not inserted when, for that Security state, SMMU\_(S\_)CR0.SMMUEN == 0.

Similarly, CDs or L1CDs are located through the STE.S1ContextPtr and L1CD.L2Ptr pointers. A CD must never be fetched or prefetched unless indicated from a valid STE, meaning that the STE S1ContextPtr is valid and therefore the STE enables stage 1.

Note: A particular area of memory is only considered to be an STE or CD because a valid pointer of a certain type points to it (the SMMU\_(S\_)STRTAB\_BASE or L1STD.L2Ptr or STE.S1ContextPtr or L1CD.L2Ptr pointers respectively). A CD cannot be prefetched from an address that is not derived directly from the CD table configuration in a valid STE, as an area of memory is not a CD unless a valid STE or L1CD.L2Ptr points to it. Similarly, an L1CD is not actually an L1CD structure unless a valid STE points to it.

A structure is said to be *reachable* if a valid pointer is available to locate the structure. Depending on the structure type, the pointer might be a register base address or a pointer within a precursor structure (either in memory or cached). When SMMUEN == 0, no configuration structures are reachable. Otherwise:

- An STE is reachable if it is within the table given by the base and size indicated in the SMMU\_(S\_)STRTAB\_BASE\_\* registers for a linear Stream table, or if it is within the 2<sup>nd</sup>-level table indicated by a valid L1STD base and span for a two-level Stream table.
- A L1ST descriptor in a two-level Stream table is reachable if it is within the first-level table indicated by the base and size set in the SMMU\_(S\_)STRTAB\_BASE\_\* registers.
- A CD is reachable if it is within the table given by the base and size indicated by a valid stage 1 S1ContextPtr and S1CDMax of a valid STE for a linear CD table, or if it is within the 2nd-level table indicated by a valid L1CD base and span for a two-level CD table.
- A VMS is reachable if the VMS is enabled for an STE.

An implementation does not fetch an unreachable structure. Walk of the tree of configuration tables does not progress beyond any invalid structure.

An implementation is permitted to fetch or prefetch any reachable structure at any time, as long as the generated address lies within the bounds of the table containing the structure. An implementation is permitted to cache any successfully fetched or prefetched configuration structure, whether marked as valid or not, in its entirety or partially. That is:

• Any STE or L1STD within the STE table (given by the base, size and intermediate table spans if appropriate) can be fetched and cached.

• Any CD or L1CD within a CD table can be fetched and cached.

When fetching a structure in response to a transaction, an implementation might read and cache more data than the required structures, as long as the limits of the tables are respected.

Note: Any change to a structure must be followed by the appropriate structure invalidation command to the SMMU, even if the structure was initially marked invalid.

Note: An *unreachable* structure cannot be fetched, because there is no valid pointer to it. However, a structure might be cached if it was fetched while the structure was reachable, even if it is subsequently made unreachable. For example, a valid STE could remain cached and later used after the SMMU\_(S\_)STRTAB\_BASE\* registers are altered. Software must perform configuration cache maintenance upon changing configuration that might make structures unreachable.

A structure that is not actually fetched, such as a CD/L1CD, STE/L1STD or VMS that experiences an external abort (F\_CD\_FETCH, F\_STE\_FETCH or F\_VMS\_FETCH) or a CD/L1CD that fails stage 2 translation, does not cause knowledge of the failure to be cached. A future access of the structure must attempt to re-fetch the structure without requiring an explicit configuration structure invalidation command before retrying the operation that caused the initial structure fetch.

Note: For example, where stage 2 is configured to stall, to progress a transaction that causes a CD fetch that in turn causes a stage 2 Translation-related fault (an event with Stall = 1), it is sufficient to:

- 1. Resolve the cause of the translation fault, for example by writing a Translation table entry.
- 2. Issue a TLB invalidation operation, if required by the translation table alteration.
- 3. Issue a CMD\_RESUME, giving the StreamID and STAG appropriate to the event record.

An implementation must not:

- Read any address outside of the configured range of any table.
  - Speculative access of reachable structures is permitted, but address speculation outside of configured structures is not permitted.
- Cache any structure under a different type to the table from which it was read. For example, it must not follow the pointer of an STE to a CD and cache that CD (or any adjacent CD in the CD table) as anything non-CD, for example a translation table entry.

Software must ensure it only configures tables that are wholly contained in Normal memory.

A configuration invalidation operation completes after all of the following become true:

- All configuration cache entries targeted by the invalidation have been invalidated.
- No accesses can become visible to their Shareability domain using addresses or attributes that could not
  result from the configuration structures as observed after the invalidation operation became visible. This
  means that invalidation completes after:
  - Any client device transactions that used configuration cache entries that were targeted by the invalidation are globally visible to their Shareability domain.
  - Any configuration structure walks that used configuration cache entries that were targeted by the
    invalidation are complete so that all accesses to any fetched levels of the structures are globally
    visible to their Shareability domain. This applies to a configuration structure walk performed for any
    reason, including a configuration structure walk performed because of a prefetch, command, incoming
    transaction, ATOS or Translation Request.

An in-progress configuration structure walk (performed for any reason, including prefetch) can be affected by a configuration invalidation command (CMD\_CFGI\_\*) if a cached intermediate structure that was previously referenced as part of the walk could have been invalidated. The completion of a configuration invalidation command (as determined by the completion of a subsequent CMD\_SYNC) ensures that any configuration structure walk that could be affected by the invalidate is either:

• Fully completed by the time the CMD\_SYNC completes.

• Stopped and restarted from the beginning after the CMD\_SYNC completes.

Note: This ensures that old or invalid pointers to subsequent configuration structures are never followed after an invalidation is complete. For example, when an SMMU has an STE pointing to a two-stage CD table and is prefetching a CD, then on reading the L1CD pointer, a CMD\_CFGI\_STE is processed that invalidates the STE that located the L1CD table. If the STE is made invalid, the pointer to the CD table is no longer valid and the SMMU must not continue to fetch the second-level CD after acknowledging to software that it considers the STE invalid. Software is free to re-use the memory used for the CD tables after receiving this acknowledgment, so continuing the prefetch after this point risks loading now-unrelated data. The SMMU must abort the fetch and not read the second-level CD, or must read the second-level CD before signaling the CMD\_CFGI\_STE/CMD\_SYNC as complete to software.

Note: Refer to the note in section 3.21.1 *Translation tables and TLB invalidation completion behavior* regarding observability of whether a translation table walk is stopped. For a configuration table walk that is stopped by an affected invalidation completion, an implementation is permitted to perform further fetches of a configuration structure walk after the completion, based on affected prior configuration structure reads that were made before the invalidation if, and only if, it is guaranteed that these reads have no effect on the SMMU or the rest of the system, are not made to addresses with read side-effects, and will thus not affect the architectural behavior of the system.

The size of single-copy atomic reads made by the SMMU is IMPLEMENTATION DEFINED but must be at least 64 bits. Any single field within an aligned 64-bit span of a structure can be altered without first making the structure invalid. For example, to change the ASID in a CD, the ASID field can be written directly, followed by CMD\_CFGI\_CD and CMD\_SYNC. However, if there are two fields separated so that one single 64-bit write cannot atomically alter both at the same time, the structure cannot be modified in this way. Non-single copy atomic writes might be visible to the SMMU separately and an inconsistent state might be cached (in which one field update has been read but another missed). The structure must, in this case, be made invalid, modified, then made valid, using the procedures described in section 3.21.3.1 Configuration structure update procedure.

Note: In some systems, 64-bit single-copy atomicity is only guaranteed to addresses backed by certain memories. If software requires such atomicity, it must locate SMMU configuration structures in these memories. For example, in LPAE ARMv7 systems, main memory is expected to be used to contain translation tables, and is therefore required to support 64-bit single-copy atomicity.

When a structure is fetched, the constituent 64-bit double-words of a structure are permitted to be accessed by the SMMU non-atomically with respect to the structure as a whole and in any temporal sequence (maintaining the relative address sequence of the read portions).

#### 3.21.3.1 Configuration structure update procedure

Note: The SMMU is not required to observe the structure word that contains the V flag in a particular order with respect to the other data in the structure. This gives rise to a requirement for an additional invalidation when transitioning a structure from V = 0 to V = 1.

Because the SMMU can read any reachable structure at any time, and is not required to read the double-words of the structure in order, Arm recommends that the following procedure is used to initialize structures:

- 1. Structure starts invalid, having V == 0.
- 2. Fill in all fields, leaving V == 0, then perform a DSB operation to ensure written data is observable from the SMMIT
- 3. Issue a CMD\_CFGI\_<STRUCT>, as appropriate.
- 4. Issue a CMD\_SYNC, and wait for completion.
- 5. Set V to 1, then perform a DSB operation to ensure write is observable by the SMMU.
- 6. Issue CMD\_CFGI\_<STRUCT>, as appropriate.
- 7. Optionally issue a CMD\_SYNC, and wait for completion. This must be done if a subsequent software operation, such as enabling device DMA, depends on the SMMU using the new structure.

To make a structure invalid, Arm recommends that this procedure is used:

1. Structure starts valid, having V == 1.

- 2. Set V == 0, then perform a DSB operation to ensure write is observable from the SMMU.
- 3. Issue a CMD\_CFGI\_<STRUCT>, as appropriate.
- 4. Issue a CMD\_SYNC, and wait for completion.

If software modifies the structure while it is valid, it must not allow the structure to enter an invalid intermediate state.

Note: Because the rules in section 3.21.3 Configuration structures and configuration invalidation completion disallow prefetch of a structure that is not directly reachable using a valid pointer, structures might be fully initialized (including with V == 1) prior to a pointer to the structure becoming observable by the SMMU. For example, a stage 1 translation can be set up with this procedure:

- 1. Allocate memory for a CD, initialize all fields including setting CD.V to 1.
- 2. Select an STE, initialize all fields and point to the CD, but leave STE.V == 0.
- 3. Perform a DSB operation to ensure writes are observable from the SMMU.
- 4. Issue a CMD\_CFGI\_STE and a CMD\_SYNC and wait for completion.
- 5. Set STE.V to 1, then perform a DSB operation to ensure write is observable from the SMMU.
- 6. Issue a CMD\_CFGI\_STE and CMD\_SYNC and wait for completion.

Note: No CMD\_CFGI\_CD is required because it is impossible for the CD to have been prefetched in an invalid state. However, a CMD\_CFGI\_CD must be issued as part of a procedure that subsequently makes the CD invalid.

# 3.22 Destructive reads and directed cache prefetch transactions

Some interconnect architectures might support the following types of transaction input to the SMMU:

- 1. RCI: Read with clean and invalidate:
  - A read transaction containing a hint side effect of clean and invalidate.
  - Note: The AMBA AXI5 interface [8] ReadOnceCleanInvalidate transaction is an example of this class
    of transaction.

#### 2. DR: Destructive read:

- A read transaction with a data-destructive side-effect that intentionally causes addressed cache lines to be invalidated, without writeback, even if they are dirty.
- Note: The AMBA AXI5 interface [8] ReadOnceMakeInvalid transaction is an example of this class of transaction.
- 3. W-DCP: Write with directed cache prefetch:
  - A write transaction containing a hint that changes the cache allocation in a part of the cache hierarchy that is not on the direct path to memory. This class of operation does not include those with data-destructive side-effects.
  - Note: The following AMBA AXI5 interface [8] transactions are examples of this class of transaction: WriteUniquePtlStash, WriteUniqueFullStash.
- 4. NW-DCP: A directed cache prefetch without write data:
  - A transaction that is neither a read nor a write, but performs a cache prefetch in a similar way to a write with directed cache prefetch, without the written data.
  - Note: The following AMBA AXI5 interface [8] transactions are examples of this class of transaction: StashOnceShared, StashOnceUnique.

#### 5. DH: Destructive Hint:

- A transaction that is neither a read nor a write, but has a hint side effect of invalidate.
- Note: The AMBA AXI5 interface [8] InvalidateHint transaction is an example of this class of transaction.

The side-effects of these transactions are hints and are therefore distinct from, and treated differently to, Cache Maintenance Operations. See section 16.7.2 *Non-data transfer transactions*.

In SMMUv3.0, the architecture does not support these transactions, which are unconditionally converted on output as specified by the interconnect architecture.

In SMMUv3.1 and later, these transactions are permitted to pass into the system unmodified when the transaction bypasses all implemented stages of translation, see section 3.22.3 *Memory types and Shareability* for permitted memory types. This happens when:

- SMMU\_(S\_)CR0.SMMUEN == 0 for the Security state of the stream:
  - These transactions are affected by SMMU\_(S\_)GBPA overrides in the same way as the implementation treats ordinary transactions.
- SMMU\_(S\_)CR0.SMMUEN == 1 for the Security state of the stream, but the valid STE of the stream has STE.Config == 0b100.
- The valid STE for the transaction has STE.S1DSS == 0b01 and STE.Config == 0b101, and the transaction is supplied without a SubstreamID.

When the output interconnect does not support these types of transaction, or when the conditions described in sections 3.22.1 *Control of transaction downgrade*, 3.22.2 *Permissions model* and 3.22.3 *Memory types and Shareability* apply, these classes of transaction are downgraded with the following transformations:

| Input Transaction Class                             | Output/downgraded transaction class  |
|---|--|
| Read with clean and invalidate (RCI)                | No downgrade, or downgrade to ordinary read transaction. (1)   |
| Destructive read (DR)                               | Non-destructive read: An ordinary transaction, or a read with a clean and invalidate side-effect. $^{(2)}$ |
| Write with directed cache prefetch (W-DCP)          | Ordinary write transaction.  |
| Directed cache prefetch without write data (NW-DCP) | No-op: Transaction completes successfully with no effect on the memory system.                             |
| Destructive hint (DH)                               | No-op: Transaction completes successfully with no effect on the memory system.                             |

- (1) It is IMPLEMENTATION DEFINED whether an implementation downgrades a RCI into a read, or whether this transaction remains unchanged. An implementation might only downgrade the RCI into a read if the output interconnect supports read but not RCI transactions.
- (2) It is IMPLEMENTATION DEFINED whether a downgrade of a destructive read to a non-destructive read chooses to downgrade to an ordinary read or a RCI.

The RCI and DR transactions are read transactions with an additional hint. The W-DCP transaction is a write transaction with an additional hint. The NW-DCP and DH transactions are hints without data transfer. An implementation is permitted to downgrade the transaction as described in this section, for any reason. The data transfer portion of these transactions, if present, is not a hint, and is treated in the same way as an ordinary read or write.

Note: Unless the SMMU has been explicitly configured to do so, Arm recommends that the common behavior of an implementation is to avoid downgrading these transactions.

## 3.22.1 Control of transaction downgrade

An implementation of SMMUv3.1 or later supporting these classes of transactions provides STE.{DRE,DCP} controls to permit these classes of transaction to pass into the system without transformation when one or more stages of translation are applied. This does not include the case where the only stage of translation is skipped because of the value of STE.S1DSS.

When these controls are disabled, the respective class of transactions is downgraded as described in the previous section:

| Input transaction class                    | Requirement to be eligible to pass into the system without class downgrade                                      |
|--|---|
| Read with clean and invalidate             | No additional requirements  |
| Destructive read                           | STE.DRE == 1.  If STE.DRE == 0, downgraded into non-destructive read (read, or read with clean and invalidate). |
| Write with directed cache prefetch         | STE.DCP == 1.  If STE.DCP == 0, downgraded into ordinary write.   |
| Directed cache prefetch without write data | STE.DCP == 1.  If STE.DCP == 0, downgraded into no-op.  |
| Destructive hint                           | STE.DRE == 1.  If STE.DRE == 0, downgraded into no-op.  |

A read with clean and invalidate is non-destructive and is not required to be transformed into a different class of

transaction by the SMMU. The SMMU evaluates permissions for this type of transaction the same way it does for an ordinary read, see section 3.22.3 *Memory types and Shareability*. A read with clean and invalidate might be transformed as required by the final memory type or Shareability.

If a transaction is enabled to progress without downgrade, it can only progress if the required translation table permissions are present, as described in the next section. If the required permissions are not present, the transaction might still be downgraded or cause a fault.

#### 3.22.2 Permissions model

When one or more stages of translation are applied to these transactions, the interaction with the permissions determined from translations is shown below. The behaviors listed here assume that translation for the given address has progressed up to permission checking, and that no higher-priority fault, for example a Translation fault or an Access flag fault, has occurred.

| Transaction type                           | Required permissions   | Behavior if permissions not met   |
|--|--|---|
| Read with clean and invalidate (1)         | Identical to ordinary read: Requires Read or Execute permission, (depending on input InD and STE.INSTCFG) at at a privilege appropriate to PnU input and STE.PRIVCFG.  | Identical to ordinary read.   |
| Destructive read                           | Requires Read or Execute permission (depending on input InD and STE.INSTCFG), and Write, at a privilege appropriate to PnU input and STE.PRIVCFG.  | If no Write permission, downgraded as above into a read or read with clean and invalidate. (2)  If no Read/Execute permission (as appropriate), identical to ordinary read. |
| Write with directed cache prefetch         | Identical to ordinary write:<br>Requires Write permission at privilege<br>appropriate to PnU input and STE.PRIVCFG.<br>Always Data.(3)   | Identical to ordinary write.  |
| Directed cache prefetch without write data | Read or Write or Execute at privilege appropriate to PnU input and STE.PRIVCFG, at each enabled stage of translation. It is implementation specific whether this permission is evaluated as the effective combination of permissions at all stages, or evaluated at each stage separately <sup>(5)</sup> . | Prefetch does not occur. (4)  |
| Destructive hint                           | Requires Read or Execute permission (depending on input InD and STE.INSTCFG), and Write, at a privilege appropriate to PnU input and STE.PRIVCFG.  | Invalidate does not occur. (6)  |

<sup>(1)</sup> This includes the case where a destructive read is downgraded to a read with clean and invalidate because STE.DRE == 0.

<sup>(2)</sup> Though a DR requires write permission to progress into the system as a DR, it does not cause a Permission fault for write

<sup>(3)</sup> The SMMU treats all writes as Data regardless of InD input and STE.INSTCFG.

<sup>(4)</sup> An NW-DCP is not a write and, if HTTU of dirty state is enabled, does not mark a page Dirty. If an NW-DCP has the required permissions at a given stage of translation and HTTU of Access flag is enabled for that stage, AF is updated. If required permissions are not met for an NW-DCP at a given stage of translation, the transaction does

not progress into the system. However, if the translation conditions permit an AF update, a coincidental speculative update of AF might occur.

- <sup>(5)</sup> This applies to the case where a non-overlapping set of permissions is available at stage 1 versus stage 2. For example, a stage 1 read-only translation with a stage 2 write-only translation.
- <sup>(6)</sup> A DH operation is a hint. If HTTU of dirty state is enabled, a DH operation does not mark a page Dirty. If the translation for a DH operation is writeable-clean, the SMMU does not perform the hardware update of dirty state and instead the DH operation is treated as a no-op and does not progress into the system. However, if the translation conditions permit an AF update, a coincidental speculative update of AF might occur.

See section 3.13.7 Hardware flag update for Cache Maintenance Operations and Destructive Reads for information on the behavior of HTTU for Destructive Reads. HTTU for RCI and W-DCP behaves the same as for an ordinary read or write, respectively.

A directed cache prefetch without write data (NW-DCP), or a destructive hint (DH) does not cause faults in the SMMU. Where the interconnect architecture requires a response to an NW-DCP or DH, and where the SMMU terminates an NW-DCP or DH, the SMMU does not cause abort responses to be returned.

If RCI or DR ultimately lead to a fault, they are recorded as reads (data or instruction, as appropriate to input InD/INSTCFG).

If W-DCP ultimately leads to a fault, it is recorded as a write.

If the RCI, DR and W-DCP transactions lead to a fault, they stall in the same way as an ordinary read or write transaction if the SMMU is configured for stalling fault behavior. Retry and termination behave the same as for an ordinary read or write transaction. If these transactions are stalled and retried, they are retried as the same transaction type.

# 3.22.3 Memory types and Shareability

The interconnect architecture of an implementation might impose constraints on the memory type or Shareability that output DR, RCI, W-DCP, NW-DCP and DH operations can take.

At the point of final output the SMMU downgrades these operations, as described in 3.22 *Destructive reads and directed cache prefetch transactions*, if the operations are not valid for output with the determined output attribute.

This rule applies to all such operations in all translation and bypass configurations, including:

- Global bypass (attribute set from GBPA).
- STE bypass (the only stage of translation is skipped because of STE.Config == 0b100 or STE.S1DSS == 0b01 and STE.Config == 0b101).
- Translation.

Note: On AMBA AXI5 interfaces [8], the W-DCP operations (WriteUniquePtlStash, WriteUniqueFullStash) are not permitted to be emitted with a Non-shareable or Sys Shareability. The NW-DCP operations (StashOnceShared, StashOnceUnique) are not permitted to be emitted with Sys Shareability. RCI and DR operations (ReadOnceCleanInvalid and ReadOnceMakeInvalid) are not permitted to be emitted with NSH or Sys Shareability.

# 3.23 Memory Tagging Extension

SMMUv3 does not have any features relating to the Armv8 Memory Tagging Extension [2].

MTE introduces a new MAIR field encoding,  $0 \times f0$ . This encoding is Reserved in SMMUv3, in the CD.MAIR0 and CD.MAIR1 fields.

All SMMU-originated accesses are Tag Unchecked accesses. The SMMU does not write Allocation Tags.

The terms Tag Unchecked and Allocation Tag are defined in [2].

## 3.24 Granule Protection Checks

The Realm Management Extension, FEAT\_RME, [5] specifies the behavior of granule protection checks. An SMMU with RME performs the same checks for non-PE Requesters.

The format and meaning of the GPT is the same in an SMMU with RME as it is in FEAT\_RME.

The invalidation and synchronization mechanisms for updates to the GPT are the same as for FEAT RME.

The SMMU configuration registers for the GPT base address and format are equivalent to those in FEAT\_RME.

See also 17.4 Assignment of PARTID and PMG for SMMU-originated transactions.

Granule protection checks are enabled only when SMMU\_ROOT\_CR0.GPCEN is 1. All statements in this section that describe how granule protection checks are performed only apply when granule protection checks are enabled.

## 3.24.1 Client-originated accesses

Accesses to all physical addresses, except for fetches of GPT information, are subject to granule protection checks.

A client-originated access that experiences a GPC fault is signaled to the client device in the same manner as an External abort.

A client-originated access that experiences a GPC fault on the output address of the access is not reported in the Event queue.

#### 3.24.1.1 GPC for client devices without a StreamID

Granule protection checks also apply to accesses from client devices that are not associated with a StreamID. These devices are referred to as NoStreamID devices.

NoStreamID devices only access PA space, and are not associated with any stage 1 or stage 2 translation configuration.

The GPC fault reporting behavior for accesses from NoStreamID devices is the same as for regular client-originated accesses.

NoStreamID devices are not associated with a SEC\_SID value.

Transactions issued by a NoStreamID device include both a physical address and a PA space.

An access from a NoStreamID device with a physical address that exceeds the implemented output address size, advertised in SMMU\_IDR5.OAS, is terminated with an abort and no Event record or fault is recorded.

The SMMU does not perform any architectural transformations or overrides on NoStreamID accesses, but the SMMU may apply protocol-specific normalization on transaction attributes.

## 3.24.1.2 Speculative and hint accesses

Note: The SMMU does not report faults encountered during a speculative translation request, translation of transactions marked as speculative, or for NW-DCP or DH transactions. See also 3.14 *Speculative accesses*.

For an SMMU with RME, GPC faults encountered during a speculative translation request, translation of transactions marked as speculative, or for NW-DCP or DH transactions, are reported as follows:

- · No event record is generated.
- If SMMU\_IDR0.RME\_IMPL = 0, it is CONSTRAINED UNPREDICTABLE whether the GPC fault is reported or not reported. If it is reported, then it is reported in the appropriate SMMU\_ROOT\_GPF\_FAR or SMMU\_ROOT\_GPT\_CFG\_FAR register, if that register does not already contain an active fault.
- If SMMU\_IDR0.RME\_IMPL = 1, the granule protection check fault is not reported.

For speculative translation requests, then:

- If SMMU\_IDRO.RME\_IMPL = 0, it is CONSTRAINED UNPREDICTABLE whether the GPC on the output address of a translation request is applied at the time of the translation or only when a transaction using the translation is issued.
- If SMMU\_IDR0.RME\_IMPL = 1, the GPC on the output address of a translation request is applied at the time of the translation.

#### 3.24.2 Interactions with PCIe ATS

Consistent with the rules for all accesses, all PCIe client transactions are subject to granule protection checks.

The SMMU CRO.ATSCHK bit has no effect on granule protection checks.

If an SMMU-originated access experiences a GPC fault while servicing an ATS Translation Request, the SMMU responds to the ATS Translation Request as Completer Abort.

If an ATS Translation Request is completed with Success and R=W=0, the address in the Translation Completion is not valid and it is not subject to granule protection checks.

If SMMU\_IDR0.RME\_IMPL == 1, the SMMU performs the GPC on the output address for the result of an ATS Translation Request before sending the completion.

If SMMU\_IDR0.RME\_IMPL == 0, the SMMU is permitted but not required to perform a GPC on the output address for the result of an ATS Translation Request.

If the output address for an ATS Translation Request fails a GPC, the SMMU responds to the ATS Translation Request as Completer Abort.

ATS Translated transactions are subject to granule protection checks.

An ATS Translated transaction that fails the GPC is treated as Completer Abort.

## 3.24.3 SMMU-originated accesses

An SMMU-originated access that experiences a GPC fault is reported as though it had experienced an External abort.

Consistent with the behavior of F\_STE\_FETCH, F\_CD\_FETCH, F\_VMS\_FETCH and F\_WALK\_EABT, signaling and reporting of these failures is not affected by the value of the CD.{A, R, S} bits nor the STE.{S2S, S2R} bits.

For an SMMU with SMMU\_IDR0.RME\_IMPL == 1:

- For each of the F\_STE\_FETCH, F\_CD\_FETCH, F\_VMS\_FETCH and F\_WALK\_EABT event records, there is a new field at bit 80 named GPCF.
- An F\_STE\_FETCH, F\_CD\_FETCH, F\_VMS\_FETCH or F\_WALK\_EABT arising from a GPC fault is reported with GPCF=1.
- An F\_STE\_FETCH, F\_CD\_FETCH, F\_VMS\_FETCH or F\_WALK\_EABT arising for a reason other than a GPC fault is reported with GPCF=0. This is unchanged from an SMMU without SMMU\_IDR0.RME\_IMPL == 1.

For example, if the SMMU experiences a GPC fault on an access to an STE, it is reported as F\_STE\_FETCH, with GPCF=1. This is signaled to the client as an External abort.

For example, if the SMMU experiences a GPC fault on an access to the Non-secure Event queue, it is reported through SMMU\_GERROR.EVENTQ\_ABT\_ERR.

# 3.24.4 Reporting of GPC faults

The reasons for a GPC fault are categorized into three groups:

- Faults arising from an access to a Location forbidden by the GPT configuration, referred to as a *Granule Protection Fault* (GPF).
- Faults arising from misconfiguration of SMMU\_ROOT\_GPT\_BASE, SMMU\_ROOT\_GPT\_BASE\_CFG or the GPT, referred to as a *GPT lookup error*.
- Faults arising from RAS errors.

The following error conditions represent a GPF, and are reported in SMMU\_ROOT\_GPF\_FAR:

- An access to a PA space other than Non-secure has a physical address that exceeds the range configured in SMMU\_ROOT\_GPT\_BASE\_CFG.PPS.
- An access was attempted to a location that is forbidden by the configuration in the GPT.

The following error conditions represent a GPT lookup error, and are reported in SMMU\_ROOT\_GPT\_CFG\_FAR:

- Fields in SMMU ROOT GPT BASE CFG are configured to reserved values.
- Configuration of SMMU\_ROOT\_GPT\_BASE\_CFG.PPS to exceed SMMU\_IDR5.OAS.
- Configuration of SMMU\_ROOT\_GPT\_BASE\_CFG.{SH, IRGN, ORGN} to an invalid combination.
- SMMU\_ROOT\_GPT\_BASE.ADDR is configured to exceed the size configured in SMMU\_ROOT\_GPT\_BASE\_CFG.PPS.
- The output address of a GPT Table Entry exceeds the size configured in SMMU ROOT GPT BASE CFG.PPS.
- The SMMU depends on using values in an invalid GPT Entry.
- The SMMU experienced an External abort while fetching a GPT Entry.
- The SMMU experienced a RAS error while fetching a GPT Entry. This is reported in the same manner as if the SMMU experienced an External abort while fetching a GPT Entry.

#### 3.24.5 SMMU behavior if a GPC fault is active

If a client-originated or SMMU-originated access experiences a GPF reported in SMMU ROOT GPF FAR, then:

- If there is no prior GPF in SMMU\_ROOT\_GPF\_FAR, the appropriate syndrome information is recorded in SMMU\_ROOT\_GPF\_FAR.
- Other accesses that do not experience a GPF or GPT lookup error continue as specified.
- The GPF remains active until software writes 0 to SMMU\_ROOT\_GPF\_FAR.FAULT.

If a client-originated or SMMU-originated access experiences a GPT lookup error reported in SMMU\_ROOT\_GPT\_CFG\_FAR, then:

- If there is no prior GPT lookup error in SMMU\_ROOT\_GPT\_CFG\_FAR, the appropriate syndrome information is recorded in SMMU\_ROOT\_GPT\_CFG\_FAR.
- Other accesses that do not experience a GPF or GPT lookup error continue as specified.
- The GPT lookup error remains active until software writes 0 to SMMU ROOT GPT CFG FAR.FAULT.

An SMMU with RME has two additional edge-triggered wired interrupts:

| Source      | Trigger reason                                    |
|-------------|---|
| GPF_FAR     | An error becomes active in SMMU_ROOT_GPF_FAR.     |
| GPT_CFG_FAR | An error becomes active in SMMU_ROOT_GPT_CFG_FAR. |

# 3.24.6 Observability of GPC faults

If the termination of a client transaction as a result of a GPC fault is observable to the client device, then:

- If the appropriate SMMU\_ROOT\_GPF\_FAR or SMMU\_ROOT\_GPT\_CFG\_FAR register already contained an active fault, then it is not updated in this case.
- If the appropriate SMMU\_ROOT\_GPF\_FAR or SMMU\_ROOT\_GPT\_CFG\_FAR register did not already contain an active fault, then the related syndrome information is observable in the appropriate register.

If an interrupt indicating the presence of a GPC fault is observable, then the syndrome information is observable in the SMMU\_ROOT\_GPF\_FAR or SMMU\_ROOT\_GPT\_CFG\_FAR register as appropriate.

If the termination of a client transaction as a result of a GPC fault has been observable to the client device, completion of a subsequent CMD\_SYNC guarantees observability of any related events in the Event queue or, if the Event queue is unwriteable, that the Event will not become observable.

For an SMMU with SMMU\_ROOT\_IDR0.BGPTM == 1, then:

- After completion of a broadcast TLBI \*PA\* and DSB instruction on the PE, completion of a subsequent CMD\_SYNC guarantees that no Events relating to GPT configuration invalidated by that TLBI and DSB will later be made observable in the Event queue.
- After a broadcast TLBI \*PA\* instruction on the PE, completion of a subsequent DSB instruction guarantees that any errors reported in the SMMU\_ROOT\_GPF\_FAR or SMMU\_ROOT\_GPT\_CFG\_FAR registers relating to GPT configuration invalidated by that TLBI are already observable.

For an SMMU with SMMU\_ROOT\_IDR0.RGPTM == 1, then:

- After completion of a register-based TLBI by PA, indicated by SMMU\_ROOT\_TLBI\_CTRL.RUN, completion of a subsequent CMD\_SYNC guarantees that no Events relating to GPT configuration invalidated by that TLBI by PA will later be made observable in the Event queue.
- Completion of a register-based TLBI by PA, indicated by SMMU\_ROOT\_TLBI\_CTRL.RUN, guarantees that any errors reported in the SMMU\_ROOT\_GPF\_FAR or SMMU\_ROOT\_GPT\_CFG\_FAR registers relating to GPT configuration invalidated by that TLBI by PA are already observable.

If an F\_STE\_FETCH, F\_CD\_FETCH, F\_VMS\_FETCH or F\_WALK\_EABT with GPCF == 1 is observable in the Event queue then either:

- If the appropriate SMMU\_ROOT\_GPF\_FAR or SMMU\_ROOT\_GPT\_CFG\_FAR register already contained an active fault, then it is not updated in this case.
- If the appropriate SMMU\_ROOT\_GPF\_FAR or SMMU\_ROOT\_GPT\_CFG\_FAR register did not already contain an active fault, then the related syndrome information is observable in the appropriate register.

If an update to SMMU\_(S\_)GERROR resulting from a GPC fault is observable, then either:

- If the appropriate SMMU\_ROOT\_GPF\_FAR or SMMU\_ROOT\_GPT\_CFG\_FAR register already contained an active fault, then it is not updated in this case.
- If the appropriate SMMU\_ROOT\_GPF\_FAR or SMMU\_ROOT\_GPT\_CFG\_FAR register did not already contain an active fault, then the related syndrome information is observable in the appropriate register.

If a fault to be reported in SMMU\_(S\_)GERROR is observable in SMMU\_ROOT\_GPF\_FAR or SMMU\_ROOT\_GPT\_CFG\_FAR, then the fault will also be reported in SMMU\_(S\_)GERROR in finite time. The existing mechanisms for ensuring the visibility of errors in SMMU\_(S\_)GERROR also apply in this case. For example, completion of an Update of SMMU\_CR0.EVENTQEN to 0 guarantees observability of any errors to be reported in SMMU\_GERROR.EVENTQ\_ABT\_ERR.

| Chapte | ar A   |
|--------|--|
| Comm   |  |
|        |  |
|        | This section describes the behavior of commands given to the SMMU through the Command queue. |
|        |  |
|        |  |
|        |  |
|        |  |
|        |  |
|        |  |

# 4.1 Commands overview

# 4.1.1 Command opcodes

All entries in the Command queue are 16 bytes long. All Command queue entries are little-endian. Each command begins with an 8-bit command opcode, defined as follows:

| <b>Command opcode</b> | Command name   |
|-----------------------|--|
| 0x00                  | Reserved   |
| 0x01                  | CMD_PREFETCH_CONFIG  |
| 0x02                  | CMD_PREFETCH_ADDR  |
| 0x03                  | CMD_CFGI_STE   |
| 0x04                  | CMD_CFGI_STE_RANGE Note: CMD_CFGI_ALL has the same opcode as this command. |
| 0x05                  | CMD_CFGI_CD  |
| 0x06                  | CMD_CFGI_CD_ALL  |
| 0x07                  | CMD_CFGI_VMS_PIDM  |
| 0x08-0x0A             | Reserved   |
| 0x10                  | CMD_TLBI_NH_ALL  |
| 0x11                  | CMD_TLBI_NH_ASID   |
| 0x12                  | CMD_TLBI_NH_VA   |
| 0x13                  | CMD_TLBI_NH_VAA  |
| 0x14-0x17             | Reserved   |
| 0x18                  | CMD_TLBI_EL3_ALL   |
| 0x19                  | Reserved   |
| 0x1A                  | CMD_TLBI_EL3_VA  |
| 0x1B-0x1F             | Reserved   |
| 0x20                  | CMD_TLBI_EL2_ALL   |
| 0x21                  | CMD_TLBI_EL2_ASID  |
| 0x22                  | CMD_TLBI_EL2_VA  |
| 0x23                  | CMD_TLBI_EL2_VAA   |

#### 4.1. Commands overview

| 0x24-0x27 | Reserved               |
|-----------|------------------------|
| 0x28      | CMD_TLBI_S12_VMALL     |
| 0x29      | Reserved               |
| 0x2A      | CMD_TLBI_S2_IPA        |
| 0x2B-0x2F | Reserved               |
| 0x30      | CMD_TLBI_NSNH_ALL      |
| 0x31-0x3F | Reserved               |
| 0x40      | CMD_ATC_INV            |
| 0x41      | CMD_PRI_RESP           |
| 0x42-0x43 | Reserved               |
| 0x44      | CMD_RESUME             |
| 0x45      | CMD_STALL_TERM         |
| 0x46      | CMD_SYNC               |
| 0x47-0x4F | Reserved               |
| 0x50      | CMD_TLBI_S_EL2_ALL     |
| 0x51      | CMD_TLBI_S_EL2_ASID    |
| 0x52      | CMD_TLBI_S_EL2_VA      |
| 0x53      | CMD_TLBI_S_EL2_VAA     |
| 0x54-0x57 | Reserved               |
| 0x58      | CMD_TLBI_S_S12_VMALL   |
| 0x59      | Reserved               |
| 0x5A      | CMD_TLBI_S_S2_IPA      |
| 0x5B-0X5F | Reserved               |
| 0x60      | CMD_TLBI_SNH_ALL       |
| 0x61-0x7F | Reserved               |
| 0x80-0x8F | IMPLEMENTATION DEFINED |
| 0x90-0xFF | Reserved               |

## 4.1.2 Submitting commands to the Command queue

Commands are submitted to the SMMU by writing them to the Command queue then, after ensuring their visibility to the SMMU, updating the SMMU\_(S\_)CMDQ\_PROD.WR index which notifies the SMMU that there are commands to process. The SMMU does not execute commands beyond the CMDQ\_PROD.WR index and, when commands are able to be processed as described in this chapter, a write to SMMU\_(S\_)CMDQ\_PROD.WR is all that is required from software to cause the SMMU to consider newly-produced commands. See section 3.21.2 *Queues*.

Commands are able to be processed from the Command queue when all of the following conditions are met:

- The Command queue CONS and PROD indexes indicate that the queue is not empty.
- The Command queue is enabled through SMMU\_(S\_)CR0.CMDQEN.
- No Command queue error is active for the given Command queue.

The SMMU processes commands in a timely manner until all commands are consumed, or a command queue error occurs, or the queue is disabled.

When SMMU\_IDR0.SEV == 1, the SMMU triggers a WFE wake-up event when a Command queue becomes non-full and an agent external to the SMMU could have observed that the queue was previously full. This applies to the Non-secure Command queue and, if implemented, the Secure Command queue.

Note: Arm expects that an attempt to insert a command into the queue will first observe from SMMU\_(S\_)CMDQ\_CONS whether the queue has space, and if it is full might then poll the SMMU\_(S\_)CMDQ\_CONS index in a loop until the queue becomes non-full. Such a loop can be throttled using the WFE instruction when the SMMU and system supports sending of WFE wake-up events.

The behaviors of some commands are dependent on SMMU register state. Register state must not be altered between such a command having been submitted to the Command queue and the command completion. If a register field is changed while a dependent command could be being processed, it is UNPREDICTABLE whether the command is interpreted under the new or old register field value.

#### 4.1.3 Command errors

A Command queue CERROR\_ILL error occurs when:

- A Reserved command opcode is encountered.
- A valid command opcode is used with invalid parameters, see the individual command descriptions.
- A valid command opcode is used and a Reserved or undefined field is optionally detected as non-zero, which
  results in the command being treated as malformed.

Some commands, where specified, are IGNORED in certain circumstances. If a command causes a CERROR\_ILL this takes precedence over whether the command is IGNORED or not.

A command queue CERROR\_ABT error occurs when:

• An external abort is encountered upon accessing memory.

The SMMU stops command consumption immediately upon the first occurrence of an error, so that the SMMU\_(S\_)CMDQ\_CONS.RD index indicates the command that could not be correctly consumed, and the error code is reported. See section 7.1 *Command queue errors* for details on Command queue error reporting and recovery.

## 4.1.4 Consumption of commands from the Command queue

A command is Consumed when the value observed in the SMMU\_(S\_)CMDQ\_CONS.RD index register passes beyond the location of the command in the queue. This means that:

#### 4.1. Commands overview

- As defined by the normal circular queue semantics, the location has been read by the SMMU and the producer might later re-use the location for a different command.
- Where explicitly noted in a command description, certain side-effects or guarantees have occurred.
  - Where not noted, no conclusions can be drawn from the Consumption of a command.

The SMMU\_(S\_)CMDQ\_CONS index can be polled to determine whether a specific command has been Consumed. See section 4.7 *Command Consumption summary* for a summary of Consumption behavior.

A CMD\_SYNC command is provided as a mechanism to ensure completion of commands submitted to the same queue at a location before the CMD\_SYNC, including side-effects. A CMD\_SYNC is not required to be issued in order to start the processing of earlier commands.

Note: A CMD\_SYNC is used where it is necessary to determine completion of prior commands, such as a TLB invalidation, but commands are able to complete without depending on a CMD\_SYNC.

#### 4.1.5 Reserved fields

All non-specified fields in the commands are RESO. An implementation is permitted to check whether these fields are zero. An implementation does one of the following:

- Detects non-zero use of a Reserved field as a malformed command, resulting in CERROR\_ILL.
- Ignores the entirety of any Reserved fields.

Some combinations or ranges of parameter values are defined in this section to be ILLEGAL and use of these values results in a CERROR\_ILL command error.

#### 4.1.6 Common command fields

These fields are common to more than one command and have the following behavior:

- SubstreamID and Substream Valid (SSV)
  - SSV indicates whether a SubstreamID is provided.
    - 0: SubstreamID not supplied.
    - 1: SubstreamID supplied.
- When SMMU\_S\_IDR1.SECURE\_IMPL == 1, SSec is used by commands on the Secure Command queue to indicate whether the given StreamID parameter is Secure or Non-secure, in a similar way to SEC\_SID for an input transaction (see section 3.10.1 StreamID Security state (SEC\_SID)):

| SSec | Meaning                |
|------|------------------------|
| 0    | StreamID is Non-secure |
| 1    | StreamID is Secure     |

- Commands on the Non-secure Command queue must set SSec == 0, where present, and cannot affect Secure streams. A command on the Non-secure Command queue with SSec == 1 is ILLEGAL, regardless of whether Secure state is supported, and raises CERROR\_ILL.
- Virtual address fields are Address[63:12], with [11:0] taken as zero.
- Physical, or IPA address fields are Address[51:12], or [51:2] for the case of MSIAddr, with other bits taken as zero.
  - Note: Bits[51:48] of these fields are RESO in SMMUv3.0.

# 4.1.7 Out-of-range parameters

Providing an out-of-range parameter to a command has one of the following CONSTRAINED UNPREDICTABLE behaviors:

- The command has no effect
- The command has an effect, taking an UNPREDICTABLE value for the parameter that is out-of-range.
  - Note: For example, an implementation might truncate an out-of-range StreamID parameter to another in-range StreamID which might then be affected by the command.

See section 3.16.1.2 *Command Queue*. Some implementations might not provide the ability to express out-of-range values in certain fields.

A StreamID parameter for a command on the Non-secure Command queue is out of range if the value exceeds the implemented Non-secure StreamID size, as reported by SMMU\_IDR1.SIDSIZE. For a command on the Secure Command queue, a Non-secure StreamID is out of range if the value exceeds the Non-secure SMMU\_IDR1.SIDSIZE and a Secure StreamID is out of range if the value exceeds the Secure SMMU\_S\_IDR1.S\_SIDSIZE.

A SubstreamID parameter is out of range if the value exceeds the implemented SubstreamID size, as reported by SMMU\_IDR1.SSIDSIZE.

Address parameter ranges are described for each command type that takes an address parameter.

The allowed range of ASID and VMID parameters is covered in section 4.4 TLB invalidation.

## 4.2 Prefetch

Two forms of prefetch command are available which can prefetch the configuration or translation data associated with a stream.

Valid prefetch commands with out of range parameters do not generate command errors. A request to prefetch an address that is out of range with respect to the translation table configuration for the StreamID or SubstreamID is IGNORED and does not record any kind of fault or error.

An implementation is not required to check the range of an Address parameter, but if it does then the parameter is considered out of range if:

- When the stream configuration enables stage 1 translation, the parameter has bits at Address[VAS-1] and upwards that are not all equal in value. TBI is permitted but not required to apply to the parameter.
- When the stream configuration enables stage 2 translation, the parameter has bits at Address[IAS] and upwards that are not zero.


If either SMMU\_IDR1.SSIDSIZE == 0 or STE.S1CDMax == 0, then:

- Prefetch commands must be submitted with SSV == 0 and the SubstreamID parameter is IGNORED.
- Setting SSV == 1 is CONSTRAINED UNPREDICTABLE and has one of the following behaviors:
  - The command behaves as though SSV == 0.
  - The command has no effect.

Prefetch commands directed to invalid configuration, for example, an STE or CD with V == 0 or out of range of the Stream table (or level-2 sub-table), fail silently and do not record error events. Similarly, prefetch commands directed to addresses that cause translation-related faults for any reason do not record error events.

When  $SMMU_(S_)CRO.SMMUEN == 0$ , valid prefetch commands are consumed but do not trigger a prefetch.

## 4.2.1 CMD\_PREFETCH\_CONFIG(StreamID, SSec, SubstreamID, SSV)

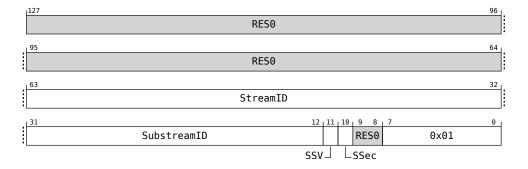


Prefetch any STE and CD configuration structures that are required to process traffic from the given StreamID, and SubstreamID if SSV == 1. An implementation is not required to prefetch any, or all, of the configuration requested.

If the STE of a StreamID configures both stage 1 and stage 2 translation, stage 2 HTTU is enabled, and if a CD or L1CD is fetched, then this command sets AF == 1 in the stage 2 translation table descriptor that is used to fetch the CD or L1CD.

Note: The CD might not be fetched if it is already cached.

The common behaviors for SSec apply. See 4.1.6 Common command fields.

# 4.2.2 CMD\_PREFETCH\_ADDR(StreamID, SSec, SubstreamID, SSV, Addr, NS, Size, Stride)

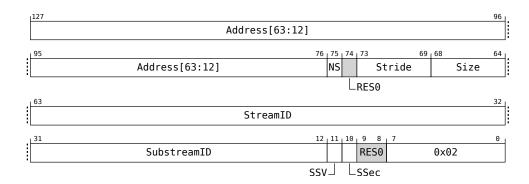

Prefetch any STE and CD configuration structures and TLB entries for the given span of addresses as though accessed by transactions associated with StreamID, and SubstreamID if SSV == 1. An implementation is not required to prefetch any, or all, entries requested.

This command performs a prefetch of one or more TLB entries associated with a sequence of addresses given by:

Addr + 
$$(n * 2^{12+Stride})$$
 where  $0 \le n < 2^{Size}$ 

The Stride parameter expresses the expected size of each resulting TLB entry, for the intended span. It controls the gap between successive addresses for which translations are prefetched. This parameter is encoded so that prefetches occur at a stride of 2<sup>12+Stride</sup> bytes. For SMMUv3.0 implementations, Stride is RESO, must be set to 0, and the effective prefetch stride is 4KB. Use of a non-zero value either ignores the value or results in a CERROR\_ILL.

The Size parameter expresses the desired number of prefetched translations, made for addresses at the effective Stride size, encoded as a 2<sup>Size</sup> multiple of the stride size.

The NS parameter is used in the scenario where the command targets a Secure stream and one of the following applies:

- The stream is configured for stage 2 translation only.
- The stream is configured for stage 1 and stage 2 translation, but stage 1 translation is bypassed.

In these scenarios, the NS parameter is used as the NS attribute required to be input to Secure stage 2 translation. The NS parameter is ignored when stage 2 translation is not performed or when stage 1 translation is performed. Note: When stage 1 translation is performed, the NS attribute provided to stage 2 comes from stage 1 translation tables.

When  $SMMU_S_IDR1.SEL2 == 0$ , the NS parameter is RES0.

For CMD\_PREFETCH\_ADDR commands issued to the Non-secure Command queue, the NS parameter is RESO. For CMD\_PREFETCH\_ADDR commands issued to the Secure Command queue with SSec == 0, the NS parameter is RESO.

An implementation internally limits the number of translation operations performed so that the overall prefetch operation completes in a reasonable time.

Note: An implementation might achieve this by ceasing prefetch at a point after which further prefetch would overwrite TLB entries prefetched earlier in the same operation.

Note: If translation table entries have been created for a range of addresses with a consistent page or block size, a prefetch operation can be optimized by setting Stride to align with the page or block size of the range.

Note: In some configurations, particularly those with smaller page sizes, it might negatively impact performance to request a prefetch of a span that results in insertion of a large number of TLB entries.

When HTTU is enabled, this command:

Chapter 4. Commands 4.2. Prefetch

- Marks a stage 2 translation table descriptor as accessed for a CD fetch through stage 2 as described in 4.2.1 CMD\_PREFETCH\_CONFIG(StreamID, SSec, SubstreamID, SSV) above.
- Performs HTTU in a manner consistent with that of a speculative read. See sections 3.14 *Speculative accesses* and 3.13 *Translation table entries and Access/Dirty flags*.

The common behaviors for SSec apply. See 4.1.6 Common command fields.

# 4.3 Configuration structure invalidation

After an SMMU configuration structure is altered in any way, an invalidation command must be issued to ensure that any cached copies of stale configuration are discarded. The following commands allow invalidation of L1STDs, Stream table entries, L1CDs and CDs by StreamID and by StreamID and SubstreamID. All configuration structures must be considered to be individually cached and the agent controlling the SMMU cannot assume that invalidation of one type of structure affects those of another type unless explicitly specified, regardless of the implementation properties of a particular SMMU. See section 16.2 *Caching*.

Modifications of translation tables require separate invalidation of SMMU TLBs, using broadcast TLB invalidation or explicit TLB invalidation commands. See section 4.4 *TLB invalidation*.

Where a StreamID parameter is provided, it corresponds directly with an STE or L1STD. The StreamID parameter indicates that an STE is to be invalidated, or a CD that has been located directly via the indicated STE. The SSec parameter indicates whether the invalidation applies to configuration related to the Secure or Non-secure Stream table.

A structure invalidation command, at a minimum, invalidates all cached copies of structures directly indicated by the command parameters. The commands are permitted to over-invalidate by invalidating other entries.


Note: Arm recommends that implementations limit over-invalidation to avoid a negative performance impact.

When issued from the Secure Command queue, a command might indicate a Secure or Non-secure Stream table entry and associated CD, using SSec. If over-invalidation occurs, it is permitted to affect either Security state.

Over-invalidation is permitted for non-locked configuration cache entries, but when issued from the Non-secure Command queue, Arm strongly recommends that a command only causes invalidation of cached copies of structures associated with Non-secure streams. Where IMPLEMENTATION DEFINED configuration cache locking is used, the IMPLEMENTATION DEFINED configuration cache invalidation semantics might restrict the effects of over-invalidation on locked configuration cache entries.

Note: Arm recommends that implementations choosing to allow over-invalidation consider the impact of Non-secure software being able to invalidate structures for Secure streams.

#### 4.3.1 CMD CFGI STE(StreamID, SSec, Leaf)

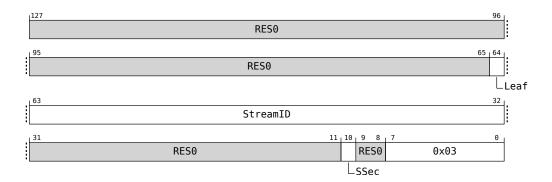

Invalidate the STE indicated by StreamID and SSec.

This might be used for:

- · Stream became invalid or valid.
- Enabling ATS.
- Enabling PASIDs.
- Changing stage 1 between bypass and translate.

Note: This command is not required to affect TLB contents. Separate TLB invalidation must be performed to clean up TLB entries resulting from a prior configuration.

When Leaf == 0, this command invalidates the STE for the specified StreamID, and all caching of the intermediate L1ST descriptor structures walked to locate the specified STE (as might be cached when multi-level Stream tables are used). When Leaf == 1, only the STE is invalidated and the intermediate L1ST descriptors are not required to be invalidated. An implementation is permitted to always invalidate the intermediate L1ST descriptors. STEs cached from linear Stream tables are invalidated with any value of Leaf.


This command invalidates all Context Descriptors (including L1CD) that were cached using the given StreamID.

This command invalidates all information cached from the VMS structure referenced using the given StreamID, for all configuration caches that are indexed by StreamID.

Arm recommends the use of the Leaf == 1 form of this command unless Leaf == 0 behavior is explicitly required. When a linear (single-level) Stream table is in use, the extra scope of the Leaf == 0 form is not required to be used.

Note: By avoiding Leaf == 0 invalidations unless cached intermediate pointers might exist from multi-level walks, invalidations might be faster and more power-efficient, depending on the implementation of STE caching.

## 4.3.2 CMD CFGI STE RANGE(StreamID, SSec, Range)

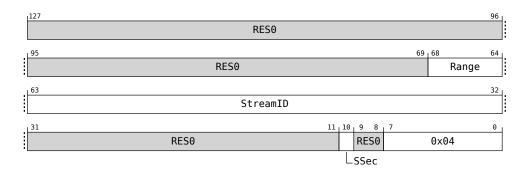

Invalidate more than one STE, falling into the range of StreamIDs given by (inclusive):

Start = (StreamID & 
$$\sim$$
(2<sup>Range+1</sup> - 1);  
End = Start + 2<sup>(Range+1)</sup> - 1:

Invalidation is performed for an aligned range of  $2^{(Range+1)}$  StreamIDs. The Range parameter encodes a value 0-31 corresponding to a range of  $2^1$  -  $2^{32}$  StreamIDs. The bottom Range+1 bits of the StreamID parameter are IGNORED, aligning the range to its size.

Note: Arm expects this command to be used for mass-invalidation when large sections of the Stream table are updated at the same time.


This command invalidates all caching of intermediate L1ST descriptors walked to locate the STEs in the given range (as might be cached when multi-level Stream tables are used). An implementation is permitted to over-invalidate these L1ST descriptors if required.

This command invalidates any Context Descriptors (including L1CD) that were cached using all StreamIDs in the given range.

This command invalidates all information cached from the VMS structure referenced using the given StreamID, for all configuration caches that are indexed by StreamID.

Note: CMD\_CFGI\_STE\_RANGE(n, SSec, 31) invalidates all 2<sup>32</sup> STEs, L1ST descriptors, CDs and L1CDs associated with the Security state given by SSec. This encoding is used for CMD\_CFGI\_ALL. The value of n is unimportant, as when Range == 31, all bits of StreamID are IGNORED. The common behaviors for SSec apply. See 4.1.6 Common command fields.

# 4.3.3 CMD\_CFGI\_CD(StreamID, SSec, SubstreamID, Leaf)

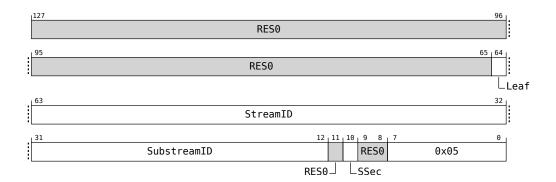

Invalidate one CD.

This might be used when:

- Changing TTBRx/ASID (software must also invalidate TLBs using the old ASID).
- Enabling TBI.

The SubstreamID parameter indicates the Context Descriptor to be invalidated. When a cached Context Descriptor was fetched from index x of the CD table indicated by StreamID, then it is invalidated by this command when issued with SubstreamID == x. This includes the case where the STE indicates one CD which is equivalent to a CD table with one entry at index 0.

#### Note:

- Where substreams have been used with StreamID, that is when the STE located a CD table with multiple entries, the SubstreamID parameter indicates the CD to be invalidated as an index into the CD table.
  - STE.S1DSS might alter the translation behavior of the CD at index 0 (which might be used with SubstreamID 0, or transactions without a SubstreamID) but when issued with SubstreamID == 0, this command invalidates caching of the CD read from index 0 independent of its role in translation through S1DSS.
- Where substreams are not used with the given StreamID, this command invalidates the CD when it is issued with SubstreamID == 0.

When the SubstreamID parameter is outside of the range of implemented SubstreamIDs, including the case where SMMU\_IDR1.SSIDSIZE == 0 and the SubstreamID parameter is greater than 0, the behavior is consistent with the out-of-range parameter CONSTRAINED UNPREDICTABLE behavior described in section 4.1.7 Out-of-range parameters.

Note: An out-of-range SubstreamID parameter might cause this command to have no effect, or to operate on a different SubstreamID. In the case that SMMU\_IDR1.SSIDSIZE == 0, a non-zero SubstreamID parameter might invalidate the single cached CD or have no effect.

Note: In the case where STE.S1DSS == 0b10, non-SubstreamID traffic uses CD table entry 0, which would be invalidated using this command with the SubstreamID parameter equal to 0, although SubstreamID == 0 traffic is terminated (therefore is not associated with CD table entry 0), see STE.S1DSS for more information.

Note: The SubstreamID parameter is interpreted as a CD table index to invalidate. As such, a configuration with one CD can be thought of as a one-entry table. To invalidate the CD cached from this configuration, the SubstreamID parameter to this command would be 0.

When Leaf == 0, this command invalidates all caching of an intermediate L1CD descriptor that locates the CD in a 2-level CD table (see STE.S1Fmt). When Leaf == 1, intermediate L1CD descriptors are not required to be invalidated. An implementation is permitted to always invalidate the intermediate descriptors.

This command raises CERROR\_ILL when stage 1 is not implemented.

#### 4.3. Configuration structure invalidation

A cached copy of CD data is treated as being local to the StreamID that locates the CD, because the CDs are indexed using SubstreamIDs whose scope is local to the StreamID. If multiple StreamIDs use a shared CD or table of CDs, the CD might be cached multiple times, having been fetched through any of the STEs. An invalidation command must be performed that affects all StreamIDs whose STEs point to the CD to be invalidated.


Note: This means that, when cached, CDs do not have to be located by address and might be indexed by StreamID and SubstreamID.

Note: For example, multiple CMD\_CFGI\_CD or CMD\_CFGI\_STE commands for each StreamID can be performed, or a wider-scope CMD\_CFGI\_STE\_RANGE or CMD\_CFGI\_ALL covering all StreamIDs.

Arm recommends the use of the Leaf == 1 form of this command unless Leaf == 0 behavior is explicitly required. When a linear (single-level) CD table is in use, the extra scope of the Leaf == 0 form is not required to be used.

Note: Avoiding Leaf == 0 invalidations unless cached intermediate pointers might exist from multi-level walks might have power and performance benefits.

## 4.3.4 CMD\_CFGI\_CD\_ALL(StreamID, SSec)

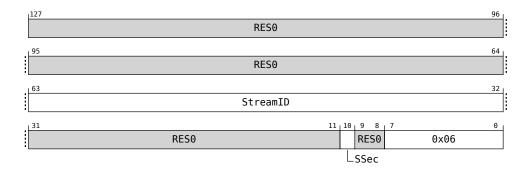

Invalidate all CDs referenced by StreamID, for example when decommissioning a device. A separate command must also be issued to invalidate TLB entries for any ASIDs used, either by ASID or all.


Note: When STE configuration has enabled substreams, this command affects all CDs cached for the StreamID substreams. When STE configuration has disabled substreams and used a single CD for stage 1, this command affects that single CD.

This command must also invalidate caches of all intermediate L1CD descriptors that locate CDs using the given StreamID.

This command raises CERROR\_ILL when stage 1 is not implemented.

See 4.3.3 CMD\_CFGI\_CD(StreamID, SSec, SubstreamID, Leaf), when a CD table is shared by multiple STEs this can give rise to multiple caches of each CD table entry. This command, or similar for STE or ALL scope, must be performed for all StreamIDs that could have cached the CD table contents.

## 4.3.5 CMD\_CFGI\_VMS\_PIDM(SSec, VMID)

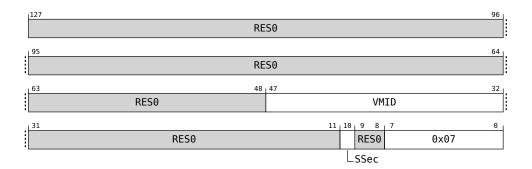

This command invalidates cached VMS.PARTID\_MAP information that is stored in a cache that is not affected by CMD\_CFGI\_STE\*.

The SSec parameter is encoded the same as for other CMD\_CFGI\_\* commands and indicates the Security state associated with the VMID parameter.

The validity and usage of the VMID parameter is consistent with the behavior of VMID in the CMD\_TLBI\_\* commands. See section 4.4.2 *TLB invalidation of stage 1*.

A CERROR\_ILL is raised in any of the following conditions:

- SMMU IDR3.MPAM == 0.
- MPAM is not supported by the programming interface indicated by SSec or the VMS is not supported by the programming interface indicated by SSec.
- SSec is used improperly, consistent with the common definition of SSec.


## 4.3.5.1 Usage

The PARTID\_MAP might be cached in either of a configuration cache or a separate PARTID\_MAP cache. This means that a change to the PARTID\_MAP requires invalidation of both configuration that could have used that PARTID\_MAP and of a separate PARTID\_MAP cache. The following invalidation procedure can be used:

- 1. CMD\_CFGI\_VMS\_PIDM(s, VMID)
- 2. CMD\_SYNC
- 3. STE configuration cache invalidations for all StreamIDs associated with the VMS holding the PARTID\_MAP (for example, CMD\_CFGI\_STE\_RANGE).
- 4. CMD SYNC

Note: The VMID required for invalidation is the STE.S2VMID value that is used by the STEs that reference the VMS.

## 4.3.6 CMD\_CFGI\_ALL(SSec)

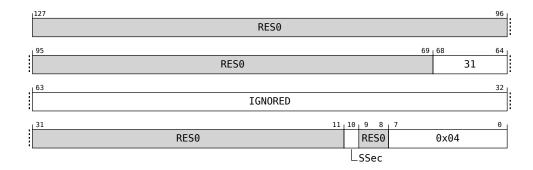

For configuration caches indexed by StreamID, this command is an alias for CMD\_CFGI\_STE\_RANGE with Range == 31 (a range of  $2^{32}$ , or all, StreamIDs). This command invalidates the cached configuration for all possible StreamIDs that are associated with the Security state given by SSec. Because Range == 31, the StreamID parameter is IGNORED.

This command additionally invalidates all information cached from all VMS structures associated with the Security state given by SSec, including from caches that are indexed by VMID.

The common behaviors for SSec apply. See 4.1.6 Common command fields.

Note: Behavior for caches indexed by StreamID is as described in CMD\_CFGI\_STE\_RANGE and invalidates caches of all configuration structures relevant to the Security state indicated by SSec. This includes caches of:

- · Stream Table Entries.
- Intermediate or L1ST descriptor multi-level Stream Table Entries.
- Context Descriptors.
- Intermediate or L1CD multi-level Context Descriptor table entries.

Note: Arm recommends that an implementation explicitly detects this case and performs an invalidate-all operation instead of using an invalidate-range, if invalidate-all would be faster or more efficient.

Note: If it is required that TLB entries are also invalidated (such as reset-time initialization of the SMMU), Arm recommends that this command is *followed* by a command sequence to invalidate all TLB entries. A sequence in which TLB invalidations *precede* a CMD\_CFGI\_ALL might lead to a race in which TLB entries are pre-loaded using prefetch with possibly-stale cached configuration structures.

#### 4.3.7 Action of VM guest OS structure invalidations by hypervisor

Note: When a guest issues structure invalidation commands on its Command queue, the hypervisor must perform maintenance on its behalf. In particular, StreamIDs might need to be mapped from the guest view into real system StreamIDs. Arm recommends the following behavior:

| Guest S1 command   | Hypervisor action  | Notes   |  |
|--------------------|--|---|--|
| CMD_CFGI_STE       | Re-shadow STE, CMD_CFGI_STE  | Map guest StreamID to host<br>StreamID. Note: SubstreamID<br>is the same in guest and host. |  |
| CMD_CFGI_STE_RANGE | Re-shadow STEs, CMD_CFGI_STE or CMD_CFGI_STE_RANGE as appropriate. | _   |  |
| CMD_CFGI_CD        | CMD_CFGI_CD  | _   |  |
| CMD_CFGI_CD_ALL    | CMD_CFGI_CD_ALL  | _   |  |

| Guest S1 command | Hypervisor action   | Notes  |
|------------------|---|--|
| CMD_CFGI_ALL     | <pre>CMD_CFGI_ALL, or, For each S in (GUEST_STREAMS) {   CMD_CFGI_STE(S); }</pre> | CMD_CFGI_ALL might over-invalidate and affect performance of other guests. An alternative is to explicitly invalidate structures for each StreamID assigned to the gues in question. |

## 4.3.8 Configuration structure invalidation semantics/rules

Stalled transactions are unaffected by structure or TLB invalidation commands and must be dealt with either by using CMD\_RESUME to retry or terminate them individually, or flushed using CMD\_STALL\_TERM for affected StreamIDs.

Note: When a stalled transaction is retried, it is re-translated as though it had just arrived, using newly-updated structures that might have been made visible to the SMMU with prior structure or TLB invalidation operations.

Translation of a transaction through the SMMU might not be a single atomic step and an invalidation command might be received while the transaction is in progress inside the SMMU. An invalidation of a structure that is used by a transaction that is in progress is not required to affect the transaction, if the transaction looked up the structure before it was invalidated. However, invalidation of any given structure must be seen as atomic so that a transaction must never see a partially-valid structure. A subsequent CMD\_SYNC ensures that the transaction, having used a structure that was affected by an invalidation command, is visible to the system before the CMD\_SYNC completes.

The consumption of structure and TLB invalidation commands does not guarantee invalidation completion. A subsequent CMD SYNC is consumed when all prior invalidations of both structure and TLB have completed.

Refer to section 3.21 *Structure access rules and update procedures* for structure update procedure and information about invalidation completion.

#### 4.4 TLB invalidation

The TLB invalidation commands are similar to the Armv8-A broadcast TLB invalidation messages originating from PE TLB invalidation operations. These commands only affect the SMMU TLB and do not generate any broadcast operations to other agents in the system.

Note: SMMU TLB invalidate commands might be required because:

- The SMMU or interconnect does not support broadcast TLB invalidation messages.
- The ASET flag in a Context Descriptor might cause a TLB entry to be marked as not participating in certain types of broadcast TLB invalidation, see section 3.17 TLB tagging, VMIDs, ASIDs and participation in broadcast TLB maintenance.

The Armv8-A Last Level (leaf) scope is supported, to only invalidate an indicated TLB entry and last level cache.

Entries in this section show the PE TLB invalidation instructions that have the same scope as the SMMU command being described. Broadcast TLB invalidation messages from these PE operations trigger the equivalent operation on the SMMU. The scope of broadcast TLB invalidation and SMMU TLB invalidation commands are affected by VMID Wildcards, if enabled, see section 3.17.6 VMID Wildcards, SMMU\_CR0.VMW and SMMU\_S\_CR0.VMW.

ASID and VMID parameters to TLB invalidation commands are either 8-bit or 16-bit values, as appropriate, depending on whether the SMMU implementation supports 8-bit or 16-bit ASIDs and VMIDs (SMMU\_IDR0.{ASID16,VMID16}). When support for either ASIDs or VMIDs is 8 bits, the upper 8 bits of the corresponding 16-bit parameter field are RES0. In this case, if the upper 8 bits are non-zero, the command is not required to affect TLB entries.

Note: There are some configurations where VMID is RESO. See Section 4.4.2 TLB invalidation of stage 1.

Commands matching TLB entries on ASID disregard the ASET value with which TLB entries were inserted.

Each command specifies the minimum required scope of TLB invalidation that must be performed. An implementation is permitted to invalidate more non-locked entries than this required scope (over-invalidation) but doing so can adversely affect performance and is not recommended by Arm. Where IMPLEMENTATION DEFINED TLB locking is used, invalidation semantics set out in section 16.6.1 *Configuration and translation cache locking* must be observed.

Note: As described in section 4.3.8 *Configuration structure invalidation semantics/rules* above, a CMD\_SYNC completes when prior TLB invalidations have completed. A sequence of CMD\_TLBI\_\* commands followed by a CMD\_SYNC is analogous to a sequence of TLBI instructions followed by a DSB on the PE, where the DSB ensures TLB invalidation completion.

Note: Consistent with the Armv8-A VMSA, for an entry to be eligible for invalidation, addresses that are provided for TLB invalidation are not required to be aligned to the start of a TLB entry address range. To match a TLB entry, the least significant bits of the address are ignored as needed, given the size of the entry.

#### 4.4.1 Common TLB invalidation fields

#### 4.4.1.1 Range-based invalidation and level hint

Armv8.4 [2] introduces range-based TLB invalidation operations and adds a level hint to both existing and range-based invalidation operations.

The SMMU\_IDR3.RIL bit indicates support for both range-based invalidation and the level hint. This feature is mandatory in SMMUv3.2 or later.

The following fields are common across all address-based invalidation operation commands, for VA and IPA, as described in sections 4.4.2 *TLB invalidation of stage 1* and 4.4.3 *TLB invalidation of stage 2*.

| Bits    | Name  | Meaning  |
|---------|-------|--|
| [24:20] | SCALE | Range invalidation scale.  • See below for use of this field in range invalidation.  • When TG == 0b00 this field is RES0.  • If SMMU_IDR3.RIL == 0, this field is RES0.   |
| [16:12] | NUM   | Range invalidation granule multiplier  • See below for use of this field in range invalidation.  • When TG = 0b00, this field is RES0.  • If SMMU_IDR3.RIL == 0, this field is RES0.   |
| [75:74] | TG    | <ul> <li>Translation Granule</li> <li>This field indicates the Translation Granule size of the TLB entries that are intended to be invalidated and is used with both the range TLB invalidation and the TTL hint, as described in Armv8.4<sup>(1)</sup>. It applies to TLB entries that cache information from Table descriptors or information from last level descriptors.</li> <li>TG is encoded as follows: <ul> <li>0b00: Entries to be invalidated were inserted using any Translation Granule size, and:</li> <li>Range invalidation is not performed.</li> <li>The TTL hint is not used.</li> <li>0b01: Entries to be invalidated were inserted using a 4KB Translation Granule.</li> <li>0b10: Entries to be invalidated were inserted using a 16KB Translation Granule.</li> <li>0b11: Entries to be invalidated were inserted using a 64KB Translation Granule.</li> </ul> </li> <li>If SMMU_IDR3.RIL == 0, this field is RES0.</li> <li>If a non-zero value is specified then the SMMU is only required to invalidate TLB entries that were inserted using a Translation Granule that matches TG.</li> </ul> |
| [73:72] | TTL   | <ul> <li>Translation Table Level</li> <li>When TG != 0b00, this field provides a hint that indicates the level of the translation table walk holding the leaf entry for the address that is being invalidated, as described in Armv8.4<sup>(1)</sup>.</li> <li>When TG == 0b00, this field is RESO. The TTL field does not affect the scope of the invalidation.</li> <li>If a non-zero value is specified, then the SMMU is only required to invalidate TLB entries that were inserted from a translation table walk level matching TTL.</li> <li>If SMMU_IDR3.RIL == 0, this field is RESO.</li> </ul>   |

<sup>(1)</sup>[2]

The encodings of TTL reduce the required scope of the invalidation as follows:

| TTL  | When TG == 0b00              | When TG == 0b01           | When TG == 0b10           | When TG == 0b11           |
|------|------------------------------|---------------------------|---------------------------|---------------------------|
| 0b00 | TTL is RESO, not used.       | Leaf entries at any level | Leaf entries at any level | Leaf entries at any level |
|      | Leaf entries at any level of | of a 4KB Granule table.   | of a 16KB Granule table.  | of a 64KB Granule table.  |
|      | walk of a table with any     |                           |                           |                           |
|      | Translation Granule size.    |                           |                           |                           |
| 0b01 |                              | Leaf entries at Level 1   | Reserved, hardware        | Leaf entries at Level 1   |
|      |                              | of a 4KB Granule table.   | treats as TTL == 00       | of a 64KB Granule table.  |
| 0b10 | •                            | Leaf entries at Level 2   | Leaf entries at Level 2   | Leaf entries at Level 2   |
|      |                              | of a 4KB Granule table.   | of a 16KB Granule table.  | of a 64KB Granule table.  |
| 0b11 |                              | Leaf entries at Level 3   | Leaf entries at Level 3   | Leaf entries at Level 3   |
|      |                              | of a 4KB Granule table.   | of a 16KB Granule table.  | of a 64KB Granule table.  |

When TG = 0b00, the TTL hint is not used and range invalidation is not performed.

Note: The TTL hint gives the level of translation table walk of the page or block last level descriptor entries for the addresses being invalidated. For operations with Leaf=0, invalidation of cached Table descriptors for the address and scope additionally occurs at levels between the start of the walk and the level before the last level given by TTL.

#### When TG != 0b00:

- The TTL field might indicate a level hint.
- A range invalidation is performed. The range, in bytes, of virtual or intermediate physical addresses are given by:
  - Range = ((NUM+1)\*2<sup>SCALE</sup>)\*Translation\_Granule\_Size
  - The range begins at the address given by the Address field in the command, meaning that the set of invalidated addresses, A, is given by:
    - \* Address <= A < Address + Range
  - Note: This differs from the range expressible using an Armv8.4 [2] PE 'TLBI R' instruction, because
    the SCALE field is larger in an SMMU command. The SMMU encoding can express a superset of all
    possible ranges expressible in a PE 'TLBI R' instruction.
  - Note: The span is a single granule when NUM == 0 and SCALE == 0. In this case, the command has similar behavior to a non-range SMMU invalidation operation, except it uses the TTL hint.
  - Note: A CMD\_TLBI\_ can be issued with an Address in the TTB1 half of the Virtual Address space, with SCALE and NUM values such that the Range exceeds the top of the address space. The Address is not considered to "wrap" on overflow and the SMMU is not required to invalidate any entries inserted for the TTB0 half of the Virtual Address space in this scenario.
- The range of addresses that is invalidated is UNPREDICTABLE in the following conditions:
  - For the 4K translation granule (TG == 0b01):
    - \* If TTL == 0b01 and bits Address[29:12] are not all zero.
    - \* If TTL == 0b10 and bits Address[20:12] are not all zero.
  - For the 16K translation granule (TG == 0b10):
    - \* If TTL == 0b10 and bits Address[24:12] are not all zero.

- \* If TTL == 0b11 or 0b00 and bits Address[13:12] are not all zero.
- \* Note: TTL == 0b01 is Reserved when TG == 0b10 and this value should not be programmed. Hardware treats TTL == 0b01 as though TTL == 0b00. This means that, to avoid an unpredictable range of invalidation, Address[13:12] are also required to be zero when TTL == 0b01.
- For the 64K translation granule (TG == 0b11):
  - \* If TTL == 0b01 and bits Address[41:12] are not all zero.
  - \* If TTL == 0b10 and bits Address[28:12] are not all zero.
  - \* If TTL == 0b11 or 0b00 and bits Address[15:12] are not all zero.
- If TG!= 0b00, the parameter combination of NUM == 0, SCALE == 0 and TTL = 0b00 is Reserved. Use of this Reserved combination of parameters causes CERROR\_ILL.
  - Note: Providing granule information without using TTL or a range invalidate has no purpose and this command encoding is Reserved.

An implementation of SMMUv3.2 or later in a system that supports broadcast invalidation, that is when SMMU IDR0.BTM == 1, also supports broadcast range invalidation operations.

Note: For example, for a TLBI issued with TTL=0b10 and Leaf=0:

- The SMMU will invalidate cached entries for matching:
  - Level 2 block entries.
  - Level 0 and level 1 table entries.
- The SMMU is not required to invalidate:
  - Level 3 entries.
  - Level 2 table entries.
  - Level 1 block entries.

## 4.4.2 TLB invalidation of stage 1

The following commands are available on a stage 1-only and a stage 1 and stage 2 SMMU. On a stage 2-only SMMU, they result in CERROR\_ILL.

| Stage 1 command   | Stage 1<br>not supported | From Non-secure Command queue   | From Secure Command queue, if present |
|-------------------|--------------------------|---------------------------------|---------------------------------------|
| CMD_TLBI_NH_ALL   | CERROR_ILL               | Invalidate NS EL1 mappings      | Invalidate Secure stage 1             |
| CMD_TLBI_NH_ASID  |                          |                                 | mappings (inserted with               |
| CMD_TLBI_NH_VAA   |                          |                                 | StreamWorld == Secure).               |
| CMD_TLBI_NH_VA    |                          |                                 | Note: EL3 entries are not             |
|                   |                          |                                 | required to be affected.              |
| CMD_TLBI_EL3_ALL  |                          | CERROR_ILL                      | Invalidate EL3 stage 1 mappings       |
| CMD_TLBI_EL3_VA   |                          |                                 | (insered with StreamWorld ==          |
|                   |                          |                                 | EL3).                                 |
| CMD_TLBI_EL2_ALL  |                          | If SMMU_IDR0.Hyp == 1, in       | validate EL2 or El2-E2H stage         |
| CMD_TLBI_EL2_VA   |                          | 1 mappings as indicated by SN   | MMU_CR2.E2H, in the                   |
| CMD_TLBI_EL2_VAA  |                          | corresponding Security state (s | see text).                            |
| CMD_TLBI_EL2_ASID |                          | If $SMMU\_IDR0.Hyp == 0$ , $Cl$ | ERROR_ILL.                            |


Note: Arm expects that software controlling a stage 1-only SMMU will use the first four commands. This includes driver software operating in a virtual machine controlling a stage 1-only SMMU interface.

In the following CMD\_TLBI\_NH\_\* commands, VMID is only matched when stage 2 is supported for the Security state corresponding to the command queue that the command was issued in. Otherwise, the VMID parameter is RESO and, if it has a non-zero value, the SMMU is permitted to perform the invalidation on an UNKNOWN VMID value, or to not perform an invalidation.

Note: A stage 1-only implementation is not required to check that the VMID parameter of CMD\_TLBI\_NH\_\* is zero.

The Address parameters of these commands are VAs. An implementation is permitted but not required to treat the parameter as out of range if bits at Address[VAS-1] and upwards are not all equal in value. TBI is permitted but not required to apply to the parameter.

## 4.4.2.1 CMD\_TLBI\_NH\_ALL(VMID)

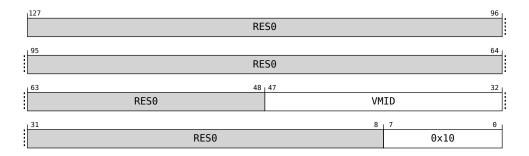


When issued from the Non-secure Command queue, the invalidation scope is equivalent to that of VMALLE1, invalidates all stage 1 NS-EL1 (not NS-EL2 or NS-EL2-E2H) entries for VMID, including global entries.

When issued from the Secure Command queue and Secure stage 2 is not supported, the invalidation scope is equivalent to that of Secure ALLE1, invalidates all Secure entries, including global entries.

When issued from the Secure Command queue and Secure stage 2 is supported, the invalidation scope is equivalent to that of Secure VMALLE1, invalidates all Secure stage 1 EL1 (not S-EL2 or S-EL2-E2H) entries for VMID, including global entries.

For an equivalent to Non-secure ALLE1, see CMD\_TLBI\_NSNH\_ALL.

#### 4.4.2.2 CMD TLBI NH ASID(VMID, ASID)

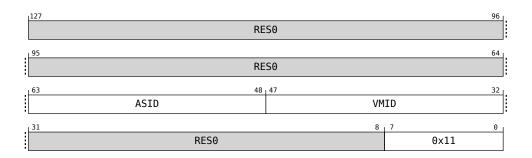


The invalidation scope is equivalent to that of ASIDE1:

When issued from the Non-secure Command queue, invalidates stage 1 NS-EL1 non-global entries by ASID and VMID.

When issued from the Secure Command queue and Secure stage 2 is not supported, invalidates stage 1 Secure non-global entries by ASID.

When issued from the Secure Command queue and Secure stage 2 is supported, invalidates Secure stage 1 non-global entries by ASID and VMID.

#### 4.4.2.3 CMD TLBI NH VAA(VMID, Addr, Leaf)

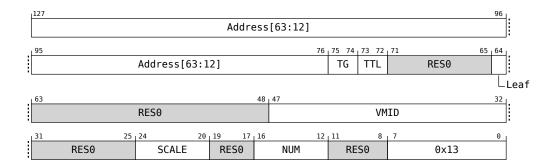

The invalidation scope is equivalent to that of VAA{L}E1:


When issued from the Non-secure Command queue, invalidates stage 1 NS-EL1 entries by VA for all ASIDs in VMID, including global entries.

When issued from the Secure Command queue and Secure stage 2 is not supported, invalidates stage 1 Secure entries by VA for all ASIDs, including global entries.

When issued from the Secure Command queue and Secure stage 2 is supported, invalidates stage 1 Secure entries by VA for all ASIDs in VMID, including global entries.

When Leaf == 1, only cached entries for the last level of translation table walk are required to be invalidated.

#### 4.4.2.4 CMD\_TLBI\_NH\_VA(VMID, ASID, Addr, Leaf)

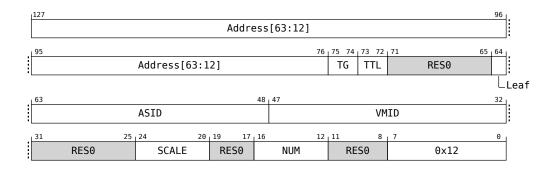

The invalidation scope is equivalent to that of  $VA\{L\}E1$ :


When issued from the Non-secure Command queue, invalidates stage 1 NS-EL1 entries by VMID, ASID and VA, as well as global entries by VMID and VA regardless of the ASID used during allocation.

When issued from the Secure Command queue and Secure stage 2 is not supported, invalidates stage 1 Secure entries by ASID and VA, as well as global entries by VA regardless of the ASID used during allocation.

When issued from the Secure Command queue and Secure stage 2 is supported, invalidates stage 1 Secure entries by VMID, ASID and VA, as well as global entries by VMID and VA regardless of the ASID used during allocation.

When Leaf == 1, only cached entries for the last level of translation table walk are required to be invalidated.

## 4.4.2.5 CMD\_TLBI\_EL3\_ALL

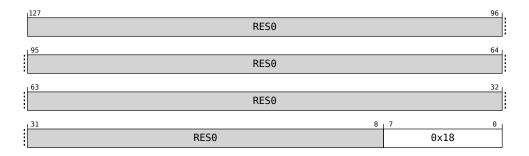


The invalidation scope is equivalent to that of ALLE3, invalidates all stage 1 EL3 entries.

This command is valid only on the Secure Command queue, otherwise a CERROR\_ILL is raised.

If SMMU\_IDR0.RME\_IMPL == 1, this command results in CERROR\_ILL, as EL3 StreamWorld is not supported.

## 4.4.2.6 CMD\_TLBI\_EL3\_VA(Addr, Leaf)

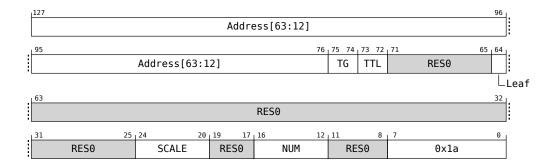


The invalidation scope is equivalent to that of VA{L}E3, invalidates stage 1 EL3 by VA.

When Leaf == 1, only cached entries for the last level of translation table walk are required to be invalidated.

This command is valid only on the Secure Command queue, otherwise a CERROR\_ILL is raised.

If SMMU\_IDR0.RME\_IMPL == 1, this command results in CERROR\_ILL, as EL3 StreamWorld is not supported.

## 4.4.2.7 CMD\_TLBI\_EL2\_ALL

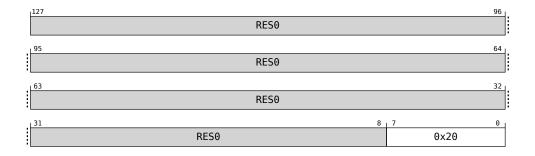


Invalidates all stage 1 NS-EL2/Hyp entries, whether ASID-tagged (inserted in NS-EL2-E2H mode when SMMU\_CR2.E2H == 1) or not.

The invalidation scope is equivalent to that of ALLE2, and when HCR\_EL2.TGE == 1 && HCR\_EL2.E2H == 1, VMALLE1.

When SMMU\_IDR0.Hyp == 0, this command causes a CERROR\_ILL.

This command has the same effect whether issued from the Secure or Non-secure command queues.

#### 4.4.2.8 CMD TLBI EL2 VA(ASID, Addr, Leaf)

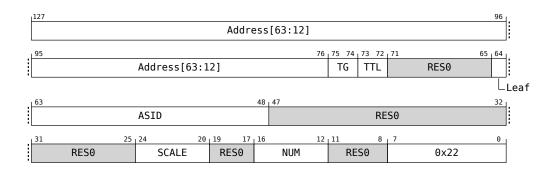

Invalidates stage 1 NS-EL2/Hyp entries by VA, including global.

When Leaf == 1, only cached entries for the last level of translation table walk are required to be invalidated.

This behavior of the command is governed by SMMU CR2.E2H:

- When SMMU\_CR2.E2H == 1, TLB entries inserted with a StreamWorld == NS-EL2-E2H configuration are invalidated if ASID matches (or global) and VA matches. TLB entries inserted with StreamWorld == NS-EL2 are not required to be invalidated.
- When SMMU\_CR2.E2H == 0, TLB entries inserted with a StreamWorld == NS-EL2 configuration are invalidated if VA matches, and the ASID parameter is ignored. TLB entries inserted with StreamWorld == NS-EL2-E2H are not required to be invalidated.


This command must not be submitted to a Command queue when the effective value of SMMU\_CR2.E2H is UNKNOWN. Otherwise, it is UNPREDICTABLE whether any NS-EL2 or NS-EL2-E2H entries that match Addr and ASID are invalidated. See section 6.3.12.3 *E2H*.

The invalidation scope is equivalent to that of  $VA\{L\}E2$ , and when  $HCR\_EL2.TGE == 1$  &&  $HCR\_EL2.E2H == 1$ ,  $VA\{L\}E1$ .

When  $SMMU_IDR0.Hyp == 0$ , this command causes a CERROR\_ILL.

This command has the same effect whether issued from the Secure or Non-secure command queues.

#### 4.4.2.9 CMD TLBI EL2 VAA(Addr, Leaf)

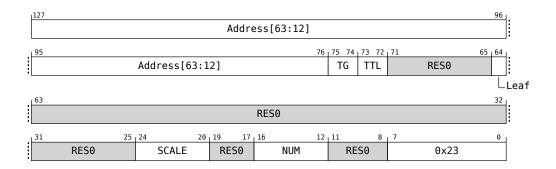

Invalidates stage 1 NS-EL2/Hyp entries by VA for all ASIDs, including global.

When Leaf == 1, only cached entries for the last level of translation table walk are required to be invalidated.

This behavior of this command is governed by SMMU CR2.E2H:

- When SMMU\_CR2.E2H == 1, TLB entries inserted with a StreamWorld == NS-EL2-E2H configuration are invalidated if the VA matches, for all ASIDs. TLB entries inserted with StreamWorld == NS-EL2 are not required to be invalidated.
- When SMMU\_CR2.E2H == 0, TLB entries inserted with a StreamWorld == NS-EL2 configuration are invalidated if the VA matches. TLB entries inserted with StreamWorld == NS-EL2-E2H are not required to be invalidated.

This command must not be submitted to a Command queue when the effective value of E2H is UNKNOWN. Otherwise, it is UNPREDICTABLE whether any NS-EL2 or NS-EL2-E2H entries that match Addr and ASID are invalidated. See section 6.3.12.3 *E2H*.


Note: An implementation might choose to optimize search of a TLB given this information, and access a single location for the given VA.

The invalidation scope is equivalent to that of  $VAA\{L\}E1$  when  $HCR\_EL2.TGE == 1 \&\& HCR\_EL2.E2H == 1$ . When a PE is not in EL2-E2H mode, it does not have an equivalent.

When SMMU\_IDR0.Hyp == 0, this command causes CERROR\_ILL.

This command has the same effect whether issued from the Secure or Non-secure command queues.

#### 4.4.2.10 CMD TLBI EL2 ASID(ASID)

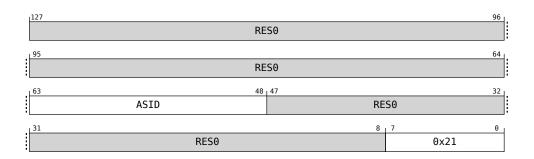

Invalidates stage 1 NS-EL2/Hyp non-global entries by ASID.


Non-global TLB entries inserted with a StreamWorld == NS-EL2-E2H configuration are invalidated if ASID matches. EL2 (non-ASID-tagged) entries are not required to be invalidated.

The invalidation scope is equivalent to that of ASIDE1 when HCR\_EL2.TGE == 1 && HCR\_EL2.E2H == 1. When a PE is not in NS-EL2-E2H mode, it does not have an equivalent.

When  $SMMU_IDR0.Hyp == 0$ , this command causes a CERROR\_ILL.

This command has the same effect whether issued from the Secure or Non-secure command queues.


# 4.4.2.11 CMD\_TLBI\_S\_EL2\_ALL

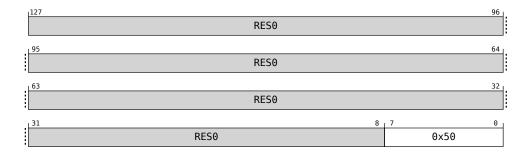

This command is equivalent to, and is encoded similarly to CMD\_TLBI\_EL2\_ALL but acts on S-EL2 instead of NS-EL2. This command relates to SMMU\_S\_CR2.E2H in a similar way as CMD\_TLBI\_EL2\_ALL relates to SMMU\_CR2.E2H.

This command causes CERROR\_ILL when used on the Non-secure Command queue. The opcode for this command is Reserved and causes CERROR\_ILL when Secure EL2 is not supported. See section 3.10.3 Secure EL2 and support for Secure stage 2 translation.


#### 4.4.2.12 CMD\_TLBI\_S\_EL2\_VA

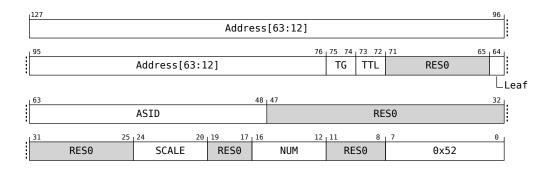

This command is equivalent to, and is encoded similarly to CMD\_TLBI\_EL2\_VA but acts on S-EL2 instead of NS-EL2. This command relates to SMMU\_S\_CR2.E2H in a similar way as CMD\_TLBI\_EL2\_VA relates to SMMU\_CR2.E2H.

This command causes CERROR\_ILL when used on the Non-secure Command queue. The opcode for this command is Reserved and causes CERROR\_ILL when Secure EL2 is not supported.


#### 4.4.2.13 CMD\_TLBI\_S\_EL2\_VAA

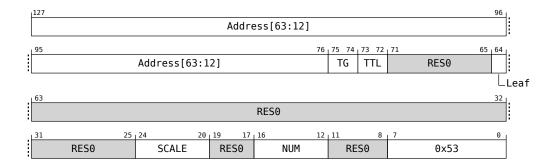

This command is equivalent to, and is encoded similarly to CMD\_TLBI\_EL2\_VAA but acts on S-EL2 instead of NS-EL2. This command relates to SMMU\_S\_CR2.E2H in a similar way as CMD\_TLBI\_EL2\_VAA relates to SMMU\_CR2.E2H.

This command causes CERROR\_ILL when used on the Non-secure Command queue. The opcode for this command is Reserved and causes CERROR\_ILL when Secure EL2 is not supported.

## 4.4.2.14 CMD\_TLBI\_S\_EL2\_ASID

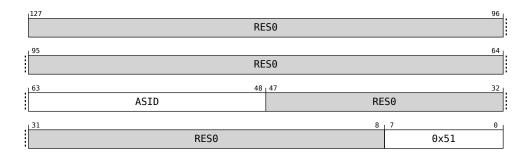


This command is equivalent to, and is encoded similarly to CMD\_TLBI\_EL2\_ASID but acts on S-EL2 instead of NS-EL2. This command relates to SMMU\_S\_CR2.E2H in a similar way as CMD\_TLBI\_EL2\_ASID relates to SMMU\_CR2.E2H.

This command causes CERROR\_ILL when used on the Non-secure Command queue. The opcode for this command is Reserved and causes CERROR\_ILL when Secure EL2 is not supported.

## 4.4.3 TLB invalidation of stage 2

These commands allow a hypervisor to perform stage 2 invalidations on behalf of a VM.

#### 4.4.3.1 CMD TLBI S2 IPA(VMID, Addr, Leaf)

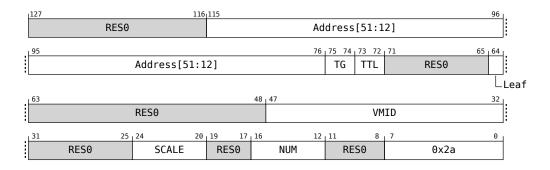

The invalidation scope is equivalent to that of IPAS2{L}E1, invalidates stage 2 by VMID and IPA.

When Leaf == 1, only cached entries for the last level of translation table walk are required to be invalidated.

When issued on an SMMU without stage 2 support, a CERROR ILL is raised.

The Address parameter is a Non-secure IPA in the Non-secure translation regime. An implementation is permitted but not required to treat the parameter as out of range if bits at Address[IAS] and upwards are not all zero. Address bits [11:0] are treated as 0s.


In SMMUv3.0, Address bits [51:48] are RES0.

Consistent with Armv8-A [2], this command is not required to invalidate structures containing combined stage 1 and stage 2 information (from nested stage 1 and 2 translation configuration). Where combined Stage 1 and stage 2 mappings are possible, this command is expected to be used with CMD\_TLBI\_NH\_ALL or CMD\_TLBI\_NH\_VAA. However, this command is sufficient to invalidate translations resulting from stage 2-only configuration.

Note: An implementation choosing to combine all stages of translation into one TLB must distinguish whether an entry represents a VA or an IPA (inserted from stage 1, stage 1 and 2 configuration or stage 2-only) so that invalidation by IPA is able to locate entries inserted from stage 2-only configurations.

This command has the same effect whether issued from the Secure or Non-secure command queues.


## 4.4.3.2 CMD\_TLBI\_S12\_VMALL(VMID)

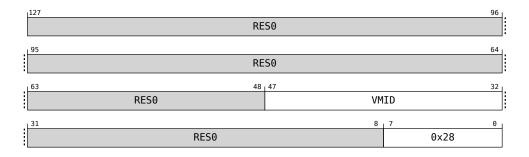

The invalidation scope is equivalent to that of VMALLS12E1, invalidates all Non-secure (and non-Hyp) entries at all implemented stages for VMID. When issued on an SMMU without stage 2 support, a CERROR\_ILL is raised.

This command has the same effect whether issued from the Secure or Non-secure command queues.

#### 4.4.3.3 CMD TLBI S S2 IPA(VMID, Addr, Leaf, NS)

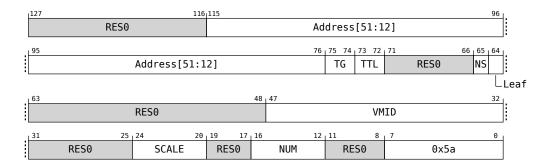


Invalidates Secure stage 2-only by IPA. This command is similar to the Non-secure CMD\_TLBI\_S2\_IPA command, except acts on TLB entries in the Secure translation regime and has an additional parameter, NS, defined as follows:

- 0: The Addr parameter is in the Secure IPA address space in the Secure translation regime.
- 1: The Addr parameter is in the Non-secure IPA address space in the Secure translation regime.

This command causes CERROR\_ILL when used on the Non-secure Command queue. The opcode for this command is Reserved and causes CERROR\_ILL when Secure stage 2 is not supported.

E.a

# 4.4.3.4 CMD\_TLBI\_S\_S12\_VMALL(VMID)

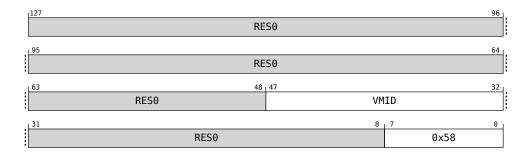


Invalidates all stages for all TLB entries in the Secure translation regime, by VMID. This command is the Secure equivalent of the CMD\_TLBI\_S12\_VMALL command and is equivalent to Secure VMALLS12E1 scope on the PE. This command invalidates all TLB entries in the Secure translation regime matching VMID.

This command causes CERROR\_ILL when used on the Non-secure Command queue. This command opcode is RESERVED and causes CERROR\_ILL when Secure stage 2 is not supported.

#### 4.4.4 Common TLB invalidation

## 4.4.4.1 CMD\_TLBI\_NSNH\_ALL

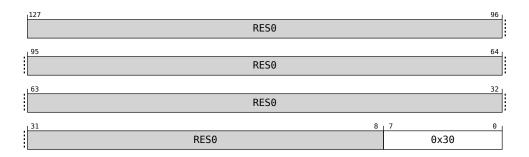


The invalidation scope is equivalent to that of Non-secure ALLE1, valid from both the Non-secure and Secure Command queue, this command invalidates all Non-secure, non-NS-EL2, non-NS-EL2-E2H TLB entries at all implemented stages.

Note: A stage 1-only Non-secure SMMU with SMMU\_IDR0.Hyp == 0 can also be initialized with CMD\_TLBI\_NH\_ALL.

This command is valid whether the SMMU supports only stage 1, only stage 2 or both stages.

# 4.4.4.2 CMD\_TLBI\_SNH\_ALL

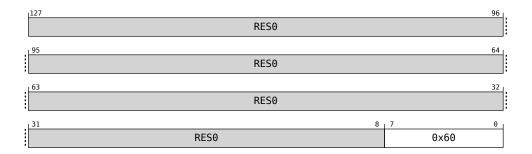

This command invalidates all stages for all TLB entries in the Secure translation regime. This command is the Secure equivalent of the CMD\_TLBI\_NSNH\_ALL command and is equivalent to Secure ALLE1 scope on the PE. This command invalidates all Secure, non-S-EL2, non-S-EL2-E2H TLB entries at all implemented stages.

This command causes CERROR\_ILL when used on the Non-secure Command queue. This command opcode is RESERVED and causes CERROR\_ILL when Secure stage 2 is not supported.


## 4.5 ATS and PRI

These commands issue outgoing requests on the SMMU ATS port, to a connected Root Complex.

Software must not use these commands if ATS and PRI are not fully supported by all system components beyond the SMMU, such as a Root Complex or Endpoint, even if SMMU ID registers indicate support within the SMMU. An SMMU and system remain fully functional even if these commands are used without full system ATS and PRI support and do not deadlock. In this scenario these commands are IGNORED.

Note: StreamID is considered Non-secure, because ATS and PRI are supported only for Non-secure streams.

## 4.5.1 CMD\_ATC\_INV(StreamID, SubstreamID, SSV, Global, Address, Size)

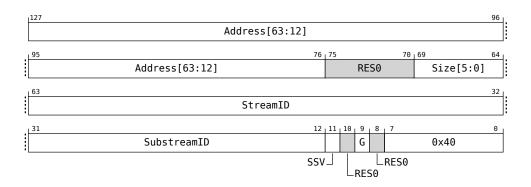

Sends an invalidation request to StreamID, and SubstreamID when SSV == 1, for translations spanned by Address plus span of  $4096 * 2^{Size}$ . The Address span is aligned to its size by the SMMU. The effective value of Address[11 + Size:0] is taken as zero.

All bits of Address[63:N] are conveyed to the endpoint, where N == 12 + Size.

A Size value of 52 corresponds to a 2<sup>64</sup> byte span, meaning invalidate all. Use of values greater than 52 in an otherwise valid CMD\_ATC\_INV are permitted, but not required, to raise a CERROR\_ILL, or might cause an UNKNOWN span to be used, which might mean no invalidation occurs.

In systems that do not support PASIDs, SubstreamID is IGNORED and SSV must be 0. If SSV == 1, one of the following CONSTRAINED UNPREDICTABLE behaviors occurs:

- The command behaves as though SSV == 0, issuing an invalidate to the given StreamID without a PASID TLP prefix.
- The command has no effect.

In systems that support PASIDs, a PCIe PASID TLP prefix containing SubstreamID is used on the ATC Invalidation Request message when SSV is set to 1. In addition, setting the Global (G) parameter to 1 when SSV == 1 sets the Global Invalidate flag in the Invalidation Request. The Global parameter is IGNORED when IGNORED when IGNORED when IGIORED when IGIOR

Note: In the PCIe ATS protocol, the Global Invalidate flag in the Invalidation Request message is Reserved when no PASID prefix is used.

Note: When SSV == 1, SubstreamID is always used as the PASID in the PASID TLP prefix. Global has no effect on this property.

Note: If the SMMU is configured, through STE.S1DSS == 0b10, to treat non-PASID (non-SubstreamID) Translation Requests as using the CD at index 0 of a table of CDs, the request is internally treated similar to a request with Substream 0 in an STE.S1DSS == 0b00 configuration, but as with the request, the response is given without PASID. For correct invalidation of ATC entries to occur in this configuration, software must issue CMD\_ATC\_INV with SSV == 0.

This command is ILLEGAL if any of the following are true:

- **SMMU IDR**0.ATS == 0
- SMMU\_IDR0.ATS == 1, and SMMU\_S\_IDR3.SAMS == 1 and this command is issued on a Secure Command queue.

This command is IGNORED if it is not ILLEGAL and any of the following are true:

- SMMU\_IDR0.ATS == 1 but ATS is not supported by the rest of the system.
- SMMUEN is 0 for the Security state corresponding to the Command queue that the command is issued on.

If this command is issued on a Secure Command queue and it is not ILLEGAL, the StreamID is considered to be Non-secure.

The Consumption of CMD\_ATC\_INV does not guarantee invalidation completion. Completion is ensured by the completion of a subsequent CMD\_SYNC. In a similar way to a TLBI operation, transactions that could have been translated using TLB entries targeted by the invalidation must all be visible to their Shareability domain before the ATC invalidation is considered complete.

Note: In a system with separate Root Complex and SMMU components, the protocol between the two must enforce this ordering, for example, the Root Complex signals that an ATC invalidation is complete only when affected transactions have been pushed to the SMMU and the SMMU then ensures this ordering is maintained, so that the completion signal is not observed before the affected transactions can be observed.

To invalidate a translation from an ATC, software must first invalidate SMMU caches of the translation (whether by explicit command or using broadcast invalidation) and then, after ensuring completion of the SMMU translation invalidate, issue a CMD ATC INV to invalidate ATC translations.

Note: For example, to alter and invalidate the last-level (leaf) translation table descriptor for a Non-secure EL1 translation of address VA using explicit SMMU operations:


- 1. Change translation table entry (and barrier to make visible to Shareability domain).
- 2. CMD\_TLBI\_NH\_VA(VMID, ASID, VA, Leaf == 1).
- 3. CMD\_SYNC.
- 4. CMD\_ATC\_INV(SID, SSID, SSV, Global == 0, VA).
- 5. CMD\_SYNC (and wait for completion)
- 6. The new translation table entry at VA is guaranteed to be in use.

Note: System software is expected to associate a device with a translation context and translation table and, when changes to the translation table are made, perform SMMU TLB maintenance using the translation table's associated ASID/VMID and ATC maintenance of all devices associated with that translation table using the StreamID/SubstreamIDs of the devices.

Note: Software must not provide a Size parameter that is lower than the system STU, as invalidation is not guaranteed if this is done. If a request is made with a span smaller than the STU, the PCIe specification [1] for ATS permits an endpoint to respond using a UR, or to round up the span and perform the invalidate with STU size.

Note: If this command results in a UR response from the endpoint, the command completes without error but invalidation is not guaranteed, see section 3.9.1.3 ATC invalidation errors.

## 4.5.2 CMD\_PRI\_RESP(StreamID, SubstreamID, SSV, PRGIndex, Resp)

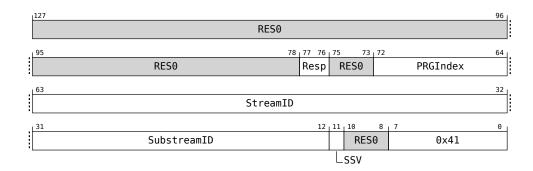

Notifies a device corresponding to StreamID, and SubstreamID when SSV == 1, that page request group indicated by PRGIndex has completed with given response, Resp.

**PRGIndex:** Page Request Group Index from page requests

Resp: 0b00: ResponseFailure: Permanent non-paging error (for example ATS or PRI is disabled for the device)

0b01: InvalidRequest: Page-in unsuccessful for one or more pages in the group

0b10: Success: Page request group was paged in successfully

0b11: Reserved: ILLEGAL

In systems that do not support PASIDs, SubstreamID is IGNORED and SSV must be 0. If SSV == 1, one of the following CONSTRAINED UNPREDICTABLE behaviors occurs:

- The command behaves as though SSV == 0, issuing a response to the given StreamID without a PASID TLP prefix.
- The command has no effect.

In systems that support PASIDs, SSV == 1 results in a PCIe PASID TLP prefix.

The command is ILLEGAL if any of the following are true:

- **SMMU IDR**0.PRI == 0
- SMMU\_IDR0.PRI == 1, and SMMU\_S\_IDR3.SAMS == 1 and this command is issued on a Secure Command queue.


This command is IGNORED if it is not ILLEGAL and any of the following are True:

- SMMU\_IDR0.PRI == 1, but PRI is not supported by the rest of the system.
- SMMUEN is 0 for the Security state corresponding to the Command queue that the command is issued on.

If the command is issued on a Secure Command queue and it is not ILLEGAL, the StreamID is considered to be Non-secure.

# 4.6 Fault response and synchronization commands

## 4.6.1 CMD\_RESUME(StreamID, SSec, STAG, Action, Abort)

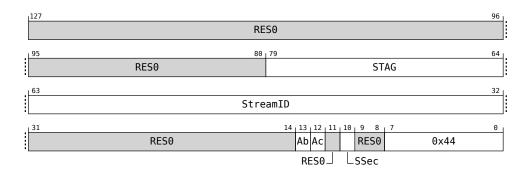

Resumes processing of the stalled transaction identified with the given StreamID and STAG parameter, with the given action parameter, Ac:

| Action (Ac)   | Result   |  |  |
|---------------|--|--|--|
| 1             | Transaction is retried as though it had just arrived at the SMMU. Configuration and translations are |  |  |
| (Retry)       | looked up, it might then progress into the system or fault again.                                    |  |  |
|               | The Abort parameter, Ab, is IGNORED.   |  |  |
| 0:(Terminate) | Transaction is terminated in the manner given by the Abort parameter, Ab. When Ab == 0, the          |  |  |
|               | transaction is completed successfully with RAZ/WI semantics. When Ab == 1, an abort/bus error is     |  |  |
|               | reported to client.  |  |  |

If SMMU\_IDR0.TERM\_MODEL == 1, the Ab parameter is IGNORED: transaction is terminated with abort.

Note: The Abort parameter is analogous to the CD.A configuration for non-stalled terminated transactions.

In response to a transaction experiencing a stage 2 fault, the STE configuration provides only two behaviors, whether the transaction is terminated by abort or becomes stalled, but a subsequent CMD\_RESUME for the stall will (if supported, as indicated by SMMU\_IDR0.TERM\_MODEL) allow the stalled transaction to be terminated with RAZ/WI behavior. There is no dependency between STE.S2S and the behavior of the CMD\_RESUME, and the Terminate parameter is not limited by STE configuration.

When issued on an SMMU implementation that does not support the Stall model (or where the Stall model has been disabled with NSSTALLD for the Security state of the Command queue), indicated by SMMU\_(S\_)IDR0.STALL\_MODEL == 0b01, a CERROR\_ILL is raised.

The STAG parameter is an opaque token that must be supplied exactly as provided in the corresponding fault event record from which the existence of the stalled transaction is determined.

The common behaviors for SSec apply. See 4.1.6 Common command fields.

Note: A CMD\_RESUME issued from the Non-secure Command queue does not affect a stalled transaction that originated from a Secure StreamID.

#### An SMMU must:

- Use the StreamID, SSec and STAG to locate the specific stalled transaction to be resumed.
- Differentiate individual transactions in the case of multiple stalled transactions from the same StreamID.
- Verify that a STAG value corresponds to the given StreamID.

If this command is issued with a STAG value that does not correspond to any stalled transaction, or if the transaction does not match the given StreamID, this command has no effect on any transaction (it is effectively a no-op). This can occur in any of these cases:

- There are no stalled transactions from the given StreamID.
- STAG indicates an SMMU resource that is not holding a stalled transaction.
- The STAG indicates an SMMU resource that does hold a stalled transaction, but it is not associated with the given StreamID.

Note: When SMMU\_S\_IDR1.SECURE\_IMPL == 1, the SMMU might be presented with transactions from a Secure stream and a Non-secure stream that have the same StreamID value. The Secure and Non-secure StreamID namespaces are independent so the streams and transactions are unrelated. It is therefore possible for two stalled transactions to exist, one from a Secure stream and the other from a Non-secure stream, which cause an event to be recorded in both Secure and Non-secure Event queues that coincidentally have the same StreamID and STAG value. Despite having the same numeric values, the two stall event records represent independent transactions, as the Security states of the streams are different.

Note: Event records from stalled transactions indicate the StreamID and SubstreamID of the transaction, the SubstreamID is not required to be supplied for this command as STAG locates the specific transaction.

Stalled transactions might be retried with CMD\_RESUME in any order, but IMPLEMENTATION DEFINED interconnect ordering rules must still be observed and these might not allow a retried transaction to progress into the system unless a prior stalled transaction is also resumed. For example, two stalled reads from the same StreamID might not be allowed to cross. If the later read is resumed with retry it might still stall until the first read is resumed with retry or terminated, at which point the later read might progress.

Arm expects software to respond to every recorded event record indicating a stall using a CMD\_RESUME or a CMD\_STALL\_TERM, and expects that a CMD\_RESUME is only issued in response to a stall event record visible in an Event queue. Software must only issue CMD\_RESUME with StreamID and STAG values that have directly been supplied in a stall event record that has not already been subject to a matching CMD\_RESUME or CMD\_STALL\_TERM operation.

The STAG value of a stall event record matched by CMD\_RESUME is returned to the set of values that the SMMU might use in future stall event records.

It is CONSTRAINED UNPREDICTABLE whether a matching transaction is affected by this command in the following cases:

- The indicated stalled transaction exists in the SMMU but, at the time of the CMD\_RESUME, an event has not yet been made visible to software.
- The encoding of STAG in an implementation allows a CMD\_RESUME to target a stalled transaction for which an event was not recorded because it was suppressed as a duplicate, see section 3.12.2 *Stall model*.
- The stalled transaction has already been subject to a prior CMD\_RESUME or CMD\_STALL\_TERM.

Note: Arm does not expect software to issue a CMD\_RESUME in these circumstances, but an implementation is not required to explicitly prevent an effect.

Consumption of CMD\_RESUME(Retry) does not guarantee that the given stalled transaction has already been retried, but does guarantee that, if it has not, it will be retried at a later time. The SMMU will retry the transaction in finite time.

Note: A stalled transaction that has no matching CMD RESUME response might never be retried.

A retried transaction behaves as though the transaction had just arrived at the SMMU.

Note: The transaction must respect configuration and translation cache invalidations and structure updates that occurred between the time of its original arrival and the retry.

Consumption of CMD\_RESUME(Terminate) does not guarantee that the given stalled transaction has already been terminated, but does guarantee that, if it has not, it will be terminated at a later time unless it retries (completing successfully) before being terminated. An implementation ensures that a transaction marked for termination with a CMD\_RESUME(Terminate) is terminated in finite time without unbounded delay, if it is not successfully retried before the termination occurs.


Note: If configuration remains in a state that would cause retries of the transaction to continue to fault, the transaction is guaranteed to be terminated. This also guarantees that a client device might wait for completion of the transaction, and will always eventually make forward progress.

Note: If the transaction is retried before the point of termination, it might complete successfully if its initial fault reason was resolved in the intervening time.

The SMMU does not guarantee response visibility by the client device.

Note: This means that software cannot guarantee that a given transaction has terminated without performing a synchronization involving the originating device originator or interconnect. This would need to be performed in a device- and system-specific manner before changing device configuration or translations in order to ensure that the transaction will not retry successfully with the new configuration. A similar scenario can exist where a system would need to ensure all transactions that are in progress that are buffered arrive at the SMMU (for termination) so that they do not later appear after new configuration or new translation state is applied.

## 4.6.2 CMD\_STALL\_TERM(StreamID, SSec)

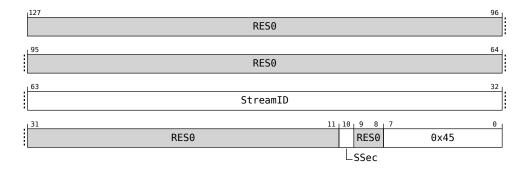

This command provides a mechanism to mark all stalled transactions originating from StreamID for termination.

Note: This command is equivalent to tracking individual stalls and issuing CMD\_RESUME(Terminate) separately.

This command must only be issued after the STE for the StreamID is updated to cause all new incoming transactions to immediately terminate with abort, including any required configuration cache invalidation and synchronization for the STE update. When issued in this condition, any transactions that are outstanding on the stream at the time that this command is observed by the SMMU are guaranteed to terminate with an abort, including the set of transactions that might have become stalled under a previous stream configuration, if the agent controlling the SMMU waits for outstanding transactions to complete before altering the STE of the StreamID to a non-terminating configuration. The mechanism for this wait operation is IMPLEMENTATION DEFINED.

If no stalled transactions from the given stream exist before the command is observed and no transactions become stalled before the command is consumed, this command has no effect.

Consider the following cases:

- The STE is not configured to immediately terminate new transactions. This includes the case when configuration cache maintenance and synchronization for the STE update has not been performed.
- The STE is written in a way that changes such a configuration before all outstanding transactions have completed.

If the CMD\_STALL\_TERM command is issued when one of these cases apply, it is UNPREDICTABLE whether one of the following occurs:

- Stalled transactions related to the StreamID are terminated.
- Pending stall fault event records are prevented from being recorded.

The STAG values in stall event records associated with stalled transactions affected by CMD\_STALL\_TERM are returned to the set of values that the SMMU might use in future stall event records.

When issued on an SMMU implementation that does not support the Stall model, or where the Stall model has been disabled with NSSTALLD for the Non-secure Command queue, indicated by SMMU\_(S\_)IDR0.STALL\_MODEL == 0b01, a CERROR\_ILL is raised.

The common behaviors for SSec apply. See 4.1.6 Common command fields.

Consumption of a CMD\_STALL\_TERM does not guarantee that matching stalled transactions have been terminated. When used as described in this section, consumption guarantees that the set of matching stalled transactions will be terminated at a future time. Transactions for the matching StreamID are not affected by this command if they become stalled after the command is consumed.

Note: This behavior matches CMD\_RESUME(Terminate).

Note: Early-retry cannot cause stalled transactions to complete successfully before termination occurs, because the STE configuration will terminate such early-retries, and therefore termination is guaranteed.

#### 4.6.2.1 Notes and usage

Some matching stalled transactions might not record events because the events are suppressed, as described in 3.12.2.1 *Suppression of duplicate Stall event records*. Event queue record visibility semantics are covered in section 3.5.2 *Queue entry visibility semantics*.

This command is not intended to be used on a stream for which incoming transactions might become stalled during processing of this command because, in this scenario, the point in an ongoing sequence of transactions at which newly-faulting stalling transactions would no longer be matched by an ongoing CMD\_STALL\_TERM is UNPREDICTABLE. In addition, stall fault events might become visible to software for transactions that were matched and marked for termination by this command.

This command is intended to be used when forcibly de-commissioning or reclaiming a stream controlled by untrusted or unreliable software. It is intended to be issued after the stream has been explicitly configured to immediately terminate future incoming transactions without creating new stalled transactions.

Note: This sequence will shut down a device stream, including removal of stalled transactions:

- 1. Software stops the device from issuing transactions.
- 2. Transactions are terminated using:
  - a) Set STE[i].Config to 0b000 and keep STE[i].V == 1
  - b) Issuing a CMD\_CFGI\_STE(i, j, k) (or other configuration invalidation that covers relevant STE(s)).
  - c) Issuing a CMD SYNC.
  - d) At this point, any incoming transactions will terminate and no new transactions will enter stalled state. In addition, the completion of CMD\_SYNC ensures visibility of all stall fault event records related to STE[i], see 4.6.3 CMD\_SYNC(ComplSignal, MSIAddress, MSIData, MSIWriteAttributes). If a stall event record cannot be written (for example, the queue is full), the transaction is either retried when the

E.a

queue becomes writable and terminates given the new configuration or is marked for termination, if a retry does not happen before the CMD\_STALL\_TERM in the next step.

Note: A stall record (STALL == 1) is not written after this point. Any record that is written relates to new STE configuration, which terminates.

#### 3. CMD\_STALL\_TERM (i, j):


- At this point, remaining stalled transactions are marked for termination, but might not have terminated vet.
- 4. Software waits for outstanding device transactions to complete.
  - a) How this is achieved is IMPLEMENTATION DEFINED.
  - b) This step waits for the stalled transactions to terminate and for transactions that are in progress to reach the SMMU and be terminated on arrival.

#### 5. [Optional] CMD\_SYNC

- a) If the STE configuration causes incoming transactions to terminate in a non-silent manner (for example, if STE[i].V == 0 instead of STE[i].Config == 0b000), terminated fault events might have been generated because of the arrival of in-progress transactions during this procedure. This CMD\_SYNC ensures visibility (if the Event queue is writable) of the events related to terminated transactions for which an abort has been returned to the client device (see section 4.6.3 CMD\_SYNC(ComplSignal, MSIAddress, MSIData, MSIWriteAttributes)). If the Event queue is not writable, the completion of the CMD\_SYNC means that events for terminated transactions will not become visible after this point.
- 6. Software discards all event records relating to StreamID 'i' in the current set of Event queue records. Thereafter, all events relating to StreamID 'i' are from subsequent or newly-created configuration.

This sequence ensures that the Event queue will not subsequently receive any further stall event records associated with the stream and that there are no incomplete transactions still stalled in the SMMU.

## 4.6.3 CMD\_SYNC(ComplSignal, MSIAddress, MSIData, MSIWriteAttributes)

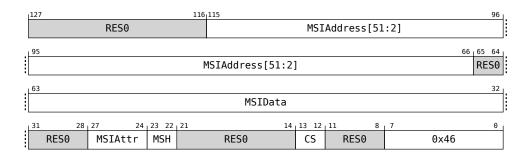

This command provides a synchronization mechanism for preceding commands that were issued to the same Command queue as the CMD\_SYNC. When this command completes, it can raise a completion signal as an optional interrupt and an optional WFE wakeup event. The interrupt might take the form of an MSI (if supported by the implementation). Any operations made observable by the completion of the synchronization operation are observable before the interrupt or event is observable, and before the SMMU\_CMDQ\_CONS index indicates that the CMD\_SYNC has been consumed. Observation of the interrupt or event means that the consumption of the CMD\_SYNC is observable.

The ComplSignal parameter, CS, determines the signaling mechanism that notifies host software of the completion of a CMD\_SYNC, and can take the following values:

• 0b00: SIG\_NONE:

E.a

The command takes no further action on its completion. The MSIAddress, MSIData, MSIWriteAttributes parameters are IGNORED.

#### • 0b01: SIG IRQ:

The command signals its completion by raising an interrupt. On implementations supporting MSIs, a write containing MSIData is made to the physical address given by MSIAddress, if MSIAddress is non-zero, using memory type attributes from MSIAttr. On implementations that do not support MSIs, MSIAddress and MSIData are IGNORED. On implementations that support wired interrupts, an event on a unique wired interrupt output is asserted on this signal, regardless of the value of MSIAddress.

Note: This allows the choice of wired or MSIs on implementations that support both. Software can configure an MSI and ignore a wired output, or can disable MSIs and configure an interrupt controller for the wired output.

Note: See section 3.18 *Interrupts and notifications*. The MSI write might be directed towards an interrupt controller to generate an interrupt, or towards a shared memory location so that the PE can poll, or wait, on the location until the notification appears.

Note: Where an SMMU can send an MSI and the system allows the MSI write to coherently affect shared cached memory locations, an Armv8-A PE might use the loss of a reservation on a location as a WFE wakeup event, providing the same semantics as SIG\_SEV with SIG\_IRQ.

#### • 0b10: SIG SEV:

The command sends an Event to the PE similar to SEV.

- Use of SIG\_SEV only sends an event when SMMU\_IDR0.SEV is set, otherwise, no event is available to a PE and SIG\_SEV is equivalent to SIG\_NONE, that is no completion signal is generated.
- Note: The PE might poll on the SMMU\_CMDQ\_CONS.RD register in a loop throttled by WFE.
- 0b11: Reserved:

Causes a CERROR\_ILL.

The MSI configuration is given by the following parameters:

MSIAttr: Write attribute for MSI, encoded the same as the STE.MemAttr field

**MSH:** Shareability attribute for MSI write, encoded as:

- 0b00: Non-shareable
- 0b01: Reserved, treated as 0b00.
- 0b10: Outer Shareable.
- 0b11: Inner Shareable.

Note: This field is IGNORED if MSIAttr specifies a memory type of any-Device or Normal-iNC-oNC, and Shareability is effectively Outer Shareable in these cases.

MSIAddress[51:2]: If this field is non-zero, it configures the physical address that an MSI is sent to when SIG\_IRQ is used. Address bits above and below this field are treated as zero. The MSI is a 32-bit word-aligned write of MSIData.

The check for zero applies to the entire specified field span and is not limited to the physical address size (OAS) of an implementation.

If the OAS is smaller than this field, MSIAddress is truncated to the OAS, as described in section 3.4.3 *Address sizes of SMMU-originated accesses*.

In SMMUv3.0, MSIAddress[51:48] are RES0.

When a cacheable type is specified in MSIAttr, the allocation and transient hints are IMPLEMENTATION DEFINED.

This command waits for completion of all prior commands and ensures observability of any related transactions through and from the SMMU. Commands in the Command queue that are more recent than a CMD\_SYNC do not begin processing until the CMD\_SYNC completes.

When following a given command submitted to the SMMU, completion of a CMD\_SYNC makes the following guarantees:

| Command type   | Action  |  |  |
|--|---|--|--|
| TLB and ATC invalidation commands: CMD_TLBI_*, CMD_ATC_INV | TLB invalidates and ATC invalidations are guaranteed to be complete (all matching TLB entries are invalidated) and all transactions in progress that were translated using any of the TLB entries targeted by the invalidates are globally observable to their Shareability domain. The semantics of the completion of TLB invalidation match those of an Armv8-A PE.  ATOS translations that were in progress at the time of the CMD_SYNC and used any of the TLB entries targeted by the invalidations are complete, or re-start from the beginning after the CMD_SYNC completes (see section Translation tables and TLB invalidation completion behavior).  Note: No dependency is required on completion of received broadcast TLB invalidation operations. The broadcast invalidation mechanism has its own synchronization and completion mechanisms (for example on AMBA interconnect, a DVM Synch Operation). |  |  |
| Configuration invalidation commands: CMD_CFGI_*            | Configuration invalidations are guaranteed to be complete (matching cached configuration entries are invalidated) and all transactions that are in progress that were translated using any of the configuration cache entries targeted by the invalidates are globally observable to their Shareability domain.  ATOS translations that were in progress at the time of the CMD_SYNC and used any of the configuration cache entries targeted by the invalidations are complete, or re-start from the beginning after the CMD_SYNC completes (see section 3.21.3 Configuration structures and configuration invalidation completion).   |  |  |
| Prefetch commands: CMD_PREFETCH_*                          | Translation or configuration table walks initiated by any kind of prefetch, including CMD_PREFETCH_*, are affected by TLB or configuration cache invalidates in the same way as any other table walk and might therefore be transitively affected by the completion of a CMD_SYNC of a CMD_TLBI_*/CMD_CFGI_*. See section 3.21 Structure access rules and update procedures.  |  |  |
| PRI responses: CMD_PRI_RESP                                | Nothing. The SMMU cannot guarantee response visibility by the endpoint.   |  |  |
| Stall resume/termination: CMD_RESUME, CMD_STALL_TERM       | Nothing. The CMD_RESUME and CMD_STALL_TERM commands complete by the time they are consumed.   |  |  |
| Synchronization commands: CMD_SYNC                         | The guarantees of the prior CMD_SYNC have been met. CMD_SYNCs complete in order.  The MSI writes of any prior CMD_SYNC are visible to their Shareability domain, where the commands are consumed from the same queue. CMD_SYNC is not required to affect MSI writes originating from sources other than prior CMD_SYNC completion signals, or completion signals for CMD_SYNC commands related to a different Command queue.  |  |  |

In addition, completion of a CMD\_SYNC ensures the following behavior:

- An unrecorded fault event record relating to a client transaction terminated by the SMMU (either immediately on a fault or after stalling) whose abort or termination response could have been observed by the client device before the start of the CMD SYNC, is guaranteed to have either:
  - Become visible in the relevant Event queue (given the visibility semantics of section 3.5.2 *Queue entry visibility semantics*).
  - Been discarded, if it could not commit to write to the queue, because the queue is not writeable. In this
    case the unrecorded fault event record will never become visible.
    - \* Note: This rule ensures that if software performs a CMD\_SYNC after notification from a device that all of its outstanding transactions are complete, it is guaranteed that no termination fault records will later become visible from the device stream after the CMD\_SYNC completes.
    - \* This rule applies however the termination of the transaction was performed, whether it was immediate because the Terminate fault model was used or whether the transaction originally stalled and was later terminated because a retry encountered a new configuration, or an update of SMMU\_(S\_)CR0.SMMUEN transitioned the field to 0. In the case of a retry encountering new configuration, any recorded event relates to the new configuration not the original stall.
- Where a particular interconnect does not return a response to a terminated client transaction, all committed
  unrecorded fault records corresponding to transactions internally terminated before the start of the
  CMD\_SYNC are made visible. Uncommitted fault records either commit to the Event queue and are
  made visible, or if they cannot be committed, are discarded and will not later become visible.
- Event records written to the Event queue after the completion of a CMD\_SYNC are guaranteed to be
  generated from configurations or translations visible to the SMMU after any invalidation completed by the
  CMD\_SYNC has taken effect. Event records relating to translations that were invalidated by broadcast TLBIs
  and the appropriate synchronization mechanism before the CMD\_SYNC was issued, are reported before
  completion of the CMD\_SYNC. No events relating to out-of-date configuration or translations will later
  become visible.
- When an unrecorded fault event record exists for a stalled transaction affected by TLBI or CFGI invalidations completed by a CMD\_SYNC, the completion also affects the event record in one of the following ways:
  - The record commits to write and is made visible in the relevant Event queue.
  - If it cannot commit to write to the queue, because the queue is not writeable, the transaction is retried when the queue is next writable, if it has not terminated or otherwise completed due to early retry before that time. If a retry leads to a new fault or error, a new event record is generated instead of the original one. If a retry completes successfully, no event is recorded for the transaction, because the original event is stale. This adheres to the previous rule. The original event record pertaining to prior invalidated configuration or translations must not be recorded after the CMD\_SYNC completes.
- HTTU caused by completed client transactions and completed ATOS translations is made visible, to the
  extent required to its Shareability domain, by completion of a CMD\_SYNC, see section 3.13.4 HTTU
  behavior summary.

#### There is no requirement for:

- A CMD\_SYNC submitted to the Non-secure Command queue to affect Secure traffic or event visibility.
  However, a CMD\_SYNC submitted to the Secure Command queue affects Non-secure traffic or event visibility when the CMD\_SYNC completes prior commands in the Secure Command queue that operate on Non-secure structures.
  - Note: Arm strongly recommends that a CMD\_SYNC issued on the Secure Command queue is not able to be blocked by actions of the Non-secure state, including Non-secure commands. When ATS is supported, Arm strongly recommends that a CMD\_SYNC issued on the Secure Command queue cannot be blocked by ATS Invalidation commands that were issued on the Non-secure Command queue.

 A CMD\_SYNC to affect any recorded stalled transaction, or to cause an unrecorded stalled transaction to be retried or recorded, except where necessary to record an event relating to newly-changed configuration or translations.

Note: A TLB or structure invalidation command has no explicit ordering against prior or subsequent non-CMD\_SYNC commands. If software requires one set of invalidations to be guaranteed complete before beginning a second set of invalidations, a CMD\_SYNC is required to separate the two sets.

If the completion of a prior CMD\_ATC\_INV cannot be guaranteed by a CMD\_SYNC because of a PCIe protocol error, such as a timeout, the CMD\_SYNC might cause a CERROR\_ATC\_INV\_SYNC command error to be raised, see sections 7.1 Command queue errors and 3.9.1.2 ATC invalidation timeout. If a CMD\_SYNC raises a CERROR\_ATC\_INV\_SYNC error:

- The CMD\_SYNC is not complete and has not been consumed, that is, SMMU\_(S\_)CMDQ\_CONS.RD remains pointing at the CMD\_SYNC that raised the error. No completion signals are sent.
- The completion guarantees of the CMD\_SYNC have not been met.
- An outstanding CMD\_ATC\_INV command is one that was submitted to the command queue before the CMD\_SYNC and that has not been completed by a previous successful CMD\_SYNC, and:
  - An UNKNOWN set of outstanding CMD\_ATC\_INV commands has timed out and will never complete.
  - An UNKNOWN set of outstanding CMD\_ATC\_INV commands might be in the process of completing successfully, but are not guaranteed to have completed successfully.
- All other operations that the CMD\_SYNC would otherwise have completed are not guaranteed to have completed, but will be completed by a new CMD\_SYNC that is successfully consumed after being re-submitted to the queue after the error is resolved and command processing is resumed.

Note: For example, a CMD\_TLBI\_\* command, that was processed prior to the CMD\_SYNC that caused the error, might still be being processed and is guaranteed to still take effect; a CERROR\_ATC\_INV\_SYNC does not cause such commands to be terminated and there is no requirement for them to be re-submitted after resolving the error.

# 4.7 Command Consumption summary

| Command Type                        | Consumption means                                    |  |  |
|-------------------------------------|--|--|--|
| TLB and ATC invalidation commands   | Nothing  |  |  |
| CMD_TLBI_*, CMD_ATC_INV             | Nothing  |  |  |
| Configuration invalidation commands | N. d.:   |  |  |
| CMD_CFGI_*                          | Nothing  |  |  |
| Prefetch commands                   | Nothing  |  |  |
| CMD_PREFETCH_*                      | Nothing  |  |  |
| PRI responses                       | Nothing  |  |  |
| CMD_PRI_RESP                        |  |  |  |
| Stall resume/termination            | CMD_RESUME and CMD_STALL_TERM have individual        |  |  |
| CMD_RESUME, CMD_STALL_TERM          | completion guarantees that have been met.            |  |  |
| Synchronization commands            | The completion guarantees of CMD_SYNC have been met. |  |  |
| CMD_SYNC                            | The completion guarantees of CMD_STNC have been met. |  |  |

# Chapter 5

# **Data structure formats**

All SMMU configuration data structures, that is Stream Table Entries and Context Descriptors, are little-endian. Translation table data might be configured for access in either endianness on some implementations, see CD.ENDI, STE.S2ENDI and SMMU\_IDR0.TTENDIAN.

All non-specified fields are RESO, Reserved, and software must set them to zero. An implementation either:

- Detects non-zero values in non-specified fields and considers the structure invalid.
- Ignores the Reserved field entirely.

All specified fields are required to be checked against the defined structure validity rules in each of the STE and CD sections.

A configuration or programming error or invalid use of any of the fields in these structures might cause the whole structure to be deemed invalid, where specified. Any transaction from a device that causes the use of an invalid structure will report an abort back to the device and will log an error event, the nature of which is specific to the nature of the misconfiguration.

A structure is used when it is indicated by an STE (or in the case of an STE itself, when an incoming transaction selects it from the Stream table, by StreamID).

The memory attribute set by SMMU\_(S\_)CR1.TABLE\_{SH,OC,IC} is used when fetching the following structures:

- Level 1 Stream Table Descriptor.
- · Stream Table Entry.
- Virtual Machine Structure.


The attribute set by STE.{S1CIR,S1COR,S1CSH} is used when fetching a Level 1 Context Descriptor and Context Descriptor.

See section 3.21.3 *Configuration structures and configuration invalidation completion* for information on structure access, caching and invalidation rules.

#### Chapter 5. Data structure formats

See section 16.2 Caching for implementation notes on caching and interactions between structures.

# 5.1 Level 1 Stream Table Descriptor



## [4:0] Span

2<sup>n</sup> size of Level 2 array and validity of L2Ptr

| Span  | Meaning   |
|-------|---|
| 0     | L2Ptr is invalid. The StreamIDs matching this descriptor are all invalid. |
| 1-11  | Level 2 array contains 2 <sup>(Span-1)</sup> STEs <sup>(1)</sup>          |
| 12-31 | Reserved, behaves as 0.   |

<sup>(1)</sup> Span must be within the range of 0 to (SMMU\_STRTAB\_BASE\_CFG.SPLIT + 1), that is it must stay within the bounds of the Stream table split point.

## [51:6] L2Ptr

Pointer to start of Level-2 array.

Address bits above and below the field range are treated as 0.

Bits L2Ptr[N:0] are treated as 0 by the SMMU, where N == 5 + (Span - 1)

Note: The Level 2 array is therefore aligned to its size by the SMMU.

In SMMUv3.0, bits [51:48] are RES0.


See section 3.4.3 Address sizes of SMMU-originated accesses for behavior of addresses beyond the OAS or physical address range.

Incoming StreamIDs that select a descriptor with Span == 0, or a Span set to a Reserved value, or a Span set to an out of bounds value given the split point, or those that select a valid Level 1 descriptor but are outside of the level 2 range described by Span, are deemed invalid. A transaction causing a Stream table lookup that does not reach a valid STE is terminated with an abort to the client device and optionally records an event, see SMMU\_(S\_)CR2.RECINVSID and C\_BAD\_STREAMID.

When an L1STD is changed, the non-leaf form of CMD\_CFGI\_STE is the minimum scope of invalidation command required to invalidate SMMU caches of the L1STD entry. Depending on the change, other STE invalidations might be required, for example:

- Changing an inactive L1STD with Span == 0 to a non-zero active Span (introducing a new section of level-2 Stream table) requires an invalidation of the L1STD only. As no STEs were reachable for StreamIDs within the span, none require invalidation.
- Changing an active L1STD with Span != 0 to an inactive L1STD (decommissioning a span of Stream table) requires an invalidation of the L1STD as well as invalidation of cached STEs from the affected span. Either multiple non-leaf CMD\_CFGI\_STE commands, or a wider scope such as CMD\_CFGI\_STE\_RANGE or CMD\_CFGI\_ALL is required.

# 5.2 Stream Table Entry

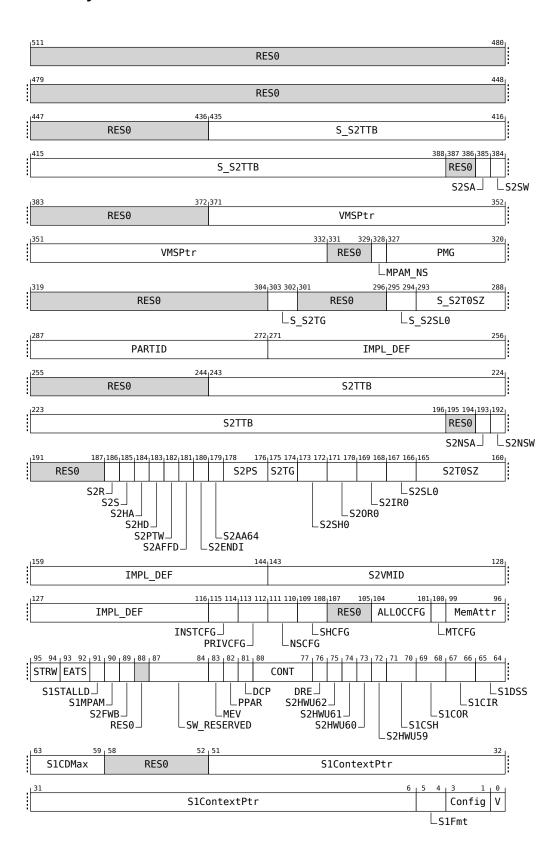

STE fields follow the convention of an S1 prefix for fields related to stage 1 translation, an S2 prefix for fields relating to stage 2 translation, and neither for fields unrelated to a specific translation stage.

In a valid STE, that is where STE.V == 1,

- All fields with an S2 prefix (with the exception of S2VMID) are IGNORED when stage 2 bypasses translation (Config[1] == 0).
- All fields with an S1 prefix are IGNORED when stage 1 bypasses translation (Config[0] == 0).

The validity conditions in field descriptions are written with the assumption that the field is not IGNORED because of a disabled stage of translation.

Note: Additionally, the validity check of STE.EATS might assert that STE.S2S == 0 even if stage 2 is in bypass. That is STE.S2S is not IGNORED.

All undefined fields, and some defined fields where explicitly noted, are permitted to take RAZ/WI behavior in an embedded implementation providing internal storage for Stream Table Entries, see section 3.16 *Embedded implementations*. Permitted differences for such an embedded implementation that does not store STEs in regular memory are marked *EI* in this section.

Note: This allows such implementations to avoid storing bits that do not affect the SMMU behavior.

Invalid or contradictory configurations are marked ILLEGAL in field descriptions. Use of an ILLEGAL STE behaves as described for STE.V == 0.

## [0] V

#### STE Valid

- 0b0: Structure contents are invalid. Other STE fields are IGNORED.
- 0b1: Structure contents are valid. Other STE fields behave as described.

Care must be taken when updating an STE when V == 1 as updates might race against SMMU fetching the structure, see section 3.21 Structure access rules and update procedures.

Device transactions that select an STE with V == 0 are terminated with an abort reported back to the device and a  $C_BAD_STE$  event is recorded.

ATS Translation Requests that select an STE with V == 0 are immediately completed with CA status. No event is recorded.

When SMMU\_CR0.ATSCHK == 1, ATS Translated transactions are checked against STE configuration. Those selecting an invalid STE (with ILLEGAL configuration, or V == 0) are terminated with an abort reported back to the device. No event is recorded. See 3.9.1 for more information on ATS-related transactions.

## [3:1] Config

#### Stream configuration

| Traffic can pass? | Stage 1              | Stage 2   | Notes                                     |
|-------------------|----------------------|---|---|
| No                | -                    | -   | Report abort to device, no event recorded |
| No                | -                    | -   | Reserved (behaves as 0b000)               |
| Yes               | Bypass               | Bypass  | EATS value effectively 0b00               |
| Yes               | Translate            | Bypass  | S1* valid                                 |
| Yes               | Bypass               | Translate   | S2* valid                                 |
|                   | pass?  No No Yes Yes | pass? Stage 1  No - No - Yes Bypass Yes Translate | pass? Stage 1 Stage 2  No                 |

| Value | Traffic can pass? | Stage 1   | Stage 2   | Notes              |
|-------|-------------------|-----------|-----------|--------------------|
| 0b111 | Yes               | Translate | Translate | S1* and S2* valid. |

If stage 1 is not implemented (SMMU\_IDR0.S1P == 0), it is ILLEGAL to set Config[2:0] == 0b1x1.

If stage 2 is not implemented (SMMU\_IDR0.S2P == 0), it is ILLEGAL to set Config[2:0] == 0b11x.

If stage 2 is implemented, and Secure stage 2 is not supported (SMMU\_S\_IDR1.SEL2 == 0), and the STE is reached from the Secure Stream table, it is ILLEGAL to set Config[2:0] == 0b11x.

It is ILLEGAL to configure a Secure STE with STE.Config[2:0] == 0b11x, and STE.S2AA64 == 0.

Note: When stage 1 is configured to translate, see the descriptions for S1DSS and S1Fmt for substream configuration.

In an EI, Config[0] is permitted to be RAZ/WI if stage 1 is not implemented and Config[1] is permitted to be RAZ/WI if stage 2 is not implemented.

When no translation stages are enabled (0b100), ATS Translation Requests (and Translated traffic, if SMMU\_CR0.ATSCHK == 1) are denied as though EATS == 0b00; the actual value of the EATS field is IGNORED. Such a Translation Request causes F\_BAD\_ATS\_TREQ and Translated traffic causes F\_TRANSL\_FORBIDDEN.

When Config[2:0] == 0b000, an ATS Translation Request is denied with UR status and no event is recorded. When Config[2:0] == 0b000 and SMMU\_CR0.ATSCHK == 1, ATS Translated transactions are terminated with an abort and no event is recorded.

#### [5:4] S1Fmt

Stage 1 Format

If S1CDMax == 0 (substreams disabled) or  $SMMU\_IDR1.SSIDSIZE == 0$  (substreams unsupported), this field is IGNORED and S1ContextPtr points to one CD.

Otherwise S1ContextPtr points to:

- 0b00: Two or more Context descriptors in a linear table indexed by SubstreamID[S1CDMax 1:0]. The table is aligned to its size. S1ContextPtr[S1CDMax + 5:6] are RES0.
- 0b01: 2-level table with 4KB L2 leaf tables.

L1 table contains 1-16384 L1CD pointers (128KB maximum) to 4KB tables of 64 CDs.

If S1CDMax <= 6, only index #0 of the L1 table is used. Otherwise, the L1 table is indexed by SubstreamID[S1CDMax - 1:6].

The L2 table is indexed by SubstreamID[5:0].

L2 tables are 4KB-aligned: L1CD.L2Ptr[11:0] are taken to be zero by the SMMU.

L1 tables are aligned to their size, or 64 bytes, whichever is greater. If S1CDMax > 9, S1ContextPtr[S1CDMax - 4:6] are RES0.

• 0b10: 2-level table with 64KB L2 leaf tables.

L1 table contains 1-1024 L1CD pointers (8KB maximum) to 64KB tables of 1024 CDs.

If S1CDMax<=10, only index #0 of the L1 table is used. Otherwise, the L1 table is indexed by SubstreamID[ S1CDMax - 1:10].

The L2 table is indexed by SubstreamID[9:0].

L2 tables are 64KB-aligned: L1CD.L2Ptr[15:12] are RES0 and L1CD.L2Ptr[11:0] are taken to be zero by the SMMU.

L1 tables are aligned to their size, or 64 bytes, whichever is greater. If S1CDMax > 13, S1ContextPtr[S1CDMax - 8:6] are RES0.

• 0b11: Reserved (behaves as 0b00)

Bits of S1ContextPtr that are RES0 because of the configuration of S1CDMax must be programmed to zero by software. If they are not programmed to zero, it is CONSTRAINED UNPREDICTABLE which of the following behaviors applies:

- The SMMU treats the bits as zero.
- If S1Fmt is 0b00, the SMMU fetches any CD in the table.
- If S1Fmt is 0b01 or 0b10, the SMMU fetches any L1CD in the level 1 CD table.

When multiple substreams are supported and enabled, the supported range is 2-1024K substreams in all table layouts.

If Config[0] == 0 (stage 1 disabled), this field is IGNORED and the supply of a SubstreamID with a transaction causes the transaction to be terminated with an abort, recording C\_BAD\_SUBSTREAMID. This is the case for full stream bypass (Config[2:0] == 0b100), or stage 2-only translation (Config[2:0] == 0b110).

If S1CDMax == 0 (substreams disabled) or SMMU\_IDR1.SSIDSIZE == 0 (substreams unsupported), this field is IGNORED and S1ContextPtr points to one CD.

If substreams are supported and enabled and stage 1 is enabled and SMMU\_IDR0.CD2L == 0, it is ILLEGAL to set S1Fmt != 0b00 (as two-stage tables are not supported).

In an EI, this field is permitted to be RAZ/WI if stage 1 is not implemented or substreams are unsupported or SMMU\_IDR0.CD2L == 0.

Note: If stage 2 is configured, S1ContextPtr is an IPA. If S1Fmt indicates a 2-level table, the pointers in the first-level table are also IPAs. Otherwise, the pointers are PAs.

Note: S1Fmt == 0b00 can be used for a single CD, or to support multiple CDs for substreams. A 4KB page will hold 64 CDs, and a 64KB page will hold 1024 CDs.

Note: Arm expects that the effective number of CDs in simultaneous use is practically limited to the number of distinct address spaces which is limited by the number of ASIDs. With S1Fmt == 0b01, 64K CDs can be accommodated with an 8KB L1 table and multiple 4KB L2 tables.

# [51:6] S1ContextPtr

Stage 1 Context descriptor pointer

Stage 1 Context descriptor pointer bits [51:6]. S1ContextPtr bits above and below this range are implied as zero in CD address calculations.

If Config[0] == 0 (stage 1 disabled), this field is IGNORED.

In an EI, this field is permitted to be RAZ/WI if stage 1 is not implemented.

If Config[1] == 1 (stage 2 enabled), this pointer is an IPA translated by stage 2 and the programmed value must be within the range of the IAS. Otherwise, this pointer is a PA, is not translated, and must be within the range of the OAS. See section 3.4.3 for allowed behavior of an out-of-range value in S1ContextPtr.

In SMMUv3.0, STE[51:48] are RES0.

#### [63:59] S1CDMax

Number of CDs pointed to by S1ContextPtr, 2<sup>S1CDMax</sup>.

If SMMU\_IDR1.SSIDSIZE == 0, this field is IGNORED. A transaction is not permitted to supply a SubstreamID. If a transaction does so, it will be terminated and a C BAD SUBSTREAMID event recorded.

In an EI, this field is permitted to be RAZ/WI if stage 1 is not implemented or if SMMU\_IDR1.SSIDSIZE == 0.

If Config[0] == 0 (stage 1 disabled), this field is IGNORED.

Otherwise, when this field is 0, the substreams of the STE are disabled and one CD is available. (The minimum useful number of substreams is 2.) Any transaction with a SubstreamID will be terminated with an abort and a C\_BAD\_SUBSTREAMID event recorded.

When this field is > 0, a specific span of substreams are in use. A transaction with a SubstreamID will be terminated with an abort and a C\_BAD\_SUBSTREAMID event recorded if the SubstreamID is outside of the range specified by this field.

The allowable range is 0 to SMMU\_IDR1.SSIDSIZE inclusive. Other values are ILLEGAL.

The behavior of a transaction without a SubstreamID when S1CDMax > 0 is governed by the S1DSS field.

#### [65:64] S1DSS

#### Default Substream

When substreams are enabled (S1CDMax != 0), this field determines the behavior of a transaction or translation request that arrives without an associated substream:

- 0b00: Terminate. An abort is reported to the device and the F\_STREAM\_DISABLED event is recorded.
- 0b01: Bypass stage 1 as though Config[0] == 0

The transaction can cause a stage 1 Address Size fault if the input address size exceeds the IAS, see section 3.4 *Address sizes* for details. If the configuration enables stage 2 translation, the address is then translated as an IPA if a stage 1 Address Size fault did not occur.

Note: This behavior is identical to a transaction through an STE with Config[0] == 0.

Note: Such a transaction does not fetch a CD, and therefore does not report F\_CD\_FETCH, C\_BAD\_CD or a stage 2 Translation-related fault with CLASS == CD.

• 0b10: Transactions that do not include a substream are translated using the CD associated with Substream 0, which becomes unavailable for use by transactions that include a substream. Transactions that include a substream and select Substream 0 are terminated. An abort is reported to the device and the F\_STREAM\_DISABLED event is recorded.

System software must associate traffic with non-zero substreams because Substream 0 is not available for use.

• 0b11: Reserved (behaves as 0b00)

If Config[0] == 0 (stage 1 disabled) or S1CDMax == 0 (substreams disabled) or  $SMMU\_IDR1.SSIDSIZE == 0$  (substreams unsupported), this field is IGNORED.

In an EI, this field is permitted to be RAZ/WI if stage 1 is not implemented or if  $SMMU\_IDR1.SSIDSIZE == 0$ .

Note: PCIe traffic might include a PASID TLP prefix, or might be issued without it. Consequently, it is possible for some transactions to supply a substream while others from the same endpoint do not.

Note: This field affects ATS Translation Requests, which can be caused to skip stages of translation as described in section 13.6.3 *Split-stage (STE.EATS == 0b10) ATS behavior and responses* and 13.6.4 *Full ATS skipping stage 1*. See section 3.9.2 *Changing ATS configuration* for information on changing configuration that affects ATS translations that could be cached in an Endpoint.

For ATS Translation Requests, if the cases described in 0b00 and 0b10 lead to termination, the Translation Request is terminated with a CA and no event is recorded.

# [67:66] S1CIR

S1ContextPtr memory Inner Region attribute

- 0b00: Normal, non-cacheable
- 0b01: Normal, Write-Back cacheable, Read-Allocate
- 0b10: Normal, Write-Through cacheable, Read-Allocate
- 0b11: Normal, Write-Back cacheable, no Read-Allocate

Note: Read allocation is a hint in the same way as in the Armv8-A architecture, and it is IMPLEMENTATION DEFINED whether it has any effect.

Note: Because CDs are read-only there is no configuration for cache allocation on write. The value of the write-allocation hint provided for a CD read is IMPLEMENTATION DEFINED.

S1CIR, S1COR and S1CSH set the memory access attributes that access the Context descriptor (and Level-1 CD table pointers, if relevant) through S1ContextPtr. If Config[1] == 1 (stage 2 enabled), the CD is loaded from IPA space and the attributes are combined with those from the stage 2 translation descriptor of the page mapping the accessed IPA, otherwise, these attributes are used directly.

In an EI, S1CIR, S1COR and S1CSH are permitted to be RAZ/WI if stage 1 is not implemented.

## [69:68] S1COR

S1ContextPtr memory Outer Region attribute

- 0b00: Normal, Non-cacheable
- 0b01: Normal, Write-Back cacheable, Read-Allocate
- 0b10: Normal, Write-Through cacheable, Read-Allocate
- 0b11: Normal, Write-Back cacheable, no Read-Allocate

# [71:70] S1CSH

S1ContextPtr memory Shareability attribute

- 0b00: Non-shareable
- 0b01: Reserved (behaves as 0b00)
- 0b10: Outer Shareable
- 0b11: Inner Shareable

Note: If both S1CIR and S1COR == 0b00, selecting normal Non-cacheable access, the Shareability of access to CDs is taken to be Outer Shareable regardless of the value of this field.

#### [72] S2HWU59

When SMMU\_IDR3.PBHA == 1, this bit controls the interpretation of bit [59] of the stage 2 translation table final-level (page or block) descriptor

- 0b0: Bit [59] is not interpreted by hardware for an IMPLEMENTATION DEFINED purpose.
- 0b1: Bit [59] has IMPLEMENTATION DEFINED hardware use.

This bit is IGNORED when PBHA are not supported (SMMU\_IDR3.PBHA == 0).

This bit is RESO in SMMUv3.0.

Note: Stage 2 translations do not have the Hierarchical Attribute Disable (HAD) control present for stage 1 and the stage 2 HWU bits therefore do not have a relation to HAD in the same way as for stage 1.

#### [73] S2HWU60

Similar to S2HWU59, but affecting descriptor bit [60].

#### [74] S2HWU61

Similar to S2HWU59, but affecting descriptor bit [61].

## [75] S2HWU62

Similar to S2HWU59, but affecting descriptor bit [62].

# [76] DRE

Destructive Read Enable

Some implementations might support transactions with data-destructive effects which intentionally cause cache lines to be invalidated, without writeback even if they are dirty, such as destructive reads or cache invalidation operations, see section 3.22 *Destructive reads and directed cache prefetch transactions*.

Note: The invalidation side-effect is not required for correctness of this class of transaction, but if performed might cause stale data to be made visible.

- 0b0: A device request to consume data using a read and invalidate transaction is transformed to a read without a data-destructive side-effect. An Invalidate Cache Maintenance Operation is transformed to a CleanInvalidate operation.
- 0b1: A device request to consume data using a read and invalidate transaction is permitted to destructively read the requested location. An Invalidate Cache Maintenance Operation is permitted without transformation. Both of these behaviors are dependent on the correct page permissions as described in sections 3.22.2 Permissions model and 16.7.2.2 Permissions model for Cache Maintenance Operations.

This bit is IGNORED on implementations that do not support this class of transactions. Otherwise, this bit only applies when at least one stage of translation is applied (if STE.S1DSS configuration or Config == 0b100 causes all stages to be bypassed, a read and invalidate or Invalidate Cache Maintenance Operation is permitted regardless of the value of this bit).

This bit is RESO in SMMUv3.0.

#### [80:77] CONT

#### Contiguous Hint

This field provides a hint to SMMU caching structures that a fetched STE is identical to its neighbours within a particular span of StreamIDs, and that a cache of the STE might be matched for any future lookup of StreamID for translation purposes within this span. The field is a 4-bit unsigned value specifying the span size. This field does not affect configuration invalidation. Software must ensure every STE in the required range is targeted by appropriate CMD\_CFGI\_\* commands, regardless of the value of the field.

When CONT == 0, the STE is an individual STE bordered by STEs not considered identical. Otherwise, the span is defined as a contiguous block of  $2^{CONT}$  STEs starting at a StreamID for which StreamID[CONT-1:0]=0.

All defined fields, except for CONT, in all STEs within the stated span must be identical, otherwise the result of an STE lookup has one of the following CONSTRAINED UNPREDICTABLE behaviors:

- The requested STE is used as it is represented in the Stream table.
- A neighbouring STE within the CONT span is used.
- An F\_CFG\_CONFLICT event is reported and the transaction or translation request that led to the STE lookup is aborted.

Note: During the process of marking STEs as members of a contiguous span (or taking away such hints), the STEs might differ by their CONT field values.

Note: Arm expects that the CONT value is changed in valid STEs and that the STEs in the span are not made invalid before changing CONT. This ensures that the STEs in the span remain identical.

A span greater than the size of the Stream table is capped by the SMMU by the size of the Stream table, and does not allow StreamIDs beyond the Stream table span to match an STE.

For a given valid STE in a 2-level Stream table, if STE.CONT is configured to a range greater than the number of entries in the level 2 array that locates that STE, use of StreamIDs within the range of that STE.CONT is CONSTRAINED UNPREDICTABLE. Either one of these behaviors is permitted:

- The transaction is terminated and a C\_BAD\_STREAMID error is raised, if the StreamID is outside of the range represented by the Span of the corresponding L1STD. Note: This is the expected behavior when using a StreamID outside of an L1STD.Span range.
- The transaction uses any STE from the same Security state as the stream.

In an EI, this field is permitted to be RAZ/WI.

# [81] DCP

#### Directed Cache Prefetch

Some implementations might support directed cache prefetch hint operations which are a standalone hint transaction, or a read/write transaction with hint side-effect, that changes the cache allocation in a part of the cache hierarchy that is not on the direct path to memory. This class of operation does not include those with data-destructive side-effects, see section 3.22 Destructive reads and directed cache prefetch transactions.

- 0b0: Directed cache prefetch operations are inhibited. A transaction input with hint side-effect is stripped of the hint. A standalone hint operation completes successfully having no effect on the system.
- 0b1: A directed cache prefetch operation is permitted as follows:
  - A transaction with hint side-effect is performed if the final translation permissions permit the transaction.
    - \* Note: This permits a write with side-effect to progress if permissions grant write access, otherwise a Permission fault occurs.
  - A standalone hint operation is performed if the final permissions grant either read or write or execute
    permission for the requested address, otherwise the hint completes successfully having no effect on the
    system.

This bit is IGNORED on implementations that do not support this class of transactions. Otherwise, this bit only applies when at least one stage of translation is applied (if STE.S1DSS configuration or Config == 0b100 causes all stages to be bypassed, a directed cache prefetch is permitted regardless of the value of this bit).

This bit is RESO in SMMUv3.0.

#### [82] PPAR

PRI Page request Auto Responses

- 0b0: Auto-generated responses on PRI queue overflow do not include a PASID TLP prefix.
- 0b1: Auto-generated responses on PRI queue overflow include a PASID TLP prefix if permitted.

See sections 8.1 *PRI queue overflow* and 8.2 *Miscellaneous* for the conditions that permit a PASID TLP prefix to be used on an auto-generated response.

If SMMU\_IDR0.PRI == 0 or SMMU\_IDR1.SSIDSIZE == 0, this field is RES0.

If SMMU\_IDR3.PPS == 1, this field is IGNORED and the behavior of an auto-generated response is the same as described for PPAR == 1.

#### [83] MEV

Merge Events arising from terminated transactions from this stream

- 0b0: Do not merge similar fault records
- 0b1: Permit similar fault records to be merged

The SMMU might be able to reduce the usage of the Event queue by coalescing fault records that share the same page granule of address, access type and SubstreamID.

Setting MEV == 1 does not guarantee that faults will be coalesced.

Setting MEV == 0 causes a physical SMMU to prevent coalescing of fault records, however, a hypervisor might not honour this setting if it deems a guest to be too verbose.

Note: Software must expect, and be able to deal with, coalesced fault records even when MEV == 0.

In an EI, this field is permitted to be RAZ/WI if the implementation does not merge events.

See section 7.3.1 Event record merging for details on event merging.

#### [87:84] SW\_RESERVED

Reserved for software use

This field is IGNORED by the SMMU.

In an EI, storage must be provided for this field

#### [89] S2FWB

Stage 2 control of attributes

- 0b0: Attribute calculation behaves as described in Chapter 13 Attribute Transformation.
- 0b1: Output attribute calculation and the behavior of the stage 2 page or block descriptor bits [4:2] are affected as described in Armv8-A VMSA for HCR\_EL2.FWB == 1.

Note: The VMSA FWB behavior allows the stage 2 memory type to be output directly instead of being combined with that of the stage 1 translation, redefining bit [4] of a stage 2 page or block descriptor to do so.

This field applies when both stage 1 and stage 2 translation is performed or when stage 2-only translation is performed. This field is IGNORED when stage 2 translation is not performed.

Otherwise, when stage 2 translation is performed, it is ILLEGAL to set this field to 1 when STE.S2AA64 == 0.

This field is RES0 prior to SMMUv3.2.

#### [90] S1MPAM

Enable stage 1 control of MPAM

- 0b0: The PARTID and PMG for transactions and SMMU-originated requests relating to this stream are assigned by STE.PARTID and STE.PMG.
- 0b1: The PARTID and PMG for transactions are assigned by the CD.PARTID and CD.PMG fields, which might be translated using the PARTID\_MAP. See section 17.2 Assignment of PARTID and PMG for client transactions.

This field is RES0 prior to SMMUv3.2 and when MPAM is not supported in the corresponding Security state. Otherwise, when MPAM is supported in the corresponding Security state then:

- When stage 1 translation is performed, this field controls whether the MPAM IDs are given by the CD or the STE. This applies to stage 1-only and nested configurations. In a nested configuration that has STE.S1MPAM == 1, CD.PARTID is translated using VMS.PARTID\_MAP as described in section 17.2 Assignment of PARTID and PMG for client transactions.
- When stage 1 translation is not performed, this field is IGNORED and the STE.PARTID and STE.PMG fields
  are used.
  - This applies to Config[0] == 0 and to scenarios where STE.S1DSS causes stage 1 to bypass.

## [91] S1STALLD

Stage 1 Stall Disable

- 0b0: Allow stalling fault model for stage 1 (configured in CD)
- 0b1: Disallow stalls to be configured for Stage 1 (faults terminate immediately)

If stage 1 is not implemented (SMMU\_IDR0.S1P == 0), this bit is RES0.

If stage 1 is not enabled (Config[0] == 0), this bit is IGNORED.

Otherwise, if stage 1 is enabled and SMMU\_(S\_)IDR0.STALL\_MODEL is not 0b00, it is ILLEGAL to set this field to 1 because the Stall model is not supported or not configurable.

When the Stall model is configurable, this bit must be set for StreamIDs associated with stall-unsafe system topologies or for PCIe clients.

#### [93:92] EATS

Enable PCIe ATS translation and traffic.

This field enables responses to ATS Translation Requests, and when SMMU\_CR0.ATSCHK == 1, controls whether ATS Translated traffic can pass into the system.

- 0b00: ATS Translation Requests are returned unsuccessful or aborted (UR) and F\_BAD\_ATS\_TREQ is recorded.
  - Additionally, when  $SMMU\_CR0.ATSCHK == 1$ , Translated traffic associated with the StreamID of the STE is prevented from bypassing the SMMU. Such traffic is terminated with an abort and a  $F\_TRANSL\_FORBIDDEN$  event is recorded.
- 0b01: Full ATS: ATS Translation Requests are serviced by translating at all enabled stages of translation.

  Translated traffic from the StreamID of the STE is allowed to bypass (regardless of SMMU\_CR0.ATSCHK).

  In implementations of SMMIN/3.1 and later this configuration is ILLEGAL if EATS is not ICNORED and

In implementations of SMMUv3.1 and later, this configuration is ILLEGAL if EATS is not IGNORED and Config[1] == 1 and S2S == 1.

In SMMUv3.0 implementations, this configuration is ILLEGAL if EATS is not IGNORED and S2S == 1. It is CONSTRAINED UNPREDICTABLE whether or not this check of S2S occurs when Config[1] == 0. Arm recommends that S2S == 1 causes EATS == 0b01 to be ILLEGAL only when Config[1] == 1. This condition is represented by CONSTR\_UNPRED\_EATS\_S2S in the pseudocode description.

• 0b10: Split-stage ATS:

ATS Translation responses return the IPA output of stage 1 translation to the Endpoint or ATC. Subsequent Translated transactions are generated by the Endpoint with IPAs and these undergo stage 2 translation in the SMMU, see section 13.6.3 *Split-stage (STE.EATS* == 0b10) *ATS behavior and responses* for details.

This configuration must only be used when:

- The stream has both stage 1 and stage 2 translation (Config[2:0] == 0b111)
- S2S == 0
- SMMU\_IDR0.NS1ATS == 0
- SMMU\_CR0.ATSCHK == 1

If any of the following hold, the STE is ILLEGAL (if it is not IGNORED):

- Config[2:0] != 0b111
- S2S == 1.
- SMMU\_IDR0.NS1ATS == 1.

If Config[2:0] == 0b111 && S2S == 0 && NS1ATS == 0, but SMMU\_CR0.ATSCHK == 0 then EATS == 0b10 configuration behaves as 0b00.

Note: See section 13.6.3 Split-stage (STE.EATS == 0b10) ATS behavior and responses and 13.6.4 Full ATS skipping stage 1 which describes interaction of this field with STE.S1DSS.

• 0b11: Reserved (behaves as 0b00)

This field is RESO if the STE is Secure, and the effective value of EATS is 0b00.

This field is IGNORED if any of the following hold:

- **SMMU\_IDR**0.ATS == 0
  - ATS is not supported by the SMMU implementation. No ATS requests can be made, nor Translated traffic passed.
- Config[1:0] == 0b00
  - When Config[2:0] == 0b100, the effective value of EATS is 0b00. The responses and events recorded for Translation Requests and Translated transactions are as described in this table for EATS == 0b00.
  - When Config[2:0] == 0b000, Translation Requests are silently terminated with UR and, if SMMU\_CR0.ATSCHK == 1, Translated transactions are silently aborted.

Incoming PCIe traffic marked Translated is only checked against the effective value of EATS if SMMU\_CR0.ATSCHK == 1, otherwise traffic marked Translated bypasses the SMMU.

Incoming ATS Translation Requests are always checked against the effective value of EATS.

The behavior of EATS == 0b10 configuration is dependent on SMMU\_CR0.ATSCHK; see section 3.9.2 Changing ATS configuration for details on changing ATS configuration. An implementation is permitted to cache ATSCHK in configuration caches, so if ATSCHK is changed while STEs exist with EATS == 0b10 it is UNPREDICTABLE as to whether the behavior on receipt of new requests related to those STEs is as though EATS == 0b00 or EATS == 0b10.

In an EI, this field is permitted to be RAZ/WI if  $SMMU_IDRO.ATS == 0$ .

Note: There is no dependency between EATS being non-zero and the ability for a CD to select the stall fault model with CD.S == 1. Arm expects that the Stall model is not enabled for PCIe-related streams both at stage 2 (STE.S2S == 0) and at stage 1 (CD.S == 0) and that STE.S1STALLD == 1 is used if necessary to ensure that a CD cannot use CD.S == 1 when the CD configuration is not managed the highest-privilege entity in the system. This expectation is present regardless of whether the stream uses ATS or not. If STE.S1STALLD == 0 and CD.S == 1, the Stall model might (if supported) cause PCIe traffic to stall upon fault.

#### [95:94] STRW

#### StreamWorld control

Selects the translation regime and associated Exception level controlling this stream, in conjunction with the Security state of the STE as defined by being fetched using the Stream table associated with that Security state, when stage 1 translation is used.

This field is RESO if stage 1 is not implemented (SMMU\_IDRO.S1P == 0). In this case, the effective StreamWorld is determined by STE.Config[1].

This field is RESO if SMMU\_IDRO.Hyp == 0 and the STE is in the Non-secure Stream table.

If STE.Config[1] == 1 (stage 2 translation enabled) and the STE is Non-secure, STRW is IGNORED (if it is not already RESO) and the effective StreamWorld is NS-EL1.

If STE.Config[1] == 1 and the STE is Secure and Secure stage 2 is supported, then STRW is IGNORED (if it is not already RESO) and the effective StreamWorld is Secure.

If STE.Config[1] == 0 (stage 2 bypass) and STE.Config[0] == 0 (stage 1 bypass), STRW is IGNORED (if it is not already RES0) as no translations are performed.

Note: The STRW field is not the same as the StreamWorld, which is an attribute whose Effective value might be influenced by STRW in some configurations, but not in others. See section 3.3.3 Configuration and Translation lookup for a definition of StreamWorld.

If Config == 0b101 (stage 1 only), then StreamWorld is determined from the Security state of the Stream table, STRW and SMMU\_(S\_)CR2.E2H as described below.

For STEs reached using the Non-secure Stream table, if STRW is not RESO or IGNORED then StreamWorld is determined from STRW and SMMU\_CR2.E2H as follows:

| STRW | E2H | Resulting StreamWorld |
|------|-----|-----------------------|
| 0000 | X   | NS-EL1                |
| 0b10 | 0   | NS-EL2                |
| 0b10 | 1   | NS-EL2-E2H            |
| 0bx1 | X   | Reserved, ILLEGAL     |

For STEs reached using the Secure Stream table, if STRW is not RESO or IGNORED then StreamWorld is determined from STRW and SMMU\_S\_CR2.E2H as follows:

| STRW | E2H | Resulting StreamWorld | ILLEGAL when              |
|------|-----|-----------------------|---------------------------|
| 0b00 | X   | Secure                | -                         |
| 0b10 | 0   | S-EL2                 | $SMMU\_S\_IDR1.SEL2 == 0$ |
| 0b10 | 1   | S-EL2-E2H             | SMMU_S_IDR1.SEL2 == 0     |

| STRW | E2H | Resulting StreamWorld | ILLEGAL when            |
|------|-----|-----------------------|-------------------------|
| 0b01 | X   | EL3                   | SMMU_IDR0.RME_IMPL == 1 |
| 0b11 | X   | Reserved, ILLEGAL     | Always                  |

The behaviors of these StreamWorlds are as follows:

- Secure tags TLB entries as Secure with an ASID and Arm expects this StreamWorld to be selected for Secure streams used by:
  - Secure software on an Armv7-A host PE, or Armv8-A host PE whose EL3 runs in AArch32.
  - Secure-EL1 software on an Armv8-A host PE whose EL3 runs in AArch64.
- When Secure stage 2 is supported, that is SMMU\_S\_IDR1.SEL2 == 1, the Secure StreamWorld additionally tags TLB entries a VMID.
- S-EL2 tags TLB entries as Secure EL2 without an ASID.
- S-EL2-E2H tags TLB entries as Secure EL2 with an ASID, using E2H mode.
- EL3 tags TLB entries as Secure EL3, without an ASID.

Note: The StreamWorld affects three things:

- The tagging of resulting TLB entries, that is the translation regime, and ASID or VMID.
- The number of translation tables used in the CD for stage 1.
- The Permissions model used in stage 1 translation table

#### See also:

- 3.3.3 Configuration and Translation lookup.
- 3.3.4 Transaction attributes: incoming, two-stage translation and overrides.

#### [99:96] MemAttr

Memory Attribute override value

If MTCFG == 1, MemAttr provides memory type override for incoming transactions. The encoding matches the VMSAv8-64 stage 2 MemAttr[3:0] field as described in the Armv8.0 architecture, except that the following encodings are Reserved (not UNPREDICTABLE) and behave as Device-nGnRnE:

- 0b0100
- 0b1000
- 0b1100

Note: This encoding matches the encoding of the stage 2 translation table descriptor MemAttr field that is used when S2FWB == 0. The S2FWB field only affects the stage 2 translation table descriptor MemAttr field, and does not affect the encoding of this field.

If MTCFG == 0 or SMMU\_IDR1.ATTR\_TYPES\_OVR == 0, this field is RES0.

## [100] MTCFG

Memory Type configuration

- 0b0: Use incoming type or Cacheability
- 0b1: Replace incoming type or Cacheability with that defined by MemAttr field

When SMMU\_IDR1.ATTR\_TYPES\_OVR == 0, this field is RESO and the incoming Memory Type is used.

It is IMPLEMENTATION DEFINED whether MTCFG applies to streams associated with PCIe devices or whether the incoming Memory Type is used for such streams regardless of the field value.

#### [104:101] ALLOCCFG

Allocation hints override

- 0b0xxx: Use incoming RA, WA, TR hints
- 0b1RWT: Hints are overridden to given values:
  - Read Allocate == R
  - Write Allocate == W
  - Transient == T

When overridden by this field, for each of RA/WA and TR, both inner and outer hints are set to the same value. Because it is not architecturally possible to express hints for types that are any-Device or Normal-Non-cacheable, this field has no effect on memory types that are not Normal-WB or Normal-WT, whether such types are provided with transaction from the client device or overridden using MTCFG/MemAttr.

Note: A value of 0b1001 encodes Transient with no-allocate. When the SMMU ensures output attribute consistency (see section 13.1.7 *Ensuring consistent output attributes*), no-allocate is considered to be non-transient. As there is no value of stage 1/stage 2 attribute with which Transient-no-allocate could combine to cause an allocating Transient attribute to be output, 0b1001 is functionally equivalent to 0b1000 (non-Transient, no-allocate).

When SMMU\_IDR1.ATTR\_TYPES\_OVR == 0, this field is RESO and the incoming Allocation hints are used.

It is IMPLEMENTATION DEFINED whether ALLOCCFG applies to streams associated with PCIe devices or whether the incoming allocation hints are used for such streams regardless of the field value.

If STE.MTCFG is 0, it is CONSTRAINED UNPREDICTABLE whether ALLOCCFG has any effect on the allocation hints for the cacheability domains of a transaction.

#### [109:108] SHCFG

Shareability configuration

- 0b00: Non-shareable
- 0b01: Use incoming Shareability attribute
- 0b10: Outer shareable
- 0b11: Inner shareable

Architecturally, any-Device and Normal-iNC-oNC are OSH and Shareability is only variable where cacheable types are used. This field has no effect on memory types that do not contain Normal-{i,o}WB or Normal-{i,o}WT, whether such types are provided with transaction from the client device or overridden using MTCFG/MemAttr.

When SMMU\_IDR1.ATTR\_TYPES\_OVR == 0, this field is RESO and the incoming Shareability attribute is used.

It is IMPLEMENTATION DEFINED whether SHCFG applies to streams associated with PCIe devices or whether the incoming Shareability attribute is used for such streams regardless of the field value.

# [111:110] NSCFG

Non-secure attribute configuration

• 0b00: Use incoming NS attribute

# Chapter 5. Data structure formats 5.2. Stream Table Entry

- 0b01: Reserved, behaves as 0b00.
- 0b10: Secure
- 0b11: Non-secure

NSCFG is IGNORED when the STE is not in the Secure Stream table.

NSCFG is IGNORED when the STE is in the Secure Stream table and stage 1 translation is enabled. In this case the final NS attribute is determined entirely by the translation process (see CD.NSCFGx, the TTD.NSTable and TTD.NS bits). The input NS attribute and STE.NSCFG field are not used. If Secure stage 2 is enabled, the output IPA space determined from the stage 1 translation is input into stage 2. See section 3.10.3 Secure EL2 and support for Secure stage 2 translation.

Otherwise, when the STE is in the Secure Stream table and stage 1 translation is disabled (Config[2:0] ==  $0b1 \times 0$ ):

- When SMMU\_IDR1.ATTR\_PERMS\_OVR == 0, this field is RESO and the incoming NS attribute is output from stage 1 directly. If Secure stage 2 is enabled, the NS attribute is input into stage 2 and selects between the Secure and Non-secure IPA spaces.
- When SMMU\_IDR1.ATTR\_PERMS\_OVR == 1, this field determines the target IPA or PA space of transactions that bypass stage 1 translation and this value is output from stage 1 as the target IPA or PA space.
  - Note: Arm recommends that SMMU\_IDR1.ATTR\_PERMS\_OVR == 1 if an implementation might be
    used in a system where the input NS attribute from a client device on a Secure stream is not accurate,
    and is required to be overridden by the SMMU configuration.
- If Secure stage 2 is enabled, the resulting NS attribute is input into stage 2. See section 3.10.3 Secure EL2 and support for Secure stage 2 translation.

Note: The function of this field is not related to the CD.NSCFG{0,1} fields (whose purpose is to affect the NS property of the translation table walk).

#### [113:112] PRIVCFG

User/privileged attribute configuration

- 0b00: Use incoming PRIV attribute
- 0b01: Reserved, behaves as 0b00.
- 0b10: Unprivileged
- 0b11: Privileged

When SMMU\_IDR1.ATTR\_PERMS\_OVR == 0, this field is RESO and the incoming PRIV attribute is used.

# [115:114] INSTCFG

Inst/Data attribute configuration

- 0b00: Use incoming INST attribute
- 0b01: Reserved, behaves as 0b00.
- 0b10: Data
- 0b11: Instruction

When SMMU\_IDR1.ATTR\_PERMS\_OVR == 0, this field is RESO and the incoming INST attribute is used.

INSTCFG only affects translations for reads, the SMMU considers incoming writes to be Data regardless of this field. See section 13.1.2 *Attribute support*.

#### [127:116] IMPL\_DEF

IMPLEMENTATION DEFINED

IMPLEMENTATION DEFINED per-stream configuration. (For example, QoS overrides for configuration access, data streams.)

## [143:128] S2VMID

Virtual Machine Identifier

Marks TLB entries inserted because of translations located through this STE, differentiating them from translations belonging to different virtual machines.

For a Non-secure STE when stage 2 is implemented (SMMU\_IDR0.S2P == 1) translations resulting from a StreamWorld == NS-EL1 configuration are VMID-tagged with S2VMID when either of stage 1 (Config[0] == 1) or stage 2 (Config[1] == 1) provide translation.

For a Secure STE when Secure stage 2 is implemented, that is SMMU\_S\_IDR1.SEL2 == 1, and when StreamWorld == Secure:

- Translations are VMID-tagged with S2VMID when stage 2 is enabled (Config[1] == 1), including nested configuration.
- When only stage 1 is enabled, the S2VMID field is IGNORED and translations are tagged with VMID 0.

Note: Secure VMIDs and Non-secure VMIDs are different namespaces. See section 3.10.3 Secure EL2 and support for Secure stage 2 translation.

When an implementation supports only 8-bit VMIDs, that is when SMMU\_IDR0.VMID16 == 0, it is ILLEGAL for bits S2VMID[15:8] to be non-zero unless this field is IGNORED.

S2VMID[15:0] is IGNORED and no VMID tagging occurs when any of the following are true:

- Stage 2 is not implemented in the Security state corresponding to the STE
- Config[1:0] == 0b00
- A Non-secure STE StreamWorld is not NS-EL1
- A Secure STE has a StreamWorld other than "Secure"
- A Secure STE has only stage 1 translation enabled

In an EI, this field is permitted to be RAZ/WI if stage 2 is not implemented. In an EI implementing stage 2 with 8-bit VMIDs, S2VMID[15:8] are permitted to be RAZ/WI.

If 16-bit VMIDs are supported by an implementation, the full VMID[15:0] value is used regardless of AA64. Arm expects that legacy and AArch32 hypervisor software using 8-bit VMIDs will write zero-extended 8-bit values in the VMID field in this case.

See section 3.17 *TLB tagging, VMIDs, ASIDs and participation in broadcast TLB maintenance* for more information on ASID and VMID TLB tagging.

Changes to the S2VMID field of an STE are not automatically reflected in cached translations, which must be subjected to separate TLB maintenance.

Note: This field might be supplied by an implementation in transactions to the memory system for IMPLEMENTA-TION DEFINED purposes.

#### [159:144] IMPL\_DEF

IMPLEMENTATION DEFINED

#### [165:160] S2T0SZ

Size of IPA input region covered by stage 2 translation table.

This field is 4 bits ([3:0]) and bits [5:4] are IGNORED when stage 2 translation is AArch32 (S2AA64 == 0). The input region size is calculated the same as in Armv8-A VMSA/AArch32 VTCR. When S2AA64 == 1, this field is 6 bits and the region size is calculated the same as for the Armv8 VTCR\_EL2.

If stage 2 translation is enabled (Config[1] == 1), legal values of S2SL0 and S2TG relate to this field as defined by the Armv8 translation system [2], in section D5.2.3, "Controlling Address translation stages".

Note: This field is IGNORED when stage 2 is implemented but not enabled (Config[1] == 0).

When STE.S2AA64 == 1:

- When SMMU IDR3.STT == 0, the maximum valid value is 39.
- When SMMU IDR3.STT == 1, the maximum valid value is:
  - 48, when STE.S2TG selects a 4KB or 16KB granule
  - 47, when STE.S2TG selects a 64KB granule.
- In SMMUv3.0, the minimum valid value for this field is (64-IAS).
- In architectures after SMMUv3.0:
  - If STE.S2TG selects a 4KB or 16KB granule, the minimum valid value for this field is MAX(16, 64-IAS).
  - If STE.S2TG selects a 64KB granule, the minimum valid value for this field is (64-IAS).

Note: If AArch32 is implemented, IAS == MAX(40, OAS), otherwise IAS == OAS, see section 3.4 Address sizes.

When STE.S2AA64 == 0, this field encodes a value from -8 to 7 as defined by the Armv8-A translation system [2].

Note: When S2AA64 == 0 all 4-bit values are valid, therefore it is not possible to use a value outside the valid range but it is still possible for the S2T0SZ to be inconsistent with S2SL0.

In SMMUv3.0 implementations, the use of a value out of range of these maximum and minimum valid values is CONSTRAINED UNPREDICTABLE and has one of the following behaviors:

- The STE becomes ILLEGAL.
- The STE is not ILLEGAL and the effective value used by the translation is the maximum permitted value (if the programmed value is greater than the maximum permitted value) or the minimum permitted value (if the programmed value is less than the minimum permitted value).

Note: This condition is represented by  ${\tt CONSTR\_UNPRED\_S2TOSZ\_OOR\_ILLEGAL}\ in\ the\ pseudocode\ description.$ 

In implementations of SMMUv3.1 and later, an STE is treated as ILLEGAL if it contains a S2T0SZ value out of range of these maximum and minimum values.

The usable range of values is further constrained by a function of the starting level set by S2SL0 and, if S2AA64 == 1, granule size set by S2TG as described by the Armv8 translation system. Use of a value of S2T0SZ that is inconsistent with the permitted range (given S2SL0 and S2TG) is ILLEGAL.

Note: The SMMU behavior differs from the PE translation system, in which the legal range of VTCR\_EL2.T0SZ values can also depend on whether EL1/stage 1 uses AArch32 or AArch64.

This field is RESO when stage 2 is not implemented, that is when  $SMMU\_IDRO.S2P == 0$ .

# [167:166] S2SL0

Starting level of stage 2 translation table walk.

The stage 2 walk start level is a function of both this field and the value of STE.S2TG.

When STE.S2AA64 is 1, the encoding of this field is the same as for the Armv8 VTCR\_EL2.SL0 field. When STE.S2AA64 is 0, the encoding of this field is the same as for the Armv8 VTCR.SL0 field.

If stage 2 translation is enabled (Config[1] == 1), it is ILLEGAL for this field to be inconsistent with S2T0SZ and S2TG.

This field is RESO when stage 2 is not implemented, that is when SMMU\_IDRO.S2P == 0.

Note: Armv8.4 [2] introduces an encoding for starting at level 3.

#### [169:168] S2IR0

Inner region Cacheability for stage 2 translation table access.

- 0b00: Non-cacheable
- 0b01: Write-back Cacheable, Read-Allocate, Write-Allocate
- 0b10: Write-through cacheable, Read-Allocate
- 0b11: Write-back cacheable, Read-Allocate, no Write-Allocate

The only time that translation table entries are written by the SMMU is when HTTU is in use, and because the read effect of the atomic update might cause read allocation of the affected translation table entry into a data cache, it is IMPLEMENTATION DEFINED as to whether <code>0b01</code> and <code>0b11</code> differ.

Many memory systems might require use of Normal Write-back Cacheable memory for the atomic updates of translation table entries to occur correctly.

If HTTU is enabled and this field is configured to 0b00 or 0b10, then it is IMPLEMENTATION DEFINED which of the following behaviors occurs for hardware updates of Access flag and dirty state:

- The hardware update occurs correctly as an atomic read-modify-write operation.
- The hardware update occurs, but the read-modify-write operation is not guaranteed to be atomic.
- The hardware update is attempted but fails and generates an F\_WALK\_EABT event.

Arm recommends that software uses 0b01 or 0b11 when HTTU is enabled for this translation table unless the behavior of an implementation is otherwise known.

This field is RESO when stage 2 is not implemented, that is when SMMU\_IDR0.S2P == 0.

#### [171:170] S2OR0

Outer region Cacheability for stage 2 translation table access.

Same as for S2IR0.

#### [173:172] S2SH0

Shareability for stage 2 translation table access

- 0b00: Non-shareable
- 0b01: Reserved, behaves as 0b00.
- 0b10: Outer Shareable
- 0b11: Inner Shareable

Note: If both S2IR0 and S2OR0 == 0b00, selecting normal Non-cacheable access, the Shareability of translation table access is taken to be OSH regardless of the value of this field.

This field is RESO when stage 2 is not implemented, that is when  $SMMU_IDRO.S2P == 0$ .

#### [175:174] S2TG

Stage 2 Translation Granule size

- 0b00: 4KB
- 0b01: 64KB
- 0b10: 16KB
- 0b11: Reserved

This field is RESO when stage 2 is not implemented, that is when SMMU\_IDRO.S2P == 0.

Otherwise, if stage 2 translation is disabled (Config[1] == 0), this field is IGNORED.

Otherwise, if stage 2 translation is enabled (Config[1] == 1),

- If S2AA64 == 0, this field is RESO and the effective S2TG value is 4KB.
- If S2AA64 == 1, this field must only select a granule supported by the SMMU, as described in SMMU\_IDR5, and use of an unsupported size or Reserved value is ILLEGAL.
- It is ILLEGAL for S2T0SZ and S2SL0 to be inconsistent with the effective value of this field, as described in [2].

# [178:176] S2PS

Physical address Size

- 0b000: 32 bits
- 0b001: 36 bits
- 0b010: 40 bits
- 0b011: 42 bits
- 0b100: 44 bits
- 0b101: 48 bits
- 0b110: 52 bits

In SMMUv3.0 implementations, this value is Reserved and behaves as 0b101.

• 0b111: Reserved

In SMMUv3.0 implementations, this value is Reserved and behaves as 0b101.

In implementations of SMMUv3.1 and later, this value is Reserved and behaves as 0b110.

Software must not rely on the behavior of Reserved values.

This field determines the Physical address size for the purpose of Address Size fault checking the output of stage 2 translation, see section 3.4 *Address sizes*.

This field is RESO when stage 2 is not implemented, that is when  $SMMU\_IDR0.S2P == 0$ .

When S2AA64 == 0, S2PS is IGNORED and the effective stage 2 output address size is taken as 40 bits.

When S2AA64 == 1, the effective stage 2 output address size is given by:

```
Effective_S2PS = MIN(STE.S2PS, SMMU_IDR5.OAS);
```

The effective S2PS size is capped to the OAS.

Note: OAS is a maximum of 48 bits in SMMUv3.0. OAS is a maximum of 52 bits in SMMUv3.1 and later.

When S2AA64 == 1, setting this field to any value greater than the cap defined here behaves as though this field equals the cap size. Software must not rely on this behavior.

Note: This includes use of a Reserved value.

An Address Size fault occurs if stage 2 translation outputs an address having bits [51:Effective\_S2PS] non-zero.

An address greater than 48 bits in size can only be output from stage 2 when the effective S2PS is 52 and a 64KB granule is in use for that translation table. In SMMUv3.0 addresses are limited to 48 bits.

Note: If a granule smaller than 64KB is used, the address output bits [51:48] are treated as 0b0000, so in this case no Address Size fault can occur if the effective STE.S2PS is greater than or equal to 48 bits.

## [179] S2AA64

- 0b0: Stage 2 translation table is AArch32 (LPAE)
- 0b1: Stage 2 translation table is AArch64

This field is RESO when stage 2 is not implemented, that is when SMMU\_IDR0.S2P == 0.

If stage 2 translation is enabled (Config[1] == 1), it is ILLEGAL to select:

- AArch32 tables when AArch32 tables are not supported (SMMU\_IDR0.TTF[0] == 0).
- AArch64 tables when AArch64 tables are not supported (SMMU\_IDR0.TTF[1] == 0).

When an STE is in the Secure stream table and Config[1] == 1, it is ILLEGAL to set S2AA64 == 0.

Note: The stage 2 translation table permissions are interpreted slightly differently between AArch64 and AArch32 (LPAE) format tables, for example, an AArch64 stage 2 table can encode an execute-only page permission whereas an AArch32 stage 2 table cannot, see [2] for more information.

#### [180] S2ENDI

Stage 2 translation table endianness

- 0b0: Little Endian
- 0b1: Big Endian

If Stage 2 translation is enabled (Config[1] == 1), it is ILLEGAL for this field to select an unimplemented endianness (as indicated by SMMU\_IDR0.TTENDIAN).

This field is RESO when stage 2 is not implemented, that is when  $SMMU\_IDR0.S2P == 0$ .

#### [181] S2AFFD

Stage 2 Access Flag Fault Disable

When HTTU is not in use at stage 2 because S2HA == 0 or HTTU is not supported, this flag determines the behavior on access of a stage 2 page whose descriptor has AF == 0:

- 0b0: An Access flag fault occurs (behavior controlled by S2R and S2S bits)
- 0b1: An Access flag fault never occurs; the TTD.AF bit is considered to be always 1.

When S2HA == 1, this flag is IGNORED.

This field is RESO when stage 2 is not implemented, that is when  $SMMU\_IDR0.S2P == 0$ .

#### [182] S2PTW

Protected Table Walk

For an STE configured for translation at both stages, a stage 1 translation table walk access or CD fetch access made to a stage 2 page with any Device type is terminated and recorded as a stage 2 Permission fault if this bit is set

Note: This might provide early indication of a programming error.

• 0b0: If SMMU\_IDR3.PTWNNC == 0: CD fetch and stage 1 translation table walks allowed to any valid stage 2 address.

If SMMU\_IDR3.PTWNNC == 1: A translation table access or CD fetch mapped as any Device type occurs as if it is to Normal Non-cacheable memory.

• 0b1: CD fetch or Stage 1 translation table walks to stage 2 addresses mapped as any Device are terminated. A stage 2 Permission fault is recorded.

If Config[1:0] != 0b11, this field is IGNORED.

This field is RESO when stage 2 is not implemented, that is when SMMU\_IDR0.S2P == 0.

# [183] S2HD

Hardware Translation Table Update of stage 2 Dirty flags

See definition of S2HA.

# [184] S2HA

Hardware Translation Table Update of stage 2 Access flags

When combined with S2HD as {S2HA, S2HD}:

- 0b00: HTTU disabled
- 0b10: Update of Access flag enabled
- 0b01: Reserved. If S2HD == 1 is not ILLEGAL, behaves as S2HA == 0 && S2HD == 0.
- 0b11: Update of Access flag and dirty state of the page enabled

If stage 2 translation is enabled (Config[1] == 1),

- It is ILLEGAL to set S2HA or S2HD if S2AA64 == 0.
- It is ILLEGAL to set S2HA if SMMU\_IDR0.HTTU == 0b00.
- It is ILLEGAL to set S2HD if SMMU\_IDR0.HTTU == 0b00 or 0b01.

These fields are RESO when stage 2 is not implemented. In an EI, S2HA is permitted to be RAZ/WI if stage 2 is not implemented or SMMU\_IDRO.HTTU == 0b00. In an EI, S2HD is permitted to be RAZ/WI when stage 2 is not implemented or SMMU\_IDRO.HTTU == 0b0x.

Note: If HTTU is enabled when S2OR0 or S2IR0 indicate Non-cacheable memory, behavior is IMPLEMENTATION DEFINED, see 3.15 *Coherency considerations and memory access types* above. A system might only be able to perform atomic updates using cacheable normal memory, or might implement other means for doing so.

#### [185] S2S

Stage 2 fault behavior - Stall

See section 5.5 Fault configuration (A, R, S bits) below for a description of fault configuration.

When Config[1] == 0 (Stage 2 disabled), {S2R, S2S} are IGNORED.

This field is RESO when stage 2 is not implemented, that is when SMMU\_IDR0.S2P == 0.

#### [186] S2R

Stage 2 fault behavior - Record

See section 5.5 Fault configuration (A, R, S bits) below for a description of fault configuration.

When Config[1] == 0 (Stage 2 disabled), {S2R, S2S} are IGNORED.

This field is RESO when stage 2 is not implemented, that is when SMMU\_IDR0.S2P == 0.

#### [192] S2NSW

S2NSW

This field gives the NS bit used for all stage 2 translation table walks for the Secure stream Non-secure IPA space, that is, made through S2TTB.

This field is RESO when the STE is not in the Secure Stream table.

This field is RESO when  $SMMU_S_IDR1.SEL2 == 0$ .

When  $SMMU_S_IDR1.SEL2 == 1$ , this field is IGNORED in a Secure STE that has Config[1] == 0.

#### [193] S2NSA

S2NSA

This field gives the NS bit that is output for all stage 2 Secure stream Non-secure IPA translations.

This field is RESO when the STE is not in the Secure Stream table.

This field is RESO when  $SMMU_S_IDR1.SEL2 == 0$ .

When  $SMMU_S_IDR1.SEL2 == 1$ , this field is IGNORED in a Secure STE that has Config[1] == 0.

Otherwise, when S2NSW == 1 or the effective S2SA value is 1, this field is IGNORED and the stage 2 Secure stream Non-secure IPA translation results in the target Non-secure PA space.

Note: The effective value of the S2SA field is treated as being 1 when the S2SW field is 1.

#### [243:196] S2TTB

Address of Translation Table base, bits [51:4].

Address bits above and below the field range are treated as zero.

Bits [(x-1):0] are treated as if all the bits are zero, where x is defined by the required alignment of the translation table as given by Armv8-A [2].

Note: The SMMU effectively aligns the value in this field before use.

In addition, a 64-byte minimum alignment on starting-level translation table addresses is imposed when S2TG selects 64KB granules and the effective S2PS value indicates 52-bit output. In this case bits [5:0] are treated as zero.

If Stage 2 translation is enabled (Config[1]=1), it is ILLEGAL for the address in S2TTB to be outside the range described by the effective S2PS value. It is ILLEGAL for the address in S2TTB to be outside of a 48-bit range when S2TG selects a granule smaller than 64KB.

Note: Where the effective S2PS < 52, an address greater than the effective S2PS that is still within the defined range of this field (up to bit [51]) causes an ILLEGAL STE. Additionally, a 52-bit address can only be used in S2TTB when a 64KB granule is configured for stage 2.

This field is RESO when stage 2 is not implemented, that is when  $SMMU\_IDR0.S2P == 0$ .

In an EI, the high-order bits of TTB outside of the PA size (SMMU\_IDR5.OAS) are permitted to be RAZ/WI. If these bits are not implemented as RAZ/WI, they must store the full address field and correctly support the ILLEGAL address range-check described above.

In SMMUv3.0, STE[243:240] are RES0.

#### [271:256] IMPL DEF

IMPLEMENTATION DEFINED

## [287:272] PARTID

MPAM partition ID assigned to accesses related to this StreamID

This field is RESO when MPAM is not supported in the corresponding Security state.

This field is interpreted as having an UNKNOWN value if it is configured with a value greater than the corresponding SMMU\_(S\_)MPAMIDR.PARTID\_MAX.

The corresponding SMMU\_(S\_)MPAMIDR.PARTID\_MAX is chosen as follows:

- For a Non-secure Stream, then SMMU\_MPAMIDR.PARTID\_MAX.
- For a Secure Stream, if SMMU\_S\_MPAMIDR.HAS\_MPAM\_NS == 0 or STE.MPAM\_NS == 0, then SMMU\_S\_MPAMIDR.PARTID\_MAX.
- For a Secure Stream, if <a href="SMMU\_S\_MPAMIDR.HAS\_MPAM\_NS">SMMU\_MPAMIDR.PARTID\_MAX</a>. then <a href="SMMU\_MPAMIDR.PARTID\_MAX">SMMU\_MPAMIDR.PARTID\_MAX</a>.

This field is RESO prior to SMMUv3.2.

See Chapter 17 Memory System Resource Partitioning and Monitoring for more information on use of this field.

#### [293:288] S S2T0SZ

Size of Secure IPA input region covered by S\_S2TTB.

This field is encoded the same as, and has the same validity requirements as S2T0SZ.

Note: This field is not used with a stage 2 translation table for which AA64 == 0, as this configuration is not permitted.

This field is RESO when SMMU\_S\_IDR1.SEL2 == 0. When SMMU\_S\_IDR1.SEL2 == 1, this field is IGNORED in a Secure STE that has Config[1] == 0. This field is RESO when the STE is not in the Secure Stream table.

#### [295:294] S\_S2SL0

Secure stage 2 translation starting level for S S2TTB.

This field is encoded the same as, and has the same validity requirements as S2SL0.

This field is RESO when SMMU\_S\_IDR1.SEL2 == 0. When SMMU\_S\_IDR1.SEL2 == 1, this field is IGNORED in a Secure STE that has Config[1] == 0. This field is RESO when the STE is not in the Secure Stream table.

#### [303:302] S S2TG

Secure stage 2 translation granule for S\_S2TTB.

This field is encoded the same as, and has the same validity requirements, as S2TG.

This field is RESO when SMMU\_S\_IDR1.SEL2 == 0. When SMMU\_S\_IDR1.SEL2 == 1, this field is IGNORED in a Secure STE that has Config[1] == 0. This field is RESO when the STE is not in the Secure Stream table.

#### [327:320] PMG

MPAM PMG assigned to accesses related to this StreamID

This field is RESO when MPAM is not supported in the corresponding Security state.

For a Non-secure StreamID, this field is interpreted as having an UNKNOWN value if it is configured with a value greater than SMMU\_MPAMIDR.PMG\_MAX.

For a Secure StreamID when SMMU\_S\_MPAMIDR.HAS\_MPAM\_NS == 0 or STE.MPAM\_NS == 0, this field is interpreted as having an UNKNOWN value if it is configured with a value greater than SMMU\_S\_MPAMIDR.PMG\_MAX.

For a Secure StreamID when SMMU\_S\_MPAMIDR.HAS\_MPAM\_NS == 1 and STE.MPAM\_NS == 1, this field is interpreted as having an UNKNOWN value if it is configured with a value greater than SMMU\_MPAMIDR.PMG\_MAX.

This field is RESO prior to SMMUv3.2.

See Chapter 17 Memory System Resource Partitioning and Monitoring for more information on use of this field.

# [328] MPAM\_NS

PARTID space value for accesses related to this StreamID

- 0b0: Accesses for structures reached from this STE use Secure PARTID space.
- 0b1: Accesses for structures reached from this STE use Non-secure PARTID space.

This bit is RESO if  $SMMU_S_MPAMIDR.HAS_MPAM_NS == 0$ .

This bit is RESO in an STE fetched for a Non-secure stream.

If this bit is 1, then accesses using MPAM information derived from information in this STE use Non-secure PARTID space. This MPAM\_NS field affects the PARTID space used for:

- · CD fetches
- Stage 1 translation table walks
- Stage 2 translation table walks
- · Client transactions

Note: This bit does not affect the PARTID space used for VMS fetches. See 17.7 *Determination of PARTID space values*.

#### [371:332] VMSPtr

VMS pointer, bits [51:12]

Physical address pointer to the VMS structure associated with the stream. For an STE in the Non-secure Stream Table, this address belongs to Non-secure PA space. For an STE in the Secure Stream Table, this address belongs to Secure PA space.

This field is RES0 prior to SMMUv3.2 and when the VMS is not supported. See section 5.6 *Virtual Machine Structure (VMS)* for information on the VMS and when it is supported.

When the VMS is supported in the corresponding Security state:

- The VMSPtr is enabled if the following is true:
  - STE.Config[2:0] == 0b111 && STE.S1MPAM == 1

• If the VMSPtr is enabled, then an address greater than the OAS leads to a C\_BAD\_STE error.

Note: This refers to the OAS from SMMU IDR5.OAS, not STE.S2PS.

• If the VMSPtr is not enabled, then VMSPtr is IGNORED.

Note: These rules may change if other facilities are added to the VMS.

Address bits [11:0] and [63:52] are taken as zero.

# [384] S2SW

S2SW

This field gives the NS bit used for all stage 2 translation table walks for Secure IPA space, that is, made through S\_S2TTB.

This field is RESO when the STE is not in the Secure Stream table.

This field is RESO in a Secure STE when SMMU S IDR1.SEL2 == 0.

When  $SMMU_S_IDR1.SEL2 == 1$ , this field is IGNORED in a Secure STE that has Config[1] == 0.

#### [385] S2SA

S2SA

This field gives the NS bit that is output for all stage 2 Secure IPA translations.

This field is RESO when the STE is not in the Secure Stream table. This field is RESO in a Secure STE when SMMU S IDR1.SEL2 == 0.

When  $SMMU_S_IDR1.SEL2 == 1$ , this field is IGNORED in a Secure STE that has Config[1] == 0.

Otherwise, when S2SW == 1, this field is IGNORED and the effective S2SA value is treated as being 1.

Note: When S2SA is 1, both the stage 2 Non-secure IPA and the stage 2 Secure IPA translations target Non-secure PA space. See S2NSA.

## [435:388] S\_S2TTB

Address of Translation Table Base for Secure stage 2 translations of Secure IPA, bits [51:4].

This field is encoded the same, and has the same validity requirements, as S2TTB.

The S\_S2TTB translation table is configured using the same STE.S2\* fields as S2TTB, with the exception of the following fields which are specific to S\_S2TTB:

- S S2SL0.
- S\_S2TG0.
- S S2T0SZ.
- S2SW.
- S2SA.

This field is RESO when SMMU\_S\_IDR1.SEL2 == 0. When SMMU\_S\_IDR1.SEL2 == 1, this field is IGNORED in a Secure STE that has Config[1] == 0. This field is RESO when the STE is not in the Secure Stream table.

# 5.2.1 General properties of the STE

If V == 1 and Config == 0b100 (Stream Bypass), the S1\* and S2\* fields are IGNORED. The following fields are used to apply attributes to the Bypass transactions:

- MTCFG/MemAttr, ALLOCCFG, SHCFG.
- NSCFG (Ignored unless STE is selected from Secure Stream table).
- · PRIVCFG, INSTCFG.
  - Note: it is system-dependent as to whether INST/DATA attributes have any effect on the path to the memory system.

If V == 1 and Config == 0b000 (disabled), the CONT field is permitted to be obeyed. The remaining fields contain no relevant configuration and are IGNORED. Transactions selecting such an STE will be silently terminated with an abort.

For more details on the memory attribute and permissions overrides (MTCFG, ALLOCCFG, SHCFG, NSCFG, PRIVCFG, INSTCFG), see Chapter 13 Attribute Transformation.

An STE or L1STD that is successfully fetched might be cached by the SMMU in any state, therefore any modification, commissioning or decommissioning of an STE must be followed by a CMD\_CFGI\_STE command. A failed fetch (F\_STE\_FETCH) does not cause an STE or L1STD to be cached.

When cached, an STE is uniquely identified by SEC\_SID and StreamID.

Note: An STE from one Stream table index X is unrelated to the STE at index X of the Stream table of the other Security state.

If an implementation supports bypass transactions (because STE.Config == 0b100) by creating 'identity-mapped' TLB entries, the presence of these entries is not visible to software. Changing STE.Config does not require explicit TLB invalidation.

Note: STE configuration invalidation is required for any alteration to an STE.

Note: StreamWorld (as determined from the STRW field, SMMU\_CR2.E2H, SMMU\_S\_CR2.E2H, Config[1:0] and the Security state of the Stream table that fetches the STE) controls the tagging of TLB entries, so a change of the StreamWorld of a stream makes lookups performed for the stream fail to match TLB entries of a prior StreamWorld or translation regime. Software must consider the possibility of such TLB entries still being present if a prior StreamWorld configuration is returned to, unless explicit invalidation has occurred. Arm recommends that TLB entries that are made unreachable by a change in StreamWorld are invalidated after the change to avoid their unanticipated use by a future configuration that happens to match the old StreamWorld, ASID and VMID (if appropriate).

Note: The following STE properties affect the interpretation of a CD located through the STE:

- StreamWorld.
- S1STALLD.
- AArch32 stage 2 translation (STE.Config[1] == 1 and STE.S2AA64 == 0)

When stage 2 translation is enabled (Config[1] == 1), the correct setting of the stage 2 table walk starting level, S2SL0, is dependent on the granule size, S2TG, and the required IPA address size (S2T0SZ). All three fields must be set in a manner consistent with the equivalent Armv8-A fields. A mismatch causes the STE to be considered ILLEGAL. When Secure stage 2 is supported and enabled, the same requirement also applies to S\_S2SL0, S\_S2TG0 and S\_S2TOSZ.

Note: In Army8-A, an inconsistency between SL0, TG and T0SZ is reported as a Translation fault.

In addition, a S2TTB base address outside the range indicated by the effective STE.S2PS value makes the STE ILLEGAL. When Secure stage 2 is enabled, this rule also applies to S\_S2TTB.

Note: In Armv8-A, an inconsistency between TTBR and PS is reported as an Address Size fault.

The following STE fields are permitted to be cached as part of a translation or TLB entry and, when altered, software must perform explicit invalidation of any TLB entry that might have cached these fields, after performing STE structure cache invalidation:

- S2TTB.
- S2PTW.
- S2VMID.
- S2T0SZ.
- S2IR0.
- S2OR0.
- S2SH0.
- S2SL0.
- S2TG.
- S2PS.
- S2AFFD.
- S2HA.
- S2HD.
- S2ENDI.
- S2AA64.
- S S2TTB.
- S2NSW.
- S2NSA.
- S2SW.
- S2SA.
- S S2SL0.
- S S2TG0.
- S\_S2T0SZ.
- S2FWB.

All other STE fields are not permitted to be cached as part of a translation or TLB entry, which means that alterations to all other STE fields do not require invalidation of TLB entries. IMPLEMENTATION DEFINED STE fields might have IMPLEMENTATION DEFINED invalidation requirements.

Note: Invalidation of an STE also implicitly invalidates cached CDs fetched through the STE.

For a given Security state, stage 2 configuration from STEs with the same S2VMID is considered interchangeable by the SMMU.

Note: Software must ensure that all STEs containing the same S2VMID value are identical for non-IGNORED fields permitted to be cacheable as part of a TLB entry, in the list in this section. Fields that are IGNORED because of a stage 2 bypass (Config[1] == 0) are not covered by this rule.

Note: As the properties of TLB or translation cache entries inserted from an STE depend on the fields listed here, a difference would cause TLB entries to be cached with different properties. It would be UNPREDICTABLE as to whether a TLB entry was cached using a particular STE sharing an S2VMID value, therefore the properties returned by a general TLB lookup under the given VMID become UNPREDICTABLE.

#### 5.2.2 Validity of STE

The following expression indicates whether an STE is considered valid or ILLEGAL, for the purposes of determining a configuration error (C\_BAD\_STE). Further checks are required (for example, on the extent of an incoming SubstreamID with respect to STE.S1CDMax) after an STE is discovered to be valid.

```
PA_RANGE = (STE.S2AA64 == 0) ? 40 : MIN(S2PS, SMMU_IDR5.OAS);

// PA range is 40 bits for AA32 tables, else effective PS size

EFF_S2TG = (STE.S2AA64 == 0) ? 4KB : STE.S2TG;

// Note: In these cases, the STRW field is ignored or Reserved so the

value itself cannot contribute to the STE being ILLEGAL. However,
```

```
//
         writing a non-zero value to a RESO field might still make the STE
         ILLEGAL. The logic to check RESO/undefined fields is not depicted here.
STRW_UNUSED = (SMMU_IDR0.S1P == 0) || (!STE_SECURE && SMMU_IDR0.Hyp == 0) ||
              (STE.Config[1] == 1) \mid \mid (STE.Config[1:0] == 0b00);
// S2VMID[15:0] is IGNORED and no VMID tagging occurs when any of the following
// are true:
S2VMID_IGNORED = (// Translation is disabled
                  (STE.Config[2] == 0) | |
                  // Stage 2 is not implemented in the Security state
                  // corresponding to the STE
                  (!STE_SECURE && SMMU_IDRO.S2P == 0) ||
                  (STE_SECURE && SMMU_S_IDR1.SEL2 == 0) ||
                  // Stream enabled but no translation occurs
                  (STE.Config[1:0] == 0b00) | |
                  // A Non-secure STE StreamWorld is not NS-EL1
                  (!STE_SECURE && !STRW_UNUSED && STE.STRW != 0b00) ||
                  // A Secure STE StreamWorld is not Secure
                  (STE_SECURE && !STRW_UNUSED && STE.STRW != 0b00) ||
                  // A Secure STE has only stage 1 enabled
                  (STE_SECURE && Config[1:0] == 0b01));
// Assuming SMMU_S_IDR1.SECURE_IMPL == 1, NSSTALLD may affect
// the Non-secure STALL_MODEL: See section 3.12.
EFFECTIVE_SMMU_IDRO_STALL_MODEL = SMMU_S_IDRO.STALL_MODEL == 0b00 ?
                                         (SMMU_S_CR0.NSSTALLD == 0 ? 0b00 : 0b01)
                                         : SMMU_S_IDRO.STALL_MODEL;
// See the definition of the STE.EATS field in section 5.2
boolean CONSTR_UNPRED_EATS_S2S = (SMMUVersion() == 3.0) ?
    CONSTRAINED_UNPREDICTABLE_BOOL() :
    FALSE;
// See the definition of the STE.S2TOSZ field in section 5.2
boolean CONSTR_UNPRED_S2TOSZ_OOR_ILLEGAL = (SMMUVersion() == 3.0) ?
    CONSTRAINED_UNPREDICTABLE_BOOL() :
    TRUE;
                !STE.V || ((STE.Config[2] == 1) && (
STE_ILLEGAL =
                (SMMU_IDR0.S1P == 0 && STE.Config[0] == 1) ||
                (SMMU_IDR0.S2P == 0 && STE.Config[1] == 1) ||
                // Can't have Secure stage 2 if not supported:
                (SMMU_IDRO.S2P == 1 && STE.Config[1] == 1 && STE_SECURE &&
                    SMMU_S_IDR1.SEL2 == 0) | |
                // Cannot use Secure stage 2 in AArch32:
                (STE.S2AA64 == 0 && STE.Config[1] == 1 && STE_SECURE) ||
                // Cannot use FWB in AArch32:
                (STE.S2AA64 == 0 \&\& STE.Config[1] == 1 \&\&
                    SMMU_IDR3.FWB == 1 \&\& STE.S2FWB == 1) ||
                (SMMU_IDR1.SSIDSIZE != 0 && STE.S1CDMax != 0 &&
                    STE.Config[0] == 1 && SMMU_IDR0.CD2L == 0 &&
                    (STE.S1Fmt == 0b01 || STE.S1Fmt == 0b10)) ||
                (!STE_SECURE && SMMU_IDRO.ATS == 1 && Config[1:0] != 0b00 && (
                    (STE.EATS == 0b10 &&
                        (STE.Config[2:0] != 0b111 || STE.S2S == 1 ||
                            SMMU_IDRO.NS1ATS == 1)) ||
                (STE.EATS == 0b01 && STE.S2S == 1 &&
                    (STE.Config[1] == 1 || CONSTR_UNPRED_EATS_S2S)))) ||
                (!STE_SECURE && !STRW_UNUSED && STE.STRW[0] == 1) ||
                ( STE_SECURE && !STRW_UNUSED && STE.STRW == 0b11) ||
```

```
( STE_SECURE && !STRW_UNUSED && STE.STRW == 0b10 &&
                    SMMU_IDR1.SEL2 == 0) ||
                 (STE.Config[0] == 1 \&\& (
                     (STE.S1STALLD == 1 && !STE_SECURE &&
                        EFFECTIVE_SMMU_IDRO_STALL_MODEL != 0b00) ||
                     (STE.S1STALLD == 1 && STE_SECURE &&
                        SMMU_S_IDRO.STALL_MODEL != 0b00) ||
                     (SMMU_IDR1.SSIDSIZE != 0 &&
                        STE.S1CDMax > SMMU_IDR1.SSIDSIZE) ||
                     /* See section 3.4.3: */
                    CONSTR_UNPRED_CHECK_PTR_SIZE_FAIL(STE.S1ContextPtr))) ||
                 (STE.Config[1] == 1 && (
                     (EFFECTIVE_SMMU_IDRO_STALL_MODEL == 0b01 && STE.S2S == 1) ||
                     (EFFECTIVE_SMMU_IDRO_STALL_MODEL == 0b10 && STE.S2S == 0) ||
                     (STE.S2AA64 == 1 &&
                         !GRANULE_SUPPORTED(STE.S2TG, SMMU_IDR5)) ||
                     (STE.S2AA64 == 0 && SMMU_IDR0.TTF[0] == 0) ||
                     (STE.S2AA64 == 1 && SMMU_IDR0.TTF[1] == 0) ||
                     ((STE.S2HA || STE.S2HD) && (STE.S2AA64 == 0)) ||
                     ((STE.S2HA || STE.S2HD) && (SMMU_IDRO.HTTU == 0b00)) ||
                     (STE.S2HD && SMMU_IDRO.HTTU == 0b01) ||
                    ADDR_OUTSIDE_RANGE(STE.S2TTB, PA_RANGE) ||
                     (STE.S2AA64 == 1 && AA64_S2TOSZ_INVALID(STE.S2TOSZ, STE.S2TG)
                        CONSTR_UNPRED_S2T0SZ_OOR_ILLEGAL) ||
                     !WALK_CONFIG_CONSISTENT(STE.S2SLO, STE.S2TOSZ, STE.S2TG,
                        STE.S2AA64, SMMU_IDR5.OAS) ||
                     (STE_SECURE &&
                         (!GRANULE_SUPPORTED(STE.S_S2TG, SMMU_IDR5) ||
                        ADDR_OUTSIDE_RANGE(STE.S_S2TTB, PA_RANGE) ||
                        AA64_S2T0SZ_INVALID(STE.S_S2T0SZ, STE.S_S2TG) ||
                         !WALK_CONFIG_CONSISTENT(STE.S_S2SLO, STE.S_S2TOSZ,
                             STE.S_S2TG, STE.S2AA64 /* Always AA64 */,
                             SMMU_IDR5.OAS) )) ||
                     (SMMU_IDRO.TTENDIAN == 0b10 && STE.S2ENDI == 1) ||
                     (SMMU_IDRO.TTENDIAN == 0b11 && STE.S2ENDI == 0))) ||
                 (!S2VMID_IGNORED && STE.Config[2] == 1 &&
                    SMMU_IDR0.VMID16 == 0 &&
                    STE.S2VMID[15:8] != 0x00) ||
                 (SMMU_IDR3.MPAM == 1 && effective_MPAM_PARTID_MAX(STE_SECURE) != 0
                    \hookrightarrow \& \&
                    STE.Config == 0b111 && STE.S1MPAM == 1 &&
                    ADDR_OUTSIDE_RANGE(STE.VMSPtr, SMMU_IDR5.OAS))
));
effective_MPAM_PARTID_MAX(IS_SECURE)
    = IS_SECURE ? SMMU_S_MPAMIDR.PARTID_MAX : SMMU_MPAMIDR.PARTID_MAX;
// This function checks whether a (S_)S2T0SZ value is outside the range that is
// valid when stage 2 is AArch64:
boolean AA64_S2T0SZ_INVALID(S2T0SZ, S2TG)
    if (SMMU_IDR3.STT == 1) {
        txsz_max = S2TG IN {4KB, 16KB} ? 48 : 47;
    } else {
        txsz_max = 39;
    if (SMMU\_AIDR == 0x00) \{ // SMMUv3.0 \}
        txsz_min = 64-IAS;
```

# Chapter 5. Data structure formats 5.2. Stream Table Entry

# 5.3 Level 1 Context Descriptor



When stage 1 is enabled and substreams are enabled and two-level Context Descriptor tables are in use (STE.S1Fmt != 0b00), the stage 1 context pointer indicates an array of Level 1 Context Descriptors which contain pointers to Level 2 CD tables.

#### [0] V

#### Valid

- 0b0: L2Ptr invalid
- 0b1: L2Ptr valid CDs are indexed through to the next level table

### [51:12] L2Ptr

Pointer to next-level table.

Address bits above and below the field range are treated as zero.

The programmed value must be in the range of the IAS if stage 2 is enabled for the stream causing a CD fetch through this descriptor, or in the range of the OAS if stage 2 is not enabled for the stream. See section 3.4.3 *Address sizes of SMMU-originated accesses* for behavior of addresses beyond IPA or PA address range.

In SMMUv3.0, bits [51:48] are RES0.

#### 5.3.1 General properties of the L1CD

If a CD fetch for a transaction with SubstreamID encounters an L1CD with V == 0, L2Ptr is IGNORED, the transaction is terminated with abort and a C\_BAD\_SUBSTREAMID event is recorded.

See the invalidation examples for L1STD in section 5.1 *Level 1 Stream Table Descriptor*. When an L1CD is changed, the non-leaf form of CMD\_CFGI\_CD is the minimum scope of invalidation command required to invalidate SMMU caches of the L1CD entry. Depending on the change, other CD invalidations might be required, for example:

- Changing an inactive L1CD with V == 0 to an active V == 1 form (introducing a new section of level-2 CD table) requires an invalidation of the L1CD only. Because no CDs were reachable for SubstreamIDs within the span, none require invalidation. A CMD\_CFGI\_CD can be used with Leaf == 0 and any SubstreamID that matches the L1CD entry.
- Changing an active L1CD with V == 1 to an inactive L1CD (decommissioning a span of SubstreamIDs) requires an invalidation of the L1CD as well as invalidation of cached CDs from the affected span. Either multiple non-leaf CMD\_CFGI\_CD commands, or a wider scope such as CMD\_CFGI\_CD\_ALL, CMD\_CFGI\_STE or CMD\_CFGI\_ALL is required.


See also the CD notes in Section 5.4.1 *CD notes*. An L1CD can be cached multiple times for the same reason as a single CD can be cached multiple times if accessed through multiple StreamIDs. This situation requires an invalidation procedure covering multiple StreamIDs.

# **5.4 Context Descriptor**

The CD structure contains stage 1 translation table pointers and associated fields (such as ASID and table walk attributes). Translation tables might be interpreted as AArch32 (Long/LPAE) or AArch64 formats (as controlled by the AA64 field).

Invalid or contradictory CD configurations are marked ILLEGAL. A transaction that attempts to translate through a CD containing ILLEGAL configuration is terminated with an abort and a C\_BAD\_CD event is recorded in the Event queue appropriate to the Security state of the transaction, as determined by SEC\_SID.

Note: In accordance with Armv8-A [2], the interpretation of the translation table descriptor permissions is a function of the translation table format (from CD.AA64) and the Exception level to which the tables correspond (as determined by the STE StreamWorld). For example, stage 1 AArch32-format tables maintained for an EL1 StreamWorld cannot encode execute-only, whereas stage 1 AArch64-format tables maintained for an EL1 can. See [2] for more information.

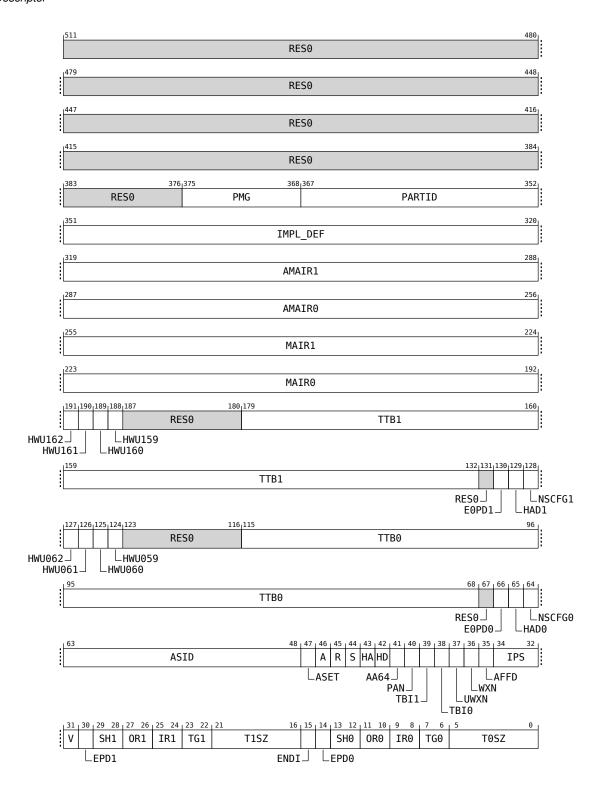

# [5:0] T0SZ

VA region size covered by TT0.

When AA64 == 0:

- This field is 3 bits ([2:0]) and bits [5:3] are IGNORED. The input region size is calculated the same as in Army8 AArch32 TTBCR.
- The valid range of values is 0 to 7 inclusive.
  - Note: All 3-bit values are valid, therefore it is not possible to use an out of range value when AA64 == 0.

#### When AA64 == 1:

- This field is 6 bits and the region size is calculated the same as in Army8-A AArch64 TCR ELx [2].
- When SMMU\_IDR3.STT == 0, the maximum valid value is 39.
- When SMMU IDR3.STT == 1, the maximum valid value is:
  - 48, when the corresponding CD.TGx selects a 4KB or 16KB granule.
  - 47, when the corresponding CD.TGx selects a 64KB granule.
- The minimum valid value is 16 unless all of the following also hold, in which case the minimum permitted value is 12:
  - SMMUv3.1 or later is supported.
  - SMMU\_IDR5.VAX indicates support for 52-bit Vas.
  - The corresponding CD.TGx selects a 64KB granule.

In implementations of SMMUv3.1 and later, a CD is treated as ILLEGAL if it contains a TxSZ value outside the range of these maximum and minimum values.

In SMMUv3.0 implementations, a fetch of a CD containing an out of range value is CONSTRAINED UNPREDICTABLE and has one of the following behaviors:

- The CD becomes ILLEGAL.
- The CD is not ILLEGAL and the Effective value used by the translation is 39 if the programmed value is greater than 39, or 16 if the programmed value is less than 16.

IGNORED if the Effective value of EPD0 == 1.

#### [7:6] TG0

TT0 Translation Granule size, when AA64 == 1

- 0b00: 4KB
- 0b01: 64KB
- 0b10: 16KB
- 0b11: Reserved

This field must only select a granule supported by the SMMU, as indicated by SMMU\_IDR5. Use of an unsupported size or Reserved value is ILLEGAL, except this field is IGNORED if the effective value of EPD0 == 1.

Note: The different encoding of TG1 to TG0 is consistent with the Armv8 Translation System [2].

When AA64 == 0 (AArch32), TG0 and TG1 are IGNORED.

#### [9:8] IR0

Inner region Cacheability for TT0 access

- 0b00: Non-cacheable
- 0b01: Write-back Cacheable, Read-Allocate, Write-Allocate
- 0b10: Write-through Cacheable, Read-Allocate
- 0b11: Write-back Cacheable, Read-Allocate, no Write-Allocate

The only time that translation table entries are written by the SMMU is when HTTU is in use, and because the read effect of the atomic update might cause read allocation of the affected translation table entry into a data cache, it is IMPLEMENTATION DEFINED as to whether <code>0b01</code> and <code>0b11</code> differ.

Many memory systems might require use of Normal Write-back Cacheable memory for the atomic updates of translation table entries to occur correctly.

If HTTU is enabled and this field is configured to 0b00 or 0b10, then it is IMPLEMENTATION DEFINED which of the following behaviors occurs for hardware updates of Access flag and dirty state:

- The hardware update occurs correctly as an atomic read-modify-write operation.
- The hardware update occurs, but the read-modify-write operation is not guaranteed to be atomic.
- The hardware update is attempted but fails and generates an F\_WALK\_EABT event.

Arm recommends that software uses 0b01 or 0b11 when HTTU is enabled for this translation table unless the behavior of an implementation is otherwise known.

IGNORED if the effective value of EPD0 == 1.

## [11:10] OR0

Outer region Cacheability for TT0 access

- 0b00: Non-cacheable
- 0b01: Write-back Cacheable, Read-Allocate, Write-Allocate
- 0b10: Write-through Cacheable, Read-Allocate
- 0b11: Write-back Cacheable, Read-Allocate, no Write-Allocate

The behavior of OR0 is otherwise the same as for field IR0.

#### [13:12] SH0

Shareability for TT0 access

- 0b00: Non-shareable
- 0b01: Reserved (behaves as 0b00)
- 0b10: Outer Shareable
- 0b11: Inner Shareable

Note: If both IR0 and OR0 == 0b00, selecting normal Non-cacheable access, the Shareability of TT0 access is taken to be OSH regardless of the value of this field.

IGNORED if the effective value of EPD0 == 1.

# [14] EPD0

TT0 translation table walk disable

- 0b0: Perform translation table walks using TT0
- 0b1: A TLB miss on an address that is translated using TT0 causes a Translation fault. No translation table walk is performed. T0SZ/TG0/IR0/OR0/SH0/TTB0 are IGNORED.

Consistent with Armv8-A translation, the EPD0 and EPD1 fields are IGNORED (and their effective value is 0) if this CD is located from an STE with StreamWorld of any-EL2 or EL3. It is only possible for an EL1 (Secure or Non-secure) or any-EL2-E2H stream to disable translation table walk using EPD0 or EPD1.

# [15] ENDI

Translation table endianness:

- 0b0: Little Endian
- 0b1: Big Endian

If the effective values of both EPD0 and EPD1 are 1, this field is IGNORED. Otherwise:

```
If SMMU_IDR0.TTENDIAN == 0b10, it is ILLEGAL to set ENDI == 1.
```

If SMMU\_IDR0.TTENDIAN == 0b11, it is ILLEGAL to set ENDI == 0.

#### [21:16] T1SZ

VA region size covered by TT1

Same encoding as TOSZ.

IGNORED if the effective value of EPD1 == 1. This field is RES0 if StreamWorld == any-EL2 or EL3.

#### [23:22] TG1

TT1 Translation Granule size

- 0b10: 4KB
- 0b11: 64KB
- 0b01: 16KB
- 0b00: Reserved

This field must only select a granule supported by the SMMU, as indicated by SMMU\_IDR5. Use of an unsupported size or Reserved value is ILLEGAL, except this field is IGNORED if the effective value of EPD1 == 1.

Note: The different encoding of TG1 to TG0 is consistent with the Armv8 Translation System [2].

This field is RES0 if StreamWorld == any-EL2 or EL3, otherwise when AA64 == 0 (AArch32), TG0 and TG1 are IGNORED.

## [25:24] IR1

Inner region Cacheability for TT1 access

Same encoding as IR0.

IGNORED if the effective value of EPD1 == 1. This field is RES0 if StreamWorld == any-EL2 or EL3.

#### [27:26] OR1

Outer region Cacheability for TT1 access

Same encoding as OR0.

IGNORED if the effective value of EPD1 == 1. This field is RES0 if StreamWorld == any-EL2 or EL3.

## [29:28] SH1

Shareability for TT1 access

Same encoding as SH0.

IGNORED if the effective value of EPD1 == 1. This field is RES0 if StreamWorld == any-EL2 or EL3.

## [30] EPD1

TT1 translation table walk disable.

Same encoding as EPD0.

Affects T1SZ/TG1/IR1/OR1/SH1/TTB1.

#### [31] V

#### CD Valid

- 0b0: Invalid use of the CD by an incoming transaction is ILLEGAL
- 0b1: Valid

If V == 0, the entire rest of the structure is IGNORED. An incoming transaction causing a CD with V == 0 to be located from a valid STE is terminated with an abort and a C\_BAD\_CD event is recorded.

## [34:32] IPS

Intermediate Physical address Size

- 0b000: 32 bits
- 0b001: 36 bits
- 0b010: 40 bits
- 0b011: 42 bits
- 0b100: 44 bits
- 0b101: 48 bits
- 0b110: In SMMUv3.0 implementations, this value is Reserved and behaves as 0b101.

In implementations of SMMUv3.1 and later, this value selects 52 bits of IPA.

• 0b111: In SMMUv3.0 implementations, this value is Reserved and behaves as 0b101.

In implementations of SMMUv3.1 and later, this value is Reserved and behaves as 0b110.

Software must not rely on the behavior of Reserved values.

Addresses output from the stage 1 translation table walks through either TTBx table base are range-checked against the effective value of this field, causing a stage 1 Address Size fault if out of range. This means that if the output address of any stage 1 translation has bits [51:\_eff\_IPS] non-zero, where eff\_IPS is the effective number of IPA bits, an F ADDR SIZE is recorded. See section 3.4 Address sizes.

This check applies to stage 1 next-level table addresses in Table descriptors, as well as stage 1 output addresses in Block and Page descriptors.

When CD.AA64 == 0, IPS is IGNORED and effective stage 1 output address size of 40 bits is always used. This reflects the 40-bit IPA used in AArch32 translations. An Address Size fault occurs if the output address bits [47:40] of an AArch32 stage 1 translation table descriptor are programmed as non-zero.

When CD.AA64 == 1:

• The effective stage 1 output address size is given by:

```
Effective_IPS = MIN(CD.IPS, SMMU_IDR5.OAS);
```

The effective IPS size is capped to the OAS.

Setting this field to any value greater than the cap behaves as though this field equals the cap size. Software
must not rely on this behavior.

An address greater than 48 bits in size can only be output from a descriptor when, in SMMUv3.1 and later, the effective IPS is 52 and a 64KB granule is in use for that translation table. In SMMUv3.0 addresses are limited to 48 bits.

Note: In configurations where the effective IPS is 52, on an implementation that supports OAS of 52 bits, and a granule smaller than 64KB is used, it is not possible to generate an address greater than 48 bits, hence the address output bits [51:48] are treated as 0b0000 and no Address Size fault can occur. Similarly, an Address Size fault is only possible when a granule other than 64KB is in use if the effective IPS is smaller than 48 bits.

## [35] AFFD

Access Flag Fault Disable

When HTTU is not in use because HA == 0 or HTTU is not supported, this flag determines the behavior on access of a stage 1 page whose descriptor has AF == 0:

- 0b0: An Access flag fault occurs (behavior controlled by ARS bits)
- 0b1: An Access flag fault never occurs. The TTD.AF bit is considered to be always 1.

When HA == 1, this flag is IGNORED.

Note: Because AFFD == 1 causes a TTD.AF bit to be considered to be 1, a resulting TLB entry will contain AF == 1.

#### [36] WXN

Write Execute Never

This flag controls overall permission of an instruction read to any writable page located using TTB{0,1}:

- 0b0: Instruction read is allowed as normal
- 0b1: Instruction read to writable page raises a Permission fault

#### [37] **UWXN**

Unprivileged Write Execute Never

This flag controls overall permission of a privileged instruction read to a page marked writable for user privilege that is located through TTB{0,1}:

- 0b0: Instruction read is allowed as normal
- 0b1: Instruction read from user-writable page raises a stage 1 Permission Fault

In configurations for which all accesses are considered privileged, for example StreamWorld == any-EL2 or StreamWorld == EL3, this bit has no effect and is IGNORED.

In configurations using AArch64-format stage 1 translation tables (AA64 == 1), all EL0-writable regions are treated as being PXN at EL1, the actual value of this bit is IGNORED and UWXN/PXN are effectively both 1 for these regions.

# [38] TBI0

Top Byte Ignore for TTB0

TBIx affects generation of a Translation fault for addresses having VA[63:56] dissimilar to a sign-extension of VA[55] in the same way as TBI in an Armv8-A.

Note: Refer to section 3.9.1 ATS Interface for additional considerations for use of TBI with PCIe ATS.

## [39] TBI1

Top Byte Ignore for TTB1

This field is RESO if StreamWorld == any-EL2 or EL3.

#### [40] PAN

Privileged Access Never

When 1, this bit disables data read or data write access by privileged transactions to a virtual address where unprivileged access to the virtual address is permitted at stage 1.

Note: See [2] for information on PAN.

Note: When HADx is used, the APTable bits do not affect the permission of a translation.

Privileged transactions are those configured through an STE with STE.PRIVCFG == Privileged, or an STE with STE.PRIVCFG == "Use Incoming" and marked as Privileged by the client device.

This bit is IGNORED when StreamWorld == any-EL2 or StreamWorld == EL3 and PAN is effectively 0.

## [41] AA64

Translation table format

- 0b0: TTB{0,1} point to AArch32-format translation tables
- 0b1: TTB{0,1} point to AArch64-format translation tables

It is ILLEGAL to select AArch32 tables when either:

- AArch32 tables are not supported (SMMU\_IDR0.TTF[0] == 0)
- StreamWorld == any-EL2-E2H or EL3.

It is ILLEGAL to select AArch64 tables when either:

- AArch64 tables are not supported (SMMU\_IDR0.TTF[1] == 0)
- Stage 2 translates (STE.Config[1] == 1) and STE.S2AA64 == 0.
  - Note: Consistent with the Armv8-A VMSA, a 64-bit stage 1 is not supported on a 32-bit stage 2.

Note: When AArch64 is selected, the IPS field selects a variable output address size, the translation granule can be altered, HTTU can be enabled and page permissions are interpreted differently, see the other fields for details.

## [42] HD

Hardware Translation Table Update of Dirty flags for TTB0 and TTB1

See definition of HA.

### [43] HA

Hardware Translation Table Update of Access flags for TTB0 and TTB1

When combined with HD as {HD, HA}:

• 0b00: HTTU disabled.

- 0b01: Update of Access flag enabled.
- 0b10: Reserved. If HD == 1 is not ILLEGAL, behaves as HA == 0 && HD == 0.
- 0b11: Update of Access flag and dirty state of the page enabled.

These flags are IGNORED when AA64 == 0 (that is not AArch64).

#### Otherwise:

- It is ILLEGAL to set HA if SMMU\_IDR0.HTTU == 0b00.
- It is ILLEGAL to set HD if SMMU\_IDR0.HTTU == 0b00 or 0b01.

Note: If HTTU is enabled when ORx or IRx indicate Non-cacheable memory, behavior is IMPLEMENTATION DEFINED, see 3.15 *Coherency considerations and memory access types* above. Some systems might only be able to perform atomic updates using normal cacheable memory. Incompatible attributes might cause HTTU not to be performed but system integrity must be maintained as a CD might be under control of a malicious VM.

## [44] S

Stage 1 fault behavior.

See section 5.5 Fault configuration (A, R, S bits) below for a description of fault configuration.

## [45] R

Stage 1 fault behavior.

See section 5.5 Fault configuration (A, R, S bits) below for a description of fault configuration.

#### [46] A

Stage 1 fault behavior.

See section 5.5 Fault configuration (A, R, S bits) below for a description of fault configuration.

#### [47] **ASET**

ASID Set.

Selects type for ASID, between sets shared and non-shared with PE ASIDs. This flag affects broadcast TLB invalidation participation and the scope within which Global TLB entries are matched:

- 0b0: ASID in shared set: This ASID, and address space described by TTB0 and TTB1, are shared with that of a process on the PE. All matching broadcast invalidation messages will invalidate TLB entries created from this context (where supported and globally enabled), keeping SMMU and PE address spaces synchronized.
- 0b1: ASID in non-shared set: TLB entries created from this context are not expected to be invalidated by some broadcast invalidations as described in section 3.17 TLB tagging, VMIDs, ASIDs and participation in broadcast TLB maintenance.

For invalidation by ASID scope such entries require SMMU invalidation commands to be issued. This ASID represents an SMMU-local address space, not shared with PE processes, therefore broadcast invalidation from a coincidentally matching ASID is irrelevant to this address space. Use of ASET == 1 might avoid over-invalidation and improve performance.

Note: All other broadcast TLB invalidations, except for those listed here, are expected to affect matching TLB entries created when ASET == 1. For example, TLBI VMALLE1IS must invalidate all TLB entries matching a given VMID, regardless of ASET.

ASET must be included in any Global cached translations inserted using a CD reached through an STE with StreamWorld == NS-EL1 or Secure or any-EL2-E2H. In these StreamWorlds, ASET is also intended (but not required) to be included in non-Global translations to allow them to opt-out of broadcast invalidation.

Changes to a the ASET of a CD or the ASID, or both, are not automatically reflected in cached translations. Arm recommends that these are subjected to separate TLB maintenance.

ASET is permitted to be included in cached translations inserted using a CD reached through an STE with StreamWorld == any EL2 or EL3.

#### [63:48] ASID

Address Space Identifier

See ASET field. Tag for TLB entries inserted due to translations from this CD, differentiating them from translations with the same VA from different address spaces.

ASID must tag all cached translations inserted using this CD through an STE with StreamWorld == NS-EL1 or Secure or any-EL2-E2H.

This field is IGNORED if StreamWorld == any-EL2 or EL3. Otherwise, when an implementation supports only 8-bit ASIDs (SMMU\_IDR0.ASID16 == 0), it is ILLEGAL for ASID[15:8] to be non-zero.

If 16-bit ASIDs are supported by an implementation, the full ASID[15:0] value is used regardless of AA64. Arm expects that legacy/AArch32 software using 8-bit ASIDs will write zero-extended 8-bit values in the ASID field in this case.

#### [64] NSCFG0

Non-secure attribute for the memory associated with the starting-level translation table to which TTB0 points

- 0b0: Starting-level descriptor of TTB0 is fetched using NS == 0 access
- 0b1: Starting-level descriptor of TTB0 is fetched using NS == 1 access

This field is used only when the CD is reached from a Secure STE and is otherwise IGNORED.

#### [65] HAD0

Hierarchical Attribute Disable for the TTB0 region

- 0b0: Hierarchical attributes are enabled.
- 0b1: Hierarchical attributes are disabled.

The presence of this feature can be determined from SMMU\_IDR3.HAD; when SMMU\_IDR3.HAD == 0, the HAD0 and HAD1 fields are IGNORED. Otherwise:

When this field is 1, the APTable, PXNTable and XNTable/UXNTable fields of table descriptors walked through TTB0 become IGNORED, might be used by software for any purpose and do not affect translation. When StreamWorld == any-EL2 or EL3, this effect includes the APTable[0] and PXNTable bits which are otherwise Reserved by VMSA in these translation regimes.

HAD0 and HAD1 are supported for both AArch32 and AArch64 translation tables.

## [66] E0PD0

Disable unprivileged accesss to addresses translated by TTB0

When an access is prevented by the E0PD mechanism, the event is reported as a Translation Fault, F TRANSLATION.

This bit is equivalent to TCR\_ELx.E0PD0 in Armv8.

Note: Consistent with FEAT\_E0PD [2], Arm expects that the fault should take the same time to generate, whether the address is present in the TLB or not, to mitigate attacks that use fault timing.

E0PD only applies to AArch64 translation regimes with StreamWorld configured as EL1, Secure or any-EL2-E2H.

- 0b0: Unprivileged access to any address translated by TTB0 will not generate a fault by this mechanism
- 0b1: Unprivileged access to any address translated by TTB0 will generate a Translation fault

This field is RES0 if SMMU IDR3.E0PD == 0.

This field is RESO if CD.AA64 == 0 or if StreamWorld is EL3 or any-EL2.

The CD.E0PD0 bit is permitted to be cached in a TLB.

#### [115:68] TTB0

Address of TT0 base, bits [51:4].

Address bits above and below the field range are implied as zero.

Bits [(x-1):0] are treated as if all the bits are zero, where x is defined by the required alignment of the translation table as given by the Armv8-A VMSA.

Note: The SMMU effectively aligns the value in this field before use.

A 64-byte minimum alignment on starting-level translation table addresses is imposed when TG0 selects 64KB granules and the effective IPS value indicates 52-bit output. In this case bits [5:0] are treated as zero.

If the effective value of EPD0 == 1, TTB0 is IGNORED. Otherwise, it is ILLEGAL for the address in TTB0 to be outside the range described by the CD's effective IPS value. In addition, it is ILLEGAL for the address in TTB0 to be outside of a 48-bit range when TG0 selects a granule smaller than 64KB.

Note: Where the effective IPS < 52, an address greater than the effective IPS that is still within the defined range of this field (up to bit [51]) causes an ILLEGAL CD. Additionally, a 52-bit address can only be used in a TTBx when a 64KB granule is configured for the TTBx.

In SMMUv3.0, CD[115:112] are RES0.

#### [124] HWU059

**HWU059** 

When SMMU\_IDR3.PBHA == 1 and CD.HAD0 == 1, this bit controls the interpretation of bit [59] of the stage 1 translation table final-level (page or block) descriptor pointed at by CD.TTB0:

- 0b0: Bit [59] is not interpreted by hardware for an IMPLEMENTATION DEFINED purpose.
- 0b1: Bit [59] has IMPLEMENTATION DEFINED hardware use.

This bit is IGNORED when PBHA are not supported (SMMU\_IDR3.PBHA == 0) or when CD.HAD0 == 0.

This bit is RESO in SMMUv3.0.

## [125] HWU060

HWU060

Similar to HWU059, but affecting descriptor bit [60].

#### [126] HWU061

HWU061

Similar to HWU059, but affecting descriptor bit [61].

#### [127] HWU062

**HWU062** 

Similar to HWU059, but affecting descriptor bit [62].

#### [128] NSCFG1

NSCFG1

Non-secure attribute for the memory associated with the starting-level translation table to which TTB1 points. See NSCFG0.

This field is RESO if StreamWorld == any-EL2 or EL3.

#### [129] HAD1

Hierarchical Attribute Disable for the TTB1 region

- 0b0: Hierarchical attributes are enabled
- 0b1: Hierarchical attributes are disabled

When SMMU\_IDR3.HAD == 1, this field is RESO if StreamWorld == any-EL2 or EL3.

## [130] E0PD1

Disable unprivileged accesss to addresses translated by TTB1

When an access is prevented by the E0PD mechanism, the event is reported as a Translation Fault, F\_TRANSLATION.

This bit is equivalent to TCR\_ELx.E0PD1 in Armv8.

Note: Consistent with FEAT\_E0PD [2], Arm expects that the fault should take the same time to generate, whether the address is present in the TLB or not, to mitigate attacks that use fault timing.

E0PD only applies to AArch64 translation regimes with StreamWorld configured as EL1, Secure or any-EL2-E2H.

- 0b0: Unprivileged access to any address translated by TTB1 will not generate a fault by this mechanism
- 0b1: Unprivileged access to any address translated by TTB1 will generate a Translation fault

This field is RESO when  $SMMU_IDR3.E0PD == 0$ .

This field is RES0 if CD.AA64 == 0 or if StreamWorld is EL3 or any-EL2.

The CD.E0PD1 bit is permitted to be cached in a TLB.

## [179:132] TTB1

Address of TTB1 base, bits [51:4]

Address bits above and below the field range are implied as zero.

See the notes below about when TTB1 might be valid.

Bits [(x-1):0] are treated as if all the bits are zero, where x is defined by the required alignment of the translation table as given by the Armv8-A VMSA [2].

Note: The SMMU effectively aligns the value in this field before use.

A 64-byte minimum alignment on starting-level translation table addresses is imposed when TG1 selects 64KB granules and the effective IPS value indicates 52-bit output; bits [5:0] are treated as zero.

This field is RES0 if StreamWorld == any-EL2 or EL3, otherwise if the effective value of EPD1 == 1, TTB1 is IGNORED. Otherwise, it is ILLEGAL for the address in TTB1 to be outside the range described by the effective IPS value of the CD. In addition, it is ILLEGAL for the address in TTB1 to be outside of a 48-bit range when TG1 selects a granule smaller than 64KB.

In SMMUv3.0, CD[179:176] are RES0.

#### [188] HWU159

HWU159

When SMMU\_IDR3.PBHA == 1 and CD.HAD1 == 1, this bit controls the interpretation of bit [59] of the Stage 1 translation table final-level (page or block) descriptor pointed at by CD.TTB1:

- 0b0: Bit [59] is not interpreted by hardware for an IMPLEMENTATION DEFINED purpose.
- 0b1: Bit [59] has IMPLEMENTATION DEFINED hardware usage.

This bit is IGNORED when PBHA are not supported (SMMU\_IDR3.PBHA == 0) or when CD.HAD1 == 0. This bit is RES0 in SMMUv3.0.

## [189] HWU160

**HWU160** 

Similar to HWU159, but affecting descriptor bit [60].

## [190] HWU161

**HWU161** 

Similar to HWU159, but affecting descriptor bit [61].

#### [191] HWU162

HWU162

Similar to HWU159, but affecting descriptor bit [62].

#### [223:192] MAIR0

Memory Attribute Indirection Register 0, bits[31:0]

#### [255:224] MAIR1

Memory Attribute Indirection Register 1, bits[31:0]

Equivalent to Armv8-A Memory Attribute Indirection Registers, the MAIR0 and MAIR1 fields are indexed by AttrIndx in descriptors fetched from TT0 & TT1 and contain attributes encoded in the same way as in Arm VMSAv8-64 MAIR registers with the following exceptions:

All encodings defined as UNPREDICTABLE in VMSAv8-64 are Reserved in this architecture, and behave as follows:

| Attr <n>[3:0]</n> | If Attr <n>[7:4] == 0b0000</n> | If Attr <n>[7:4] !== 0b0000</n>                             |
|-------------------|--------------------------------|---|
| 0b0000            | [same as VMSAv8-64]            | Reserved, behaves as Normal-iWT<br>Transient with RW = 0b11 |

| Attr <n>[3:0]</n>        | If Attr <n>[7:4] == 0b0000</n>       | If Attr <n>[7:4] !== 0b0000</n> |
|--------------------------|--------------------------------------|---------------------------------|
| 0b00RW where RW != 0b00  | Reserved, behaves as Device-nGnRnE   | Same as VMSAv8-64               |
| 0b01RW where RW != 0b00  | Reserved, behaves as<br>Device-nGnRE | Same as VMSAv8-64               |
| Oblorw where RW $!=0b00$ | Reserved, behaves as Device-nGRE     | Same as VMSAv8-64               |
| 0b11RW where RW != 0b00  | Reserved, behaves as Device-GRE      | Same as VMSAv8-64               |

Note: The encoding 0b11110000, "Tagged Normal Memory" in Armv8 is not supported in SMMUv3.

#### [287:256] AMAIR0

Auxiliary Memory Attribute Indirection Register 0, bits[31:0]

#### [319:288] AMAIR1

Auxiliary Memory Attribute Indirection Register 1, bits[31:0]

Equivalent to PE Auxiliary Memory Attribute Indirection Registers. In a typical implementation, the AMAIR{1,0} fields are split into eight one-byte fields corresponding to the MAIRn.Attr[n] fields, but this is not required. The content of the AMAIR{1,0} fields is IMPLEMENTATION DEFINED and might enable extended functionality.

If software has no implementation-specific knowledge it must set the AMAIR{1,0} fields to zero. An implementation must remain compatible with generic driver software by maintaining correct behavior when the AMAIR is set to zero.

#### [351:320] IMPL DEF

IMPLEMENTATION DEFINED

IMPLEMENTATION DEFINED, for example QoS, allocation, or transient hints for translation table access.

## [367:352] PARTID

MPAM Partition ID

This field is RES0 when MPAM is not supported in the corresponding Security state, or if STE.S1MPAM == 0. Otherwise:

When STE.Config[2:0] == 0b111 and STE.S1MPAM == 1, PARTID[4:0] is the 5-bit virtual PARTID used for client transactions. Bits [15:5] are RESO. The virtual ID is translated to a physical ID using the VMS.PARTID\_MAP structure.

When STE.Config[2:0] == 0b101 and STE.S1MPAM == 1, this field is the physical PARTID used for client transactions. In this configuration, this field is interpreted as having an UNKNOWN value if it is configured with a value greater than the corresponding SMMU\_(S\_)MPAMIDR.PARTID\_MAX.

The corresponding SMMU\_(S\_)MPAMIDR.PARTID\_MAX is chosen as follows:

- For a Non-secure Stream, then SMMU\_MPAMIDR.PMG\_MAX.
- For a Secure Stream, if SMMU\_S\_MPAMIDR.HAS\_MPAM\_NS == 0 or STE.MPAM\_NS == 0, then SMMU\_S\_MPAMIDR.PMG\_MAX.
- For a Secure Stream, if <a href="SMMU\_S\_MPAMIDR.HAS\_MPAM\_NS">SMMU\_MPAMIDR.PMG\_MAX</a>. then <a href="SMMU\_MPAMIDR.PMG\_MAX">SMMU\_MPAMIDR.PMG\_MAX</a>.

See Chapter 17 Memory System Resource Partitioning and Monitoring for more information on use of this field.

#### [375:368] PMG

MPAM Performance Monitor Group

This field is RESO when MPAM is not supported in the corresponding Security state or if STE.S1MPAM == 0.

This field is interpreted as having an UNKNOWN value if it is configured with a value greater than the corresponding SMMU (S )MPAMIDR.PMG MAX.

The corresponding SMMU\_(S\_)MPAMIDR.PMG\_MAX is chosen as follows:

- For a Non-secure Stream, then SMMU\_MPAMIDR.PMG\_MAX.
- For a Secure Stream, if SMMU\_S\_MPAMIDR.HAS\_MPAM\_NS == 0 or STE.MPAM\_NS == 0, then SMMU\_S\_MPAMIDR.PMG\_MAX.
- For a Secure Stream, if <a href="SMMU\_S\_MPAMIDR.HAS\_MPAM\_NS">SMMU\_MPAMIDR.PMG\_MAX</a>. then <a href="SMMU\_MPAMIDR.PMG\_MAX">SMMU\_MPAMIDR.PMG\_MAX</a>.

See Chapter 17 Memory System Resource Partitioning and Monitoring for more information on use of this field.

#### 5.4.1 CD notes

Note: Consistent with Armv8.1 [2] PE translation, translation table descriptor bits APTable, PXNTable and UXNTable control hierarchical permission attributes for lower levels of translation table walks. Not all systems use this feature, so the CD Hierarchical Attribute Disable flags allow translation table walks using TTB0 and TTB1 to be performed ignoring these bits. Software is then free to use the APTable, PXNTable and UXNTable fields for other purposes.

When a CD is used from a stream configured with StreamWorld == any-EL2 or EL3 (but not any-EL2-E2H):

- Only one translation table is supported (TTB0) and TTB1 is unreachable.
- ASID is IGNORED.

When TTB1 is unreachable:

• The following fields become RESO:

TTB1, TBI[1], TG1, SH1, OR1, IR1, T1SZ, HAD1, NSCFG1.

• T0SZ must cover the required VA input space

A CD must only be configured to be located through a set of multiple STEs when all STEs in the set configure an identical Exception level (given by the STE StreamWorld).

Note: For example, one STE configuring a stream as NS-EL2 and another STE configuring a stream as NS-EL1 must not both share the same CD as, in this configuration, TTB1 is both enabled and unused depending on the StreamID that locates the CD. Similarly, a CD with AA64 == 0 is ILLEGAL if reached from an STE with StreamWorld == any-EL2-E2H but not if reached from an STE with StreamWorld == NS-EL1 or Secure.

The legality of a CD is, in part, affected by following properties of the STE used to locate the CD:

- StreamWorld.
- S1STALLD.
- AA64 and Config[1] (to detect AArch32 stage 2 translation).

When a CD is reached from an STE whose state causes the CD to be considered ILLEGAL, C\_BAD\_CD is raised and the transaction causing the configuration lookup is terminated with an abort.

The interpretation of the lower bit of the translation table descriptor AP[2:1] field changes depending on the translation regime under which the table is walked, Translation tables located from STEs with StreamWorld == any-EL2 or EL3 are under EL2 or EL3 AArch64 ownership and, consistent with Armv8-A PEs, the AP[1] bit (of AP[2:1]) is ignored and treated as 1, see section 13.4.1 Stage 1 page permissions.

Depending on the presentation of an address to the SMMU, TTB1 might never be selected in some implementations, see section 3.4.1 *Input address size and Virtual Address size* for details.

In Armv8-A, an inconsistency between TTBRx and IPS is reported as an Address Size fault. A CD TTBx address outside the range of IPS makes the CD ILLEGAL, recording a C BAD CD error.

A CD or L1CD that is successfully fetched might be cached in any state, therefore any modification, commissioning or decommissioning of a CD must be followed by a CMD\_CFGI\_CD command to make the modification visible to the SMMU. A failed fetch (F\_CD\_FETCH, or a stage 2 fault where CLASS == CD) does not cause a CD or L1CD to be cached.

The translation table walks performed from TTB0 or TTB1 are always performed in IPA space if stage 2 translations are enabled (STE.Config[1] == 1). If stage 2 translations are not enabled (or if the SMMU does not implement stage 2), translation table walks are always performed in PA space. CDs are fetched from IPA space if stage 2 translations are enabled, otherwise they are fetched from PA space.

Note: This enables a hypervisor to point directly to guest-managed CD structures and translation tables.

The following CD fields are permitted to be cached as part of a translation or TLB entry, and alteration requires invalidation of any TLB entry that might have cached these fields, in addition to CD structure cache invalidation:

- HAD{0,1}.
- AFFD.
- ASID+ASET (affect tagging of TLB entries, so a change may not require old entries to be invalidated).
- MAIR.
- AMAIR.
- EPD $\{0,1\}$ .
- TTB{0,1}.
- T{0,1}SZ.
- OR{0,1}.
- IR{0,1}.
- SH{0,1}.
- ENDI.
- TG{0,1}.
- HA, HD.
- WXN, UWXN.
- AA64.
- TBI.
- IPS.
- NSCFG{0,1}.
- PAN.

Alteration of the remaining fields of the CD does not require an explicit invalidation of any structure other than the CD itself:

A.R.S

The PARTID and PMG fields are not permitted to be cached in a TLB entry and these fields are permitted to differ between CDs having the same ASID value within the same VMID.

Note: Changes to IMPLEMENTATION DEFINED fields might have IMPLEMENTATION DEFINED invalidation requirements.

When cached in an SMMU, a CD is uniquely identified by the tuple {StreamID, SubstreamID} including the qualification of StreamID by SEC\_SID. This means that:

- Multiple CDs are distinguished by StreamID, so CDs located from the same SubstreamID index but through different StreamIDs are considered separate and can contain different configuration:
  - Note: Different devices (StreamIDs) might therefore use the same SubstreamID value to associate transactions with different process address spaces in an OS. The SubstreamID namespace is local to the

StreamID.

- A common CD (or CD table) shared by different STEs is permitted to be cached as multiple entries that are specific to each possible {StreamID, SubstreamID} combination.
  - A change to such a CD requires invalidation of the CD cache. When CMD\_CFGI\_CD(\_ALL) is used, it
    must be issued multiple times for every {StreamID, SubstreamID} combination that the CD is reachable
    from
  - Note: The SMMU might prefetch a reachable structure, so even if a CD was not accessed by a transaction
    with a particular StreamID, it might have been prefetched through the STE of that stream, so must still
    be invalidated using that StreamID.

It might arise that multiple CDs represent the same address space (therefore TLB entries), as identified by a combination of Security state, StreamWorld or translation regime, VMID tag (if relevant) and ASID tag (if relevant). This can happen in any of the following (non-exhaustive list of) cases:

- Several STEs with StreamWorld == Secure each point to their own CD that contains a common ASID value
  - Secure translation regime differentiates address spaces by ASID (but not VMID).
- Several STEs with StreamWorld == NS-EL1 contain a common VMID. Each STE points to its own CD that contains a common ASID value:
  - NS-EL1 differentiates address spaces by ASID and VMID.
- An STE with StreamWorld == any-EL2 points to a table of more than one CD.
  - EL2 has no ASIDs, therefore multiple CDs represent the same (single) set of translations.
- An STE with StreamWorld == any-EL2-E2H points to a CD table where some entries use the same ASID value:
  - EL2-E2H differentiates address spaces by ASID only.

If multiple CDs exist in the same translation regime representing the same address space, any of these CDs can insert TLB entries matching lookup in that address space. All such CDs are considered interchangeable by the SMMU and must contain identical configuration for fields that are permitted to be cacheable as part of a TLB entry.

Note: The EL2 and EL3 translation regimes do not differentiate address spaces by ASID, therefore all CDs referenced from STEs having StreamWorld any-EL2 or EL3 must be identical for fields permitted to be cacheable in a TLB. This includes tables of multiple CDs referenced from one STE, or CDs referenced one to one from an STE. It is not expected that SubstreamIDs (therefore a CD table with multiple entries) will be used with STEs configured for any-EL2 or EL3 StreamWorlds.

If a software error causes two CDs representing the same address space to differ, the result of a TLB lookup for that address space is UNPREDICTABLE. The SMMU must not allow such an error to provide device access to memory locations outside of the Security state of the stream, or that would not otherwise have been accessible given a stage 2 configuration, if present.

Note: Fields permitted to be cached as part of a TLB entry modify the properties of the TLB entry. A difference in CD configuration can cause TLB entries to be cached with different properties in the same address space. It would be UNPREDICTABLE as to which CD inserted a given TLB entry, therefore the properties returned by a general TLB lookup become UNPREDICTABLE.

#### 5.4.1.1 EPDx behavior

The CD EPD0 and EPD1 fields disable translation configuration related to TTB0 and TTB1, respectively. Validity checks are not performed on fields that are disabled or IGNORED by CD.EPDx.

This table shows interaction of CD.TxSZ with EPDx and incoming addresses that select TTB0 or TTB1 translation configuration:

| Virtual Address<br>(AArch64 example    |                |                |                        |                        |   |
|--|----------------|----------------|------------------------|------------------------|---|
| shown)                                 | Effective EPD0 | Effective EPD1 | T0SZ                   | T1SZ                   | Result  |
| 0xFFFFXXXXXXXXXXXX                     | 0              | 0              | Valid                  | Valid                  | Translates through TTB1   |
| 0x0000XXXXXXXXXXXX                     | 0              | 0              | Valid                  | Valid                  | Translates through TTB0   |
| 0xffffxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx | 0              | 0              | X                      | Invalid <sup>(1)</sup> | C_BAD_CD  |
| 0x0000XXXXXXXXXXX                      | 0              | 0              | X                      | Invalid <sup>(1)</sup> | C_BAD_CD  |
| 0xFFFFXXXXXXXXXXXX                     | 0              | 0              | Invalid <sup>(1)</sup> | X                      | C_BAD_CD  |
| 0x0000XXXXXXXXXXX                      | 0              | 0              | Invalid <sup>(1)</sup> | X                      | C_BAD_CD  |
| 0xffffxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx | 0              | 1              | Valid                  | X                      | TLB miss causes<br>F_TRANSLATION<br>(translation through<br>TTB1 is disabled) |
| 0x0000XXXXXXXXXXXXX                    | 0              | 1              | Valid                  | X                      | Translates through TTB0   |
| 0xffffxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx | 0              | 1              | Invalid <sup>(1)</sup> | X                      | C_BAD_CD  |
| 0×0000XXXXXXXXXXX                      | 0              | 1              | Invalid <sup>(1)</sup> | X                      | C_BAD_CD  |
| 0xFFFFXXXXXXXXXXXXX                    | 1              | 0              | X                      | Valid                  | Translates through TTB1   |
| 0x0000XXXXXXXXXXX                      | 1              | 0              | X                      | Valid                  | TLB miss causes F_TRANSLATION (translation through TTB1 is disabled)          |
| 0×FFFFXXXXXXXXXXXX                     | 1              | 0              | X                      | Invalid <sup>(1)</sup> | C_BAD_CD  |
| 0x0000XXXXXXXXXX                       | 1              | 0              | X                      | Invalid <sup>(1)</sup> | C_BAD_CD  |

- The high-order bits or bits of the VA determine whether TTB0 or TTB1 is selected, according to the Armv8-A VMSA.
- In the cases marked <sup>(1)</sup>, TxSZ is shown as being an invalid value and the SMMU treating this as making the CD ILLEGAL, for the purposes of illustration. See CD.TOSZ, this is one of the CONSTRAINED UNPREDICTABLE behaviors for an out-of-range TxSZ.
- EPDx == 1 causes TxSZ to be IGNORED and an invalid TxSZ value (or an invalid TTBx or TGx value) does not lead to C\_BAD\_CD.
- When EPDx == 1, a translation table walk through TTBx causes F\_TRANSLATION.
  - Note: The Armv8-A VMSA allows a TLB hit to occur for an input address associated with an EPD bit set to 1, but the translation table walk is disabled upon miss.

#### 5.4.2 Validity of CD

The following expression indicates whether a CD is considered valid or ILLEGAL, for the purposes of determining a configuration error (C\_BAD\_CD). Subsequent checks must be performed as part of the translation process and further faults might arise, but these are unrelated to the validity of configuration structures.

```
IPA_RANGE = (CD.AA64 == 0 /* LPAE */) ?
                40 : MIN(VALUE(CD.IPS), VALUE(SMMU_IDR5.OAS)));
// IPA range is 40 bits for LPAE tables, else effective IPS size
// Note: The StreamWorld is a function of STE.STRW combined with
// other properties, e.g. SMMU_CR2.E2H, STE_SECURE, etc. See the
// STE.STRW description for more information on StreamWorld.
// This expression assumes that SMMU_IDRO.Hyp == 1 and
// SMMU_CR2.E2H == 1;
// it does not illustrate the cases where STE.STRW is
// IGNORED or RESO and an effective value is used (e.g. where
// SMMU_IDR0.S1P == 0 so the effective StreamWorld is NS-EL1):
STE_STREAMWORLD = (STE.STRW == 0b00 && !STE_SECURE) ? NS_EL1 :
                  (STE.STRW == 0b10 \&\& SMMU\_CR2.E2H == 1) ? any-EL2-E2H :
                  (STE.STRW == 0b10 && SMMU_CR2.E2H == 0) ? any-EL2 :
                  (STE.STRW == 0b00 && STE_SECURE) ? Secure :
                  (STE.STRW == 0b01 && STE_SECURE) ? EL3 :
                  RESERVED_STRW_VALUE_USED; // Would have caused STE to be ILLEGAL.
N_TRANSL_CFG0 = (STE_STREAMWORLD == any-EL2 || STE_STREAMWORLD == EL3) ?
                    0 : CD.EPD0;
N_TRANSL_CFG1 = (STE_STREAMWORLD == any-EL2 || STE_STREAMWORLD == EL3) ?
                    1 : CD.EPD1;
// The EFFECTIVE_SMMU_IDRO_STALL_MODEL is defined in section 5.2.1.
CD_ILLEGAL = !CD.V ||
             (STE.S1STALLD == 1 && CD.S == 1) ||
             (SMMU_IDRO.TERM_MODEL == 1 && CD.A == 0) ||
             (!STE_SECURE && EFFECTIVE_SMMU_IDRO_STALL_MODEL == 0b01 &&
                 CD.S == 1) | |
             (!STE_SECURE && EFFECTIVE_SMMU_IDRO_STALL_MODEL == 0b10 &&
                 CD.S == 0) | |
             (STE_SECURE && SMMU_S_IDRO.STALL_MODEL == 0b01 && CD.S == 1) ||
             (STE_SECURE && SMMU_S_IDRO.STALL_MODEL == 0b10 && CD.S == 0) ||
             ((!N_TRANSL_CFG0 || !N_TRANSL_CFG1) &&
                 ((SMMU_IDRO.TTENDIAN == 0b10 && CD.ENDI == 1) ||
                 (SMMU_IDRO.TTENDIAN == 0b11 && CD.ENDI == 0))) ||
             (CD.AA64 == 0 \&\& ((SMMU_IDR0.TTF[0] == 0) ||
                 (STE_STREAMWORLD == EL3) ||
                 (STE_STREAMWORLD == any-EL2-E2H) ||
                 (STE_SECURE && STE_STREAMWORLD == any-EL2))) ||
             (CD.AA64 == 1 && ((SMMU_IDRO.TTF[1] == 0) ||
                 (STE.Config[1] == 1 && STE.S2AA64 == 0))) ||
             (CD.AA64 == 1 &&
                 (((CD.HA || CD.HD) && (SMMU_IDRO.HTTU == 0b00)) ||
                 (CD.HD && SMMU_IDRO.HTTU == 0b01))) ||
             ((STE_STREAMWORLD == NS-EL1 || STE_STREAMWORLD == Secure ||
                 STE\_STREAMWORLD == any-EL2-E2H) &&
                 SMMU_IDR0.ASID16 == 0 && CD.ASID[15:8] != 0x00) ||
             ((CD.AA64 == 1 && CONSTR_UNPRED_TXSZ_OOR_ILLEGAL == YES) &&
                 ((N_TRANSL_CFG0 == 0 && AA64_TXSZ_INVALID(CD.T0SZ, CD.TG0)) ||
                  (N_TRANSL_CFG1 == 0 && AA64_TXSZ_INVALID(CD.T1SZ, CD.TG1)))) ||
             (!N_TRANSL_CFG0 &&
                 ((CD.AA64 == 1 && !GRANULE_SUPPORTED(CD.TG0, SMMU_IDR5)) ||
```

# Chapter 5. Data structure formats 5.4. Context Descriptor

```
ADDR_OUTSIDE_RANGE(CD.TTB0,
                     MIN(IPA_RANGE, (CD.TGO == TGO_64KB) ? 52 : 48))) | |
             (!N_TRANSL_CFG1 &&
                 ((CD.AA64 == 1 && !GRANULE_SUPPORTED(CD.TG1, SMMU_IDR5)) ||
                 ADDR_OUTSIDE_RANGE(CD.TTB1,
                     MIN(IPA_RANGE, (CD.TG1 == TG1_64KB) ? 52 : 48))));
// This function checks whether a TxSZ value is outside the range that is valid
   ⇔when
// stage 1 is AArch64:
boolean AA64_TXSZ_INVALID(TxSZ, TGx)
    if (SMMU_IDR3.STT == 1) {
        txsz_max = TGx IN {4KB, 16KB} ? 48 : 47;
    } else {
        txsz_max = 39;
    // Input address can be larger when VAX is true:
    if (SMMU_AIDR \geq 0x01 && SMMU_IDR5.VAX == 1 && TGx == 64KB) {
        txsz_min = 12;
    } else {
        txsz_min = 16;
    return (TxSZ < txsz_min || TxSZ > txsz_max);
```

# 5.5 Fault configuration (A, R, S bits)

The STE contains fault configuration for faults derived from stage 2 translations (S2R, S2S) and the CD contains fault configuration for faults derived from stage 1 translations (A, R, S).

A applies to CD.A, R applies to STE.S2R and CD.R, S applies to STE.S2S and CD.S.

The A, R and S flags control fault behavior for transactions experiencing the following Translation-related faults during stage 1 or stage 2 translation, see section 3.12 *Fault models, recording and reporting*:

- F\_TRANSLATION.
- F\_ACCESS.
- F\_ADDR\_SIZE.
- F\_PERMISSION.

Transactions are terminated with an abort if they encounter any other fault or configuration error and attempt to record an event in the relevant Event queue. This case is unaffected by the A, R and S flags.

When a transaction encounters one of the four Translation-related faults, it might be immediately terminated or stalled (in which case it is later retried, or terminated, according to software command).

The following flags are used to configure fault behavior:

| A | Abort behavior upon transaction termination | When set and a transaction experiencing one of the faults listed in this section is terminated, an abort or bus error is returned to the client device. When clear, such a transaction is completed successfully with RAZ/WI behavior so that the client does not receive an error condition. This configuration exists only for stage 1. The termination behavior of stage 2 is abort, as though an implied A == 1. An SMMU might only implement abort termination (with no RAZ/WI support) and indicate this behavior through the SMMU_IDR0.TERM_MODEL flag. For these implementations, configuring CD.A == 0 renders the CD ILLEGAL. The A flag has no effect on faults arising from ATS Translation Requests, which do not support RAZ/WI behavior. |
|---|---|---|
| R | Record event                                | When set, the detection of the fault is recorded in the Event queue. When clear, the fault record is suppressed. This field only suppresses a fault record if $S == 0$ and if the fault is of one of the four Translation-related faults.   |

#### S Stall upon fault

When set, an incoming transaction experiencing one of the four Translation-related faults is stalled. No response is given to the transaction until software issues a resume or terminate command, whereupon the transaction is either retried or terminated. The stall is always reported and the R bit is ignored.

Configuration or faults not arising during stage 1 or stage 2 translation cause the transaction to be terminated, regardless of the setting of this bit.

When clear, an incoming transaction experiencing a fault is terminated immediately in a manner according to A.

The CD.S flag has no effect on Translation-related faults arising from ATS Translation Requests, for which a R == W == 0 response is given, see section 3.9.1 ATS interface.

Some implementations might not support stalling of eligible transactions and immediately terminate the transaction (with behavior determined by the A bit). Other implementations might not support immediate termination of transactions (that fault in a manner eligible to stall). Such implementations indicate these behaviors through the SMMU\_(S\_)IDR0.STALL\_MODEL field.

When stage 1 translation is enabled (STE.Config[0] == 1), an STE is considered ILLEGAL if:

- SMMU\_(S\_)IDR0.STALL\_MODEL != 0b00 and STE.S1STALLD == 1. A CD (Stage 1 translation enabled) is considered ILLEGAL if one of the following applies:
  - SMMU\_(S\_)IDR0.STALL\_MODEL == 0b00 and STE.S1STALLD == 1 and CD.S == 1.
  - $SMMU_(S_)IDR0.STALL_MODEL == 0b01$  and CD.S == 1.
  - SMMU\_(S\_)IDR0.STALL\_MODEL == 0b10 and CD.S == 0.

When stage 2 translation is enabled (STE.Config[1] == 1), an STE is considered ILLEGAL if one of the following applies:

- SMMU\_IDR0.STALL\_MODEL == 0b01 and STE.S2S == 1.
- SMMU\_IDR0.STALL\_MODEL == 0b10 and STE.S2S == 0.
- Note: If SMMU\_S\_IDR1.SEL2 == 0, Stage 2-enabled STEs cannot also be Secure.

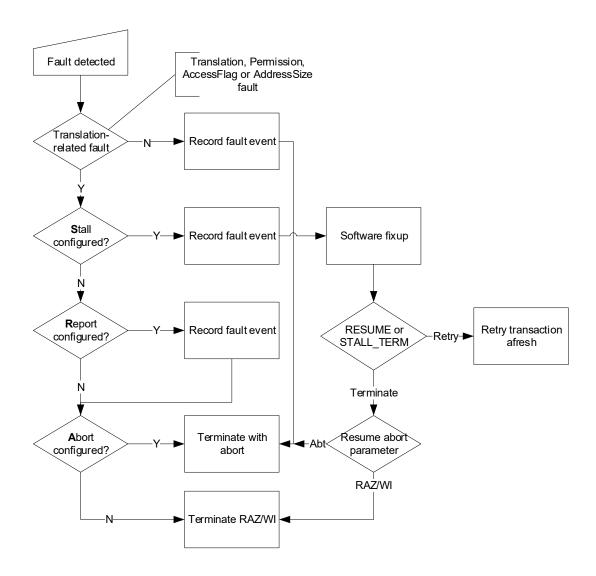


Figure 5.1: Fault configuration flow

These flags can be used, in the following combinations, to affect transactions experiencing one of the four Translation-related faults:

| ARS   |  |
|-------|--|
| 0b000 | Silently terminate transactions at the SMMU, with writes acknowledged successfully and reads returning zero, RAZ/WI. |
| 0b010 | Terminate transactions at the SMMU in a RAZ/WI manner, but record fault event as well.                               |

#### **ARS**

0bxx1 Stall transaction and record fault event.

In this case, the effective value of R is assumed to be 1 so that it is impossible for transactions to stall without an event being recorded.

Only the stalled transaction is held and subsequent non-faulting transactions in the same stream or substream might complete (subject to interconnect ordering rules) before the stall is resolved, see section 3.12.2 Stall model

Later receipt of a CMD\_RESUME or CMD\_STALL\_TERM ensures that the transaction will be retried or terminated (with termination behavior given by the CMD\_RESUME operation).

0b100 Transaction abort reported to client, silent.

0b110 Transaction abort reported to client, fault event recorded.

Note: Although the STE has no A flag, stage 2 behavior is as though an effective A flag is fixed at 1.

Note: ARS == 0bxx1 is ILLEGAL when the SMMU does not support Stall behavior, or when an STE has explicitly disabled stage 1 stall configuration but stage 1 is configured to use it:

- A CD with CD.S == 1 is considered ILLEGAL if either of the following is true:
  - SMMU\_(S\_)IDR0.STALL\_MODEL == 0b00 and the CD is reached through an STE with STE.S1STALLD == 1.
  - SMMU\_(S\_)IDR0.STALL\_MODEL == 0b01.
- A STE with STE.S2S == 1 is considered ILLEGAL if SMMU (S) IDR0.STALL MODEL == 0b01.

Note: ARS == 0bxx0 is ILLEGAL when the SMMU forces Stall behavior:

- A CD with CD.S == 0 is considered ILLEGAL if SMMU\_(S\_)IDR0.STALL\_MODEL == 0b10.
- A STE with stage 2 translation enabled and STE.S2S == 0 is considered ILLEGAL if SMMU\_IDR0.STALL\_MODEL == 0b10.

Note: There is no separate Hit Under Previous Context Fault configuration as in prior SMMU architectures because those contain a different concept of in-register context configuration being in a stall state, whereas in SMMUv3 it is only the transaction that is stalled, separate from the configuration in memory. The treatment of stalls is therefore a per-stream or per-transaction concept rather than a per-translation context concept.

Where interconnect ordering rules allow, later transactions might overtake a stalled transaction associated with the same StreamID (and SubstreamID, if supplied with all transactions). A device might restrict ordering further if required. See section 3.12.2 *Stall model* for more details.

# 5.6 Virtual Machine Structure (VMS)

The Virtual Machine Structure, VMS, is an SMMU concept and is a structure that is located from the pointer field STE.VMSPtr. The VMS holds per-VM facilities. The VMS is 4KB in size and is 4KB-aligned.

Multiple STEs can point to the same VMS if required, for example to avoid duplication.

If a group of STEs with the same VMID contain different VMS pointers then it is UNPREDICTABLE which of the pointers are used for VMS access for a given STE in the group.

Note: This means that multiple STEs within a Security state with the same VMID must point to the same VMS.

The VMS is fetched using the same Security state as the STE that references it. The attributes used to access the VMS are the same as those used to fetch STEs in the corresponding Security state. See SMMU\_CR1 and SMMU\_STRTAB\_BASE.

#### 5.6.1 VMS layout

The VMS is 4096 bytes long.

## [511:0] PARTID\_MAP

Map from virtual CD.PARTID values to physical PARTID values

Array of 32 16-bit little-endian physical PARTIDs, indexed by the virtual PARTID from CD.PARTID for a CD located through the same STE as that of the VMS.

If an entry is configured with a value that is greater than the supported PARTID size, indicated by the corresponding SMMU\_(S\_)MPAMIDR.PARTID\_MAX, an UNKNOWN PARTID is used.

The corresponding SMMU\_(S\_)MPAMIDR.PARTID\_MAX is chosen as follows:

- For a Non-secure Stream, then SMMU MPAMIDR.PARTID MAX.
- For a Secure Stream, if SMMU\_S\_MPAMIDR.HAS\_MPAM\_NS == 0 or STE.MPAM\_NS == 0, then SMMU\_S\_MPAMIDR.PARTID\_MAX.
- For a Secure Stream, if SMMU\_S\_MPAMIDR.HAS\_MPAM\_NS == 1 and STE.MPAM\_NS == 1, then SMMU\_MPAMIDR.PARTID\_MAX.

Note: There is no equivalent mapping for PMGs because they do not need to be mapped from virtual to physical values.

Note: The number 32 derives from the MPAM Armv8.4-A [2] PE limit.

The area of the VMS outside of the PARTID\_MAP structure is RESO.

Note: It is the intention to use the VMS to extend the SMMU with future per-VM functionality unrelated to MPAM.

## 5.6.2 VMS presence and fetching

The VMS is supported by a Security state if all the statements below are true:

- **SMMU\_IDR3**.MPAM == 1
- SMMU\_IDR0.S1P == 1
- **SMMU\_IDR**0.S2P == 1
- For Non-secure Stream:

- SMMU\_MPAMIDR.PARTID\_MAX != 0
- For Secure Stream:
  - SMMU\_S\_IDR1.SEL2 == 1 and one of the following is true:
    - \* SMMU\_S\_MPAMIDR.PARTID\_MAX != 0 and either SMMU\_S\_MPAMIDR.HAS\_MPAM\_NS == 0 or STE.MPAM\_NS == 0
    - \* SMMU\_MPAMIDR.PARTID\_MAX != 0 and both SMMU\_S\_MPAMIDR.HAS\_MPAM\_NS == 1 and STE.MPAM\_NS == 1

The VMS is not always enabled even if an implementation supports it. See STE.VMSPtr for information on when the VMS is enabled.

If the VMS is enabled, an SMMU is permitted but not required to access the VMS when processing a transaction that uses an STE but does not require information from the VMS indicated from the STE. If this happens and the access results in an External abort, the transaction is treated as though it required the VMS and the abort is reported for the transaction as an F\_VMS\_FETCH event.

Note: For example, a nested configuration with STE.S1MPAM == 1 enables the VMS and the VMS is required for a transaction that undergoes both stages of translation. A different transaction using the same STE might bypass stage 1 due to STE.S1DSS == 0b01 configuration and in this case the VMS is permitted to be accessed. This means that VMS access error might be detected and reported relating to a transaction that does not require information from the VMS. See section  $7.3.20 \ F_{VMS}$ \_FETCH.

Note: It is also possible that non-client transaction accesses experience a VMS access error. See section 8.1 *PRI* queue overflow.

## 5.6.3 VMS caching and invalidation

The contents of VMS.PARTID\_MAP are permitted to be cached as part of any of the following architecturally-visible structures:

- A configuration cache entry.
  - Indexed by StreamID.
  - Invalidated by an operation affecting a StreamID, meaning an invalidation scope of CMD\_CFGI\_STE or wider.
- A separate configuration cache for PARTID\_MAP contents.
  - Indexed by VMID.

PARTID\_MAP information is not cached in a TLB.

Because the PARTID\_MAP contents might be cached in structures indexed by StreamID and VMID, a change to PARTID\_MAP requires invalidation by both StreamID and VMID.

The configuration invalidation commands CMD\_CFGI\_STE and CMD\_CFGI\_STE\_RANGE invalidate cached information that is cached indexed by StreamID from all VMS fields relating to the StreamIDs in the scope of a given command.

The configuration invalidation command CMD\_CFGI\_ALL invalidates cached information regardless of whether it is cached indexed by StreamID or VMID.

The command CMD\_CFGI\_VMS\_PIDM invalidates any separate caching of PARTID\_MAP.

See section 4.3.5.1 *Usage* for more information on invalidation of VMS fields.

The VMS does not interact with SMMU\_(S\_)CR0.VMW. If STEs with different VMIDs point to a common VMS, information from the VMS might be cached multiple times and invalidation will require multiple operations that apply to all VMIDs that reference the VMS.

# Chapter 6

# Memory map and registers

# 6.1 Memory map

SMMU registers occupy two consecutive 64KB pages starting from an at least 64KB-aligned boundary. Other OPTIONAL 64KB pages might follow these pages, depending on implemented features:

- If the VATOS interface is supported, one 64KB page is present containing the VATOS registers.
- $\bullet$  If the Secure VATOS interface is supported, one 64KB page is present containing the S\_VATOS registers.
- If Enhanced Command queue interfaces are supported, one or more Command queue control pages might be present, each containing one or more ECMDQ interfaces.
- If Enhanced Command queue interfaces are supported for Secure state, one or more Secure Command queue control pages might be present, each containing one or more ECMDQ interfaces.
- Any number of IMPLEMENTATION DEFINED pages might be present.

The presence and base addresses of all OPTIONAL pages are IMPLEMENTATION DEFINED and discoverable:

- The presence of VATOS support can be determined from <a href="SMMU\_IDR0.VATOS">SMMU\_IDR0.VATOS</a>.
  - The VATOS page's base address is given by SMMU\_IDR2.BA\_VATOS
  - This base address is called O\_VATOS hereafter.
- The presence of Secure VATOS support can be determined from SMMU\_S\_IDR1.SECURE\_IMPL, SMMU\_S\_IDR1.SEL2 and SMMU\_IDR0.VATOS.
  - The Secure VATOS page's base address is given by SMMU\_S\_IDR2.BA\_S\_VATOS.
  - This base address is called O\_S\_VATOS hereafter.
- The presence of Command queue control pages can be determined from SMMU\_IDR1.ECMDQ.
  - The number of pages is discoverable from SMMU\_IDR6.

- The offset of each page is discoverable from SMMU\_CMDQ\_CONTROL\_PAGE\_BASEn.ADDR.
- These offsets are referred to as O\_CMDQCPn.
- The presence of Secure Command queue control pages can be determined from SMMU\_S\_IDR0.ECMDQ.
  - The number of pages is discoverable from SMMU\_S\_IDR6.
  - The offset of each page is discoverable from SMMU\_S\_CMDQ\_CONTROL\_PAGE\_BASEn.ADDR.
  - These offsets are referred to as O\_S\_CMDQCPn.
- The presence of all IMPLEMENTATION DEFINED register pages can be determined through the Peripheral ID registers and IMPLEMENTATION DEFINED registers, for example SMMU\_IDR4.

The base address of OPTIONAL pages is expressed as an offset from the SMMU extension address 0x20000, in units of a 64KB page.

An SMMU that does not support any OPTIONAL or IMPLEMENTATION DEFINED register pages will occupy a 128K span of addresses, 0x00000-0x1FFFF.

| 0x00000-0x0FFFF             | SMMU registers, Page 0              |  |
|-----------------------------|-------------------------------------|--|
| 0x10000-0x1FFFF             | SMMU registers, Page 1              |  |
| 0x20000-END                 | 0 or more OPTIONAL pages            |  |
| O_VATOS + 0x0000-0xFFFF     | VATOS interface registers           |  |
| O_S_VATOS + 0x0000-0xFFFF   | Secure VATOS interface registers    |  |
| O_CMDQCPn + 0x0000-0xFFFF   | Command queue control page n        |  |
| O_S_CMDQCPn + 0x0000-0xFFFF | Secure Command queue control page n |  |

## 6.2 Register overview

Unless specified otherwise, all registers are 32-bit, little-endian and allow read and write (R/W) accesses.

For all pages except Page 1, undefined register locations are RAZ/WI. For Page 1, access to undefined/Reserved register locations is CONSTRAINED UNPREDICTABLE and an implementation has one of the following behaviors:

- The access has RAZ/WI behavior.
- The location has the same behavior as RESO.
- The access has the same effect as would an access to the same offset in Page 0, that is Page 0 and 1 are permitted to alias.

The equivalent Page 0 offsets of registers that are defined on Page 1 are Reserved and Arm recommends that they are not accessed. Access to these offsets is CONSTRAINED UNPREDICTABLE and (depending on the implementation of Page 1) has one of the following behaviors:

- The location aliases the corresponding register in Page 1.
- The access has RAZ/WI behavior.

When SMMU\_S\_IDR1.SECURE\_IMPL == 1, SMMU\_S\_\* registers are RAZ/WI to Non-secure access. See section 3.11 *Reset, Enable and initialization* regarding Non-secure access to SMMU\_S\_INIT. All other registers are accessible to both Secure and Non-secure accesses.

When SMMU\_S\_IDR1.SECURE\_IMPL == 0, SMMU\_S\_\* registers are RAZ/WI.

In an SMMU with RME, all of the following apply:

- All SMMU registers that are specified to be accessible only in Secure PA space in this document are additionally accessible in Root PA space in an SMMU with RME.
- All SMMU registers that are specified to be accessible in Non-secure PA space in this document are additionally accessible in Root and Realm PA spaces in an SMMU with RME.

All SMMU ID registers (those that report the presence or scope of features) hold constant values after reset.

Reserved or undefined bit positions in defined registers are RESO: they read as zero and must not be written with non-zero values.

An implementation must support aligned 32-bit word access to 32-bit registers, and to both 32-bit halves of 64-bit registers. The SMMU supports aligned 64-bit access to 64-bit registers. Support for other access sizes is IMPLEMENTATION DEFINED.

The following constitute an illegal register access:

- An access of an unsupported size.
- Unaligned accesses, that is an access that does not start on a boundary equal to the access size.

An illegal register access is CONSTRAINED UNPREDICTABLE and has one of the following behaviors:

- The access is RAZ/WI.
- The access is observed by the register or registers spanned by the access and:
  - Write access will write any value to this register or registers including to fields of this register or registers
    outside of the access. This behavior does not enable a Non-secure access to affect registers that are not
    otherwise accessible to Non-secure accesses.
  - Read access returns an UNKNOWN value.
- The access is terminated with an abort.

A 64-bit access to two adjacent 32-bit registers is CONSTRAINED UNPREDICTABLE and has one of the following behaviors:

- The access is RAZ/WI.
- A read returns the value of both registers and a write updates both registers, as though two 32-bit accesses were performed in an UNPREDICTABLE order.

- One of the pair of registers is read or written and the other register is RAZ/WI, as though a single 32-bit access was performed to an UNPREDICTABLE one of the pair of registers.
- The access is terminated with an abort.

Note: Arm strongly recommends not to abort accesses to registers that might be used by software that is associated with lower exception levels on the PE, such as the SMMU\_VATOS \* or PMCG registers.

It is IMPLEMENTATION DEFINED whether a 64-bit access to a 64-bit register is single-copy atomic. An SMMU implementation might internally observe the access in two 32-bit halves. An aligned 32-bit word access is single-copy atomic.

All 64-bit fields are composed of two separately-writable 32-bit register halves, with bits[63:32] at offset +4 and [31:0] at offset +0.

Some register fields have a dependency on another register field, and are described as Guarded by the other field. A Guarded register field is not permitted to be changed by software unless the field by which it is Guarded is in a certain state (and is not in the process of being Updated to or from that state). For example, SMMU\_CMDQ\_BASE is Guarded by SMMU\_CR0.CMDQEN so that software is only permitted to change SMMU\_CMDQ\_BASE if SMMU\_CR0.CMDQEN == 0.

Note: Software must use an appropriate barrier to ensure initialization of Guarded register fields is visible to the SMMU before the SMMU observes a set of the field by which they are Guarded.

Registers are not required to support being the target of exclusive or atomic read-modify-write update operations. In this document, read-only means that writes are ignored.

#### 6.2.1 Registers in Page 0

| Offset | Register     | Notes      |
|--------|--------------|------------|
| 0x0000 | SMMU_IDR0    | 32-bit, RO |
| 0x0004 | SMMU_IDR1    | 32-bit, RO |
| 0x0008 | SMMU_IDR2    | 32-bit, RO |
| 0x000C | SMMU_IDR3    | 32-bit, RO |
| 0x0010 | SMMU_IDR4    | 32-bit, RO |
| 0x0014 | SMMU_IDR5    | 32-bit, RO |
| 0x0018 | SMMU_IIDR    | 32-bit, RO |
| 0x001C | SMMU_AIDR    | 32-bit, RO |
| 0x0020 | SMMU_CR0     | 32-bit, RW |
| 0x0024 | SMMU_CR0ACK  | 32-bit, RO |
| 0x0028 | SMMU_CR1     | 32-bit, RW |
| 0x002C | SMMU_CR2     | 32-bit, RW |
| 0x0040 | SMMU_STATUSR | 32-bit, RO |

| Offset | Register   | Notes      |
|--------|--|------------|
| 0x0044 | SMMU_GBPA  | 32-bit, RW |
| 0x0048 | SMMU_AGBPA   | 32-bit, RW |
| 0x0050 | SMMU_IRQ_CTRL  | 32-bit, RW |
| 0x0054 | SMMU_IRQ_CTRLACK                                     | 32-bit, RO |
| 0x0060 | SMMU_GERROR  | 32-bit, RO |
| 0x0064 | SMMU_GERRORN   | 32-bit, RW |
| 0x0068 | SMMU_GERROR_IRQ_CFG0                                 | 64-bit, RW |
| 0x0070 | SMMU_GERROR_IRQ_CFG1                                 | 32-bit, RW |
| 0x0074 | SMMU_GERROR_IRQ_CFG2                                 | 32-bit, RW |
| 0x0080 | SMMU_STRTAB_BASE                                     | 64-bit, RW |
| 0x0088 | SMMU_STRTAB_BASE_CFG                                 | 32-bit, RW |
| 0x0090 | SMMU_CMDQ_BASE                                       | 64-bit, RW |
| 0x0098 | SMMU_CMDQ_PROD                                       | 32-bit, RW |
| 0x009C | SMMU_CMDQ_CONS                                       | 32-bit, RW |
| 0x00A0 | SMMU_EVENTQ_BASE                                     | 64-bit, RW |
| 0x00A8 | Optional alias of SMMU_EVENTQ_PROD, otherwise RAZ/WI |            |
| 0x00AC | Optional alias of SMMU_EVENTQ_CONS, otherwise RAZ/WI |            |
| 0x00B0 | SMMU_EVENTQ_IRQ_CFG0                                 | 64-bit, RW |
| 0x00B8 | SMMU_EVENTQ_IRQ_CFG1                                 | 32-bit, RW |
| 0x00BC | SMMU_EVENTQ_IRQ_CFG2                                 | 32-bit, RW |
| 0x00C0 | SMMU_PRIQ_BASE                                       | 64-bit, RW |
| 0x00C8 | Optional alias of SMMU_PRIQ_PROD, otherwise RAZ/WI   | 32-bit, RW |
| 0x00CC | Optional alias of SMMU_PRIQ_CONS, otherwise RAZ/WI   | 32-bit, RW |
| 0x00D0 | SMMU_PRIQ_IRQ_CFG0                                   | 64-bit, RW |
| 0x00D8 | SMMU_PRIQ_IRQ_CFG1                                   | 32-bit, RW |
| 0x00DC | SMMU_PRIQ_IRQ_CFG2                                   | 32-bit, RW |
| 0x0100 | SMMU_GATOS_CTRL                                      | 32-bit, RW |

# Chapter 6. Memory map and registers 6.2. Register overview

| Offset            | Register                                 | Notes                  |
|-------------------|--|------------------------|
| 0x0108            | SMMU_GATOS_SID                           | 64-bit, RW             |
| 0x0110            | SMMU_GATOS_ADDR                          | 64-bit, RW             |
| 0x0118            | SMMU_GATOS_PAR                           | 64-bit, RO             |
| 0x0130            | SMMU_MPAMIDR                             | 32-bit, RO             |
| 0x0138            | SMMU_GMPAM                               | 32-bit, RW             |
| 0x013C            | SMMU_GBPMPAM                             | 32-bit, RW             |
| 0x0180            | SMMU_VATOS_SEL                           | 32-bit, RW             |
| 0x0190            | SMMU_IDR6                                | 32-bit, RO             |
| 0x0E00            | IMPLEMENTATION DEFINED                   | IMPLEMENTATION DEFINED |
| 0x0EFF            |  |                        |
| 0x0FD0-<br>0x0FFC | ID_REGS - identification register space. | IMPLEMENTATION DEFINED |
| 0×4000<br>+ 32*n  | SMMU_CMDQ_CONTROL_PAGE_BASEn             | 64-bit, RO             |
| 0x4008<br>+ 32*n  | SMMU_CMDQ_CONTROL_PAGE_CFGn              | 32-bit, RO             |
| 0x400C<br>+ 32*n  | SMMU_CMDQ_CONTROL_PAGE_STATUSn           | 32-bit, RO             |
| 0x8000            | SMMU_S_IDR0                              | 32-bit, Secure, RO     |
| 0x8004            | SMMU_S_IDR1                              | 32-bit, Secure, RO     |
| 0x8008            | SMMU_S_IDR2                              | 32-bit, Secure, RO     |
| 0x800C            | SMMU_S_IDR3                              | 32-bit, Secure, RO     |
| 0x8010            | SMMU_S_IDR4                              | 32-bit, Secure, RO     |
| 0x8020            | SMMU_S_CR0                               | 32-bit, Secure, RW     |
| 0x8024            | SMMU_S_CR0ACK                            | 32-bit, Secure, RO     |
| 0x8028            | SMMU_S_CR1                               | 32-bit, Secure, RW     |
| 0x802C            | SMMU_S_CR2                               | 32-bit, Secure, RW     |
| 0x803C            | SMMU_S_INIT                              | 32-bit, Secure, RW     |
| 0x8044            | SMMU_S_GBPA                              | 32-bit, Secure, RW     |

| Offset | Register               | Notes              |
|--------|------------------------|--------------------|
| 0x8048 | SMMU_S_AGBPA           | 32-bit, Secure, RW |
| 0x8050 | SMMU_S_IRQ_CTRL        | 32-bit, Secure, RW |
| 0x8054 | SMMU_S_IRQ_CTRLACK     | 32-bit, Secure, RO |
| 0x8060 | SMMU_S_GERROR          | 32-bit, Secure, RO |
| 0x8064 | SMMU_S_GERRORN         | 32-bit, Secure, RW |
| 0x8068 | SMMU_S_GERROR_IRQ_CFG0 | 64-bit, Secure, RW |
| 0x8070 | SMMU_S_GERROR_IRQ_CFG1 | 32-bit, Secure, RW |
| 0x8074 | SMMU_S_GERROR_IRQ_CFG2 | 32-bit, Secure, RW |
| 0x8080 | SMMU_S_STRTAB_BASE     | 64-bit, Secure, RW |
| 0x8088 | SMMU_S_STRTAB_BASE_CFG | 32-bit, Secure, RW |
| 0x8090 | SMMU_S_CMDQ_BASE       | 64-bit, Secure, RW |
| 0x8098 | SMMU_S_CMDQ_PROD       | 32-bit, Secure, RW |
| 0x809C | SMMU_S_CMDQ_CONS       | 32-bit, Secure, RW |
| 0x80A0 | SMMU_S_EVENTQ_BASE     | 64-bit, Secure, RW |
| 0x80A8 | SMMU_S_EVENTQ_PROD     | 32-bit, Secure, RW |
| 0x80AC | SMMU_S_EVENTQ_CONS     | 32-bit, Secure, RW |
| 0x80B0 | SMMU_S_EVENTQ_IRQ_CFG0 | 64-bit, Secure, RW |
| 0x80B8 | SMMU_S_EVENTQ_IRQ_CFG1 | 32-bit, Secure, RW |
| 0x80BC | SMMU_S_EVENTQ_IRQ_CFG2 | 32-bit, Secure, RW |
| 0x8100 | SMMU_S_GATOS_CTRL      | 32-bit, Secure, RW |
| 0x8108 | SMMU_S_GATOS_SID       | 64-bit, Secure, RW |
| 0x8110 | SMMU_S_GATOS_ADDR      | 64-bit, Secure, RW |
| 0x8118 | SMMU_S_GATOS_PAR       | 64-bit, Secure, RO |
| 0x8130 | SMMU_S_MPAMIDR         | 32-bit, Secure, RO |
| 0x8138 | SMMU_S_GMPAM           | 32-bit, Secure, RW |
| 0x813C | SMMU_S_GBPMPAM         | 32-bit, Secure, RW |
| 0x8180 | SMMU_S_VATOS_SEL       | 32-bit, Secure, RW |

| Offset                | Register                         | Notes                          |
|-----------------------|----------------------------------|--------------------------------|
| 0x8190                | SMMU_S_IDR6                      | 32-bit, Secure, RO             |
| 0x8E00<br>-<br>0x8EFF | IMPLEMENTATION DEFINED, Secure   | IMPLEMENTATION DEFINED, Secure |
| 0x9000<br>-<br>0xBFFF | IMPLEMENTATION DEFINED, Secure   | IMPLEMENTATION DEFINED, Secure |
| 0xC000<br>+ 32*n      | SMMU_S_CMDQ_CONTROL_PAGE_BASEn   | 64-bit, Secure, RO             |
| 0xC008<br>+ 32*n      | SMMU_S_CMDQ_CONTROL_PAGE_CFGn    | 32-bit, Secure, RO             |
| 0xC00C<br>+ 32*n      | SMMU_S_CMDQ_CONTROL_PAGE_STATUSn | 32-bit, Secure, RO             |

# 6.2.2 Registers in Page 1

Offsets are relative to the base of Page 1, 0x10000.

| Offset | Register         | Notes      |
|--------|------------------|------------|
| 0x00A8 | SMMU_EVENTQ_PROD | 32-bit, RW |
| 0x00AC | SMMU_EVENTQ_CONS | 32-bit, RW |
| 0x00C8 | SMMU_PRIQ_PROD   | 32-bit, RW |
| 0x00CC | SMMU_PRIQ_CONS   | 32-bit, RW |

## 6.2.3 Registers in the VATOS page

Offsets are relative to the base of the VATOS page,  $o_{VATOS}$ . See SMMU\_IDR2.

| Offset     | Register               | Notes      |
|------------|------------------------|------------|
| 0x0A00     | SMMU_VATOS_CTRL        | 32-bit, RW |
| 0x0A08     | SMMU_VATOS_SID         | 64-bit, RW |
| 0x0A10     | SMMU_VATOS_ADDR        | 64-bit, RW |
| 0x0A18     | SMMU_VATOS_PAR         | 64-bit, RO |
| 0x0E00     | IMPLEMENTATION DEFINED |            |
| -<br>0xEFF |                        |            |

## 6.2.4 Registers in the S\_VATOS page

When Secure state is supported and SMMU\_S\_IDR1.SEL2 == 1 and SMMU\_IDR0.VATOS == 1, the S\_VATOS registers are present.

The base address of the S\_VATOS page is determined from SMMU\_S\_IDR2.BA\_S\_VATOS and referred to as O\_S\_VATOS:

O\_S\_VATOS = SMMU\_BASE + 0x20000 + (SMMU\_S\_IDR2.BA\_S\_VATOS \* 0x10000)

The offsets below are relative to the base of the  $S_VATOS$  page,  $O_S_VATOS$ .

| Offset               | Register               | Notes              |
|----------------------|------------------------|--------------------|
| 0x0A00               | SMMU_S_VATOS_CTRL      | 32-bit, Secure, RW |
| 0x0A08               | SMMU_S_VATOS_SID       | 64-bit, Secure, RW |
| 0x0A10               | SMMU_S_VATOS_ADDR      | 64-bit, Secure, RW |
| 0x0A18               | SMMU_S_VATOS_PAR       | 64-bit, Secure, RO |
| 0x0E00<br>-<br>0xEFF | IMPLEMENTATION DEFINED | Secure             |

#### 6.2.5 Registers in a Command queue control page

A Command queue control page contains the ECMDQ interfaces specified in section 3.5.6 *Enhanced Command queue interfaces*.

The number of ECMDQs in a Command queue control page is between 1 and 256, according to the value of SMMU\_IDR6.CMDQ\_CONTROL\_PAGE\_LOG2NUMQ for Non-secure state, or SMMU\_S\_IDR6.CMDQ\_CONTROL\_PAGE\_LOG2NUMQ for Secure state.

The size of a Command queue control page is 64KB. A Command queue control page is aligned in PA space to 64KB.

A Command queue control page is implemented as registers.

The ECMDQs are spaced evenly throughout a Command queue control page.

For example, if a control page has 128 ECMDQs, the interfaces are spaced at 512 byte intervals throughout the page.

There are therefore many copies of the following three registers within a Command queue control page:

| Offset | Register        | Notes      |
|--------|-----------------|------------|
| 0x00   | SMMU_ECMDQ_BASE | 64-bit, RW |
| 0x08   | SMMU_ECMDQ_PROD | 32-bit, RW |
| 0x0C   | SMMU_ECMDQ_CONS | 32-bit, RW |

## 6.2.6 Root Control Page

Access to the SMMU Root Control Page is bounded by the following rules:

- The base address is IMPLEMENTATION DEFINED.
- The base address is 64KB aligned.
- The page is accessible only in the Root PA space.
- Accesses in any PA space other than Root are completed as RAZ/WI.
- The Root Control Page base address is distinct from addresses of registers accessible in other PA spaces.

#### Address map:

| Offset        | Register               | Notes                  |
|---------------|------------------------|------------------------|
| 0x0000        | SMMU_ROOT_IDR0         | 32-bit, RO             |
| 0x0008        | SMMU_ROOT_IIDR         | 32-bit, RO             |
| 0x0020        | SMMU_ROOT_CR0          | 32-bit, R/W            |
| 0x0024        | SMMU_ROOT_CR0ACK       | 32-bit, RO             |
| 0x0028        | SMMU_ROOT_GPT_BASE     | 64-bit, R/W            |
| 0x0030        | SMMU_ROOT_GPT_BASE_CFG | 64-bit, R/W            |
| 0x0038        | SMMU_ROOT_GPF_FAR      | 64-bit, R/W            |
| 0x0040        | SMMU_ROOT_GPT_CFG_FAR  | 64-bit, R/W            |
| 0x0050        | SMMU_ROOT_TLBI         | 64-bit, R/W, OPTIONAL  |
| 0x0058        | SMMU_ROOT_TLBI_CTRL    | 32-bit, R/W, OPTIONAL  |
| 0x0E00-0x0EFF | IMPLEMENTATION DEFINED | IMPLEMENTATION DEFINED |

Locations in the SMMU Root Control Page that are not associated with a register are RESO.

# 6.3 Register formats

In the following detailed register descriptions, there is information about behavior of accesses to each register. For each register, there is a subsection titled "Accessing the *register name*". This subsection in each register description follows the following format:

- 1. Optional introductory text, that might specify complex access behaviors.
- 2. A table describing the register page and offset of the register.
- 3. A simplified description of the register access behavior.

In all cases, the information in part 3 describes the behavior from SMMUv3.2 onwards. In some cases, the introductory text in part 1 includes additional, more-relaxed, behaviors that were permitted in SMMUv3.1 and earlier.

## 6.3.1 SMMU\_IDR0

The SMMU\_IDR0 characteristics are:

#### Purpose

Provides information about the features implemented for the SMMU Non-secure programming interface.


#### **Attributes**

SMMU\_IDR0 is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

#### **Field descriptions**

The SMMU\_IDR0 bit assignments are:

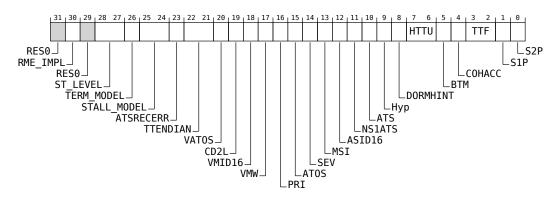

#### Bit [31]

Reserved, RESO.

#### RME\_IMPL, bit [30]

Indicates support for SMMU\_RME\_IMPL.

| RME_IMPL | Meaning   |
|----------|---|
| 0b0      | RME features not supported for Non-secure or Secure programming interfaces.                                       |
| 0b1      | RME features supported for Non-secure programming interface, and for Secure programming interface if implemented. |

If this bit is 1, it is possible to report each of  $F_STE_FETCH$ ,  $F_CD_FETCH$ ,  $F_VMS_FETCH$ , and  $F_WALK_EABT$  with GPCF == 1 in the Non-secure Event queue.

#### Bit [29]

Reserved, RESO.

#### ST\_LEVEL, bits [28:27]

Multi-level Stream table support.

| ST_LEVEL | Meaning  |
|----------|--|
| 0b00     | Linear Stream table supported.                                     |
| 0b01     | 2-level Stream table supported in addition to Linear Stream table. |
| 0b1x     | Reserved.  |

#### TERM\_MODEL, bit [26]

Terminate model behavior.

| TERM_MODEL | Meaning  |
|------------|--|
| 0b0        | <ul> <li>CD.A flag determines Abort or RAZ/WI behavior of a terminated transaction.</li> <li>The act of terminating a transaction might be configured using the CD.A flag to successfully complete the transaction with RAZ/WI behavior or abort the transaction.</li> </ul> |
| 0b1        | Terminating a transaction with RAZ/WI behavior is not supported, CD.A must be 1.  • This means that a terminated transaction will always be aborted.   |

## STALL\_MODEL, bits [25:24]

Stall model support.

| STALL_MODEL | Meaning  |
|-------------|--|
| 0000        | Stall and Terminate models supported.  |
| 0b01        | Stall is not supported, all faults terminate transaction and STE.S2S and CD.S must be 0.  • CMD_RESUME and CMD_STALL_TERM are not available. |
| 0b10        | Stall is forced (all faults eligible to stall cause stall), STE.S2S and CD.S must be 1.  |
| 0b11        | Reserved.  |

- Note: STE.S2S must be in the states above only if stage 2 translation was enabled.
- When SMMU\_S\_IDR1.SECURE\_IMPL == 0, this field reports whether an implementation supports the Stall model.

When SMMU\_S\_IDR1.SECURE\_IMPL == 1, this field reports SMMU\_S\_IDR0.STALL\_MODEL unless SMMU\_S\_IDR0.STALL\_MODEL == 0b00 and SMMU\_S\_CR0.NSSTALLD == 1 in which case

Non-secure use of Stall is prevented and this field's value is 0b01. See section 3.12 Fault models, recording and reporting.

- Note: When SMMU\_S\_IDR1.SECURE\_IMPL == 1, this field is related to SMMU\_S\_IDR0.STALL\_MODEL and might be modified by SMMU\_S\_CR0.NSSTALLD. See section 3.12 Fault models, recording and reporting.
- Note: An SMMU associated with a PCI system must not have STALL\_MODEL == 0b10.

#### ATSRECERR, bit [23]

Indicates support for recording Configuration-related errors for ATS and PRI.

| ATSRECERR | Meaning   |
|-----------|---|
| 000       | SMMU supports recording only the base set of Events for ATS-related and PRI requests. |
| 0b1       | SMMU supports recording some additional Events for ATS-related and PRI requests.      |

See section 3.9.1.1 *Responses to ATS Translation Requests and Translated transactions* and section 8.1 *PRI queue overflow* for details of which events are recorded or not.

See SMMU\_CR2.REC\_CFG\_ATS for control details.

This bit is RES0 if  $SMMU_IDR0.ATS == 0$ .

#### TTENDIAN, bits [22:21]

Endianness support for translation table walks.

| TTENDIAN | Meaning   |
|----------|---|
| 0b00     | Mixed-endian: CD.ENDI and STE.S2ENDI are each permitted to select either endianness, and do not have to have the same value |
| 0b01     | Reserved  |
| 0b10     | Little-endian: CD.ENDI and STE.S2ENDI must select little-endian   |
| 0b11     | Big-endian: CD.ENDI and STE.S2ENDI must select big-endian   |

• Arm strongly recommends that a general-purpose SMMU implementation supports mixed-endian translation table walks.

#### VATOS, bit [20]

Virtual ATOS page interface supported.

| VATOS | Meaning                                    |
|-------|--|
| 0b0   | Virtual ATOS page interface not supported. |

| VATOS | Meaning   |
|-------|---|
| 0b1   | Virtual ATOS page interface supported.  • ATOS must also be supported.  • Stage 1 and stage 2 translation must also be supported. |

## CD2L, bit [19]

2-level Context descriptor table supported.

| CD2L | Meaning                         |
|------|---------------------------------|
| 0b0  | 2-level CD table not supported. |
| 0b1  | 2-level CD table supported.     |

## VMID16, bit [18]

16-bit VMID supported.

| VMID16 | Meaning   |
|--------|---|
| 000    | <ul><li>16-bit VMID not supported.</li><li>VMID[15:8] is RESO in command parameters and must be zero in STE.S2VMID.</li></ul> |
| 0b1    | 16-bit VMID supported.  |

• Note: The value of this field is irrelevant to software unless SMMU\_IDR0.S2P == 1.

## VMW, bit [17]

VMID wildcard-matching supported for TLB invalidation.

| VMW | Meaning  |
|-----|--|
| 0b0 | VMID wildcard-matching not supported for TLB invalidation. |
| 0b1 | VMID wildcard-matching supported for TLB invalidation.     |

• When SMMU\_IDR0.S2P == 0 this field is RES0

## PRI, bit [16]

Page Request Interface supported.

| PRI | Meaning  |
|-----|--|
| 0d0 | Page Request Interface not supported • All SMMU_PRIQ_* registers are Reserved. |
| 0b1 | Page Request Interface supported   |

- When SMMU\_IDR0.ATS == 0 this field is RES0.
- See section 3.9 Support for PCI Express, PASIDs, PRI and ATS.

#### ATOS, bit [15]

Address Translation Operations supported.

| ATOS | Meaning   |
|------|---|
| 0b0  | Address Translation Operations not supported.  • SMMU_IDR0.VATOS is RES0 and all SMMU_(S_)GATOS_* registers are Reserved. |
| 0b1  | Address Translation Operations supported  |

## SEV, bit [14]

SMMU, and system, support generation of WFE wake-up events to PE.

| SEV | Meaning   |
|-----|---|
| 0b0 | SMMU, and system, do not support generation of WFE wake-up events to PE.  |
| 0b1 | <ul> <li>SMMU, and system, support generation of WFE wake-up events to PE.</li> <li>Note: WFE might be used on the PE to wait for CMD_SYNC command completion.</li> </ul> |

• This bit must reflect the ability of the system, and SMMU implementation, to convey events to all PEs that are expected to run SMMU maintenance software.

## MSI, bit [13]

Message Signalled Interrupts are supported.

| MSI | Meaning  |
|-----|--|
| 0d0 | The implementation supports wired interrupt notifications only.  • The MSI fields in SMMU_EVENTQ_IRQ_CFGn, SMMU_PRIQ_IRQ_CFGn and SMMU_GERROR_IRQ_CFGn are RES0. |
| 0b1 | Message Signalled Interrupts are supported.  |

• Note: The SMMU\_PRIQ\_IRQ\_CFG2.LO bit is not affected by whether MSIs are implemented or not.

#### ASID16, bit [12]

16-bit ASID support.

| ASID16 | Meaning  |
|--------|--|
| 000    | <ul><li>16-bit ASID not supported.</li><li>ASID[15:8] is RES0 in command parameters and must be zero in CD.ASID.</li></ul> |
| 0b1    | 16-bit ASID is supported.  |

Note: The value of this bit is irrelevant to software unless SMMU\_IDR0.S1P == 1.

#### NS1ATS, bit [11]

Split-stage (stage 1-only) ATS not supported.

| NS1ATS | Meaning  |
|--------|--|
| 0b0    | Split-stage (stage 1-only) ATS supported.  |
| 0b1    | <ul> <li>Split-stage (stage 1-only) ATS not supported.</li> <li>Split-stage ATS set by STE.EATS == 0b10 is not supported. See STE.EATS.</li> </ul> |

- RESO when SMMU\_IDR0.ATS == 0 or SMMU\_IDR0.S1P == 0 or SMMU\_IDR0.S2P == 0.
- Note: The value of this field is only relevant to software when ATS and both stages of translation are supported.
- See section 3.9 Support for PCI Express, PASIDs, PRI and ATS.

#### ATS, bit [10]

PCIe ATS supported by SMMU.

| ATS | Meaning                         |  |
|-----|---------------------------------|--|
| 0b0 | PCIe ATS not supported by SMMU. |  |
| 0b1 | PCIe ATS supported by SMMU.     |  |

• The support provided by an implementation for ATS and PRI influences interpretation of STE.EATS, ATS and PRI-related commands and SMMU\_PRIQ\_\* registers. It does not guarantee that client devices and intermediate components also support ATS and this must be determined separately.

See section 3.9 Support for PCI Express, PASIDs, PRI and ATS.

#### Hyp, bit [9]

Hypervisor stage 1 contexts supported.

This flag indicates whether TLB entries might be tagged as EL2/EL2-E2H - see STE.STRW.

| Нур | Meaning                                    |  |
|-----|--|--|
| 0b0 | Hypervisor stage 1 contexts not supported. |  |
| 0b1 | Hypervisor stage 1 contexts supported.     |  |

RESO when S1P == 0 or S2P == 0.

• Arm recommends the implementation of Hyp/EL2 support when S1P == 1 && S2P == 1, that is when both stages of translations are supported.

Note: The Hyp bit indicates support for Non-secure EL2 only. If the Secure state is supported, SMMU\_S\_IDR1.SEL2 indicates support for both S-EL2 and Secure stage 2.

Note: There is no SMMU equivalent of the Armv8.4 [2] SCR\_EL3.EEL2 flag to enable Secure EL2.

Hyp == 1 is mandatory in implementations of SMMUv3.2 or later, if S1P == 1 and S2P == 1.

#### DORMHINT, bit [8]

Dormant Hint supported.

| DORMHINT | Meaning                     |
|----------|-----------------------------|
| 0b0      | Dormant hint not supported. |
| 0b1      | Dormant hint supported.     |

#### HTTU, bits [7:6]

H/W translation table Access flag and Dirty state of the page updates supported.

| HTTU | Meaning                       |  |
|------|-------------------------------|--|
| 0b00 | No flag updates supported.    |  |
| 0b01 | Access flag update supported. |  |

| HTTU | Meaning   |  |
|------|---|--|
| 0b10 | Access flag and Dirty state of the page update supported. |  |
| 0b11 | Reserved.   |  |

- This field reflects the ability of the system, and SMMU implementation, to support hardware update.
- Note: HTTU is a feature of an SMMU implementation, but the system design also bears upon whether HTTU can be supported. For instance, HTTU requires coherent atomic updates to translation table data which need to be supported by an external interconnect. An SMMU that internally supports HTTU but does not have requisite system support must mark HTTU as 0b00 in this field.

#### BTM, bit [5]

Broadcast TLB Maintenance. Indicates support for receiving broadcast TLBI operations issued by Arm PEs in the system.

| ВТМ | Meaning                                  |  |
|-----|--|--|
| 0b0 | Broadcast TLB maintenance not supported. |  |
| 0b1 | Boradcast TLB maintenance supported.     |  |

• This bit reflects the ability of the system, and SMMU implementation, to support broadcast maintenance. If either the SMMU, or the system, or the interconnect cannot fully support broadcast TLB maintenance, this bit reads as 0.

#### COHACC, bit [4]

Coherent access supported to translations, structures and queues.

| СОНАСС | Meaning  |
|--------|--|
| 000    | Coherent access for translations, structures and queues is not supported.  |
| 0b1    | <ul> <li>IO-coherent access is supported for:</li> <li>Translation table walks.</li> <li>Fetches of L1STD, STE, L1CD and CD.</li> <li>Command queue, Event queue and PRI queue access.</li> <li>GERROR, CMD_SYNC, Event queue and PRI queue MSIs, if supported.</li> <li>Whether a specific access is performed in a chacheable shareable manner is dependent on the access type configured for access to structures, queues and translation table walks.</li> </ul> |

- This bit reflects the ability of the system, and SMMU implementation, to support IO-Coherent access to memory shared coherently with the PE. If either the SMMU or system cannot fully support IO-coherent access to SMMU structures/queues/translations, this reads as 0.
- Note: This bit only pertains to accesses made directly by the SMMU in response to internal operations. It

does not indicate that transactions from client devices are also IO-coherent, this capability must be determined in a system-specific manner.

• Note: For embedded implementations using preset tables or queues, this bit only pertains to accesses made outside of the preset structures.

## TTF, bits [3:2]

Translation table formats supported at both stage 1 and stage 2.

| TTF  | Meaning              |
|------|----------------------|
| 0b00 | Reserved.            |
| 0b01 | AArch32 (LPAE).      |
| 0b10 | AArch64.             |
| 0b11 | AArch32 and AArch64. |

# S1P, bit [1]

Stage1 translation supported.

| S1P | Meaning                            |  |
|-----|------------------------------------|--|
| 0b0 | Stage 1 translation not supported. |  |
| 0b1 | Stage 1 translation supported.     |  |

# S2P, bit [0]

Stage2 translation supported.

| S2P | Meaning                            |  |
|-----|------------------------------------|--|
| 0b0 | Stage 2 translation not supported. |  |
| 0b1 | Stage 2 translation supported.     |  |

# Accessing SMMU\_IDR0

SMMU\_IDR0 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x0000 |

# 6.3.2 SMMU\_IDR1

The SMMU\_IDR1 characteristics are:

#### Purpose

Provides information about the features implemented for the SMMU Non-secure programming interface.

#### **Attributes**

SMMU\_IDR1 is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_IDR1 bit assignments are:



#### ECMDQ, bit [31]

Support for enhanced Command queue interface.

| ECMDQ | Meaning   |  |
|-------|---|--|
| 0b0   | Enhanced Command queue interface not supported. SMMU_IDR6 is RES0.    |  |
| 0b1   | Enhanced Command queue interface details are advertised in SMMU_IDR6. |  |

If ECMDQ == 1, then  $SMMU\_IDR0.COHACC == 1$  and  $SMMU\_IDR0.MSI == 1$ .

See section 3.5.6 Enhanced Command queue interfaces.

## TABLES\_PRESET, bit [30]

Table base addresses fixed.

| TABLES_PRESET | Meaning  |
|---------------|--|
| 060           | The contents of the registers SMMU_STRTAB_BASE and SMMU_STRTAB_BASE_CFG are not fixed. When SMMU_S_IDR1.SECURE_IMPL == 1, the contents of the registers SMMU_S_STRTAB_BASE and SMMU_S_STRTAB_BASE_CFG are not fixed. |
| 0b1           | The contents of the registers SMMU_STRTAB_BASE, SMMU_STRTAB_BASE_CFG, SMMU_S_STRTAB_BASE and SMMU_S_STRTAB_BASE_CFG are fixed.   |

# QUEUES\_PRESET, bit [29]

Queue base addresses fixed.

| QUEUES_PRESET | Meaning   |
|---------------|---|
| 0b0           | The contents of the registers SMMU_CMDQ_BASE, SMMU_EVENTQ_BASE, and if present, SMMU_PRIQ_BASE are not fixed. When SMMU_S_IDR1.SECURE_IMPL == 1, the contents of the registers SMMU_S_CMDQ_BASE and SMMU_S_EVENTQ_BASE are not fixed. |
| 0b1           | The contents of the registers SMMU_CMDQ_BASE, SMMU_EVENTQ_BASE, and if present, SMMU_PRIQ_BASE are fixed.The contents of the registers SMMU_S_CMDQ_BASE and SMMU_S_EVENTQ_BASE are fixed.   |

# REL, bit [28]

Relative base pointers.

| REL | Meaning   |
|-----|---|
| 0b0 | When the corresponding preset field is set, base address registers report an absolute address.  |
| 0b1 | <ul> <li>When the corresponding preset field is set, base address registers report an address offset.</li> <li>Relative addresses are calculated using an addition of the unsigned ADDR field onto the base address of Page 0.</li> </ul> |

When SMMU\_IDR1.TABLES\_PRESET == 0 and SMMU\_IDR1.QUEUES\_PRESET == 0, this field is RESO.

# ATTR\_TYPES\_OVR, bit [27]

Incoming MemType, Shareability, allocation and transient hints override.

| ATTR_TYPES_OVR | Meaning  |
|----------------|--|
| 0b0            | Incoming attributes cannot be overridden before translation or by global bypass. |
| 0b1            | Incoming attributes can be overridden.   |

## ATTR\_PERMS\_OVR, bit [26]

Incoming Data or Instruction, User or Privileged, input NS attribute override.

| ATTR_PERMS_OVR | Meaning  |
|----------------|--|
| 0b0            | Incoming attributes cannot be overridden before translation or by global bypass. |
| 0b1            | Incoming attributes can be overridden.   |

## CMDQS, bits [25:21]

Maximum number of Command queue entries.

- Maximum number of entries as log<sub>2</sub>(entries).
  - Maximum value 19.
- Note: The index register values include an extra bit for wrap. Therefore a queue with 2<sup>N</sup> entries has indices of N bits, but an index register containing (N+1) bits.

#### EVENTQS, bits [20:16]

Maximum number of Event queue entries.

- Maximum number of entries as log<sub>2</sub>(entries).
  - Maximum value 19.

#### PRIQS, bits [15:11]

Maximum number of PRI queue entries.

- Maximum number of entries as log<sub>2</sub>(entries).
  - Maximum value 19.
  - If SMMU\_IDR0.PRI == 0, this field has an implementation-specific value.

#### SSIDSIZE, bits [10:6]

Max bits of SubstreamID.

- Valid range 0 to 20 inclusive, 0 meaning no substreams are supported.
- Reflects physical SubstreamID representation size, that is the SMMU cannot represent or be presented with SubstreamIDs greater than SSIDSIZE.

#### SIDSIZE, bits [5:0]

Max bits of StreamID.

- This value is between 0 and 32 inclusive.
  - Note: 0 is a legal value. In this case the SMMU supports one stream.
- This must reflect the physical StreamID size, that is the SMMU cannot represent or be presented with StreamIDs greater than SIDSIZE.
- When SMMU\_IDR1.SIDSIZE >= 7, SMMU\_IDR0.ST\_LEVEL != 0b00.

# Accessing SMMU\_IDR1

SMMU\_IDR1 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

# Chapter 6. Memory map and registers 6.3. Register formats

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x0004 |

# 6.3.3 **SMMU\_IDR2**

The SMMU\_IDR2 characteristics are:

#### Purpose

Provides information about the features implemented for the SMMU Non-secure programming interface.

#### **Attributes**

SMMU\_IDR2 is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_IDR2 bit assignments are:



#### Bits [31:10]

Reserved, RESO.

#### BA\_VATOS, bits [9:0]

#### When $SMMU\_IDR0.VATOS == 1$ :

VATOS page base address offset.

All BA values are encoded as an unsigned offset from SMMU address 0x20000 in units of 64KB.

Page\_Address =  $SMMU_BASE + 0x20000 + (BA * 0x10000)$ .

#### Otherwise:

RESO

# Accessing SMMU\_IDR2

SMMU\_IDR2 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x0008 |

# 6.3.4 SMMU\_IDR3

The SMMU\_IDR3 characteristics are:

## **Purpose**

Provides information about the features implemented for the SMMU Non-secure programming interface.


#### **Attributes**

SMMU\_IDR3 is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_IDR3 bit assignments are:



#### Bits [31:15]

Reserved, RESO.

## PTWNNC, bit [14]

Behavior of STE.S2PTW bit.

| PTWNNC | Meaning  |
|--------|--|
| 0b0    | STE.S2PTW == 0 permits stage 1 translation table walks mapped as Device memory.                                  |
| 0b1    | STE.S2PTW == 0 treats stage 1 translation table walks mapped as Device memory, as Normal Non-cacheable accesses. |

In implementations of SMMUv3.3 and later that have SMMU\_IDR0.S2P == 1, SMMU\_IDR3.PTWNNC == 1. See STE.S2PTW for details.

If  $SMMU_IDR0.S2P == 0$ , this bit is RES0.

#### E0PD, bit [13]

| E0PD | Meaning                                |
|------|--|
| 0b0  | The E0PD mechanism is not implemented. |
| 0b1  | The E0PD mechanism is implemented.     |

This bit is 1 in all implementations of SMMUv3.3 and later.

See CD.E0PD0 and CD.E0PD1.

## BBML, bits [12:11]

Break-Before-Make behavior Level.

| BBML | Meaning  |  |
|------|----------|--|
| 0b00 | Level 0. |  |
| 0b01 | Level 1. |  |
| 0b10 | Level 2. |  |

- $\bullet\,$  BBML is 0b01 or 0b10 in an implementation of SMMUv3.2 or later.
- See section 3.21.1 Translation tables and TLB invalidation completion behavior.

## RIL, bit [10]

Range-based Invalidations and Level hint support for TLBI.

| RIL | Meaning  |
|-----|--|
| 0b0 | Range-based invalidation and level hint are not supported. |
| 0b1 | Range-based invalidation and level hint are supported.     |

- RIL is 1 in an implementation of SMMUv3.2 or later.
- See section 4.4.1.1 Range-based invalidation and level hint.

## STT, bit [9]

Small translation table support.

| STT | Meaning                                     |
|-----|---|
| 0b0 | Small translation tables are not supported. |
| 0b1 | Small translation tables are supported.     |

• STT is 1 in implementations where SMMU\_S\_IDR1.SEL2 == 1.

## FWB, bit [8]

Stage 2 control of memory types and attributes.

| FWB | Meaning  |
|-----|--|
| 0b0 | Stage 2 control of memory types and attributes is not supported and the STE.S2FWB bit is RES0. |

| FWB | Meaning  |
|-----|--|
| 0b1 | Stage 2 control of memory types and attributes is supported. |

• FWB is 1 in an implementation of SMMUv3.2 or later.

## MPAM, bit [7]

Memory Partitioning And Monitoring (MPAM) support.

| MPAM | Meaning  |
|------|--|
| 0b0  | MPAM is not supported.   |
| 0b1  | MPAM is supported in at least one Security state and the SMMU_(S_)MPAMIDR registers are present.  The SMMU_(S_)MPAMIDR registers indicate whether MPAM is supported by a corresponding Security state. |

- MPAM support is optional.
- When MPAM is not supported, all MPAM-related register fields are RESO.
- See Chapter 17 Memory System Resource Partitioning and Monitoring.

#### Bit [6]

Reserved, RESO.

## PPS, bit [5]

| PPS | Meaning   |
|-----|---|
| 0b0 | The STE.PPAR field determines whether the PASID is used on a PRI auto-generated response.   |
| 0b1 | If the request had a PASID, it is used on a PRI auto-generated response for PRI queue overflow, in the same way as when STE.PPAR == 1. The STE.PPAR field is not checked, and the value is IGNORED. |

• When SMMU\_IDR0.PRI == 0 or SMMU\_IDR1.SSIDSIZE == 0, this field is RES0.

## XNX, bit [4]

Indicates support for execute-never control distinction by Exception level at stage 2.

| XNX | Meaning   |
|-----|---|
| 0d0 | EL0/EL1 execute control distinction at stage 2 not supported. |

| XNX | Meaning  |
|-----|--|
| 0b1 | <ul> <li>EL0/EL1 execute control distinction at stage 2 supported for both AArch64 and AArch32 stage 2 translation tables.</li> <li>This feature extends the stage 2 TTD.XN field bit to 2 bits which are encoded, and behave as described in Armv8.2[2].</li> </ul> |

- In SMMUv3.0, this field is RES0.
- In SMMUv3.1 and later, support for this feature is mandatory when stage 2 is supported, that is when SMMU\_IDR0.S2P == 1.

#### PBHA, bit [3]

Page-Based Hardware Attributes presence.

| PBHA | Meaning   |
|------|---|
| 000  | Page-Based Hardware Attributes not supported.  • SMMU_IDR3.HAD determines whether Hierachical Attribute Disables supported. |
| 0b1  | Page-Based Hardware Attributes supported.  • If this field is one SMMU_IDR3.HAD must be one.                                |

- In SMMUv3.0, this field is RES0.
- See CD.HWU059 and STE.S2HWU59.

# HAD, bit [2]

Hierarchical Attribute Disable presence.

| HAD | Meaning   |
|-----|---|
| 0b0 | No Hierarchical Attribute Disable support. CD.HAD0 and CD.HAD1 are IGNORED. |
| 0b1 | CD.HAD0 and CD.HAD1 control Hierarchical Attribute Disable.                 |

- In SMMUv3.0, support for this feature is optional when stage 1 is supported, that is when SMMU\_IDR0.S1P == 1.
- In SMMUv3.1 and later, support for this feature is mandatory when stage 1 is supported, that is when SMMU\_IDR0.S1P == 1.
- When  $SMMU\_IDR0.S1P == 0$ ,  $SMMU\_IDR3.HAD == 0$ .

# Bits [1:0]

Reserved, RESO.

# Accessing SMMU\_IDR3

SMMU\_IDR3 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x000C |

# 6.3.5 **SMMU\_IDR4**

The SMMU\_IDR4 characteristics are:

## **Purpose**

Provides information about the features implemented for the SMMU Non-secure programming interface.

#### **Attributes**

SMMU\_IDR4 is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_IDR4 bit assignments are:



#### IMPLEMENTATION\_DEFINED, bits [31:0]

IMPLEMENTATION DEFINED

#### Additional information

The contents of this register are IMPLEMENTATION DEFINED and can be used to identify the presence of other IMPLEMENTATION DEFINED register regions elsewhere in the memory map.

# Accessing SMMU\_IDR4

SMMU\_IDR4 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x0010 |

# 6.3.6 SMMU\_IDR5

The SMMU\_IDR5 characteristics are:

#### **Purpose**

Provides information about the features implemented for the SMMU Non-secure programming interface.


#### **Attributes**

SMMU\_IDR5 is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

## Field descriptions

The SMMU\_IDR5 bit assignments are:



#### STALL\_MAX, bits [31:16]

Maximum number of outstanding stalled transactions supported by the SMMU and system.

- The SMMU guarantees that the total number of Stall fault records that will be recorded in any Event queue, without any having been the subject of a resume or terminate command, will not exceed this number.
- This field is RESO if SMMU\_S\_IDR1.SECURE\_IMPL == 0 and SMMU\_IDR0.STALL\_MODEL == 0b01, or if SMMU\_S\_IDR1.SECURE\_IMPL == 1 and SMMU\_S\_IDR0.STALL\_MODEL == 0b01.

#### Bits [15:12]

Reserved, RESO.

#### VAX, bits [11:10]

Virtual Address eXtend.

| VAX  | Meaning   |
|------|---|
| 0b00 | Virtual addresses of up to 48 bits can be translated per CD.TTBx. |
| 0b01 | Virtual addresses of up to 52 bits can be translated per CD.TTBx. |

- Other values reserved.
- In SMMUv3.0, this field is RES0.
- An implementation is permitted to support VAX == 0b01 independently of whether OAS == 0b110.
- If VAX == 0b01, GRAN64K must be 1.

#### Bits [9:7]

Reserved, RESO.

## GRAN64K, bit [6]

64KB translation granule supported.

| GRAN64K | Meaning                                 |
|---------|---|
| 0b0     | 64KB translation granule not supported. |
| 0b1     | 64KB translation granule supported.     |

# GRAN16K, bit [5]

16KB translation granule supported.

| GRAN16K | Meaning                                 |
|---------|---|
| 0b0     | 16KB translation granule not supported. |
| 0b1     | 16KB translation granule supported.     |

# GRAN4K, bit [4]

4KB translation granule supported.

| GRAN4K | Meaning                                |
|--------|--|
| 0b0    | 4KB translation granule not supported. |
| 0b1    | 4KB translation granule supported.     |

• When SMMU\_IDR0.TTF[0] == 1, that is when AArch32 translation tables are supported, this field is RES1.

## Bit [3]

Reserved, RESO.

## OAS, bits [2:0]

Output Address Size.

Size of physical address output from SMMU.

| OAS   | Meaning  |
|-------|----------|
| 0b000 | 32 bits. |
| 0b001 | 36 bits. |
| 0b010 | 40 bits. |
| 0b011 | 42 bits. |

| OAS   | Meaning   |
|-------|---|
| 0b100 | 44 bits.  |
| 0b101 | 48 bits.  |
| 0b110 | <ul><li>52 bits.</li><li>In SMMUv3.0, this value is Reserved.</li></ul>   |
| 0b111 | Reserved.  • Any future use of reserved encodings will ensure that any new encoded size will never be smaller than those defined in this version of the architecture. |

- This value must match the system physical address size, see section 3.4 Address sizes.
- Note: Where reference is made to OAS, it is the size value that is referenced, not the literal value of this field.
- If OAS indicates 52 bits, GRAN64K must be 1.

Note: Arm recommends that SMMUv3 implementations support at least 4K and 64K granules.

# Accessing SMMU\_IDR5

SMMU\_IDR5 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x0014 |

## 6.3.7 SMMU IIDR

The SMMU\_IIDR characteristics are:

#### Purpose

Provides information about the implementation and implementer of the SMMU, and architecture version supported.

#### **Attributes**

SMMU\_IIDR is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

#### Field descriptions

The SMMU\_IIDR bit assignments are:

| ı | 31 20     | l 19 16 | 15 12    | 111 0 1     |  |
|---|-----------|---------|----------|-------------|--|
|   | ProductID | Variant | Revision | Implementer |  |

#### ProductID, bits [31:20]

ProductID.

- IMPLEMENTATION DEFINED value identifying the SMMU part.
- Note: Normally, when the SMMU\_PIDR{0,1} registers are present, Arm expects that the SMMU\_PIDR{0,1}.PART\_{0,1} fields match the value of SMMU\_IIDR.ProductID. If required, however, an implementation is permitted to provide values for SMMU\_PIDR.{0,1}.PART\_{0,1} that do not match the value of SMMU\_IIDR.ProductID.

#### Variant, bits [19:16]

Variant.

• IMPLEMENTATION DEFINED value used to distinguish product variants, or major revisions of the product

#### Revision, bits [15:12]

Revision.

• IMPLEMENTATION DEFINED value used to distinguish minor revisions of the product

#### Implementer, bits [11:0]

Implementer.

- Contains the JEP106 code of the company that implemented the SMMU:
  - [11:8] The JEP106 continuation code of the implementer.
  - [7] Always 0.
  - [6:0] The JEP106 identity code of the implementer.
- For an Arm implementation, bits[11:0] are 0x43B.
- Matches the SMMU\_PIDR{1,2,4}.DES\_{0,1,2} fields, if SMMU\_PIDR{1,2,4} are present.

#### Additional information

Note: This register duplicates some of the information that might be present in the ID\_REGS SMMU\_CIDRx/SMMU\_PIDRx fields. However, those fields are not required to be present in all implementations, so this register provides a way for software to probe this information in a generic way. Arm expects that the SMMU\_CIDRx/SMMU\_PIDRx fields are used by Arm CoreSight and related debug mechanisms rather than primarily being for the use of drivers.

# Accessing SMMU\_IIDR

SMMU\_IIDR can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x0018 |

# 6.3.8 SMMU\_AIDR

The SMMU\_AIDR characteristics are:

#### **Purpose**

This register identifies the SMMU architecture version to which the implementation conforms.

#### **Attributes**

SMMU\_AIDR is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_AIDR bit assignments are:



#### Bits [31:8]

Reserved, RESO.

#### ArchMajorRev, bits [7:4]

Major Architecture revision.

| ArchMajorRev | Meaning   |
|--------------|-----------|
| 0b0000       | SMMUv3.x. |

# ArchMinorRev, bits [3:0]

Minor Architecture revision.

| ArchMinorRev | Meaning   |
|--------------|-----------|
| 000000       | SMMUv3.0. |
| 0b0001       | SMMUv3.1. |
| 0b0010       | SMMUv3.2. |
| 0b0011       | SMMUv3.3. |

# Accessing SMMU\_AIDR

SMMU\_AIDR can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x001C |

Chapter 6. Memory map and registers 6.3. Register formats

# 6.3.9 SMMU\_CR0

The SMMU\_CR0 characteristics are:

#### Purpose

Non-secure SMMU programming interface control and configuration register.

#### **Attributes**

SMMU\_CR0 is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_CR0 bit assignments are:



#### Bits [31:9]

Reserved, RESO.

VMW, bits [8:6]

When  $SMMU\_IDR0.VMW == 1$ :

VMID Wildcard.

| VMW   | Meaning                                    |
|-------|--|
| 0b000 | TLB invalidations match VMID tags exactly. |
| 0b001 | TLB invalidations match VMID[N:1].         |
| 0b010 | TLB invalidations match VMID[N:2].         |
| 0b011 | TLB invalidations match VMID[N:3].         |
| 0b100 | TLB invalidations match VMID[N:4].         |

- All other values are reserved, and behave as 0b000.
  - N == upper bit of VMID as determined by SMMU\_IDR0.VMID16.
- This field has no effect on VMID matching on translation lookup.

The reset behavior of this field is:

• This field resets to 0b000.

#### Otherwise:

RES0

#### Bit [5]

Reserved, RESO.

## ATSCHK, bit [4]

## When $SMMU\_IDR0.ATS == 1$ :

ATS behavior.

| ATSCHK | Meaning  |
|--------|--|
| 000    | Fast mode, all ATS Translated traffic passes through the SMMU without Stream table or TLB lookup.  |
| 0b1    | Safe mode, all ATS Translated traffic is checked against the corresponding STE.EATS field to determine whether the StreamID is allowed to produce Translated transactions. |

#### See also:

- Section 3.9.1.1 Responses to ATS Translation Requests and Translated transactions.
- Section 13.6 PCIe and ATS attribute/permissions handling.
- Section 17.3 PCIe ATS transactions.

The reset behavior of this field is:

• This field resets to 0b0.

## Otherwise:

RESO

## CMDQEN, bit [3]

Enable Command queue processing.

| CMDQEN | Meaning   |
|--------|---|
| 0b0    | Processing of commands from the Non-secure Command queue is disabled. |
| 0b1    | Processing of commands from the Non-secure Command queue is enabled.  |

The reset behavior of this field is:

• This field resets to 0b0.

# **EVENTQEN**, bit [2]

Enable Event queue writes.

| EVENTQEN | Meaning  |  |
|----------|--|--|
| 0b0      | Writes to the Non-secure Event queue are disabled. |  |
| 0b1      | Writes to the Non-secure Event queue are enabled.  |  |

The reset behavior of this field is:

• This field resets to 0b0.

#### PRIQEN, bit [1]

#### When $SMMU\_IDR0.PRI == 1$ :

Enable PRI queue writes.

| PRIQEN | Meaning                               |  |
|--------|---------------------------------------|--|
| 0b0    | Writes to the PRI queue are disabled. |  |
| 0b1    | Writes to the PRI queue are enabled.  |  |

The reset behavior of this field is:

• This field resets to 0b0.

#### Otherwise:

RESO

#### SMMUEN, bit [0]

Non-secure SMMU enable

| SMMUEN | Meaning   |  |
|--------|---|--|
| 0b0    | All Non-secure streams bypass SMMU, with attributes determined from SMMU_GBPA.                      |  |
| 0b1    | All Non-secure streams are checked against configuration structures, and might undergo translation. |  |

The reset behavior of this field is:

• This field resets to 0b0.

# Accessing SMMU\_CR0

SMMU\_CR0 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x0020 |

Access on this interface is RW.

## Additional information

Each field in this register has a corresponding field in SMMU\_CROACK. An individual field is described as *Updated* after the value of the field observed in SMMU\_CROACK matches the value that was written to the field

in SMMU\_CR0. Reserved fields in SMMU\_CR0 are not reflected in SMMU\_CR0ACK. To ensure a field change has taken effect, software must poll the equivalent field in SMMU\_CR0ACK after writing the field in this register.

Each field in this register is independent and unaffected by ongoing update procedures of adjacent fields.

Update of a field must complete in finite time, but is not required to occur immediately. The Update process has side-effects which are guaranteed to be complete by the time update completes.

A field that has been written is considered to be in a transitional state until Update has completed. Any SMMU function depending on its value observes the old value until the new value takes effect at an UNPREDICTABLE point before Update completes, whereupon the new value is guaranteed to be used. Therefore:

- A new value written to a field cannot be assumed to have taken effect until Update completes.
- A new value written to a field cannot be assumed not to have taken effect immediately after the write is
  observed by the SMMU.

A written value is observable to reads of the register even before Update has completed.

Anywhere this document refers to behavior depending on a field value (for example, a rule of the form "REG must only be changed if SMMUEN == 0"), it is the post-Update value that is referred to. In this example, the rule would be broken were REG to be changed after the point that SMMU\_(S\_)CR0.SMMUEN has been written to 1 even if Update has not completed. Similarly, a field that has been written and is still in a transitional state (pre-Update completion) must be considered to still have the old value for the purposes of constraints the old value places upon software. For example, SMMU\_CMDQ\_CONS must not be written when CMDQEN == 1, or during an as-yet incomplete transition to 0 (as CMDQEN must still be considered to be 1).

After altering a field value, software must not alter the value of the field again before the Update of the initial alteration is complete. Behavior on doing so is CONSTRAINED UNPREDICTABLE and one of the following occurs:

- The new value is stored and the Update completes with any of the values written:
  - This behavior is only permitted in SMMUv3.1 and earlier.
  - Note: The effective field value in use might not match that read back from this register.
- The new value is ignored and Update completes using the first value (reflected in SMMU\_CR0ACK.
- Cease Update if the new value is the same as the original value before the first write. Note: This means no update side-effects would occur.

Note: A write with the same value (on that is not altered) is permitted. This might occur when altering an unrelated field in the same register while an earlier field Update is in process.

## 6.3.9.1 VMW

Update completes after both of the following occur:

- All received broadcast TLB maintenance operations are guaranteed to behave under the new value.
- A fetched CMD\_TLBI\_\* command specifying a VMID is guaranteed to be processed using the new value.

This field is permitted to be cached in a TLB; an Update of this field must be followed by invalidation of all StreamWorld EL1 TLB entries, for all enabled stages of translation, for the appropriate Security state.

This field must not be changed while a CMD\_TLBI\_\* command specifying a VMID, or incoming broadcast TLB invalidation operations could be being processed. If this is done, the invalidations are not guaranteed to affect TLB entries with the specified VMIDs.

Note: Arm recommends that software stops issuing invalidation commands and uses CMD\_SYNC to ensure any prior invalidation commands are complete before changing this value. Similarly, Arm recommends that software completes all relevant broadcast TLBI operations before changing this field, and avoids issuing subsequent operations until Update is complete.

#### 6.3.9.2 ATSCHK

Update completes after both of the following occur:

- Newly-fetched configuration is guaranteed to be interpreted with the new value.
- ATS Translated Transactions are guaranteed to be treated with the new value.

This bit is permitted to be cached in configuration caches. Update of this bit must be followed by invalidation of all STEs associated with ATS traffic.

In addition, this bit must not be cleared when traffic could encounter valid STEs having EATS == 0b10. See STE.EATS and section 3.9.2 *Changing ATS configuration* for details of this rule. If this is done, ATS Translated transactions through such STEs have an IPA address and will be presented to the system directly instead of undergoing stage 2 translation. The point at which this begins to occur is UNPREDICTABLE.

#### 6.3.9.3 CMDQEN

When SMMU\_(S\_)CR0.CMDQEN completes update from 1 to 0:

- Command processing has stopped.
- Any commands that are in progress have been Consumed in their entirety, and no new commands are fetched from the Command queue. All previous Command queue reads have completed and no reads will later become visible to the system that originated from the previous CMDQEN == 1 configuration.
- Consumed commands are not guaranteed to be complete unless the last Consumed command was a CMD\_SYNC (whose effects are to force completion of prior commands).
- The index after the last Consumed command or the index of the first unprocessed command, if any, is observable in SMMU\_(S\_)CMDQ\_CONS.

Note: Completion of an Update of CMDQEN from 1 to 0 does not guarantee that an outstanding CMD\_SYNC MSI has completed.

When CMDQEN has completed Update to 1, the SMMU begins processing commands if the CMDQ\_PROD / CMDQ\_CONS indexes indicate the queue is non-empty and no Command queue error is present. See Chapter 4 *Commands*.

Commands are not fetched when CMDQEN == 0.

#### **6.3.9.4 EVENTQEN**

When SMMU\_(S\_)CR0.EVENTQEN is transitioned from 1 to 0, SMMU accesses to the queue stop. EVENTQEN completes Update when all committed event records that are in progress become visible in the queue and any Event queue abort conditions are visible in SMMU\_(S\_)GERROR.EVENTQ\_ABT\_ERR. Uncommitted events from terminated faulting transactions are discarded when the queue becomes unwritable. See section 7.2 Event queue recorded faults and events.

#### 6.3.9.5 PRIQEN

The effective value of PRIQEN is dependent on SMMUEN, however the value of SMMU\_CR0ACK.PRIQEN is solely affected by the actual value of the SMMU\_CR0.PRIQEN field.

When the effective value of SMMU\_CR0.PRIQEN is transitioned from 1 to 0, page request writes into the queue stop. PRIQEN completes Update when all committed page request records that are in progress become visible in the queue. When the effective value of PRIQEN == 0, incoming requests are discarded; see section 8.2 *Miscellaneous*.

The SMMU\_PRIQ\_\* registers are Guarded by the actual value of the SMMU\_CR0.PRIQEN field, not the effective value.

Note: This means that clearing SMMUEN but leaving PRIQEN == 1 is not a permitted method for changing the SMMU\_PRIQ\_\* register configuration.

#### 6.3.9.6 SMMUEN

SMMU\_CR0.SMMUEN controls translation through the Non-secure interface and behavior of transactions on Non-secure streams. When SMMU\_S\_IDR1.SECURE\_IMPL == 1, SMMU\_S\_CR0.SMMUEN controls transactions on Secure streams) and the SMMU might be translating Secure transactions, even if SMMU\_CR0.SMMUEN == 0. In all cases, the effect of the SMMUEN of one programming interface does not affect transactions or requests associated with the other programming interface.

When SMMU (S) CR0.SMMUEN == 0:

- Incoming transactions on streams with Security state matching that of the SMMUEN do not undergo translation, and their behavior is controlled by SMMU (S )GBPA:
  - If SMMU\_(S\_)GBPA.ABORT == 0, the transactions bypass the SMMU with attributes determined by the other fields in SMMU (S\_)GBPA. This includes transactions supplied with a SubstreamID.
  - If SMMU (S )GBPA.ABORT == 1, the transactions are terminated with abort.
- When SMMU\_CR0.SMMUEN == 0, the ATS interface is not operational:
  - Incoming ATS Translation Requests are returned with Unsupported Request status.
  - CMD\_ATC\_INV and CMD\_PRI\_RESP commands are ignored.
  - The effective value of PRIQEN is 0 (for SMMU\_CR0.SMMUEN) and incoming PRI Page Requests are discarded.
  - All clients of the interface must undergo re-initialization when the SMMU is re-enabled. For PCIe clients, this will mean endpoint ATS and PRI facilities need to undergo re-initialization.
  - ATS Translated transactions are terminated with an abort.
- Configuration or translation structures are not accessed:
  - The SMMU does not access the Stream table and ignores the contents of SMMU\_(S\_)STRTAB\_\*
    configuration registers, which might be written by software when in this state.
  - Translation and configuration cache entries are not inserted or modified, except for invalidation by maintenance commands or broadcast operations.
    - \* Note: Maintenance commands issued while SMMUEN == 0 can therefore guarantee the targeted entries do not exist in SMMU caches after the command has completed.
    - \* Note: The 'other' Security state might still have SMMUEN == 1 and therefore be inserting cache entries for that Security state. As these entries are not visible to or affected by the Non-secure programming interface, this is only a consideration for the Secure programming interface which can maintain Non-secure cache entries.
  - Prefetch commands do not access configuration or translations nor insert entries thereof into caches.
  - HTTU is not performed. Speculative setting of Access flag is prohibited.
- As translation does not occur for bypassing transactions, translation-related events are not recorded. See section 7.2 Event queue recorded faults and events for events that are permitted to be recorded when SMMUEN == 0.
- ATOS translation requests are not processed, see SMMU\_GATOS\_CTRL.
- Commands and events are still processed, or recorded, as controlled by CMDQEN and EVENTQEN.

Completion of an Update of SMMUEN from 0 to 1 ensures that:

- Configuration written to SMMU\_(S\_)CR2 has taken effect.
- All new transactions will be treated with STE configuration relevant to their stream, and will not undergo SMMU bypass.
- All associated ATOS\_CTRL.RUN fields are 0, see SMMU\_GATOS\_CTRL.

Completion of an Update of SMMUEN from 1 to 0 ensures that:

- All stalled transactions that might be present and that are associated with the programming interface of the SMMUEN have been marked to be terminated with an abort and no new transactions can become stalled.
  - The STAG value of a stall event record relating to a stalled transaction affected by this update is returned
    to the set of values that the SMMU might use in future stall event records.
  - This transition does not guarantee that stalled transactions have already been terminated by the time of the completion. Software must wait for completion of outstanding transactions in an IMPLEMENTATION DEFINED manner.
  - Note: New transactions cannot stall because SMMU translation is disabled.
- Effective PRIQEN value has transitioned to 0, including PRIQEN side-effects.
- ATOS-specific initialization and termination has completed, see SMMU\_GATOS\_CTRL for details.
- ATOS translation requests that are underway have either completed or are terminated with a INTERNAL\_ERR
  fault. The ATOS\_CTRL.RUN fields of all affected ATOS register groups have been cleared, and ATOS\_PAR
  has been updated with the result by the time Update completes.
- All new transactions associated with the programming interface of the SMMUEN will undergo SMMU bypass (using the SMMU\_(S\_)GBPA attributes).

Note: At the point of transitioning SMMUEN, there might be transactions that are in progress that are buffered in the interconnect. The SMMU has no control over these transactions and the system might provide a mechanism to ensure they are flushed before SMMUEN is cleared, if required.

The path of a transaction through the SMMU is atomic with respect to changes of SMMUEN, the SMMU treats a transaction as though SMMUEN did not change mid-way during the path of the transaction path through the SMMU, even if temporally this is not the case. Therefore, when SMMUEN changes, two groups of transactions that are progress are formed for transactions relevant to the Security state of the SMMUEN in question: those that behave according to the old SMMUEN value, and those that behave according to the new value, so that it appears as though the SMMUEN change instantaneously takes effect at some point in time and incoming transactions are processed in their entirety either before or after this point. There is no requirement for the boundary between these groups to be predictable when SMMUEN is altered in the middle of a stream of transactions. However, interconnect ordering guarantees are maintained throughout. The completion of an update to SMMUEN guarantees that all new transactions arriving at the SMMU will be treated with the new value.

A change to SMMUEN is not required to invalidate cached configuration or TLB entries.

## 6.3.10 SMMU\_CROACK

The SMMU\_CR0ACK characteristics are:

#### Purpose

Provides acknowledgment of changes to configurations and controls in the Non-secure SMMU programming interface, SMMU CR0.


#### **Attributes**

SMMU\_CR0ACK is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# Field descriptions

The SMMU\_CR0ACK bit assignments are:



## Bits [31:9]

Reserved, RESO.

VMW, bits [8:6]

## When $SMMU\_IDR0.VMW == 1$ :

VMID Wildcard.

| VMW   | Meaning                                    |
|-------|--|
| 0b000 | TLB invalidations match VMID tags exactly. |
| 0b001 | TLB invalidations match VMID[N:1].         |
| 0b010 | TLB invalidations match VMID[N:2].         |
| 0b011 | TLB invalidations match VMID[N:3].         |
| 0b100 | TLB invalidations match VMID[N:4].         |

- All other values are reserved, and behave as 0b000.
  - N == upper bit of VMID as determined by SMMU\_IDR0.VMID16.
- This field has no effect on VMID matching on translation lookup.

The reset behavior of this field is:

• This field resets to 0b000.

#### Otherwise:

RES0

## Bit [5]

Reserved, RESO.

## ATSCHK, bit [4]

## When $SMMU\_IDR0.ATS == 1$ :

ATS behavior.

| ATSCHK | Meaning  |
|--------|--|
| 0b0    | Fast mode, all ATS Translated traffic passes through the SMMU without Stream table or TLB lookup.  |
| 0b1    | Safe mode, all ATS Translated traffic is checked against the corresponding STE.EATS field to determine whether the StreamID is allowed to produce Translated transactions. |

The reset behavior of this field is:

• This field resets to 0b0.

#### Otherwise:

RESO

## CMDQEN, bit [3]

Enable Command queue processing.

| CMDQEN | Meaning   |
|--------|---|
| 000    | Processing of commands from the Non-secure Command queue is disabled. |
| 0b1    | Processing of commands from the Non-secure Command queue is enabled.  |

The reset behavior of this field is:

• This field resets to 0b0.

# EVENTQEN, bit [2]

Enable Event queue writes.

| EVENTQEN | Meaning  |  |
|----------|--|--|
| 0b0      | Writes to the Non-secure Event queue are disabled. |  |
| 0b1      | Writes to the Non-secure Event queue are enabled.  |  |

The reset behavior of this field is:

• This field resets to 0b0.

## PRIQEN, bit [1]

# When $SMMU\_IDR0.PRI == 1$ :

Enable PRI queue writes.

| PRIQEN | Meaning                               |  |
|--------|---------------------------------------|--|
| 0b0    | Writes to the PRI queue are disabled. |  |
| 0b1    | Writes to the PRI queue are enabled.  |  |

The reset behavior of this field is:

• This field resets to 0b0.

#### Otherwise:

RESO

# SMMUEN, bit [0]

Non-secure SMMU enable.

| SMMUEN | Meaning   |  |
|--------|---|--|
| 0b0    | All Non-secure streams bypass SMMU, with attributes determined from SMMU_GBPA.                      |  |
| 0b1    | All Non-secure streams are checked against configuration structures, and might undergo translation. |  |

The reset behavior of this field is:

• This field resets to 0b0.

# Accessing SMMU\_CR0ACK

SMMU\_CR0ACK can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x0024 |

# 6.3.11 SMMU\_CR1

The SMMU\_CR1 characteristics are:

#### **Purpose**

Non-secure SMMU programming interface control and configuration register.


#### **Attributes**

SMMU\_CR1 is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

## **Field descriptions**

The SMMU\_CR1 bit assignments are:



#### Bits [31:12]

Reserved, RESO.

#### **TABLE\_SH**, bits [11:10]

Table access Shareability.

| TABLE_SH | Meaning                    |  |
|----------|----------------------------|--|
| 0b00     | Non-shareable.             |  |
| 0b01     | Reserved, treated as 0b00. |  |
| 0b10     | Outer Shareable.           |  |
| 0b11     | Inner Shareable.           |  |

• Note: When SMMU\_CR1.TABLE\_OC == 0b00 and SMMU\_CR1.TABLE\_IC == 0b00, this field is IGNORED and behaves as Outer Shareable.

The reset behavior of this field is:

- When SMMU\_IDR1.TABLES\_PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

Accessing this field has the following behavior:

- Access is **RW** if all of the following are true:
  - SMMU\_CR0.SMMUEN == 0
  - SMMU CR0ACK.SMMUEN == 0
- Otherwise, access to this field is RO

#### TABLE\_OC, bits [9:8]

Table access Outer Cacheability.

| TABLE_OC | Meaning                    |  |
|----------|----------------------------|--|
| 0000     | Non-cacheable.             |  |
| 0b01     | Write-Back Cacheable.      |  |
| 0b10     | Write-Through Cacheable.   |  |
| 0b11     | Reserved, treated as 0b00. |  |

The reset behavior of this field is:

- When SMMU\_IDR1.TABLES\_PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

Accessing this field has the following behavior:

- Access is **RW** if all of the following are true:
  - SMMU\_CR0.SMMUEN == 0
  - SMMU\_CR0ACK.SMMUEN == 0
- Otherwise, access to this field is **RO**

## TABLE\_IC, bits [7:6]

Table access Inner Cacheability.

| TABLE_IC | Meaning                    |  |
|----------|----------------------------|--|
| 0b00     | Non-cacheable.             |  |
| 0b01     | Write-Back Cacheable.      |  |
| 0b10     | Write-Through Cacheable.   |  |
| 0b11     | Reserved, treated as 0b00. |  |

The reset behavior of this field is:

- When SMMU\_IDR1.TABLES\_PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

Accessing this field has the following behavior:

- Access is **RW** if all of the following are true:
  - SMMU\_CR0.SMMUEN == 0
  - SMMU\_CR0ACK.SMMUEN == 0
- Otherwise, access to this field is **RO**

## QUEUE\_SH, bits [5:4]

Queue access Shareability.

| QUEUE_SH | Meaning                    |  |
|----------|----------------------------|--|
| 0b00     | Non-shareable.             |  |
| 0b01     | Reserved, treated as 0b00. |  |

| QUEUE_SH | Meaning          |
|----------|------------------|
| 0b10     | Outer Shareable. |
| 0b11     | Inner Shareable. |

• When SMMU\_CR1.QUEUE\_OC == 0b00 and SMMU\_CR1.QUEUE\_IC == 0b00, this field is IGNORED and behaves as Outer Shareability.

The reset behavior of this field is:

- When SMMU\_IDR1.QUEUES\_PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

Accessing this field has the following behavior:

- Access is **RW** if all of the following are true:
  - SMMU\_CR0.EVENTQEN == 0
  - SMMU\_CR0ACK.EVENTQEN == 0
  - SMMU\_CR0.CMDQEN == 0
  - SMMU\_CR0ACK.CMDQEN == 0
  - SMMU\_CR0.PRIQEN == 0
  - SMMU\_CR0ACK.PRIQEN == 0
  - SMMU\_ECMDQ\_PROD<n>.EN == 0
  - SMMU\_ECMDQ\_CONS<n>.ENACK == 0
- Otherwise, access to this field is **RO**

#### QUEUE\_OC, bits [3:2]

Queue access Outer Cacheability.

| QUEUE_OC | Meaning                    |
|----------|----------------------------|
| 0b00     | Non-cacheable.             |
| 0b01     | Write-Back Cacheable.      |
| 0b10     | Write-Through Cacheable.   |
| 0b11     | Reserved, treated as 0b00. |

The reset behavior of this field is:

- When SMMU\_IDR1.QUEUES\_PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

Accessing this field has the following behavior:

- Access is **RW** if all of the following are true:
  - SMMU\_CR0.EVENTQEN == 0
  - SMMU\_CR0ACK.EVENTQEN == 0
  - SMMU\_CR0.CMDQEN == 0
  - SMMU CR0ACK.CMDQEN == 0
  - SMMU CR0.PRIQEN == 0
  - SMMU CROACK.PRIQEN == 0
  - SMMU\_ECMDQ\_PROD<n>.EN == 0
  - SMMU ECMDQ CONS<n>.ENACK == 0
- Otherwise, access to this field is RO

E.a

#### QUEUE\_IC, bits [1:0]

Queue access Inner Cacheability.

| QUEUE_IC | Meaning                    |
|----------|----------------------------|
| 0b00     | Non-cacheable.             |
| 0b01     | Write-Back Cacheable.      |
| 0b10     | Write-Through Cacheable.   |
| 0b11     | Reserved, treated as 0b00. |

The reset behavior of this field is:

- When SMMU\_IDR1.QUEUES\_PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

Accessing this field has the following behavior:

- Access is **RW** if all of the following are true:
  - SMMU\_CR0.EVENTQEN == 0
  - SMMU CR0ACK.EVENTOEN == 0
  - SMMU\_CR0.CMDQEN == 0
  - SMMU\_CR0ACK.CMDQEN == 0
  - SMMU\_CR0.PRIQEN == 0
  - SMMU\_CR0ACK.PRIQEN == 0
  - SMMU\_ECMDQ\_PROD<n>.EN == 0
  - SMMU\_ECMDQ\_CONS<n>.ENACK == 0
- Otherwise, access to this field is RO

#### Additional information

The TABLE\_\* fields set the attributes for access to memory through the SMMU\_STRTAB\_BASE.ADDR pointer and any accesses made to a VMS through STE.VMSPtr in a Non-secure STE. The QUEUE\_\* fields set the attributes for access to memory through SMMU\_CMDQ\_BASE.ADDR, SMMU\_EVENTQ\_BASE.ADDR and SMMU\_PRIQ\_BASE.ADDR pointers.

Cache allocation hints are present in each \_BASE register and are ignored unless a cacheable type is used for the table or queue to which the register corresponds. The transient attribute is implementation defined for each \_BASE register. See section 13.1.2 *Attribute support*; use of an unsupported memory type for structure or queue access might cause the access to be treated as an external abort. For example, in the case of SMMU\_STRTAB\_BASE, an F\_STE\_FETCH fault is raised.

## **Accessing SMMU CR1**

SMMU\_CR1 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x0028 |

Access on this interface is **RW**.

# 6.3.11.1 TABLE\_\* attributes

The TABLE\_\* fields are preset when SMMU\_IDR1.TABLES\_PRESET == 1 and the effective attribute is unchangeable. In this case, a write of a different value to these fields is CONSTRAINED UNPREDICTABLE and has one of the following behaviors:

- The write of the field is IGNORED.
- The new value is stored, making it visible to future reads of the field, but have no effect on the (fixed) access type.

Otherwise when not PRESET, the TABLE\_\* attributes reset to an UNKNOWN value and must be initialized by software.

These fields are Guarded by SMMU\_(S\_)CR0.SMMUEN and must only be changed when SMMU\_(S\_)CR0.SMMUEN == 0. A write to these fields when SMMU\_(S\_)CR0.SMMUEN == 1 is CONSTRAINED UNPREDICTABLE and has one of the following behaviors:

- The write to the fields is IGNORED. This is the only permitted behavior in SMMUv3.2 and later.
- The new attribute is applied, taking effect at an UNPREDICTABLE point before the SMMU is later disabled (SMMUEN transitioned 1 to 0). This behavior is permitted only in SMMUv3.1 and earlier.

## 6.3.11.2 QUEUE \* attributes

The QUEUE\_\* fields are fixed and preset when SMMU\_IDR1.QUEUES\_PRESET == 1 and the effective attribute is unchangeable. In this case, a write of a different value to these fields is CONSTRAINED UNPREDICTABLE in the same way as for preset TABLE\_\* fields.

Otherwise when not preset, the QUEUE\_\* attributes reset to an UNKNOWN value and must be initialized by software.

These fields are Guarded by SMMU\_(S\_)CR0.EVENTQEN, SMMU\_CR0.PRIQEN (for SMMU\_CR1 and SMMU\_(S\_)CR0.CMDQEN. They must only change when access to all queues is disabled through SMMU\_(S\_)CR0.EVENTQEN == 0 and SMMU\_CR0.PRIQEN == 0 and SMMU\_(S\_)CR0.CMDQEN == 0. In an implementation with Enhanced Command queues, they are additionally guarded by all SMMU\_ECMDQ\_PRODn.EN and SMMU\_ECMDQ\_CONSn.ENACK pairs associated with the respective Security state. They must only change when all SMMU\_ECMDQ\_PRODn.EN == SMMU\_ECMDQ\_CONSn.ENACK == 0 for the corresponding Security state. A write to these fields when any of these queues are enabled is CONSTRAINED UNPREDICTABLE and has one of the following behaviors:

- The write to the fields is IGNORED. This is the only permitted behavior in SMMUv3.2 and later.
- The new attribute is applied, taking effect, with respect to an enabled queue access, at an UNPREDICTABLE point before the respective queue is later disabled (the enable flag transitioned from 1 to 0). This behavior is permitted only in SMMUv3.1 and earlier.

# 6.3.12 SMMU\_CR2

The SMMU\_CR2 characteristics are:

#### Purpose

Non-secure SMMU programming interface control and configuration register.

#### **Attributes**

SMMU\_CR2 is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_CR2 bit assignments are:



#### Bits [31:4]

Reserved, RESO.

REC\_CFG\_ATS, bit [3]

#### When SMMU\_IDRO.ATSRECERR == 1:

Record Configuration-related errors for ATS and PRI in the Event queue.

| REC_CFG_ATS | Meaning  |
|-------------|--|
| 0b0         | SMMU records only the base set of Events for ATS-related and PRI requests. |
| 0b1         | SMMU records an extended set of Events for ATS-related and PRI requests.   |

See section 3.9.1.1 *Responses to ATS Translation Requests and Translated transactions* and section 8.1 *PRI queue overflow* for details of which events are recorded or not.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Otherwise:

RESO

# PTM, bit [2]

# When $SMMU\_IDR0.BTM == 1$ :

Private TLB Maintenance.

| PTM | Meaning   |
|-----|---|
| 0b0 | The SMMU participates in broadcast TLB maintenance, if implemented. See SMMU_IDR0.BTM.  |
| 0b1 | The SMMU is not required to invalidate any local TLB entries on receipt of broadcast TLB maintenance operations for Non-secure EL1, Non-secure EL2 or Non-secure EL2-E2H translation regimes. |

- Broadcast invalidation for Secure EL1, Secure EL2, Secure EL2-E2H or EL3 translation regimes are not affected by this flag, see <a href="SMMU\_S\_CR2.PTM">SMMU\_S\_CR2.PTM</a>.
- This field resets to an implementation specific value. Arm recommends PTM is reset to 1 where it is supported, but software cannot rely on this value.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Otherwise:

RES0

#### RECINVSID, bit [1]

Record event C\_BAD\_STREAMID from invalid input StreamIDs.

| RECINVSID | Meaning  |  |
|-----------|--|--|
| 0d0       | C_BAD_STREAMID events are not recorded for the Non-secure programming interface.             |  |
| 0b1       | C_BAD_STREAMID events are permitted to be recorded for the Non-secure programming interface. |  |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# E2H, bit [0]

# When $SMMU\_IDR0.Hyp == 1$ :

Enable Non-secure EL2-E2H translation regime.

| E2H | Meaning   |  |
|-----|---|--|
| 0b0 | EL2 translation regime, without ASIDs or VMIDs. |  |
| 0b1 | EL2-E2H translation regime used, with ASID.     |  |

• This field affects the STE.STRW encoding 0b10, which selects a hypervisor translation regime for the resulting translations. The translations are tagged without ASID in EL2 mode, or with ASID in EL2-E2H mode. Note: Arm expects software to set this bit to match HCR\_EL2.E2H in host PEs.

- This bit is permitted to be cached in configuration caches and TLBs. Changes to this bit must be accompanied by invalidation of configuration and translations associated with streams configured with StreamWorld == NS-EL2 or NS-EL2-E2H.
- This bit affects the StreamWorld of Non-secure streams only.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Otherwise:

RESO

# Accessing SMMU\_CR2

This register is made read-only when the associated SMMU\_CR0.SMMUEN is Updated to 1. This register must only be changed when SMMU\_CR0.SMMUEN == 0.

A write to this register after SMMU\_CRO.SMMUEN has been changed but before its Update completes is CONSTRAINED UNPREDICTABLE and has one of the following behaviors:

- Apply the new value.
- Ignore the write. In SMMUv3.2 and later, this is the only permitted behavior.

When this register is changed, the new value takes effect (affects SMMU behavior corresponding to the field changed) at an UNPREDICTABLE time, bounded by a subsequent Update of SMMUEN to 1. As a side-effect of SMMUEN completing Update to 1, a prior change to this register is guaranteed to have taken effect.

SMMU\_CR2 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x002C |

- When SMMU\_CR0.SMMUEN == 0 and SMMU\_CR0ACK.SMMUEN == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

#### 6.3.12.1 PTM

A change to PTM is permitted to take effect at any time prior to a subsequent Update of SMMUEN to 1. If incoming broadcast TLB invalidates are received after PTM is changed but before Update of SMMUEN completes, it is UNPREDICTABLE whether the invalidations take effect.

Broadcast invalidations issued after SMMUEN has Updated to 1 are guaranteed to be treated with the value of PTM prior to the SMMUEN update, if PTM has not been modified after SMMUEN was written.

# 6.3.12.2 **RECINVSID**

This field only has an effect on transactions received when SMMUEN == 1, therefore a change cannot affect transactions in flight.

#### 6.3.12.3 E2H

All Non-secure EL2/EL2-E2H configuration and translation cache entries must be invalidated when E2H is changed. The equivalent requirement exists for Secure EL2/EL2-E2H and changes to SMMU\_S\_CR2.E2H, if implemented.

# Chapter 6. Memory map and registers 6.3. Register formats

Note: The behavior of the CMD\_TLBI\_EL2\_VAA and CMD\_TLBI\_EL2\_ASID commands depends on the value of E2H. Because, after write of SMMU\_CR2, the effective action of E2H is UNPREDICTABLE until SMMUEN is transitioned to 1, it is UNPREDICTABLE whether these two commands behave according to E2H == 0 or E2H == 1. Consequently, CMD\_TLBI\_EL2\_ALL must be used to invalidate EL2 translation cache entries.

# 6.3.13 SMMU\_STATUSR

The SMMU\_STATUSR characteristics are:

#### **Purpose**

Provides information on the status of the component.

#### **Attributes**

SMMU\_STATUSR is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_STATUSR bit assignments are:



#### Bits [31:1]

Reserved, RESO.

#### DORMANT, bit [0]

# When $SMMU\_IDR0.DORMHINT == 1$ :

Dormant hint.

| DORMANT | Meaning  |  |
|---------|--|--|
| 0b0     | The SMMU might have cached translation or configuration structure data, or be in the process of doing so.                |  |
| 0b1     | The SMMU guarantees that no translation or configuration structure data is cached, and that no prefetches are in-flight. |  |

• Software might avoid issuing configuration invalidation or TLB invalidation commands for changes to structures made visible to the SMMU before reading this hint as 1. See section 3.19.1 *Dormant state*.

The reset behavior of this field is:

• This field resets to 0b0.

#### Otherwise:

RESO

# Accessing SMMU\_STATUSR

SMMU\_STATUSR can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x0040 |

Chapter 6. Memory map and registers 6.3. Register formats

Access on this interface is RO.

# 6.3.14 SMMU\_GBPA

The SMMU\_GBPA characteristics are:

#### **Purpose**

Global ByPass Attribute


#### **Attributes**

SMMU\_GBPA is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_GBPA bit assignments are:



#### Update, bit [31]

Update completion flag.

See section 6.3.14.1 Update procedure.

The reset behavior of this field is:

• This field resets to 0b0.

#### Bits [30:21]

Reserved, RESO.

#### ABORT, bit [20]

Abort all incoming transactions.

| ABORT | Meaning  |
|-------|--|
| 0b0   | Do not abort incoming transactions. Transactions bypass the SMMU with attributes given by other fields in this register. |
| 0b1   | Abort all incoming transactions.   |

Note: An implementation can reset this field to 1, in order to implement a default deny policy on reset.

The reset behavior of this field is:

• This field resets to an IMPLEMENTATION DEFINED value.

#### INSTCFG, bits [19:18]

Instruction/data override.

| INSTCFG | Meaning                    |
|---------|----------------------------|
| 0b00    | Use incoming.              |
| 0b01    | Reserved, behaves as 0b00. |
| 0b10    | Data.                      |
| 0b11    | Instruction.               |

• INSTCFG only affects reads, writes are always output as Data.

The reset behavior of this field is:

• This field resets to an IMPLEMENTATION DEFINED value.

# PRIVCFG, bits [17:16]

User/privileged override.

| PRIVCFG | Meaning                    |
|---------|----------------------------|
| 0b00    | Use incoming.              |
| 0b01    | Reserved, behaves as 0b00. |
| 0b10    | Unprivileged.              |
| 0b11    | Privileged.                |

The reset behavior of this field is:

• This field resets to an IMPLEMENTATION DEFINED value.

# Bits [15:14]

Reserved, RESO.

# SHCFG, bits [13:12]

Shareability override.

| SHCFG | Meaning          |
|-------|------------------|
| 0b00  | Non-shareable.   |
| 0b01  | Use incoming.    |
| 0b10  | Outer Shareable. |
| 0b11  | Inner Shareable. |

The reset behavior of this field is:

• This field resets to an IMPLEMENTATION DEFINED value.

#### ALLOCCFG, bits [11:8]

Allocation Configuration.

- 0b0xxx use incoming RA/WA/TR allocation/transient hints.
- 0b1RWT Hints are overridden to given values:
  - Read Allocate == R.
  - Write Allocate == W.
  - Transient == T.
- When overridden by this field, for each of RA, WA, and TR, both inner- and outer- hints are set to the
  same value. Because it is not architecturally possible to express hints for types that are Device or Normal
  Non-cacheable, this field has no effect on memory types that are not Normal-WB or Normal-WT, whether
  such types are provided with a transaction or overridden using MTCFG/MemAttr.

The reset behavior of this field is:

• This field resets to an IMPLEMENTATION DEFINED value.

#### Bits [7:5]

Reserved, RESO.

# MTCFG, bit [4]

Memory Type override.

| MTCFG | Meaning  |  |
|-------|--|--|
| 0b0   | Use incoming memory type.                          |  |
| 0b1   | Override incoming memory type using MemAttr field. |  |

The reset behavior of this field is:

• This field resets to an IMPLEMENTATION DEFINED value.

# MemAttr, bits [3:0]

Memory type.

• Encoded the same as the STE.MemAttr field.

The reset behavior of this field is:

• This field resets to an IMPLEMENTATION DEFINED value.

# Accessing SMMU\_GBPA

SMMU\_GBPA can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x0044 |

- When SMMU\_GBPA.Update == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

This register controls the global bypass attributes used for transactions from Non-secure StreamIDs (as determined by SEC\_SID) when SMMU\_CR0.SMMUEN == 0. Transactions passing through the SMMU when it is disabled might have their attributes overridden/assigned using this register.

Where Use incoming is selected, the attribute is taken from that supplied on the incoming interconnect, if supported. If the incoming interconnect does not supply the attribute, the SMMU generates a default attribute, which is selected for Use incoming. See Chapter 13 Attribute Transformation for details.

It is IMPLEMENTATION DEFINED whether MTCFG, SHCFG and ALLOCCFG apply to streams associated with PCIe devices or whether these attributes are treated as Use incoming for such streams regardless of the field values.

If SMMU\_IDR1.ATTR\_TYPES\_OVR == 0, MTCFG, SHCFG, ALLOCCFG are effectively fixed as Use incoming and it is implementation specific whether these fields read as zero or a previously written value. In this case, MemAttr reads as UNKNOWN.

If SMMU\_IDR1.ATTR\_PERMS\_OVR == 0, INSTCFG and PRIVCFG are effectively fixed as Use incoming and it is implementation specific whether these fields read as zero or a previously written value.

If the outgoing interconnect does not support a particular attribute, the value written to the corresponding field is IGNORED and it is implementation specific whether the field reads as zero or a previously written value.

Update resets to zero and all other fields reset to an IMPLEMENTATION DEFINED state. This allows an implementation to provide useful default transaction attributes when software leaves the SMMU uninitialized.

# 6.3.14.1 Update procedure

This register must be written with a single 32-bit write that simultaneously sets the Update bit to 1. Software must then poll the Update bit which is cleared when the attribute update has completed.

The Update flag allows software to determine when a change in attributes takes effect. Transactions arriving at the SMMU after completion of a GBPA update are guaranteed to take the new attributes written.

If GBPA is altered in the middle of a stream of transactions, the exact point in the sequence at which the change takes effect is UNPREDICTABLE.

Note: It is the responsibility of client devices to ensure that transactions generated prior to an update have completed, meaning that no more transactions will become globally visible to the required Shareability domain of the overridden attributes with attributes given by a previous value of the register. This is achieved in an IMPLEMENTATION DEFINED manner.

This register must only be written when Update == 0 (prior updates are complete). A write when an Update == 1, that is when a prior update is underway, is CONSTRAINED UNPREDICTABLE and has one of the following behaviors:

- The write is IGNORED and update completes using the initial value. This is the only permitted behavior in SMMUv3.2 and later.
- Update completes with any value.
  - Note: The effective attribute in use might not match that read back from this register.

If this register is written without simultaneously setting Update to 1, the effect is CONSTRAINED UNPREDICTABLE and has one of the following behaviors:

- The write is IGNORED. This is the only permitted behavior in SMMUv3.2 and later.
- The written value is stored and is visible to future reads of the register, but does not affect transactions.
- The written value affects transactions at an UNPREDICTABLE update point:

# Chapter 6. Memory map and registers 6.3. Register formats

- There is no guarantee that all transactions arriving at the SMMU after the write will take the new value, or that all transactions prior to the write have completed.

When this register is written (correctly observing the requirements in this section), the new value is observable to future reads of the register even if they occur before the Update has completed.

# 6.3.15 SMMU\_AGBPA

The SMMU\_AGBPA characteristics are:

#### **Purpose**

Alternate Global ByPass Attribute.

#### **Attributes**

SMMU\_AGBPA is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_AGBPA bit assignments are:



#### IMPLEMENTATION\_DEFINED, bits [31:0]

IMPLEMENTATION DEFINED attributes to assign.

#### Additional information

- This register allows an implementation to apply an additional non-architected attributes or tag to bypassing transactions.
- If this field is unsupported by an implementation it is RESO.
- Note: Arm does not recommend that this register further modifies existing architected bypass attributes.

The process used to change contents of this register in relation to SMMU\_GBPA.Update is IMPLEMENTATION DEFINED.

# Accessing SMMU\_AGBPA

SMMU\_AGBPA can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x0048 |

Access on this interface is RW.

# 6.3.16 SMMU\_IRQ\_CTRL

The SMMU\_IRQ\_CTRL characteristics are:

#### **Purpose**

Interrupt control and configuration register.


#### **Attributes**

SMMU\_IRQ\_CTRL is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_IRQ\_CTRL bit assignments are:



#### Bits [31:3]

Reserved, RESO.

# EVENTQ\_IRQEN, bit [2]

Event queue interrupt enable.

| EVENTQ_IRQEN | Meaning  |
|--------------|--|
| 0b0          | Interrupts from the Non-secure Event queue are disabled. |
| 0b1          | Interrupts from the Non-secure Event queue are enabled.  |

The reset behavior of this field is:

• This field resets to 0b0.

# PRIQ\_IRQEN, bit [1]

### When $SMMU\_IDR0.PRI == 1$ :

PRI queue interrupt enable.

| PRIQ_IRQEN | Meaning                                 |
|------------|---|
| 0b0        | Interrupts from PRI queue are disabled. |
| 0b1        | Interrupts from PRI queue are enabled.  |

The reset behavior of this field is:

• This field resets to 0b0.

#### Otherwise:

RESO

#### GERROR\_IRQEN, bit [0]

GERROR interrupt enable.

| GERROR_IRQEN | Meaning  |
|--------------|--|
| 0b0          | Interrupts from Non-secure Global errors are disabled. |
| 0b1          | Interrupts from Non-secure Global errors are enabled.  |

The reset behavior of this field is:

• This field resets to 0b0.

#### Additional information

Each field in this register has a corresponding field in SMMU\_IRQ\_CTRLACK, with the same Update observability semantics as fields in SMMU\_CR0 versus SMMU\_CR0ACK.

This register contains IRQ enable flags for GERROR, PRI queue and Event queue interrupt sources. These enables allow or inhibit both edge-triggered wired outputs if implemented and MSI writes if implemented.

IRQ enable flags Guard the MSI address and payload registers when MSIs supported, SMMU\_IDR0.MSI == 1, which must only be changed when their respective enable flag is 0. See SMMU\_GERROR\_IRQ\_CFG0 for details.

#### Accessing SMMU\_IRQ\_CTRL

SMMU\_IRQ\_CTRL can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x0050 |

Access on this interface is RW.

Completion of Update to IRQ enables guarantees the following side-effects:

- Completion of an Update of x\_IRQEN from 0 to 1 guarantees that the MSI configuration in SMMU\_x\_IRQ\_CFG{0,1,2} will be used for all future MSIs generated from source x. All wired or MSI interrupts that are triggered from a source relate to occurrences that happened after the completion of the Update that enabled the source. It is not permitted to trigger an interrupt that relates to an occurrence that happened before the source was enabled, even if the source was previously enabled at the time of the occurrence.
- An Update of x\_IRQEN from 1 to 0 completes when all prior MSIs have completed. An MSI has completed when it is visible to its Shareability domain, or when it has aborted, and the abort is recorded in the appropriate SMMU\_(S\_)GERROR bit. Completion of this Update guarantees that no new MSI writes or wired edge events from source x become visible until the source is re-enabled. See section 3.18.1 MSI synchronization.

# 6.3.17 SMMU\_IRQ\_CTRLACK

The SMMU\_IRQ\_CTRLACK characteristics are:

#### **Purpose**

Provides acknowledgment of changes to configurations and controls of interrupts in SMMU IRQ CTRL.


#### **Attributes**

SMMU\_IRQ\_CTRLACK is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_IRQ\_CTRLACK bit assignments are:



# Bits [31:3]

Reserved, RESO.

#### EVENTQ\_IRQEN, bit [2]

Event queue interrupt enable.

| EVENTQ_IRQEN | Meaning  |
|--------------|--|
| 0b0          | Interrupts from the Non-secure Event Queue are disabled. |
| 0b1          | Interrupts from the Non-secure Event Queue are enabled.  |

The reset behavior of this field is:

• This field resets to 0b0.

#### PRIQ\_IRQEN, bit [1]

#### When $SMMU\_IDR0.PRI == 1$ :

PRI queue interrupt enable.

| PRIQ_IRQEN | Meaning                                 |
|------------|---|
| 0b0        | Interrupts from PRI Queue are disabled. |
| 0b1        | Interrupts from PRI Queue are enabled.  |

The reset behavior of this field is:

• This field resets to 0b0.

#### Otherwise:

RES0

# GERROR\_IRQEN, bit [0]

GERROR interrupt enable.

| GERROR_IRQEN | Meaning  |
|--------------|--|
| 0b0          | Interrupts from Non-secure Global errors are disabled. |
| 0b1          | Interrupts from Non-secure Global errors are enabled.  |

The reset behavior of this field is:

• This field resets to 0b0.

#### Additional information

Undefined bits read as zero. Fields in this register are RAZ if their corresponding SMMU\_IRQ\_CTRL field is reserved.

# Accessing SMMU\_IRQ\_CTRLACK

SMMU\_IRQ\_CTRLACK can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x0054 |

Access on this interface is RO.

# 6.3.18 SMMU GERROR

The SMMU\_GERROR characteristics are:

#### Purpose

Reporting of Global Error conditions.


#### **Attributes**

SMMU\_GERROR is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

#### Field descriptions

The SMMU\_GERROR bit assignments are:



This register, in conjunction with SMMU\_GERRORN, indicates whether global error conditions exist. See section 7.5 *Global error recording*.

An error is active if the value of SMMU\_GERROR[x] is different to the corresponding SMMU\_GERRORN[x] bit.

The SMMU toggles SMMU\_GERROR[x] when an error becomes active. An external agent acknowledges the error by toggling the corresponding SMMU\_GERRORN[x], making the GERRORN[x] bit the same value as the corresponding GERROR[x] bit. Acknowledging an error deactivates the error, allowing a new occurrence to be reported at a later time, however:

• SFM\_ERR indicates that Service failure mode has been entered. Acknowledging this GERROR bit does not exit Service failure mode which remains active and is resolved in an IMPLEMENTATION DEFINED way.

The SMMU does not toggle a bit when an error is already active. An error is only activated if it is in an inactive state.

Note: Software is not intended to trigger interrupts by arranging for GERRORN[x] to differ from GERROR[x]. See SMMU\_GERRORN.

#### Bits [31:10]

Reserved, RESO.

#### CMDQP\_ERR, bit [9]

#### When $SMMU\_IDR1.ECMDQ == 1$ :

When this bit is different to SMMU\_GERRORN.CMDQP\_ERR, it indicates that one or more errors have been encountered on a Command queue control page interface.

See section 3.5.6.3 Errors relating to an ECMDQ interface.

The reset behavior of this field is:

• This field resets to 0b0.

#### Otherwise:

RESO

#### SFM\_ERR, bit [8]

- When this bit is different to SMMU\_GERRORN[8], the SMMU has entered Service failure mode.
  - Traffic through the SMMU has stopped. The SMMU has stopped processing commands and recording events. The RAS registers describe the error.
  - Acknowledgement of this error through GERRORN does not clear the Service failure mode error, which
    is cleared in an IMPLEMENTATION DEFINED way. See Section 12.3 Service Failure Mode (SFM).
  - SFM triggers SFM\_ERR in SMMU\_GERROR, and when SMMU\_S\_IDR1.SECURE\_IMPL == 1 in SMMU\_S\_GERROR.

The reset behavior of this field is:

• This field resets to 0b0.

#### MSI\_GERROR\_ABT\_ERR, bit [7]

When  $SMMU\_IDR0.MSI == 1$ :

- When this bit is different to SMMU\_GERRORN[7], a GERROR MSI was terminated with abort.
  - Activation of this error does not affect future MSIs.

The reset behavior of this field is:

• This field resets to 0b0.

# Otherwise:

RESO

#### MSI\_PRIQ\_ABT\_ERR, bit [6]

When  $SMMU\_IDR0.MSI == 1$  and  $SMMU\_IDR0.PRI == 1$ :

- When this bit is different to SMMU\_GERRORN[6], a PRI queue MSI was terminated with abort.
  - Activation of this error does not affect future MSIs.

The reset behavior of this field is:

• This field resets to 0b0.

#### Otherwise:

RESO

# MSI\_EVENTQ\_ABT\_ERR, bit [5]

When  $SMMU\_IDR0.MSI == 1$ :

- When this bit is different to SMMU\_GERRORN[5], an Event queue MSI was terminated with abort.
  - Activation of this error does not affect future MSIs.

The reset behavior of this field is:

• This field resets to 0b0.

# Otherwise:

RES0

# MSI\_CMDQ\_ABT\_ERR, bit [4]

#### When $SMMU\_IDR0.MSI == 1$ :

- When this bit is different to SMMU\_GERRORN[4], a CMD\_SYNC MSI was terminated with abort.
  - Activation of this error does not affect future MSIs.

The reset behavior of this field is:

• This field resets to 0b0.

#### Otherwise:

RESO

#### PRIQ\_ABT\_ERR, bit [3]

# When $SMMU\_IDR0.PRI == 1$ :

- When this bit is different to SMMU\_GERRORN[3], an access to the PRI queue was terminated with abort.
  - Page Request records might have been lost.

The reset behavior of this field is:

• This field resets to 0b0.

#### Otherwise:

RES0

#### EVENTQ\_ABT\_ERR, bit [2]

- When this bit is different to SMMU\_GERRORN[2], an access to the Event queue was terminated with abort.
  - Event records might have been lost.

The reset behavior of this field is:

• This field resets to 0b0.

# Bit [1]

Reserved, RESO.

# CMDQ\_ERR, bit [0]

- When this bit is different to SMMU\_GERRORN[0], a command has been encountered that cannot be processed.
  - SMMU\_CMDQ\_CONS.ERR has been updated with a reason code and command processing has stopped.
  - Commands are not processed while this error is active.

The reset behavior of this field is:

• This field resets to 0b0.

# Accessing SMMU\_GERROR

SMMU\_GERROR can be accessed through the SMMUv3\_PAGE\_0 block as follows:

# Chapter 6. Memory map and registers 6.3. Register formats

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x0060 |

Access on this interface is RO.

# 6.3.19 SMMU GERRORN

The SMMU\_GERRORN characteristics are:

#### **Purpose**

Acknowledgement of Global Error conditions.


#### **Attributes**

SMMU\_GERRORN is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_GERRORN bit assignments are:



This register has the same fields as SMMU\_GERROR.

Software must not toggle fields in this register that correspond to errors that are inactive. It is CONSTRAINED UNPREDICTABLE whether or not an SMMU activates errors if this is done.

The SMMU does not alter fields in this register. A read of this register returns the values that were last written to the defined fields of the register.

Note: Software might maintain an internal copy of the last value written to this register, for comparison against values read from SMMU\_GERROR when probing for errors.

#### Bits [31:10]

Reserved, RESO.

#### CMDQP\_ERR, bit [9]

When  $SMMU\_IDR1.ECMDQ == 1$ :

See SMMU\_GERROR.CMDQP\_ERR.

The reset behavior of this field is:

• This field resets to 0b0.

#### Otherwise:

RES0

# SFM\_ERR, bit [8]

- When this bit is different to SMMU\_GERROR[8], the SMMU has entered Service failure mode.
  - Traffic through the SMMU has stopped. The SMMU has stopped processing commands and recording events. The RAS registers describe the error.
  - Acknowledgement of this error through GERRORN does not clear the Service failure mode error, which
    is cleared in an IMPLEMENTATION DEFINED way. See Section 12.3 Service Failure Mode (SFM).

 SFM triggers SFM\_ERR in SMMU\_GERROR, and when SMMU\_S\_IDR1.SECURE\_IMPL == 1 in SMMU\_S\_GERROR.

The reset behavior of this field is:

• This field resets to 0b0.

#### MSI\_GERROR\_ABT\_ERR, bit [7]

#### When $SMMU\_IDR0.MSI == 1$ :

- When this bit is different to SMMU\_GERROR[7], a GERROR MSI was terminated with abort.
  - Activation of this error does not affect future MSIs.

The reset behavior of this field is:

• This field resets to 0b0.

#### Otherwise:

RESO

#### MSI\_PRIQ\_ABT\_ERR, bit [6]

#### When SMMU IDR0.MSI == 1 and SMMU IDR0.PRI == 1:

- When this bit is different to SMMU\_GERROR[6], a PRI queue MSI was terminated with abort.
  - Activation of this error does not affect future MSIs.

The reset behavior of this field is:

• This field resets to 0b0.

#### Otherwise:

RES0

#### MSI\_EVENTQ\_ABT\_ERR, bit [5]

#### When SMMU IDR0.MSI == 1:

- When this bit is different to SMMU\_GERROR[5], an Event queue MSI was terminated with abort.
  - Activation of this error does not affect future MSIs.

The reset behavior of this field is:

• This field resets to 0b0.

# Otherwise:

RES0

#### MSI\_CMDQ\_ABT\_ERR, bit [4]

#### When SMMU IDR0.MSI == 1:

- When this bit is different to SMMU\_GERROR[4], a CMD\_SYNC MSI was terminated with abort.
  - Activation of this error does not affect future MSIs.

The reset behavior of this field is:

• This field resets to 0b0.

#### Otherwise:

RES0

#### PRIQ\_ABT\_ERR, bit [3]

#### When SMMU IDR0.PRI == 1:

- When this bit is different to SMMU\_GERROR[3], an access to the PRI queue was terminated with abort.
  - Page Request records might have been lost.

The reset behavior of this field is:

• This field resets to 0b0.

#### Otherwise:

RESO

#### EVENTQ\_ABT\_ERR, bit [2]

- When this bit is different to SMMU\_GERROR[2], an access to the Event queue was terminated with abort.
  - Event records might have been lost.

The reset behavior of this field is:

• This field resets to 0b0.

#### Bit [1]

Reserved, RESO.

# CMDQ\_ERR, bit [0]

- When this bit is different to SMMU\_GERROR[0], a command has been encountered that cannot be processed.
  - SMMU\_CMDQ\_CONS.ERR has been updated with a reason code and command processing has stopped.
  - Commands are not processed while this error is active.

The reset behavior of this field is:

• This field resets to 0b0.

#### Additional information

Fields that are Reserved in SMMU\_GERROR are also Reserved in this register.

# Accessing SMMU\_GERRORN

SMMU\_GERRORN can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x0064 |

Access on this interface is **RW**.

# 6.3.20 SMMU\_GERROR\_IRQ\_CFG0

The SMMU\_GERROR\_IRQ\_CFG0 characteristics are:

#### Purpose

Global Error interrupt configuration register.

#### Configuration

This register is present only when SMMU\_IDR0.MSI == 1. Otherwise, direct accesses to SMMU\_GERROR\_IRQ\_CFG0 are RES0.

#### Attributes

SMMU\_GERROR\_IRQ\_CFG0 is a 64-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

#### Field descriptions

The SMMU\_GERROR\_IRQ\_CFG0 bit assignments are:



#### Bits [63:52]

Reserved, RESO.

#### ADDR, bits [51:2]

Physical address of MSI target register, bits [51:2].

• If OAS, the system physical address size reported by SMMU\_IDR5.OAS, is less than 52 then bits ADDR[51:OAS] are RES0.

Note: An implementation is not required to store these bits.

- Bits [51:OAS] and [1:0] of the effective address that results from this field are zero.
- If ADDR == 0, no MSI is sent. This allows a wired IRQ, if implemented, to be used when SMMU\_IRQ\_CTRL.GERROR\_IRQEN == 1 instead of an MSI.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# Bits [1:0]

Reserved, RESO.

# Accessing SMMU\_GERROR\_IRQ\_CFG0

SMMU\_GERROR\_IRQ\_CFG0 is Guarded by SMMU\_IRQ\_CTRL.GERROR\_IRQEN and must only be modified when SMMU\_IRQ\_CTRL.GERROR\_IRQEN == 0.

These update conditions are common for all SMMU\_\*\_IRQ\_CFG $\{0,1,2\}$  register sets in the SMMU with respect to their corresponding SMMU\_IRQ\_CTRL.\*\_IRQEN flag.

In SMMUv3.1 and earlier, a write while SMMU\_IRQ\_CTRL.GERROR\_IRQEN == 1 is CONSTRAINED UNPREDICTABLE and has one of the following behaviors:

- The register takes on any value, which might cause MSIs to be written to UNPREDICTABLE addresses or with UNPREDICTABLE payload values.
- The write is IGNORED.
- A read following such a write will return an UNKNOWN value.

In SMMUv3.2 and later, a write while SMMU\_IRQ\_CTRL.GERROR\_IRQEN == 1 is IGNORED.

SMMU\_GERROR\_IRQ\_CFG0 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x0068 |

- When SMMU\_IRQ\_CTRL.GERROR\_IRQEN == 0 and SMMU\_IRQ\_CTRLACK.GERROR\_IRQEN == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

# 6.3.21 SMMU\_GERROR\_IRQ\_CFG1

The SMMU\_GERROR\_IRQ\_CFG1 characteristics are:

#### Purpose

Global Error interrupt configuration register.

#### Configuration

This register is present only when SMMU\_IDR0.MSI == 1. Otherwise, direct accesses to SMMU\_GERROR\_IRQ\_CFG1 are RES0.


#### Attributes

SMMU\_GERROR\_IRQ\_CFG1 is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# Field descriptions

The SMMU\_GERROR\_IRQ\_CFG1 bit assignments are:



# DATA, bits [31:0]

MSI Data payload.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# Accessing SMMU\_GERROR\_IRQ\_CFG1

SMMU\_GERROR\_IRQ\_CFG1 is Guarded by SMMU\_IRQ\_CTRL.GERROR\_IRQEN, and must only be modified when SMMU\_IRQ\_CTRL.GERROR\_IRQEN == 0.

See SMMU\_GERROR\_IRQ\_CFG0 for detailed behavior.

SMMU\_GERROR\_IRQ\_CFG1 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x0070 |

- When SMMU\_IRQ\_CTRL.GERROR\_IRQEN == 0 and SMMU\_IRQ\_CTRLACK.GERROR\_IRQEN == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

# 6.3.22 SMMU\_GERROR\_IRQ\_CFG2

The SMMU\_GERROR\_IRQ\_CFG2 characteristics are:

#### Purpose

Global Error interrupt configuration register.

#### Configuration

This register is present only when SMMU\_IDR0.MSI == 1. Otherwise, direct accesses to SMMU\_GERROR\_IRQ\_CFG2 are RES0.

#### Attributes

SMMU\_GERROR\_IRQ\_CFG2 is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_GERROR\_IRQ\_CFG2 bit assignments are:



#### Bits [31:6]

Reserved, RESO.

#### SH, bits [5:4]

Shareability.

| SH   | Meaning                    |
|------|----------------------------|
| 0b00 | Non-shareable.             |
| 0b01 | Reserved, treated as 0b00. |
| 0b10 | Outer Shareable.           |
| 0b11 | Inner Shareable.           |

• When MemAttr specifies a Device memory type, the contents of this field are IGNORED and the Shareability is effectively Outer Shareable.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### MemAttr, bits [3:0]

Memory type.

• Encoded the same as the STE.MemAttr field.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Additional information

MemAttr and SH allow the memory type and Shareability of the MSI to be configured, see section 3.18 *Interrupts and notifications*. When a cacheable type is specified in MemAttr, the allocation and transient hints are IMPLEMENTATION DEFINED.

# Accessing SMMU\_GERROR\_IRQ\_CFG2

SMMU\_GERROR\_IRQ\_CFG2 is Guarded by SMMU\_IRQ\_CTRL.GERROR\_IRQEN, and must only be modified when SMMU\_IRQ\_CTRL.GERROR\_IRQEN == 0.

See SMMU\_GERROR\_IRQ\_CFG0 for detailed behavior.

SMMU\_GERROR\_IRQ\_CFG2 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x0074 |

- When SMMU\_IRQ\_CTRL.GERROR\_IRQEN == 0 and SMMU\_IRQ\_CTRLACK.GERROR\_IRQEN == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

# 6.3.23 SMMU\_STRTAB\_BASE

The SMMU\_STRTAB\_BASE characteristics are:

#### **Purpose**

Configuration of Stream table base address.


#### **Attributes**

SMMU\_STRTAB\_BASE is a 64-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_STRTAB\_BASE bit assignments are:



#### Bit [63]

Reserved, RESO.

#### RA, bit [62]

Read-Allocate hint.

| RA  | Meaning           |
|-----|-------------------|
| 0b0 | No Read-Allocate. |
| 0b1 | Read-Allocate.    |

The reset behavior of this field is:

- When SMMU\_IDR1.TABLES\_PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

#### Bits [61:52]

Reserved, RESO.

# ADDR, bits [51:6]

Physical address of Stream table base, bits [51:6].

- Address bits above and below this field range are implied as zero.
- High-order bits of the ADDR field above the system physical address size, as reported by SMMU\_IDR5.OAS, are RES0.
  - Note: An implementation is not required to store these bits.

• When a Linear Stream table is used, that is when SMMU\_STRTAB\_BASE\_CFG.FMT == 0b00, the effective base address is aligned by the SMMU to the table size, ignoring the least-significant bits in the ADDR range as required to do so:

```
ADDR[LOG2SIZE + 5:0] = 0.
```

• When a 2-level Stream table is used, that is when SMMU\_STRTAB\_BASE\_CFG.FMT == 0b01, the effective base address is aligned by the SMMU to the larger of 64 bytes or the first-level table size:

```
ADDR[MAX(5, (LOG2SIZE - SPLIT - 1 + 3)):0] = 0.
```

The alignment of ADDR is affected by the literal value of the respective SMMU\_STRTAB\_BASE\_CFG.LOG2SIZE field and is not limited by SIDSIZE.

Note: This means that configuring a table that is larger than required by the incoming StreamID span results in some entries being unreachable, but the table is still aligned to the configured size.

The reset behavior of this field is:

- When SMMU IDR1.TABLES PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

#### Bits [5:0]

Reserved, RESO.

#### Additional information

Access attributes of the Stream table are set using the SMMU\_CR1.TABLE\_\* fields, a Read-Allocate hint is provided for Stream table accesses with the RA field.

# Accessing SMMU\_STRTAB\_BASE

SMMU\_STRTAB\_BASE is Guarded by SMMU\_CR0.SMMUEN and must only be written when SMMU\_CR0.SMMUEN == 0.

These update conditions are common for all SMMU\_(S\_)STRTAB\_\* registers in the SMMU with respect to their corresponding SMMUEN.

In SMMUv3.1 and earlier, a write while SMMU\_CR0.SMMUEN == 1 is CONSTRAINED UNPREDICTABLE and has one of the following behaviors:

- The register takes on any value, which might cause STEs to be fetched from an UNPREDICTABLE address.
- The write is ignored.
- A read following such a write will return an UNKNOWN value.

In SMMUv3.2 and later, a write while SMMU\_CR0.SMMUEN == 1 is IGNORED.

SMMU\_STRTAB\_BASE can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x0080 |

- When SMMU\_IDR1.TABLES\_PRESET == 1, access on this interface is **RO**.
- When SMMU\_CR0.SMMUEN == 0 and SMMU\_CR0ACK.SMMUEN == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

# 6.3.24 SMMU\_STRTAB\_BASE\_CFG

The SMMU\_STRTAB\_BASE\_CFG characteristics are:

#### **Purpose**

Configuration of Stream table.

#### **Attributes**

SMMU\_STRTAB\_BASE\_CFG is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_STRTAB\_BASE\_CFG bit assignments are:

| 31 | 18   | 17 16 | 15 11 | 10 6  | _ 5 0 _  |
|----|------|-------|-------|-------|----------|
|    | RES0 | FMT   | RES0  | SPLIT | L0G2SIZE |

#### Bits [31:18]

Reserved, RESO.

#### FMT, bits [17:16]

#### When SMMU\_IDR0.ST\_LEVEL != 0b00:

Format of Stream table.

| FMT  | Meaning  |
|------|--|
| 0b00 | Linear - ADDR points to an array of STEs.                              |
| 0b01 | 2-level - ADDR points to an array of Level 1 Stream Table Descriptors. |

• Other values are reserved, behave as 0b00.

The reset behavior of this field is:

- When SMMU\_IDR1.TABLES\_PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

#### Otherwise:

RESO

#### Bits [15:11]

Reserved, RESO.

# **SPLIT**, bits [10:6]

#### When SMMU\_IDR0.ST\_LEVEL != 0b00:

StreamID split point for multi-level table.

• This field determines the split point of a 2-level Stream table, selected by the number of bits at the bottom level.

• This field is IGNORED if FMT == 0b00.

| SPLIT   | Meaning                     |  |
|---------|-----------------------------|--|
| 0b00110 | 6 bits - 4KB leaf tables.   |  |
| 0b01000 | 8 bits - 16KB leaf tables.  |  |
| 0b01010 | 10 bits - 64KB leaf tables. |  |

- Other values are reserved, behave as 6 (0b0110).
- The upper-level L1STD is located using StreamID[LOG2SIZE 1:SPLIT] and this indicates the lowest-level table which is indexed by StreamID[SPLIT 1:0].
  - For example, selecting SPLIT == 6 (0b0110) causes StreamID[5:0] to be used to index the lowest level Stream table and StreamID[LOG2SIZE 1:6] to index the upper level table.
- Note: If SPLIT >= LOG2SIZE, a single upper-level descriptor indicates one bottom-level Stream table with 2<sup>LOG2SIZE</sup> usable entries. The L1STD.Span value's valid range is up to SPLIT + 1, but not all of this Span is accessible, as it is not possible to use a StreamID >= 2<sup>LOG2SIZE</sup>.

Note: Arm recommends that a Linear table, FMT == 0b00, is used instead of programming SPLIT > LOG2SIZE.

The reset behavior of this field is:

- When SMMU\_IDR1.TABLES\_PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

#### Otherwise:

RESO

#### LOG2SIZE, bits [5:0]

Table size as  $log_2(entries)$ .

• The maximum StreamID value that can be used to index into the Stream table is 2<sup>LOG2SIZE</sup> - 1. The StreamID range is equal to the number of STEs in a linear Stream table or the maximum sum of the STEs in all second-level tables. The number of L1STDs in the upper level of a 2-level table is MAX(1, 2<sup>LOG2SIZE-SPLIT</sup>). Except for readback of a written value, the effective LOG2SIZE is <= SMMU\_IDR1.SIDSIZE for the purposes of input StreamID range checking and upper/lower/linear Stream table index address calculation.

The reset behavior of this field is:

- When SMMU\_IDR1.TABLES\_PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

#### Additional information

A transaction having a StreamID  $\geq$ =  $2^{\text{LOG2SIZE}}$  is out of range. Such a transaction is terminated with abort and a C\_BAD\_STREAMID event is recorded if permitted by SMMU\_CR2.RECINVSID.

#### Accessing SMMU\_STRTAB\_BASE\_CFG

SMMU\_STRTAB\_BASE\_CFG is Guarded by SMMU\_CR0.SMMUEN and must only be written when SMMU\_CR0.SMMUEN == 0.

See SMMU STRTAB BASE for detailed behavior.

SMMU\_STRTAB\_BASE\_CFG can be accessed through the SMMUv3\_PAGE\_0 block as follows:

# 6.3. Register formats

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x0088 |

- When SMMU\_IDR1.TABLES\_PRESET == 1, access on this interface is **RO**.
- When SMMU\_CR0.SMMUEN == 0 and SMMU\_CR0ACK.SMMUEN == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

# 6.3.25 SMMU\_CMDQ\_BASE

The SMMU\_CMDQ\_BASE characteristics are:

#### **Purpose**

Configuration of the Command queue base address.


#### **Attributes**

SMMU\_CMDQ\_BASE is a 64-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_CMDQ\_BASE bit assignments are:



#### Bit [63]

Reserved, RESO.

#### RA, bit [62]

Read-Allocate hint.

| RA  | Meaning           |  |
|-----|-------------------|--|
| 0b0 | No Read-Allocate. |  |
| 0b1 | Read-Allocate.    |  |

The reset behavior of this field is:

- When SMMU\_IDR1.QUEUES\_PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

# Bits [61:52]

Reserved, RESO.

#### ADDR, bits [51:5]

PA of Command queue base, bits [51:5].

- Address bits above and below this field range are treated as zero.
- High-order bits of the ADDR field above the system physical address size, as reported by SMMU\_IDR5.OAS, are RES0.
  - Note: An implementation is not required to store these bits.
- The effective base address is aligned by the SMMU to the larger of the queue size in bytes or 32 bytes, ignoring the least-significant bits of ADDR as required. ADDR bits [4:0] are treated as zero.

 Note: For example, a queue with 2<sup>8</sup> entries is 4096 bytes in size so software must align an allocation, and therefore ADDR, to a 4KB boundary.

The reset behavior of this field is:

- When SMMU IDR1.QUEUES PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

### LOG2SIZE, bits [4:0]

Oueue size as log<sub>2</sub>(entries).

- LOG2SIZE must be less than or equal to SMMU\_IDR1.CMDQS. Except for the purposes of readback of this register, any use of the value of this field is capped at the maximum, SMMU\_IDR1.CMDQS.
- The minimum size is 0, for one entry, but this must be aligned to a 32-byte (2 entry) boundary as above.

The reset behavior of this field is:

- When SMMU\_IDR1.QUEUES\_PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

#### Additional information

Upon initialization, if SMMU\_IDR1.QUEUES\_PRESET == 0 then the SMMU\_CMDQ\_BASE.LOG2SIZE field might affect which bits of SMMU\_CMDQ\_CONS.RD and SMMU\_CMDQ\_PROD.WR can be written upon initialization. The registers must be initialized in this order:

- 1. Write SMMU\_CMDQ\_BASE to set the queue base and size.
- 2. Write initial values to SMMU\_CMDQ\_CONS and SMMU\_CMDQ\_PROD.
- 3. Enable the queue with an Update of the respective SMMU\_CR0.CMDQEN to 1.

This also applies to the initialization of Event queue and PRI queue registers.

Access attributes of the Command queue are set using the SMMU\_CR1.QUEUE\_\* fields. A Read-Allocate hint is provided for Command queue accesses with the RA field.

# Accessing SMMU CMDQ BASE

SMMU\_CMDQ\_BASE is Guarded by SMMU\_CR0.CMDQEN and must only be modified when SMMU\_CR0.CMDQEN == 0

These update conditions are common for all SMMU\_(S\_)CMDQ\_{BASE, CONS} registers in the SMMU with respect to their corresponding CMDQEN.

In SMMUv3.1 and earlier, a write while SMMU\_CR0.CMDQEN == 1 is CONSTRAINED UNPREDICTABLE and has one of the following behaviors:

- The register takes on any value, which might cause commands to be fetched from an UNPREDICTABLE address.
- The write is ignored.
- A read following such a write will return an UNKNOWN value.

In SMMUv3.2 and later, a write while SMMU\_CR0.CMDQ\_EN == 1 is IGNORED.

SMMU\_CMDQ\_BASE can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x0090 |

# Chapter 6. Memory map and registers 6.3. Register formats

- When SMMU\_IDR1.QUEUES\_PRESET == 1, access on this interface is **RO**.
- When SMMU\_CR0.CMDQEN == 0 and SMMU\_CR0ACK.CMDQEN == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

# 6.3.26 SMMU\_CMDQ\_PROD

The SMMU\_CMDQ\_PROD characteristics are:

#### **Purpose**

Allows Command queue producer to update the write index.

#### **Attributes**

SMMU\_CMDQ\_PROD is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_CMDQ\_PROD bit assignments are:



#### Bits [31:20]

Reserved, RESO.

#### WR, bits [19:0]

Command queue write index.

This field is treated as two sub-fields, depending on the configured queue size:

Bit [QS]: WR WRAP - Command queue write index wrap flag.

Bits [QS-1:0]: WR - Command queue write index.

• Updated by the host PE (producer) indicating the next empty space in the queue after new data.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

## Additional information

QS == SMMU\_CMDQ\_BASE.LOG2SIZE, see SMMU\_CMDQ\_CONS.

If QS < 19, bits [19:QS + 1] are RESO. If software writes a non-zero value to these bits, the value might be stored but has no other effect. In addition, if SMMU\_IDR1.CMDOS < 19, bits [19:CMDOS+1] are UNKNOWN on read.

If QS == 0 the queue has one entry. Zero bits of WR index are present and WR\_WRAP is bit zero.

When software increments WR, if the index would pass off the end of the queue it must be correctly wrapped to the queue size given by QS and WR\_WRAP toggled.

Note: In the degenerate case of a one-entry queue, an increment of WR consists solely of a toggle of WR\_WRAP.

There is space in the queue for additional commands if:

```
SMMU_CMDQ_CONS.RD != SMMU_CMDQ_PROD.WR ||
SMMU_CMDQ_CONS.RD_WRAP == SMMU_CMDQ_PROD.WR_WRAP
```

The value written to this register must only move the pointer in a manner consistent with adding N consecutive entries to the Command queue, updating WR\_WRAP when appropriate.

When SMMU\_CMDQ\_BASE.LOG2SIZE is increased within its valid range, the value of the bits of this register that were previously above the old wrap flag position are UNKNOWN and when it is decreased, the value of the bits from the wrap flag downward are the effective truncation of the value in the old field.

Arm recommends that software initializes the register to a valid value before SMMU\_CR0.CMDQEN is transitioned from 0 to 1.

A write to this register causes the SMMU to consider the Command queue for processing if SMMU\_CR0.CMDQEN == 1 and SMMU\_GERROR.CMDQ\_ERR is not active.

# Accessing SMMU\_CMDQ\_PROD

SMMU\_CMDQ\_PROD can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x0098 |

Access on this interface is RW.

## 6.3.27 SMMU\_CMDQ\_CONS

The SMMU\_CMDQ\_CONS characteristics are:

#### **Purpose**

Command queue consumer read index.

#### **Attributes**

SMMU\_CMDQ\_CONS is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_CMDQ\_CONS bit assignments are:



## Bit [31]

Reserved, RESO.

#### ERR, bits [30:24]

Error reason code.

- When a command execution error is detected, ERR is set to a reason code and then the <a href="SMMU\_GERROR.CMDQ\_ERR">SMMU\_GERROR.CMDQ\_ERR</a> global error becomes active.
- The value in this field is UNKNOWN when the CMDQ\_ERR global error is not active.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

## Bits [23:20]

Reserved, RESO.

## RD, bits [19:0]

Command queue read index.

This field is treated as two sub-fields, depending on the configured queue size:

Bit [QS]: RD\_WRAP - Queue read index wrap flag.

Bits [QS-1:0]: RD - Queue read index.

• Updated by the SMMU (consumer) to point at the queue entry after the entry it has just consumed.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Additional information

QS == SMMU\_CMDQ\_BASE.LOG2SIZE and SMMU\_CMDQ\_BASE.LOG2SIZE <= SMMU\_IDR1.CMDQS <= 19.

This gives a configurable-sized index pointer followed immediately by the wrap bit.

If QS < 19, bits [19:QS + 1] are RAZ. When incremented by the SMMU, the RD index is always wrapped to the current queue size given by SMMU\_CMDQ\_BASE.LOG2SIZE.

If QS == 0 the queue has one entry. Zero bits of RD index are present and RD WRAP is bit zero.

When SMMU\_CMDQ\_BASE.LOG2SIZE is increased within its valid range, the value of the bits of this register that were previously above the old wrap flag position are UNKNOWN and when it is decreased, the value of the bits from the wrap flag downward are the effective truncation of the value in the old field.

Arm recommends that software initializes the register to a valid value before SMMU\_CR0.CMDQEN is transitioned from 0 to 1.

Upon a write to this register, when SMMU\_CR0.CMDQEN == 0, the ERR field is permitted to either take the written value or ignore the written value.

Note: There is no requirement for the SMMU to update this value after every command consumed. It might be updated only after an implementation specific number of commands have been consumed. However, an SMMU must ultimately update RD in finite time to indicate free space to software.

When a command execution error is detected, ERR is set to a reason code and then the respective SMMU\_GERROR.CMDQ\_ERR error becomes active. RD remains pointing at the infringing command for debug. The SMMU resumes processing commands after the CMDQ\_ERR error is acknowledged, if the Command queue is enabled at that time. SMMU\_GERROR.CMDQ\_ERR has no other interaction with SMMU\_CR0.CMDQEN than that a Command queue error can only be detected when the queue is enabled and therefore consuming commands. A change to SMMU\_CR0.CMDQEN does not affect, or acknowledge, SMMU\_GERROR.CMDQ\_ERR which must be explicitly acknowledged. See section 7.1 Command queue errors.

## Accessing SMMU\_CMDQ\_CONS

This register is Guarded by SMMU\_CR0.CMDQEN and must only be modified when SMMU\_CR0.CMDQEN == 0.

See SMMU\_CMDQ\_BASE for detailed behavior.

SMMU\_CMDQ\_CONS can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x009C |

- When SMMU\_CR0.CMDQEN == 0 and SMMU\_CR0ACK.CMDQEN == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

# 6.3.28 SMMU\_EVENTQ\_BASE

The SMMU\_EVENTQ\_BASE characteristics are:

#### **Purpose**

Event queue base address register.


#### Attributes

SMMU\_EVENTQ\_BASE is a 64-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_EVENTQ\_BASE bit assignments are:



#### Bit [63]

Reserved, RESO.

## WA, bit [62]

Write Allocate hint.

| WA  | Meaning            |
|-----|--------------------|
| 0b0 | No Write-Allocate. |
| 0b1 | Write-Allocate.    |

The reset behavior of this field is:

- When SMMU\_IDR1.QUEUES\_PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

# Bits [61:52]

Reserved, RESO.

## ADDR, bits [51:5]

PA of queue base, bits [51:5].

- Address bits above and below this field range are treated as zero.
- High-order bits of the ADDR field above the system physical address size, as reported by SMMU\_IDR5.OAS, are RES0.
  - Note: An implementation is not required to store these bits.
- The effective base address is aligned by the SMMU to the larger of the queue size in bytes or 32 bytes, ignoring the least-significant bits of ADDR as required.

The reset behavior of this field is:

- When SMMU IDR1.QUEUES PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

#### LOG2SIZE, bits [4:0]

Queue size as  $log_2(entries)$ .

• LOG2SIZE is less than or equal to SMMU\_IDR1.EVENTQS. Except for the purposes of readback of this register, any use of the value of this field is capped at the maximum, SMMU\_IDR1.EVENTQS.

The reset behavior of this field is:

- When SMMU\_IDR1.QUEUES\_PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

#### Additional information

See SMMU\_CMDQ\_BASE for initialization order with respect to the PROD and CONS registers.

Events destined for an Event queue (for the appropriate Security state, if supported) are delivered into the queue if SMMU\_CR0.EVENTQEN == 1 and the queue is writable. If SMMU\_CR0.EVENTQEN == 0, no events are delivered into the queue. See section 7.2 Event queue recorded faults and events; some events might be lost in these situations.

Access attributes of the Event queue are set using the SMMU\_CR1.QUEUE\_\* fields. A Write-Allocate hint is provided for Event queue accesses with the WA field.

# Accessing SMMU\_EVENTQ\_BASE

SMMU\_EVENTQ\_BASE is Guarded by SMMU\_CR0.EVENTQEN and must only be modified when SMMU\_CR0.EVENTQEN == 0

These update conditions are common for all SMMU\_(S\_)EVENTQ\_{BASE, PROD} registers in the SMMU with respect to their corresponding EVENTQEN.

In SMMUv3.1 and earlier, a write while SMMU\_CR0.EVENTQEN == 1 is CONSTRAINED UNPREDICTABLE and has one of the following behaviors:

- The register takes on any value, which might cause events to be written to an UNPREDICTABLE address.
- The write is ignored.
- A read following such a write will return an UNKNOWN value.

In SMMUv3.2 and later, a write while SMMU\_CR0.EVENTQ\_EN == 1 is IGNORED.

SMMU EVENTQ BASE can be accessed through the SMMUv3 PAGE 0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x00A0 |

- When SMMU IDR1.QUEUES PRESET == 1, access on this interface is **RO**.
- When SMMU\_CR0.EVENTQEN == 0 and SMMU\_CR0ACK.EVENTQEN == 0, access on this interface is RW
- Otherwise, access on this interface is RO.

## 6.3.29 SMMU\_EVENTQ\_IRQ\_CFG0

The SMMU\_EVENTQ\_IRQ\_CFG0 characteristics are:

#### Purpose

Event queue interrupt configuration register.

#### Configuration

This register is present only when SMMU\_IDR0.MSI == 1. Otherwise, direct accesses to SMMU\_EVENTQ\_IRQ\_CFG0 are RES0.

## Attributes

SMMU\_EVENTQ\_IRQ\_CFG0 is a 64-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

## Field descriptions

The SMMU\_EVENTQ\_IRQ\_CFG0 bit assignments are:



#### Bits [63:52]

Reserved, RESO.

## ADDR, bits [51:2]

Physical address of MSI target register, bits [51:2].

• If OAS, the system physical address size reported by SMMU\_IDR5.OAS, is less than 52 then bits ADDR[51:OAS] are RES0.

Note: An implementation is not required to store these bits.

- Bits [51:OAS] and [1:0] of the effective address that results from this field are zero.
- If ADDR == 0, no MSI is sent.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# Bits [1:0]

Reserved, RESO.

# Accessing SMMU\_EVENTQ\_IRQ\_CFG0

SMMU\_EVENTQ\_IRQ\_CFG0 is Guarded by SMMU\_IRQ\_CTRL.EVENTQ\_IRQEN and must only be modified when SMMU\_IRQ\_CTRL.EVENTQ\_IRQEN == 0.

See SMMU\_GERROR\_IRQ\_CFG0 for detailed behavior.

SMMU\_EVENTQ\_IRQ\_CFG0 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x00B0 |

- When SMMU\_IRQ\_CTRL.EVENTQ\_IRQEN == 0 and SMMU\_IRQ\_CTRLACK.EVENTQ\_IRQEN == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

# 6.3.30 SMMU\_EVENTQ\_IRQ\_CFG1

The SMMU\_EVENTQ\_IRQ\_CFG1 characteristics are:

#### Purpose

Event queue interrupt configuration register.

#### Configuration

This register is present only when SMMU\_IDR0.MSI == 1. Otherwise, direct accesses to SMMU\_EVENTQ\_IRQ\_CFG1 are RES0.


#### **Attributes**

SMMU\_EVENTQ\_IRQ\_CFG1 is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_EVENTQ\_IRQ\_CFG1 bit assignments are:



## DATA, bits [31:0]

MSI Data payload.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# Accessing SMMU\_EVENTQ\_IRQ\_CFG1

SMMU\_EVENTQ\_IRQ\_CFG1 is Guarded by SMMU\_IRQ\_CTRL.EVENTQ\_IRQEN, and must only be modified when SMMU\_IRQ\_CTRL.EVENTQ\_IRQEN == 0.

See SMMU\_GERROR\_IRQ\_CFG0 for detailed behavior.

SMMU\_EVENTQ\_IRQ\_CFG1 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x00B8 |

- When SMMU\_IRQ\_CTRL.EVENTQ\_IRQEN == 0 and SMMU\_IRQ\_CTRLACK.EVENTQ\_IRQEN == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

# 6.3.31 SMMU\_EVENTQ\_IRQ\_CFG2

The SMMU\_EVENTQ\_IRQ\_CFG2 characteristics are:

#### Purpose

Event queue interrupt configuration register.

#### Configuration

This register is present only when SMMU\_IDR0.MSI == 1. Otherwise, direct accesses to SMMU\_EVENTQ\_IRQ\_CFG2 are RES0.

## **Attributes**

SMMU\_EVENTQ\_IRQ\_CFG2 is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_EVENTQ\_IRQ\_CFG2 bit assignments are:



#### Bits [31:6]

Reserved, RESO.

## SH, bits [5:4]

Shareability.

| SH   | Meaning                    |
|------|----------------------------|
| 0b00 | Non-shareable.             |
| 0b01 | Reserved, treated as 0b00. |
| 0b10 | Outer Shareable.           |
| 0b11 | Inner Shareable.           |

• When MemAttr specifies a Device memory type, the contents of this field are IGNORED and the Shareability is effectively Outer Shareable.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

## MemAttr, bits [3:0]

Memory type.

• Encoded in the same way as STE.MemAttr.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Additional information

MemAttr and SH allow the memory type and Shareability of the MSI to be configured, see section 3.18 *Interrupts and notifications*.

Note: The encodings of all of the SMMU\_\*\_IRQ\_CFG2 MemAttr and SH fields are the same. When a cacheable type is specified in MemAttr, the allocation and transient hints are IMPLEMENTATION DEFINED.

# Accessing SMMU\_EVENTQ\_IRQ\_CFG2

SMMU\_EVENTQ\_IRQ\_CFG2 is Guarded by SMMU\_IRQ\_CTRL.EVENTQ\_IRQEN, and must only be modified when SMMU\_IRQ\_CTRL.EVENTQ\_IRQEN == 0.

See SMMU\_GERROR\_IRQ\_CFG0 for detailed behavior.

SMMU\_EVENTQ\_IRQ\_CFG2 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x00BC |

- When SMMU\_IRQ\_CTRL.EVENTQ\_IRQEN == 0 and SMMU\_IRQ\_CTRLACK.EVENTQ\_IRQEN == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

# 6.3.32 SMMU\_PRIQ\_BASE

The SMMU\_PRIQ\_BASE characteristics are:

#### Purpose

Configuration of the PRI queue base address.

#### Configuration

This register is present only when SMMU\_IDR0.PRI == 1. Otherwise, direct accesses to SMMU\_PRIQ\_BASE are RES0.


## Attributes

SMMU\_PRIQ\_BASE is a 64-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# Field descriptions

The SMMU\_PRIQ\_BASE bit assignments are:



## Bit [63]

Reserved, RESO.

## WA, bit [62]

Write allocate hint.

| WA  | Meaning            |  |
|-----|--------------------|--|
| 0b0 | No Write-Allocate. |  |
| 0b1 | Write-Allocate.    |  |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

## Bits [61:52]

Reserved, RESO.

# ADDR, bits [51:5]

PA of queue base, bits [51:5].

- Address bits above and below this field range are implied as zero.
- High-order bits of the ADDR field above the system physical address size, as reported by SMMU\_IDR5.OAS, are RES0.

- Note: An implementation is not required to store these bits.
- The effective base address is aligned by the SMMU to the larger of the queue size in bytes or 32 bytes, ignoring the least-significant bits of ADDR as required.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### LOG2SIZE, bits [4:0]

Queue size as  $log_2(entries)$ .

• LOG2SIZE <= SMMU\_IDR1.PRIQS (which has a maximum value of 19). Except for the purposes of readback of this register, any use of this field's value is capped at SMMU\_IDR1.PRIQS.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Additional information

See SMMU\_CMDQ\_BASE for initialization order with respect to the PROD and CONS registers.

Access attributes of the PRI queue are set using the SMMU\_CR1.QUEUE\_\* fields. A Write-Allocate hint is provided for PRI queue accesses with the WA field.

# Accessing SMMU\_PRIQ\_BASE

SMMU\_PRIQ\_BASE is Guarded by SMMU\_CR0.PRIQEN and must only be modified when SMMU\_CR0.PRIQEN == 0

These update conditions are common for both SMMU\_PRIQ\_{BASE, PROD} registers in the SMMU with respect to PRIQEN.

In SMMUv3.1 and earlier, a write while SMMU\_CR0.PRIQEN == 1 is CONSTRAINED UNPREDICTABLE and has one of the following behaviors:

- The register takes on any value, which might cause events to be written to an UNPREDICTABLE address.
- The write is ignored.
- A read following such a write will return an UNKNOWN value.

In SMMUv3.2 and later, a write while SMMU\_CR0.PRIQ\_EN == 1 is IGNORED.

SMMU\_PRIQ\_BASE can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x00C0 |

- When SMMU CR0.PRIQEN == 0 and SMMU CR0ACK.PRIQEN == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

## 6.3.33 SMMU\_PRIQ\_IRQ\_CFG0

The SMMU\_PRIQ\_IRQ\_CFG0 characteristics are:

#### Purpose

PRI queue interrupt configuration register.

#### Configuration

This register is present only when SMMU\_IDR0.MSI == 1 and SMMU\_IDR0.PRI == 1. Otherwise, direct accesses to SMMU\_PRIQ\_IRQ\_CFG0 are RES0.

#### **Attributes**

SMMU\_PRIQ\_IRQ\_CFG0 is a 64-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

## **Field descriptions**

The SMMU\_PRIQ\_IRQ\_CFG0 bit assignments are:



#### Bits [63:52]

Reserved, RESO.

# ADDR, bits [51:2]

Physical address of MSI target register, bits [51:2].

• If OAS, the system physical address size reported by SMMU\_IDR5.OAS, is less than 52 then bits ADDR[51:OAS] are RES0.

Note: An implementation is not required to store these bits.

- Bits [51:OAS] and [1:0] of the effective address that results from this field are zero.
- If ADDR == 0, no MSI is sent. This allows a wired IRQ, if implemented, to be used when SMMU\_IRQ\_CTRL.PRIQ\_IRQEN == 1 instead of an MSI.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

## Bits [1:0]

Reserved, RESO.

# Accessing SMMU\_PRIQ\_IRQ\_CFG0

 $SMMU\_PRIQ\_IRQ\_CFG0 \ is \ Guarded \ by \ SMMU\_IRQ\_CTRL.PRIQ\_IRQEN \ and \ must \ only \ be \ modified \ when \ SMMU\_IRQ\_CTRL.PRIQ\_IRQEN == 0.$ 

See SMMU\_GERROR\_IRQ\_CFG0 for detailed behavior.

SMMU\_PRIQ\_IRQ\_CFG0 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x00D0 |

- When SMMU\_IRQ\_CTRL.PRIQ\_IRQEN == 0 and SMMU\_IRQ\_CTRLACK.PRIQ\_IRQEN == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

# 6.3.34 SMMU\_PRIQ\_IRQ\_CFG1

The SMMU\_PRIQ\_IRQ\_CFG1 characteristics are:

#### Purpose

PRI queue interrupt configuration register.

#### Configuration

This register is present only when SMMU\_IDR0.MSI == 1 and SMMU\_IDR0.PRI == 1. Otherwise, direct accesses to SMMU\_PRIQ\_IRQ\_CFG1 are RES0.


#### **Attributes**

SMMU\_PRIQ\_IRQ\_CFG1 is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# Field descriptions

The SMMU\_PRIQ\_IRQ\_CFG1 bit assignments are:



## DATA, bits [31:0]

MSI Data payload.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# Accessing SMMU\_PRIQ\_IRQ\_CFG1

SMMU\_PRIQ\_IRQ\_CFG1 is Guarded by SMMU\_IRQ\_CTRL.PRIQ\_IRQEN, and must only be modified when SMMU\_IRQ\_CTRL.PRIQ\_IRQEN == 0.

See SMMU\_GERROR\_IRQ\_CFG0 for detailed behavior.

SMMU\_PRIQ\_IRQ\_CFG1 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x00D8 |

- When SMMU\_IRQ\_CTRL.PRIQ\_IRQEN == 0 and SMMU\_IRQ\_CTRLACK.PRIQ\_IRQEN == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

# 6.3.35 SMMU\_PRIQ\_IRQ\_CFG2

The SMMU\_PRIQ\_IRQ\_CFG2 characteristics are:

#### Purpose

PRI queue interrupt configuration register.

#### Configuration

This register is present only when SMMU\_IDR0.MSI == 1 and SMMU\_IDR0.PRI == 1. Otherwise, direct accesses to SMMU\_PRIQ\_IRQ\_CFG2 are RES0.

## **Attributes**

SMMU\_PRIQ\_IRQ\_CFG2 is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_PRIQ\_IRQ\_CFG2 bit assignments are:



Similar to SMMU\_GERROR\_IRQ\_CFG2 but for PRI queue MSIs.

## LO, bit [31]

Last Only: only interrupt if PRI message received with L bit set.

| LO  | Meaning  |
|-----|--|
| 0b0 | Send PRI queue interrupt when PRI queue transitions from empty to non-empty.   |
| 0b1 | <ul> <li>Send PRI queue interrupt when PRI message received with L bit set.</li> <li>• When the message is written to PRI queue, the interrupt is visible after the queue entry becomes visible. See section 3.18 <i>Interrupts and notifications</i></li> <li>• When the message is discarded because of a PRI queue overflow, the interrupt is generated. When the message is discarded for any other reason, the interrupt is not generated.</li> </ul> |

Note: The LO field applies to wired and MSI interrupts.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

## Bits [30:6]

Reserved, RESO.

#### SH, bits [5:4]

Shareability.

| SH   | Meaning                    |
|------|----------------------------|
| 0b00 | Non-shareable.             |
| 0b01 | Reserved, treated as 0b00. |
| 0b10 | Outer Shareable.           |
| 0b11 | Inner Shareable.           |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

## MemAttr, bits [3:0]

Memory type.

• Encoded the same as the STE.MemAttr field.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Additional information

MemAttr and SH allow the memory type and Shareability of the MSI to be configured, see section 3.18 *Interrupts and notifications*. The encodings of all of the SMMU\_\*\_IRQ\_CFG2 MemAttr and SH fields are the same. When a cacheable type is specified in MemAttr, the allocation and transient hints are IMPLEMENTATION DEFINED.

# Accessing SMMU\_PRIQ\_IRQ\_CFG2

SMMU\_PRIQ\_IRQ\_CFG2 is Guarded by SMMU\_IRQ\_CTRL.PRIQ\_IRQEN, and must only be modified when SMMU\_IRQ\_CTRL.PRIQ\_IRQEN == 0.

See SMMU\_GERROR\_IRQ\_CFG0 for detailed behavior.

SMMU\_PRIQ\_IRQ\_CFG2 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x00DC |

- When SMMU\_IRQ\_CTRL.PRIQ\_IRQEN == 0 and SMMU\_IRQ\_CTRLACK.PRIQ\_IRQEN == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

# 6.3.36 SMMU\_GATOS\_CTRL

The SMMU\_GATOS\_CTRL characteristics are:

#### **Purpose**

Global ATOS translation control register.

#### Configuration

This register is present only when SMMU\_IDR0.ATOS == 1. Otherwise, direct accesses to SMMU\_GATOS\_CTRL are RES0.

## Attributes

SMMU\_GATOS\_CTRL is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

## Field descriptions

The SMMU\_GATOS\_CTRL bit assignments are:



#### Bits [31:1]

Reserved, RESO.

#### RUN, bit [0]

Run ATOS translation.

- Software must write this bit to 1 to initiate the translation operation, after initializing the ATOS\_SID and ATOS\_ADDR registers.
- The SMMU clears the RUN flag after the translation completes and its result is visible in ATOS\_PAR.
- A write of 0 to this flag might change the value of the flag but has no other effect. Software must only write 0 to this flag when the flag is zero.

The reset behavior of this field is:

• This field resets to 0b0.

## Additional information

SMMU\_GATOS\_{CTRL, SID, ADDR, PAR} are only present if SMMU\_IDR0.ATOS == 1; otherwise, they are Reserved. See Chapter 9 *Address Translation Operations* for more information on the overall behavior of ATOS operations.

## Accessing SMMU\_GATOS\_CTRL

RUN is Guarded by  $SMMU_CR0.SMMUEN$  and must only be set when SMMUEN == 1 and RUN == 0.

ATOS\_CTRL.RUN must not be set to 1 after SMMU\_CR0.SMMUEN has been written to 0, including at a point prior to the completion of an Update to SMMUEN.

In SMMUv3.1 and earlier, behavior of doing so is CONSTRAINED UNPREDICTABLE and one of the following occurs:

- The write is IGNORED.
- The value is stored and visible for readback, but no other effect occurs and RUN is not cleared by the SMMU unless SMMUEN is later Updated to 1.

In SMMUv3.2 and later, such a write is IGNORED

Between software writing ATOS\_CTRL.RUN == 1 and observing the SMMU having cleared it to 0 again:

- In SMMUv3.1 and earlier, writes to ATOS\_SID, ATOS\_ADDR and VATOS\_SEL (if appropriate) are CONSTRAINED UNPREDICTABLE and one of the following occurs:
  - The write is IGNORED.
  - Translation is performed with any value of the written register. After completion, ATOS\_PAR is UNKNOWN.

Note: HTTU might have been performed to an UNPREDICTABLE set of translation table descriptors that could otherwise have been updated using any given value of the written register.

- In SMMUv3.2 and later, writes to ATOS SID, ATOS ADDR and VATOS SEL (if appropriate) are IGNORED.
- In SMMUv3.1 and earlier, writes to ATOS\_CTRL are CONSTRAINED UNPREDICTABLE and one of the following occurs:
  - The write is IGNORED.
  - The value is stored and visible for readback, but translation is unaffected and completes normally. Note: If RUN == 0 was written, it is not possible to determine that the translation has completed.
  - Reads of ATOS\_PAR return UNKNOWN.
- In SMMUv3.2 and later, writes to ATOS\_CTRL are IGNORED.

The completion of an Update of SMMU\_CR0.SMMUEN from 1 to 0 while RUN == 1 is contingent on the completion of the ATOS operation, which clears RUN. Clearing SMMU\_CR0.SMMUEN while RUN == 1 is CONSTRAINED UNPREDICTABLE and the completion of the SMMUEN == 0 Update ensures one of the following behaviors:

- The operation has completed normally and a valid translation/fault response is reported.
- The ATOS operation has been aborted, reporting ATOS\_PAR.FAULT == 1 and ATOS\_PAR.FAULTCODE == INTERNAL\_ERR.
  - The translation table walks for the ongoing ATOS translation might have been partially performed. If
    HTTU was performed during the translation, an UNPREDICTABLE set of the translation table descriptors
    relevant to the translation table walks might have been updated.

An Update of SMMU\_CR0.SMMUEN from 0 to 1 clears RUN, if RUN was set while SMMU\_CR0.SMMUEN == 0. Completion of the Update occurs after RUN has been cleared for all Non-secure ATOS register groups.

The behavior specified here is consistent across all SMMU\_\*ATOS\_\* registers and their corresponding SMMUEN and ATOS\_CTRL.RUN bits.

SMMU\_GATOS\_CTRL can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x0100 |

- When SMMU\_GATOS\_CTRL.RUN == 1, access on this interface is **RO**.
- Otherwise, access on this interface is RW.

# 6.3.37 SMMU\_GATOS\_SID

The SMMU\_GATOS\_SID characteristics are:

#### Purpose

Global ATOS StreamID register.

#### Configuration

This register is present only when SMMU\_IDR0.ATOS == 1. Otherwise, direct accesses to SMMU\_GATOS\_SID are RES0.


## Attributes

SMMU\_GATOS\_SID is a 64-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# Field descriptions

The SMMU\_GATOS\_SID bit assignments are:



## Bits [63:53]

Reserved, RESO.

## SSID\_VALID, bit [52]

# When SMMU\_IDR1.SSIDSIZE != 0:

SubstreamID valid.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

## Otherwise:

RES0

## SUBSTREAMID, bits [51:32]

SubstreamID of request.

• If SMMU\_IDR1.SSIDSIZE < 20, bits [51:(32 + SMMU\_IDR1.SSIDSIZE)] are RESO.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

## STREAMID, bits [31:0]

StreamID of request.

- This is written with the StreamID (used to locate translations/CDs) of the request later submitted to SMMU\_GATOS\_ADDR.
- If SMMU\_IDR1.SID\_SIZE < 32, bits [31:SMMU\_IDR1.SID\_SIZE] are RES0.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Additional information

Bits of SubstreamID and StreamID outside of the supported range are RESO.

# **Accessing SMMU GATOS SID**

This register is Guarded by SMMU\_GATOS\_CTRL.RUN and must only be altered when RUN == 0.

See SMMU\_GATOS\_CTRL for more detailed behavior.

SMMU\_GATOS\_SID can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x0108 |

- When SMMU\_GATOS\_CTRL.RUN == 1, access on this interface is **RO**.
- Otherwise, access on this interface is **RW**.

# 6.3.38 SMMU\_GATOS\_ADDR

The SMMU\_GATOS\_ADDR characteristics are:

#### Purpose

Global ATOS translation address register.

#### Configuration

This register is present only when SMMU\_IDR0.ATOS == 1. Otherwise, direct accesses to SMMU\_GATOS\_ADDR are RES0.


## **Attributes**

SMMU\_GATOS\_ADDR is a 64-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# Field descriptions

The SMMU\_GATOS\_ADDR bit assignments are:



## ADDR, bits [63:12]

Requested input address, bits [63:12].

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# TYPE, bits [11:10]

Request type.

| ТҮРЕ | Meaning                         |
|------|---------------------------------|
| 0b00 | Reserved.                       |
| 0b01 | Stage 1 (VA to IPA).            |
| 0b10 | Stage 2 (IPA to PA).            |
| 0b11 | Stage 1 and stage 2 (VA to PA). |

• Use of a Reserved value results in an INV\_REQ ATOS error.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

## PnU, bit [9]

Privileged or User access.

| PnU | Meaning       |
|-----|---------------|
| 0b0 | Unprivileged. |
| 0b1 | Privileged.   |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

## RnW, bit [8]

Read/write access.

| RnW | Meaning |
|-----|---------|
| 0b0 | Write.  |
| 0b1 | Read.   |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

## InD, bit [7]

Instruction/data access.

| InD | Meaning      |
|-----|--------------|
| 0b0 | Data.        |
| 0b1 | Instruction. |

• This bit is IGNORED if RnW == 0, and the effective InD for writes is Data.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# HTTUI, bit [6]

Inhibit hardware update of the Access flag and dirty state.

| HTTUI | Meaning   |
|-------|---|
| 0b0   | Flag update (HTTU) might occur, where supported by the SMMU, according to HA:HD configuration fields at stage 1 and stage 2.              |
| 0b1   | <ul><li>HTTU is inhibited, regardless of HA/HD configuration.</li><li>The ATOS operation causes no state change and is passive.</li></ul> |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

## Bits [5:0]

Reserved, RESO.

## Additional information

The PnU and InD attributes are not affected by the STE.INSTCFG or STE.PRIVCFG overrides.

# Accessing SMMU\_GATOS\_ADDR

This register is Guarded by  $SMMU\_GATOS\_CTRL.RUN$  and must only be altered when RUN == 0.

See SMMU\_GATOS\_CTRL for more detailed behavior.

SMMU\_GATOS\_ADDR can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x0110 |

- When SMMU\_GATOS\_CTRL.RUN == 1, access on this interface is **RO**.
- Otherwise, access on this interface is **RW**.

# 6.3.39 SMMU\_GATOS\_PAR

The SMMU\_GATOS\_PAR characteristics are:

#### **Purpose**

Global ATOS translation results register.

This result register encodes both successful results and error results. The format is determined by the FAULT field.

## Configuration

This register is present only when SMMU\_IDR0.ATOS == 1. Otherwise, direct accesses to SMMU\_GATOS\_PAR are RES0.

#### **Attributes**


SMMU\_GATOS\_PAR is a 64-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

## **Field descriptions**

The SMMU\_GATOS\_PAR bit assignments are:

## When SMMU\_GATOS\_PAR.FAULT == 0:



When FAULT == 0, a successful result is present:

#### ATTR, bits [63:56]

Memory attributes, in MAIR format.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

## Bits [55:52]

Reserved, RESO.

## ADDR, bits [51:12]

Result address, bits [51:12].

- Address bits above and below [51:12] are treated as zero.
- In SMMUv3.0, bits [51:48] are RES0.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

Chapter 6. Memory map and registers 6.3. Register formats

# Size, bit [11]

Translation page/block size flag.

| Size | Meaning  |
|------|--|
| 0b0  | Translation is 4KB.  |
| 0b1  | Translation is determined by position of lowest 1 bit in ADDR field. |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# Bit [10]

Reserved, RESO.

## SH, bits [9:8]

Shareability attribute.

| SH   | Meaning          |
|------|------------------|
| 0b00 | Non-shareable.   |
| 0b01 | Reserved.        |
| 0b10 | Outer Shareable. |
| 0b11 | Inner Shareable. |

• Note: Shareability is returned as Outer Shareable when ATTR selects any Device type.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# Bits [7:1]

Reserved, RESO.

# FAULT, bit [0]

Fault/error status.

| FAULT | Meaning   |
|-------|-----------|
| 0b0   | No fault. |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

## Additional information for When SMMU\_GATOS\_PAR.FAULT == 0

The Size field allows the size of the translation to be determined, using an encoding in the ADDR field.

The translated address is aligned to the translation size (appropriate number of LSBs zeroed) and then, if the size is greater than 4KB, a single bit is set such that its position, N, denotes the translation size, where  $2^{(N+1)}$  == size in

bytes.


Note: For example, if Size == 1 and ADDR[14:12] == 0 and ADDR[15] == 1, the lowest set bit is 15 so the translation size is  $2^{15+1}$ , or 64KB. In this case, the actual output address must be aligned to 64KB by masking out bit 15. Similarly, an output address with ADDR[13:12] == 0b10 denotes a page of size  $2^{13+1}$ , or 16KB, and the output address is taken from ADDR[14] upwards.

An implementation that does not support all of the defined attributes is permitted to return the behavior that the cache supports, instead of the exact value from the translation table entries. Similarly, an implementation might return the translation page/block size that is cached rather than the size that is determined from the translation table entries.

The memory attributes and Shareability that are returned in ATTR and SH are determined from the translation tables without including STE overrides that might be configured for the given stream:

- When ATOS\_ADDR.TYPE == stage 1, the stage 1 translation table attributes are returned.
- When ATOS\_ADDR.TYPE == stage 2, the stage 2 translation table attributes are returned. In this case, the allocation and transient hints in ATTR are:
  - RA == WA == 1.
  - TR == 0.
  - Note: The stage 2 TTD.MemAttr[3:0] field does not encode RA/WA/TR.
- When ATOS\_ADDR.TYPE == stage 1 and stage 2, the attributes returned are those from stage 1 combined with stage 2 (where combined is as defined in Chapter 13 Attribute Transformation).

# When SMMU\_GATOS\_PAR.FAULT == 1:



When FAULT == 1, the translation has failed and a fault syndrome is present:

## IMPDEF, bits [63:60]

IMPLEMENTATION DEFINED fault data.

#### Bits [59:52]

Reserved, RESO.

## FADDR, bits [51:12]

Stage 2 fault page address, bits [51:12].

- The value returned in FADDR depends on the cause of the fault. See section 9.1.4 ATOS\_PAR for details.
- In SMMUv3.0, bits [51:48] are RES0.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

## FAULTCODE, bits [11:4]

Fault/error code.

• See section 9.1.4 ATOS\_PAR for details.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

## Bit [3]

Reserved, RESO.

## REASON, bits [2:1]

Class of activity causing fault.

• This indicates the stage and reason for the fault. See section 9.1.4 ATOS\_PAR for details.

| REASON | Meaning   |
|--------|---|
| 0b00   | Stage 1 translation-related fault occurred, or miscellaneous non-translation fault not attributable to a translation stage (for example, F_BAD_STE).  |
| 0b01   | CD: Stage 2 fault occurred because of a CD fetch.   |
| 0b10   | TT: Stage 2 fault occurred because of a stage 1 translation table walk.   |
| 0b11   | IN: Stage 2 fault occurred because of the input address to stage 2 (output address from successful stage 1 translation table walk, or address given in ATOS_ADDR for stage 2-only translation). |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

## FAULT, bit [0]

Fault/error status.

| FAULT | Meaning                     |
|-------|-----------------------------|
| 0b1   | Fault or translation error. |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# Accessing SMMU\_GATOS\_PAR

The content of ATOS\_PAR registers is UNKNOWN if values in the ATOS register group are modified after a translation has been initiated by setting ATOS\_CTRL.RUN == 1. See section 9.1.4 ATOS\_PAR.

This register has an UNKNOWN value if read when SMMU\_GATOS\_CTRL.RUN == 1.

 $SMMU\_GATOS\_PAR\ can \ be\ accessed\ through\ the\ SMMUv3\_PAGE\_0\ block\ as\ follows:$ 

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x0118 |

Access on this interface is RO.

## 6.3.40 SMMU MPAMIDR

The SMMU\_MPAMIDR characteristics are:

#### Purpose

MPAM capability identification register for Non-secure state.

#### Configuration

This register is present only when SMMU\_IDR3.MPAM == 1. Otherwise, direct accesses to SMMU\_MPAMIDR are RES0.


#### **Attributes**

SMMU\_MPAMIDR is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

## Field descriptions

The SMMU\_MPAMIDR bit assignments are:



### Bits [31:24]

Reserved, RESO.

## PMG\_MAX, bits [23:16]

• The maximum PMG value that is permitted to be used in Non-secure state.

## PARTID\_MAX, bits [15:0]

• The maximum PARTID value that is permitted to be used in Non-secure state.

#### Additional information

The PMG bit width is defined as the bit position of the most significant 1 in PMG\_MAX[7:0], plus one, or is defined as zero if PMG MAX is zero.

Note: For example, if  $PMG\_MAX == 0 \times 0 f$ , the PMG bit width is 4.

The PARTID bit width is defined as the bit position of the most significant 1 in PARTID\_MAX[15:0], plus one, or is defined as zero if PARTID\_MAX is zero.

Note: For example, if PARTID\_MAX ==  $0 \times 0034$ , the PARTID bit width is 6.

Note: PMG\_MAX and PARTID\_MAX specify the maximum values of each ID type that can be configured in the corresponding Security state. These values do not describe properties of the rest of the system, which are discovered using mechanisms that are outside the scope of this specification.

Note: Either field is architecturally permitted to be zero-sized, but Arm recommends that PARTID\_MAX is non-zero when MPAM is implemented.

## Accessing SMMU\_MPAMIDR

SMMU\_MPAMIDR can be accessed through the SMMUv3\_PAGE\_0 block as follows:

# Chapter 6. Memory map and registers 6.3. Register formats

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x0130 |

Access on this interface is RO.

## 6.3.41 SMMU\_GMPAM

The SMMU\_GMPAM characteristics are:

#### Purpose

Global MPAM configuration register for SMMU-originated transactions relating to the Non-secure programming interface.

#### Configuration

This register is present only when SMMU\_IDR3.MPAM == 1. Otherwise, direct accesses to SMMU\_GMPAM are RESO.


#### **Attributes**

SMMU\_GMPAM is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_GMPAM bit assignments are:



## Update, bit [31]

Update completion flag.

For more information see below.

The reset behavior of this field is:

• This field resets to 0b0.

## Bits [30:24]

Reserved, RESO.

## SO\_PMG, bits [23:16]

PMG for SMMU-originated accesses.

- This field determines the PMG of the SMMU-originated transactions described below.
- Bits above the supported PMG bit width, as indicated by SMMU\_MPAMIDR.PMG\_MAX, are RESO.
- If a value is programmed that is greater than the corresponding PMG\_MAX, an UNKNOWN PMG is used.

The reset behavior of this field is:

• This field resets to 0x00.

## SO\_PARTID, bits [15:0]

PARTID for SMMU-originated accesses.

- This field determines the PARTID of the SMMU-originated transactions described below.
- Bits above the supported PARTID bit width, as indicated by SMMU\_MPAMIDR.PARTID\_MAX, are RESO.
- If a value is programmed that is greater than SMMU\_MPAMIDR.PARTID\_MAX, an UNKNOWN PARTID is used.

The reset behavior of this field is:

• This field resets to 0x0000.

#### Additional information

The SO\_PMG and SO\_PARTID values determine the MPAM attributes applied to the following SMMU-originated accesses that are associated with the Non-secure programming interface:

- · L1STD and STE accesses.
- · Queue accesses.
- SMMU core MSIs.

The Update flag behaves the same as the SMMU\_GBPA.Update mechanism. It indicates that a change to this register has been accepted and when the Update flag is observed to be zero after a correct update procedure, the new values are guaranteed to be applied to future SMMU-originated accesses.

# Accessing SMMU\_GMPAM

This register must only be written when Update == 0 (prior updates are complete). A write when an Update == 1, that is when a prior update is underway, is IGNORED. A write of new values that does not set Update == 1 is IGNORED.

When this register is written, correctly observing the requirements in this section, the new value is observable to future reads of the register even if they occur before the Update has completed.

SMMU\_GMPAM can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x0138 |

- When SMMU\_GMPAM.Update == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

# 6.3.42 SMMU\_GBPMPAM

The SMMU\_GBPMPAM characteristics are:

#### Purpose

MPAM configuration register for global bypass transactions relating to the Non-secure programming interface.

#### Configuration

This register is present only when SMMU\_IDR3.MPAM == 1. Otherwise, direct accesses to SMMU\_GBPMPAM are RESO.


#### **Attributes**

SMMU\_GBPMPAM is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# Field descriptions

The SMMU\_GBPMPAM bit assignments are:



## Update, bit [31]

Update completion flag.

For more information see below.

The reset behavior of this field is:

• This field resets to 0b0.

## Bits [30:24]

Reserved, RESO.

## GBP\_PMG, bits [23:16]

PMG value for transactions in Global ByPass

- This field determines the default PMG applied to all client transactions that bypass translation for the reasons described below.
- Bits above the supported PMG bit width, as indicated by SMMU\_MPAMIDR.PMG\_MAX, are RESO.
- If a value is programmed that is greater than SMMU\_MPAMIDR.PMG\_MAX, an UNKNOWN PMG is used.

The reset behavior of this field is:

• This field resets to 0x00.

### GBP\_PARTID, bits [15:0]

PARTID value for transactions in Global ByPass.

- This field determines the default PARTID applied to all client transactions that bypass translation for the reasons described below.
- Bits above the supported PARTID bit width, as indicated by SMMU\_MPAMIDR.PARTID\_MAX, are RESO.
- If a value is programmed that is greater than SMMU\_MPAMIDR.PARTID\_MAX, an UNKNOWN PARTID is
  used.

The reset behavior of this field is:

• This field resets to 0x0000.

#### Additional information

The GBP\_PMG and GBP\_PARTID attributes apply to client transactions from Non-secure streams that bypass translation because:

- The SMMU programming interface is disabled with SMMU\_CR0.SMMUEN == 0, or,
- The transaction is ATS Translated and ATSCHK == 0. See section 3.9.1 ATS Interface.

When SMMU\_CR0.SMMUEN == 1, the PMG and PARTID of a non-ATS Translated transaction are determined by STE, and if appropriate, CD configuration.

The Update flag behaves the same as the SMMU\_GBPA.Update mechanism. It indicates that a change to this register has been accepted and when the Update flag is observed to be zero after a correct update procedure, the new values are guaranteed to be applied to future client transactions.

## Accessing SMMU\_GBPMPAM

This register must only be written when Update == 0 (prior updates are complete). A write when an Update == 1, that is when a prior update is underway, is IGNORED. A write of new values that does not set Update == 1 is IGNORED.

When this register is written, correctly observing the requirements in this section, the new value is observable to future reads of the register even if they occur before the Update has completed.

SMMU\_GBPMPAM can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x013C |

- When SMMU\_GBPMPAM.Update == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

## 6.3.43 SMMU\_VATOS\_SEL

The SMMU\_VATOS\_SEL characteristics are:

#### **Purpose**

VATOS VMID selection.

#### Configuration

This register is present only when SMMU\_IDR0.VATOS == 1. Otherwise, direct accesses to SMMU\_VATOS\_SEL are RES0.


### Attributes

SMMU\_VATOS\_SEL is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

## Field descriptions

The SMMU\_VATOS\_SEL bit assignments are:



### Bits [31:16]

Reserved, RESO.

# VMID, bits [15:0]

VMID associated with the VM that is using the VATOS interface.

• When SMMU\_IDR0.VMID16 == 0, bits [15:8] of this field are RES0.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

### Additional information

When requests are made through VATOS, this field is compared to the S2VMID field of the STE selected in the request. The request is denied if the STE configuration means that translations are not tagged with a VMID, or the VMID values do not match (indicating a lookup for a StreamID not assigned to the VM that has been granted access to the VATOS interface). See section 9.1.6 SMMU\_(S\_)VATOS\_SEL.

## Accessing SMMU\_VATOS\_SEL

This register is Guarded by SMMU\_VATOS\_CTRL.RUN and must only be altered when RUN == 0.

See SMMU\_GATOS\_CTRL for more detailed behavior.

SMMU\_VATOS\_SEL can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x0180 |

• When SMMU\_VATOS\_CTRL.RUN == 1, access on this interface is **RO**.

Chapter 6. Memory map and registers 6.3. Register formats

• Otherwise, access on this interface is RW.

## 6.3.44 SMMU IDR6

The SMMU\_IDR6 characteristics are:

#### **Purpose**

Provides information about the Enhanced Command queue interface for the SMMU Non-secure programming interface.

### Configuration

This register is present only when SMMU\_IDR1.ECMDQ == 1. Otherwise, direct accesses to SMMU\_IDR6 are RES0.


### **Attributes**

SMMU\_IDR6 is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# Field descriptions

The SMMU\_IDR6 bit assignments are:



### Bits [31:28]

Reserved, RESO.

### CMDQ\_CONTROL\_PAGE\_LOG2NUMP, bits [27:24]

Number of Command queue control pages supported.

The number of Command queue control pages supported is  $2^{\text{CMDQ\_CONTROL\_PAGE\_LOG2NUMP}}$ .

This field has a maximum value of 0b1000.

### Bits [23:20]

Reserved, RESO.

### CMDQ\_CONTROL\_PAGE\_LOG2NUMQ, bits [19:16]

Number of queues per Command queue control page.

The number of queues supported per Command queue control page is  $2^{\text{CMDQ\_CONTROL\_PAGE\_LOG2NUMQ}}$ .

This field has a maximum value of 0b1000.

## Bits [15:0]

Reserved, RESO.

### Additional information

See section 3.5.6 Enhanced Command queue interfaces.

## Accessing SMMU\_IDR6

SMMU\_IDR6 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

# 6.3. Register formats

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x0190 |

When SMMU\_IDR1.ECMDQ == 1 access on this interface is **RO**.

# 6.3.45 SMMU\_CMDQ\_CONTROL\_PAGE\_BASE<n>, n = 0 - 255

The SMMU\_CMDQ\_CONTROL\_PAGE\_BASE<n> characteristics are:

### **Purpose**

Provides information about the Enhanced Command queue interface for the SMMU Non-secure programming interface.

## Configuration

This register is present only when SMMU\_IDR1.ECMDQ == 1. Otherwise, direct accesses to SMMU\_CMDQ\_CONTROL\_PAGE\_BASE<n> are RES0.


### Attributes

SMMU\_CMDQ\_CONTROL\_PAGE\_BASE<n> is a 64-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

## Field descriptions

The SMMU\_CMDQ\_CONTROL\_PAGE\_BASE<n> bit assignments are:



# Bits [63:52]

Reserved, RESO.

#### ADDR, bits [51:16]

Base address of the Command queue control page, bits [51:16].

The bits [15:0] of the base address are 0.

Bits above the system physical address size, as advertised in SMMU\_IDR5.OAS, are RESO.

The value of this field is an offset from the base address of SMMU Register Page 0, not an absolute address.

The values of all SMMU\_CMDQ\_CONTROL\_PAGE\_BASEn.ADDR are such that the pages occupy a contiguous region of address space within the SMMU register file, and they are arranged in ascending value of n.

### Bits [15:3]

Reserved, RESO.

### CMDQGS, bits [2:1]

Granule size to use for the Command queue control page.

| CMDQGS | Meaning |
|--------|---------|
| 0b01   | 64KB    |

## CMDQ\_CONTROL\_PAGE\_PRESET, bit [0]

Indicates whether queue controls for this interface are stored in Normal memory or registers.

| CMDQ_CONTROL_PAGE_PRESET | Meaning  |
|--------------------------|--|
| 0b1                      | The ECMDQ interfaces for this page are implemented as registers in the SMMU. |

This bit is 1 in implementations of SMMUv3.3.

# Accessing SMMU\_CMDQ\_CONTROL\_PAGE\_BASE<n>

SMMU\_CMDQ\_CONTROL\_PAGE\_BASE<n> can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset            |
|---------------|-------------------|
| SMMUv3_PAGE_0 | 0x4000 + (32 * n) |

When  $SMMU\_IDR1.ECMDQ == 1$  access on this interface is **RO**.

# 6.3.46 SMMU\_CMDQ\_CONTROL\_PAGE\_CFG<n>, n = 0 - 255

The SMMU\_CMDQ\_CONTROL\_PAGE\_CFG<n> characteristics are:

## **Purpose**

Control for Enhanced Command queue interface for the SMMU Non-secure programming interface.

### Configuration

This register is present only when SMMU\_IDR1.ECMDQ == 1. Otherwise, direct accesses to SMMU\_CMDQ\_CONTROL\_PAGE\_CFG<n> are RES0.


### **Attributes**

SMMU\_CMDQ\_CONTROL\_PAGE\_CFG<n> is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# Field descriptions

The SMMU\_CMDQ\_CONTROL\_PAGE\_CFG<n> bit assignments are:



### Bits [31:1]

Reserved, RESO.

# EN, bit [0]

Command queue control page enable.

| EN  | Meaning                                |
|-----|--|
| 0b1 | Command queue control page is enabled. |

This field is RES1.

# Accessing SMMU\_CMDQ\_CONTROL\_PAGE\_CFG<n>

SMMU\_CMDQ\_CONTROL\_PAGE\_CFG<n> can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset            |
|---------------|-------------------|
| SMMUv3_PAGE_0 | 0x4008 + (32 * n) |

When  $SMMU_IDR1.ECMDQ == 1$  access on this interface is **RO**.

# 6.3.47 SMMU\_CMDQ\_CONTROL\_PAGE\_STATUS<n>, n = 0 - 255

The SMMU\_CMDQ\_CONTROL\_PAGE\_STATUS<n> characteristics are:

#### **Purpose**

Status of Enhanced Command queue interface for the SMMU Non-secure programming interface.

### Configuration

This register is present only when SMMU\_IDR1.ECMDQ == 1. Otherwise, direct accesses to SMMU\_CMDQ\_CONTROL\_PAGE\_STATUS<n> are RES0.

### **Attributes**

SMMU\_CMDQ\_CONTROL\_PAGE\_STATUS<n> is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# Field descriptions

The SMMU\_CMDQ\_CONTROL\_PAGE\_STATUS<n> bit assignments are:



### Bits [31:1]

Reserved, RESO.

### ENACK, bit [0]

Command queue control page enable.

| ENACK | Meaning                                |
|-------|--|
| 0b1   | Command queue control page is enabled. |

This field is RES1.

# Accessing SMMU\_CMDQ\_CONTROL\_PAGE\_STATUS<n>

SMMU\_CMDQ\_CONTROL\_PAGE\_STATUS<n> can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset            |
|---------------|-------------------|
| SMMUv3_PAGE_0 | 0x400C + (32 * n) |

When  $SMMU_IDR1.ECMDQ == 1$  access on this interface is **RO**.

# 6.3.48 SMMU\_S\_IDR0

The SMMU\_S\_IDR0 characteristics are:

#### Purpose

Provides information about the features implemented for the SMMU Secure programming interface.

### Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1. Otherwise, direct accesses to SMMU\_S\_IDR0 are RES0.


### Attributes

SMMU\_S\_IDR0 is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_S\_IDR0 bit assignments are:



## ECMDQ, bit [31]

Support for enhanced Command queue interface for Secure programming interface.

| ECMDQ | Meaning  |
|-------|--|
| 0b0   | Secure Enhanced Command queue interface not supported. SMMU_S_IDR6 is RES0.    |
| 0b1   | Secure Enhanced Command queue interface details are advertised in SMMU_S_IDR6. |

If ECMDQ == 1, then SMMU\_IDR0.COHACC == 1 and SMMU\_S\_IDR0.MSI == 1.

# Bits [30:26]

Reserved, RESO.

### STALL\_MODEL, bits [25:24]

Stalling fault model support.

| STALL_MODEL | Meaning   |
|-------------|---|
| 0b00        | Stall and Terminate models supported.   |
| 0b01        | Stall is not supported, all faults terminate transaction and STE.S2S and CD.S must be 0. CMD_RESUME and CMD_STALL_TERM are not available. |
| 0b10        | Stall is forced (all faults eligible to stall cause stall), STE.S2S and CD.S must be 1.   |

| STALL_MODEL | Meaning  |
|-------------|--|
| 0b11        | Reserved. Note: STE.S2S must be in the states above only if stage 2 translation was enabled. |

- Encoded identically to SMMU\_IDR0.STALL\_MODEL, this field indicates the SMMU support for the Stall model and the Terminate model.
- For more information, see <a href="SMMU\_S\_CR0.NSSTALLD">SMMU\_S\_CR0.NSSTALLD</a>.

# Bits [23:14]

Reserved, RESO.

# MSI, bit [13]

Secure Message Signalled Interrupts are supported.

| MSI | Meaning   |
|-----|---|
| 0b0 | The SMMU supports wired interrupt notifications only for Secure events and GERROR.                    |
|     | <ul> <li>The MSI fields in SMMU_S_EVENTQ_IRQ_CFGr<br/>and SMMU_S_GERROR_IRQ_CFGn are RES0.</li> </ul> |
| 0b1 | Message Signalled Interrupts are supported for Secure events and GERROR.                              |
|     | Note: Arm strongly recommends that an   |
|     | implementation supports Non-secure MSIs   |
|     | (SMMU_IDR0.MSI == 1) if Secure MSIs are supported.  |

# Bits [12:0]

Reserved, RESO.

# Accessing SMMU\_S\_IDR0

SMMU\_S\_IDR0 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x8000 |

- When an access is not Secure, access on this interface is RAZ/WI.
- Otherwise, access on this interface is **RO**.

# 6.3.49 SMMU\_S\_IDR1

The SMMU\_S\_IDR1 characteristics are:

#### Purpose

Provides information about the features implemented for the SMMU Secure programming interface.

### Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1. Otherwise, direct accesses to SMMU\_S\_IDR1 are RES0.

### Attributes

SMMU\_S\_IDR1 is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

## Field descriptions

The SMMU\_S\_IDR1 bit assignments are:



• Note: If the SMMU implementation supports SubstreamIDs, the size of the SubstreamID that is provided for Secure StreamIDs is the same as the size that is provided for Non-secure StreamIDs. Therefore, there is no separate Secure SSIDSIZE option.

# SECURE\_IMPL, bit [31]

Secure state implemented.

| SECURE_IMPL | Meaning   |
|-------------|---|
| 0b0         | The SMMU does not implement Secure state. All SMMU_S_* Secure registers are RAZ/WI. |
| 0b1         | The SMMU implements Secure state.   |

When SECURE\_IMPL == 1, stage 1 must be supported, and therefore SMMU\_IDR0.S1P == 1.

If SECURE\_IMPL == 1 and SMMU\_IDR0.RME\_IMPL == 1, then all the following apply:

- SMMU\_S\_IDR1.SEL2 == 1.
- The EL3 StreamWorld is not supported.
- It is possible to report each of F\_STE\_FETCH, F\_CD\_FETCH, F\_VMS\_FETCH, and F\_WALK\_EABT with GPCF == 1 in the Secure Event queue.

See also:

• 3.10 Support for Secure state.

### Bit [30]

Reserved, RESO.

### SEL2, bit [29]

Secure EL2 and Secure stage 2 support.

| SEL2 | Meaning  |
|------|--|
| 0b0  | Secure EL2 and Secure stage 2 are not supported.   |
| 0b1  | Secure EL2 is supported and Secure STEs are permitted to be configured with STE.STRW == 0b10.  Secure stage 2 is supported and Secure STEs are permitted to be configured with STE.Config[1] == 1. |

- Secure EL2 and Secure stage 2 support is optional in SMMUv3.2 and later.
- SEL2 == 0 if  $SMMU\_IDR0.S1P == 0$  or if  $SMMU\_IDR0.S2P == 0$ .

### Bits [28:6]

Reserved, RESO.

### S\_SIDSIZE, bits [5:0]

Max bits of Secure StreamID.

• Equivalent to SMMU\_IDR1.SIDSIZE and encoded the same way, this field determines the maximum Secure StreamID value and therefore the maximum size of the Secure Stream table.

# Accessing SMMU\_S\_IDR1

SMMU\_S\_IDR1 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x8004 |

- When an access is not Secure, access on this interface is RAZ/WI.
- Otherwise, access on this interface is **RO**.

## 6.3.50 SMMU\_S\_IDR2

The SMMU\_S\_IDR2 characteristics are:

#### **Purpose**

Provides information about the features implemented for the SMMU Secure programming interface.

#### Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1. Otherwise, direct accesses to SMMU\_S\_IDR2 are RES0.

### **Attributes**

SMMU\_S\_IDR2 is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# Field descriptions

The SMMU\_S\_IDR2 bit assignments are:



### Bits [31:10]

Reserved, RESO.

# BA\_S\_VATOS, bits [9:0]

# When $SMMU\_IDR0.VATOS == 1$ :

S\_VATOS page base address offset. If SMMUv3.0-VATOS is not implemented, no S\_VATOS page is present.

If Secure state is supported and SMMU\_S\_IDR1.SEL2 == 1 and SMMU\_IDR0.VATOS == 1, the S\_VATOS registers are present.

The address of the S\_VATOS page is determined from this field and is referred to as O\_S\_VATOS:

```
O_S_VATOS = SMMU_BASE + 0x20000 + (SMMU_S_IDR2.BA_S_VATOS * 0x10000)
```

### Otherwise:

RES0

# Accessing SMMU S IDR2

SMMU\_S\_IDR2 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x8008 |

- When an access is not Secure, access on this interface is **RAZ/WI**.
- Otherwise, access on this interface is **RO**.

# 6.3.51 SMMU\_S\_IDR3

The SMMU\_S\_IDR3 characteristics are:

#### Purpose

Provides information about the features implemented for the SMMU Secure programming interface.

### Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1. Otherwise, direct accesses to SMMU\_S\_IDR3 are RES0.

### Attributes

SMMU\_S\_IDR3 is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_S\_IDR3 bit assignments are:



## Bits [31:7]

Reserved, RESO.

### SAMS, bit [6]

Secure ATS Maintenance Support.

| SAMS | Meaning   |
|------|---|
| 060  | If SMMU_IDR0.ATS == 1, the CMD_ATC_INV command is supported when issued on the Non-secure and Secure Command queues.  If SMMU_IDR0.PRI == 1, the CMD_PRI_RESP command is supported, when issued on the Non-secure and Secure Command queues.  |
| 0b1  | If SMMU_IDR0.ATS == 1, the CMD_ATC_INV command is supported when issued on the Non-secure Command queue, but raises CERROR_ILL when issued on the Secure Command queue.  If SMMU_IDR0.PRI == 1, the CMD_PRI_RESP command is supported when issued on the Non-secure Command queue, but raises CERROR_ILL when issued on the Secure Command queue. |

If  $SMMU_IDR0.ATS == 0$ , this field is RES0.

### 6.3. Register formats

Note: This ID field has the opposite polarity from most ID fields.

Bits [5:0]

Reserved, RESO.

# Accessing SMMU\_S\_IDR3

SMMU\_S\_IDR3 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x800C |

- When an access is not Secure, access on this interface is RAZ/WI.
- Otherwise, access on this interface is **RO**.

## 6.3.52 SMMU\_S\_IDR4

The SMMU\_S\_IDR4 characteristics are:

#### Purpose

Provides information about the features implemented for the SMMU Secure programming interface.

### Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1. Otherwise, direct accesses to SMMU\_S\_IDR4 are RES0.


### Attributes

SMMU\_S\_IDR4 is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_S\_IDR4 bit assignments are:



### IMPLEMENTATION\_DEFINED, bits [31:0]

IMPLEMENTATION DEFINED

### Additional information

The contents of this register are IMPLEMENTATION DEFINED and can be used to identify the presence of other IMPLEMENTATION DEFINED register regions elsewhere in the memory map.

# Accessing SMMU\_S\_IDR4

SMMU\_S\_IDR4 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x8010 |

- When an access is not Secure, access on this interface is RAZ/WI.
- Otherwise, access on this interface is **RO**.

## 6.3.53 SMMU\_S\_CR0

The SMMU\_S\_CR0 characteristics are:

#### Purpose

Secure SMMU programming interface control and configuration register.

### Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1. Otherwise, direct accesses to SMMU\_S\_CR0 are RES0.


### **Attributes**

SMMU\_S\_CR0 is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

## Field descriptions

The SMMU\_S\_CR0 bit assignments are:



### Bits [31:10]

Reserved, RESO.

## NSSTALLD, bit [9]

Non-secure stall disable.

| NSSTALLD | Meaning   |
|----------|---|
| 0b0      | Non-secure programming interface might use Stall model.             |
| 0b1      | Non-secure programming interface prohibited from using Stall model. |

- When SMMU\_S\_IDR0.STALL\_MODEL == 0b00, setting this bit modifies the Non-secure behavior so that only the Terminate model is available for Non-secure streams and SMMU\_IDR0.STALL\_MODEL reads as 0b01. Otherwise, if NSSTALLD == 0, SMMU\_IDR0.STALL\_MODEL == SMMU\_S\_IDR0.STALL\_MODEL.
- When SMMU\_S\_IDR0.STALL\_MODEL != 0b00, this bit is RES0 and SMMU\_IDR0.STALL\_MODEL == SMMU\_S\_IDR0.STALL\_MODEL.
  - Note: A reserved SMMU S CR0 bit is not reflected into SMMU S CR0ACK.

The reset behavior of this field is:

• This field resets to 0b0.

## VMW, bits [8:6]

### When $SMMU\_IDR0.VMW == 1$ :

Secure VMID Wildcard.

| VMW   | Meaning                                    |  |
|-------|--|--|
| 0b000 | TLB invalidations match VMID tags exactly. |  |
| 0b001 | TLB invalidations match VMID[N:1].         |  |
| 0b010 | TLB invalidations match VMID[N:2].         |  |
| 0b011 | TLB invalidations match VMID[N:3].         |  |
| 0b100 | TLB invalidations match VMID[N:4].         |  |

- The VMW field is defined in the same way as SMMU\_CR0.VMW, but affects Secure VMID matching on invalidation.
- All other values are reserved, and behave as 0b000.
  - N == upper bit of VMID as determined by SMMU\_IDR0.VMID16.
- This field has no effect on VMID matching on translation lookup.

The reset behavior of this field is:

• This field resets to 0b000.

### Otherwise:

RES0

## SIF, bit [5]

Secure Instruction Fetch.

| SIF | Meaning  |
|-----|--|
| 0b0 | Secure transactions might exit the SMMU as a Non-secure instruction fetch.                           |
| 0b1 | Secure transactions determined to be Non-secure instruction fetch are treated as a Permission fault. |

This field causes transactions from a Secure stream that are determined to be an instruction fetch, after INSTCFG fields are applied, to experience a Permission fault if their effective stage 1 output NS attribute is Non-secure.

- When translation is disabled because SMMUEN == 0, the transaction is terminated with abort and no F\_PERMISSION is recorded.
- When SMMUEN is set, one of the following occurs and, if the Event queue is writable, a stage 1 F\_PERMISSION is recorded:
  - If the stream translation is disabled (STE.Config selects bypass, including the case where Config[2:0] == 0b101 and STE.S1DSS causes stage 1 to be skipped, behaving as though Config[2:0] == 0b100) the faulting transation is terminated with abort.
  - If stream translation is applied (STE.Config enables stage 1 and STE.S1DSS does not cause stage 1

translation to be skipped), CD. {A,R,S} govern stall and terminate behavior of the transaction.

- The F\_PERMISSION event is reported with CLASS = IN and S2 = 0.

The SIF field is permitted to be cached in a TLB or configuration cache and an Update of this field requires invalidation of all Secure TLB entries and configuration caches.

The reset behavior of this field is:

• This field resets to 0b0.

### Bit [4]

Reserved, RESO.

### CMDQEN, bit [3]

Enable Secure Command queue processing.

| CMDQEN | Meaning   |
|--------|---|
| 0b0    | Processing of commands from the Secure Command queue is disabled. |
| 0b1    | Processing of commands from the Secure Command queue is enabled.  |

The reset behavior of this field is:

• This field resets to 0b0.

## EVENTQEN, bit [2]

Enable Secure Event queue writes.

| EVENTQEN | Meaning  |
|----------|--|
| 0b0      | Writes to the Secure Event queue are disabled. |
| 0b1      | Writes to the Secure Event queue are enabled.  |

The reset behavior of this field is:

• This field resets to 0b0.

## Bit [1]

Reserved, RESO.

# SMMUEN, bit [0]

Secure SMMU enable.

| SMMUEN | Meaning  |
|--------|--|
| 000    | All Secure streams bypass the SMMU, with attributes determined from SMMU_S_GBPA. |

| SMMUEN | Meaning   |
|--------|---|
| 0b1    | All Secure streams are checked against configuration structures, and might undergo translation. |

The reset behavior of this field is:

• This field resets to 0b0.

#### Additional information

The Update procedure, with respect to flags reflected into SMMU\_S\_CR0ACK, is the same as for SMMU\_CR0.

The Update side-effects of CMDQEN, EVENTQEN, and SMMUEN fields are similar to their respective equivalents in SMMU\_CR0.

# Accessing SMMU\_S\_CR0

SMMU\_S\_CR0 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x8020 |

- When an access is not Secure, access on this interface is RAZ/WI.
- Otherwise, access on this interface is RW.

## 6.3.53.1 NSSTALLD

This bit has no Update side-effects. NSSTALLD prevents Non-secure configuration from using the Stall model, therefore stall-related commands are unavailable and use of STE and CD stall configuration renders the structures ILLEGAL.

This bit is permitted to be cached in configuration caches.

This bit must not be modified when any of the following could occur:

- Non-secure CMD\_STALL\_TERM or CMD\_RESUME commands have been submitted to the Non-secure Command queue, therefore might be processed.
- Non-secure transactions are being translated through structures configured to stall faults.

A change to this bit takes effect at an UNPREDICTABLE point prior to Update completion. If changed while the above stall-related activities are occurring, it is UNPREDICTABLE whether transactions and commands behave in manner corresponding to either value of this bit, until Update of this bit completes.

Update completes when it is guaranteed that all of the following are observable:

- Any subsequent fetch of an STE or CD will behave in a manner relating to the new value of this bit.
- Any subsequently consumed command will behave in a manner relating to the new value of this bit.
- The value of SMMU\_IDR0.STALL\_MODEL reflects the new value of this bit.

Note: After Update is completed, client transactions might be affected by stall configuration previously cached in a Configuration cache, until completion of an appropriate invalidation operation.

Note: Secure software is expected to Update this bit before Non-secure software can access the SMMU.

## 6.3.53.2 SIF

This bit has no Update side-effects.

For a transaction that bypasses translation, a change to SIF is guaranteed to be visible with respect to that transaction after the new value of SIF is acknowledged in SMMU\_S\_CR0ACK.SIF.

For a transaction that undergoes translation, a change to SIF is guaranteed to be visible with respect to that transaction only after the completion of a TLB invalidation of a scope related to that transaction, where the TLB invalidation is made visible to the SMMU after the new value of SIF is acknowledged in SMMU\_S\_CR0ACK.SIF.

## 6.3.54 SMMU\_S\_CROACK

The SMMU\_S\_CR0ACK characteristics are:

#### Purpose

Provides acknowledgment of changes to configurations and controls in Secure SMMU programming interface, SMMU S CR0.

## Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1. Otherwise, direct accesses to SMMU\_S\_CR0ACK are RES0.


### **Attributes**

SMMU\_S\_CR0ACK is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# Field descriptions

The SMMU\_S\_CR0ACK bit assignments are:



# Bits [31:10]

Reserved, RESO.

### NSSTALLD, bit [9]

Non-secure stall disable.

| NSSTALLD | Meaning   |
|----------|---|
| 0b0      | Non-secure programming interface might use Stall model.             |
| 0b1      | Non-secure programming interface prohibited from using Stall model. |

When SMMU\_S\_IDR0.STALL\_MODEL != 0b00, this bit is RESO and SMMU\_IDR0.STALL\_MODEL == SMMU\_S\_IDR0.STALL\_MODEL.

• Note: A reserved SMMU S CR0 bit is not reflected into SMMU S CR0ACK.

The reset behavior of this field is:

• This field resets to 0b0.

### VMW, bits [8:6]

When  $SMMU\_IDR0.VMW == 1$ :

Secure VMID Wildcard.

| VMW   | Meaning                                    |
|-------|--|
| 0b000 | TLB invalidations match VMID tags exactly. |
| 0b001 | TLB invalidations match VMID[N:1].         |
| 0b010 | TLB invalidations match VMID[N:2].         |
| 0b011 | TLB invalidations match VMID[N:3].         |
| 0b100 | TLB invalidations match VMID[N:4].         |

• The VMW field is defined in the same way as SMMU\_CR0.VMW, but affects Secure VMID matching on invalidation.

The reset behavior of this field is:

• This field resets to 0b000.

### Otherwise:

RESO

## SIF, bit [5]

Secure Instruction Fetch.

| SIF | Meaning  |
|-----|--|
| 0b0 | Secure transactions might exit the SMMU as a Non-secure instruction fetch.                           |
| 0b1 | Secure transactions determined to be Non-secure instruction fetch are treated as a Permission fault. |

The reset behavior of this field is:

• This field resets to 0b0.

# Bit [4]

Reserved, RESO.

# CMDQEN, bit [3]

Enable Secure Command queue processing.

| CMDQEN | Meaning   |
|--------|---|
| 0b0    | Processing of commands from the Secure Command queue is disabled. |
| 0b1    | Processing of commands from the Secure Command queue is enabled.  |

The reset behavior of this field is:

• This field resets to 0b0.

## EVENTQEN, bit [2]

Enable Secure Event queue writes.

| EVENTQEN | Meaning  |
|----------|--|
| 0b0      | Writes to the Secure Event queue are disabled. |
| 0b1      | Writes to the Secure Event queue are enabled.  |

The reset behavior of this field is:

• This field resets to 0b0.

### Bit [1]

Reserved, RESO.

### SMMUEN, bit [0]

Secure SMMU enable.

| SMMUEN | Meaning   |
|--------|---|
| 0b0    | All Secure streams bypass the SMMU, with attributes determined from SMMU_S_GBPA.                |
| 0b1    | All Secure streams are checked against configuration structures, and might undergo translation. |

The reset behavior of this field is:

• This field resets to 0b0.

#### Additional information

Undefined bits read as zero. Fields in this register are RAZ if their corresponding SMMU\_S\_CRO field is IGNORED.

An Update to a field in SMMU\_S\_CR0 is considered complete, along with any side-effects, when the respective field in this register is observed to take the new value.

The Update procedure, with respect to flags reflected in SMMU\_S\_CR0ACK, is the same as for SMMU\_CR0 and SMMU\_CR0ACK.

# Accessing SMMU\_S\_CR0ACK

SMMU\_S\_CR0ACK can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x8024 |

- When an access is not Secure, access on this interface is RAZ/WI.
- Otherwise, access on this interface is **RO**.

## 6.3.55 SMMU\_S\_CR1

The SMMU\_S\_CR1 characteristics are:

#### Purpose

Secure SMMU programming interface control and configuration register.

### Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1. Otherwise, direct accesses to SMMU\_S\_CR1 are RES0.


### Attributes

SMMU\_S\_CR1 is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# Field descriptions

The SMMU\_S\_CR1 bit assignments are:



### Bits [31:12]

Reserved, RESO.

### **TABLE\_SH**, bits [11:10]

Secure Stream table access Shareability.

| TABLE_SH | Meaning                    |
|----------|----------------------------|
| 0b00     | Non-shareable.             |
| 0b01     | Reserved, treated as 0b00. |
| 0b10     | Outer Shareable.           |
| 0b11     | Inner Shareable.           |

When SMMU\_S\_CR1.TABLE\_OC == 0b00 and SMMU\_S\_CR1.TABLE\_IC == 0b00, this field is IGNORED and behaves as Outer Shareable.

The reset behavior of this field is:

- When SMMU\_IDR1.TABLES\_PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

Accessing this field has the following behavior:

- Access is **RW** if all of the following are true:
  - SMMU\_S\_CR0.SMMUEN == 0
  - SMMU\_S\_CR0ACK.SMMUEN == 0
- Otherwise, access to this field is RO

### TABLE\_OC, bits [9:8]

Secure Stream table access Outer Cacheability.

| TABLE_OC | Meaning                    |
|----------|----------------------------|
| 0000     | Non-cacheable.             |
| 0b01     | Write-Back Cacheable.      |
| 0b10     | Write-Through Cacheable.   |
| 0b11     | Reserved, treated as 0b00. |

The reset behavior of this field is:

- When SMMU\_IDR1.TABLES\_PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

Accessing this field has the following behavior:

- Access is **RW** if all of the following are true:
  - SMMU\_S\_CR0.SMMUEN == 0
  - SMMU S CR0ACK.SMMUEN == 0
- Otherwise, access to this field is **RO**

### TABLE\_IC, bits [7:6]

Secure Stream table Inner Cacheability.

| TABLE_IC | Meaning                    |
|----------|----------------------------|
| 0000     | Non-cacheable.             |
| 0b01     | Write-Back Cacheable.      |
| 0b10     | Write-Through Cacheable.   |
| 0b11     | Reserved, treated as 0b00. |

The reset behavior of this field is:

- When SMMU\_IDR1.TABLES\_PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

Accessing this field has the following behavior:

- Access is **RW** if all of the following are true:
  - SMMU\_S\_CR0.SMMUEN == 0
  - SMMU\_S\_CR0ACK.SMMUEN == 0
- Otherwise, access to this field is RO

## QUEUE\_SH, bits [5:4]

Secure queue access Shareability.

| QUEUE_SH | Meaning                    |
|----------|----------------------------|
| 0000     | Non-shareable.             |
| 0b01     | Reserved, treated as 0b00. |
| 0b10     | Outer Shareable.           |
| 0b11     | Inner Shareable.           |

• When SMMU\_S\_CR1.QUEUE\_OC == 0b00 and SMMU\_S\_CR1.QUEUE\_IC == 0b00, this field is IGNORED and behaves as Outer Shareable.

The reset behavior of this field is:

- When SMMU\_IDR1.QUEUES\_PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

Accessing this field has the following behavior:

- Access is **RW** if all of the following are true:
  - SMMU\_S\_CR0.EVENTQEN == 0
  - SMMU\_S\_CR0ACK.EVENTQEN == 0
  - SMMU\_S\_CR0.CMDQEN == 0
  - SMMU S CR0ACK.CMDOEN == 0
  - SMMU\_ECMDQ\_PROD<n>.EN == 0
  - SMMU\_ECMDQ\_CONS<n>.ENACK == 0
- Otherwise, access to this field is **RO**

## QUEUE\_OC, bits [3:2]

Secure queue access Outer Cacheability.

| QUEUE_OC | Meaning                    |
|----------|----------------------------|
| 0b00     | Non-cacheable.             |
| 0b01     | Write-Back Cacheable.      |
| 0b10     | Write-Through Cacheable.   |
| 0b11     | Reserved, treated as 0b00. |

The reset behavior of this field is:

- When SMMU\_IDR1.QUEUES\_PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

Accessing this field has the following behavior:

- Access is **RW** if all of the following are true:
  - SMMU\_S\_CR0.EVENTQEN == 0
  - SMMU\_S\_CR0ACK.EVENTQEN == 0
  - SMMU\_S\_CR0.CMDQEN == 0
  - SMMU\_S\_CR0ACK.CMDQEN == 0
  - SMMU\_ECMDQ\_PROD<n>.EN == 0
  - SMMU\_ECMDQ\_CONS<n>.ENACK == 0
- Otherwise, access to this field is RO

### QUEUE\_IC, bits [1:0]

Secure queue access Inner Cacheability.

| QUEUE_IC | Meaning                    |
|----------|----------------------------|
| 0000     | Non-cacheable.             |
| 0b01     | Write-Back Cacheable.      |
| 0b10     | Write-Through Cacheable.   |
| 0b11     | Reserved, treated as 0b00. |

The reset behavior of this field is:

- When SMMU\_IDR1.QUEUES\_PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

Accessing this field has the following behavior:

- Access is **RW** if all of the following are true:
  - SMMU\_S\_CR0.EVENTQEN == 0
  - SMMU S CROACK.EVENTOEN == 0
  - SMMU\_S\_CR0.CMDQEN == 0
  - SMMU\_S\_CR0ACK.CMDQEN == 0
  - SMMU\_ECMDQ\_PROD<n>.EN == 0
  - SMMU\_ECMDQ\_CONS<n>.ENACK == 0
- Otherwise, access to this field is **RO**

#### Additional information

The TABLE\_\* fields set the attributes for access to memory through the SMMU\_S\_STRTAB\_BASE.ADDR pointer and any accesses made to a VMS through STE.VMSPtr in a Secure STE. The QUEUE\_\* fields set the attributes for access to memory through SMMU\_S\_CMDQ\_BASE.ADDR and SMMU\_S\_EVENTQ\_BASE.ADDR pointers.

Cache allocation hints are present in each BASE register and are IGNORED unless a cacheable type is used for the table or queue to which the register corresponds. The transient attribute is IMPLEMENTATION DEFINED for each \_BASE register. See section 13.1.2 *Attribute support*. Use of an unsupported memory type for structure or queue access might cause the access to be treated as an external abort. For example, in the case of SMMU S STRTAB BASE, a F STE FETCH fault is raised.

# Accessing SMMU\_S\_CR1

The fields in this register are guarded by various queue and table enable bits.

See sections 6.3.11.1 TABLE\_\* attributes and 6.3.11.2 QUEUE\_\* attributes.

SMMU\_S\_CR1 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x8028 |

- When an access is not Secure, access on this interface is RAZ/WI.
- Otherwise, access on this interface is RW.

# 6.3.56 SMMU\_S\_CR2

The SMMU\_S\_CR2 characteristics are:

#### **Purpose**

Secure SMMU programming interface control and configuration register.

### Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1. Otherwise, direct accesses to SMMU\_S\_CR2 are RES0.


### Attributes

SMMU\_S\_CR2 is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# Field descriptions

The SMMU\_S\_CR2 bit assignments are:



### Bits [31:3]

Reserved, RESO.

## PTM, bit [2]

## When $SMMU\_IDR0.BTM == 1$ :

Private TLB Maintenance.

| PTM | Meaning  |
|-----|--|
| 0b0 | The SMMU participates in broadcast TLB maintenance, if implemented.  |
| 0b1 | The SMMU is not required to invalidate any local TLB entries on receipt of broadcast TLB maintenance operations for Secure EL1, Secure EL2, Secure EL2-E2H or EL3 translation regimes. |

- Broadcast invalidation for Non-secure EL1, Non-secure EL2 or Non-secure EL2-E2H translation regimes are not affected by this flag, see SMMU\_CR2.PTM.
- Arm recommends that this field resets to 1, but software cannot rely on this value.

The reset behavior of this field is:

• This field resets to an IMPLEMENTATION DEFINED value.

# Otherwise:

RESO

## RECINVSID, bit [1]

Record event C\_BAD\_STREAMID from invalid input StreamIDs.

| RECINVSID | Meaning  |
|-----------|--|
| 0b0       | C_BAD_STREAMID events are not recorded for the Secure programming interface.             |
| 0b1       | C_BAD_STREAMID events are permitted to be recorded for the Secure programming interface. |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

### E2H, bit [0]

## When $SMMU\_S\_IDR1.SEL2 == 1$ :

Enable Secure EL2-E2H translation regime.

| E2H | Meaning  |
|-----|--|
| 0d0 | Secure EL2 translation regime used, without ASID.  |
| 0b1 | Secure EL2-E2H translation regime used, with ASID. |

• This field affects the STE.STRW encoding 0b10, which selects a hypervisor translation regime for the resulting translations. The translations are tagged without ASID in EL2 mode, or with ASID in EL2-E2H mode.

Note: Arm expects software to set this bit to match the Secure HCR\_EL2.E2H in host PEs.

- This bit is permitted to be cached in configuration caches and TLBs. Changes to this bit must be accompanied by invalidation of configuration and translations associated with streams configured with StreamWorld == S-EL2 or S-EL2-E2H.
- This bit affects the StreamWorld of Secure streams only.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Otherwise:

RESO

# Accessing SMMU\_S\_CR2

This register is made read-only when the SMMU\_S\_CR0.SMMUEN is Updated to 1. This register must only be changed when SMMU\_S\_CR0.SMMUEN == 0.

A write to this register after SMMU\_S\_CR0.SMMUEN has been changed before its Update completes is CON-STRAINED UNPREDICTABLE and has one of the following behaviors:

- Apply the new value.
- Ignore the write.

When this register is changed, the new value takes effect (affects SMMU behavior corresponding to the field changed) at an UNPREDICTABLE time, bounded by a subsequent Update to SMMUEN to 1. As a side-effect of SMMUEN completing Update to 1, a prior change to this register is guaranteed to have taken effect.

SMMU\_S\_CR2 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x802C |

- When an access is not Secure, access on this interface is RAZ/WI.
- When SMMU\_S\_CR0.SMMUEN == 0 and SMMU\_S\_CR0ACK.SMMUEN == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

## 6.3.57 **SMMU\_S\_INIT**

The SMMU\_S\_INIT characteristics are:

#### Purpose

Provides controls for the invalidation of all cache and TLB contents.

#### Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1. Otherwise, direct accesses to SMMU\_S\_INIT are RESO.

### **Attributes**

SMMU\_S\_INIT is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

## Field descriptions

The SMMU\_S\_INIT bit assignments are:



### Bits [31:1]

Reserved, RESO.

### INV ALL, bit [0]

Invalidate all cache and TLB contents.

- For writes:
  - 0b0: If INV\_ALL == 0, ignored.
  - 0b1: SMMU-global invalidation is performed for all configuration and translation caches for all translation regimes and Security states.
- For reads:
  - 0b0: There is no outstanding global invalidation operation.
  - 0b1: There is an outstanding global invalidation operation.
- Note: This field can be used to simplify Secure software that otherwise makes no use of the SMMU but must safely initialize the SMMU for use by Non-secure software. See section 3.11 *Reset, Enable and initialization*.
- Note: When SMMU\_S\_IDR1.SECURE\_IMPL == 1, but no Secure software exists, Arm strongly recommends this register is exposed for use by Non-secure initialization software.

The reset behavior of this field is:

• This field resets to 0b0.

#### Additional information

When observing the conditions in this section, a write of INV\_ALL to 1 causes an invalidation of all cache and TLB entries that are present before the write and on completion of the invalidation the SMMU resets INV\_ALL to 0, including when an invalidation operation was already underway before the write.

Note: If the conditions regarding SMMUEN are observed correctly, a write of 1 to INV\_ALL is guaranteed to invalidate the SMMU caches and reset INV\_ALL to 0 when complete.

The completion of an INV\_ALL invalidation is not required to depend on the completion of any outstanding transactions.

An INV\_ALL invalidation operation affects locked configuration and translation cache entries, if an implementation supports locking of cache entries.

Note: As GPT information is permitted to be cached in a TLB, an INV\_ALL operation also invalidates all GPT information cached in TLBs.

# Accessing SMMU\_S\_INIT

SMMU S INIT.INV ALL has no effect if SMMU ROOT CR0.GPCEN == 1.

If SMMU\_ROOT\_CR0.GPCEN == 0, a write of 1 to INV\_ALL when any SMMU\_(\*\_)CR0.SMMUEN == 1, or an Update of any SMMUEN to 1 is in progress, or SMMU\_ROOT\_CR0.ACCESSEN == 1, or an Update of ACCESSEN to 1 is in progress, is CONSTRAINED UNPREDICTABLE and has one of the following behaviors:

- The write is IGNORED.
- The invalidation operation occurs and completes, with INV\_ALL reset to 0 on completion.

An Update of SMMUEN to 1 while an INV\_ALL invalidation operation is underway has a CONSTRAINED UNPREDICTABLE effect on the invalidation operation and has one of the following behaviors:

- The invalidation operation completes successfully, with INV\_ALL reset to 0 after completion.
- The invalidation operation might not affect any cache or TLB entries, and INV\_ALL is reset to 0 by the SMMU.

After INV\_ALL is written to 1, a write of 0 before the invalidation operation is observed to have completed is CONSTRAINED UNPREDICTABLE and has one of the following behaviors:

- The invalidation operation does not take place.
- The invalidation operation completes successfully but it cannot be determined when this completion occurs.

Note: It is Root firmware's responsibility to write to INV\_ALL before enabling SMMU\_ROOT\_CR0.{ACCESSEN, GPCEN}.

SMMU\_S\_INIT can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x803C |

- When an access is not Secure, access on this interface is RAZ/WI.
- Otherwise, access on this interface is RW.

# 6.3.58 SMMU\_S\_GBPA

The SMMU\_S\_GBPA characteristics are:

### **Purpose**

Secure Global Bypass Attributes.

### Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1. Otherwise, direct accesses to SMMU\_S\_GBPA are RES0.


### Attributes

SMMU\_S\_GBPA is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# Field descriptions

The SMMU\_S\_GBPA bit assignments are:



## Update, bit [31]

Update completion flag, see section 6.3.14.1 *Update procedure*.

The reset behavior of this field is:

• This field resets to 0b0.

# Bits [30:21]

Reserved, RESO.

## ABORT, bit [20]

Abort all incoming transactions.

| ABORT | Meaning  |
|-------|--|
| 0b0   | Do not abort incoming transactions. Transactions bypass the SMMU with attributes given by other fields in this register. |
| 0b1   | Abort all incoming transactions.   |

Note: An implementation can reset this field to 1, in order to implement a default deny policy on reset.

The reset behavior of this field is:

• This field resets to an IMPLEMENTATION DEFINED value.

### INSTCFG, bits [19:18]

Instruction/Data override.

| INSTCFG | Meaning                    |
|---------|----------------------------|
| 0b00    | Use incoming.              |
| 0b01    | Reserved, behaves as 0b00. |
| 0b10    | Data.                      |
| 0b11    | Instruction.               |

• INSTCFG only affects reads. Writes are always output as Data.

The reset behavior of this field is:

• This field resets to an IMPLEMENTATION DEFINED value.

## PRIVCFG, bits [17:16]

User/Privileged override.

| PRIVCFG | Meaning                    |
|---------|----------------------------|
| 0b00    | Use incoming.              |
| 0b01    | Reserved, behaves as 0b00. |
| 0b10    | Unprivileged.              |
| 0b11    | Privileged.                |

The reset behavior of this field is:

• This field resets to an IMPLEMENTATION DEFINED value.

## NSCFG, bits [15:14]

NS attribute override.

| NSCFG | Meaning                    |
|-------|----------------------------|
| 0b00  | Use incoming.              |
| 0b01  | Reserved, behaves as 0b00. |
| 0b10  | Secure.                    |
| 0b11  | Non-secure.                |

• If SMMU\_IDR1.ATTR\_PERMS\_OVR == 0 NSCFG is fixed as Use incoming and it is Implementation specific whether this field reads as zero or a previously written value.

The reset behavior of this field is:

• This field resets to an IMPLEMENTATION DEFINED value.

# SHCFG, bits [13:12]

Shareability override.

| SHCFG | Meaning          |
|-------|------------------|
| 0b00  | Non-shareable.   |
| 0b01  | Use incoming.    |
| 0b10  | Outer Shareable. |
| 0b11  | Inner Shareable. |

The reset behavior of this field is:

• This field resets to an IMPLEMENTATION DEFINED value.

## ALLOCCFG, bits [11:8]

Allocation configuration

- 0b0xxx use incoming RA/WA/TR allocation/transient hints.
- 0b1RWT Hints are overridden to given values:
  - Read Allocate == R.
  - Write Allocate == W.
  - Transient == T.
- When overridden by this field, for each of RA, WA, and TR, both inner- and outer- hints are set to the same value. Because it is not architecturally possible to express hints for types that are Device or Normal Non-cacheable, this field has no effect on memory types that are not Normal-WB or Normal-WT, whether such types are provided with a transaction or overridden using MTCFG/MemAttr.

The reset behavior of this field is:

• This field resets to an IMPLEMENTATION DEFINED value.

## Bits [7:5]

Reserved, RESO.

## MTCFG, bit [4]

Memory type override.

| MTCFG | Meaning  |
|-------|--|
| 0b0   | Use incoming memory type.                          |
| 0b1   | Override incoming memory type using MemAttr field. |

The reset behavior of this field is:

• This field resets to an IMPLEMENTATION DEFINED value.

## MemAttr, bits [3:0]

Memory type.

The reset behavior of this field is:

• This field resets to an IMPLEMENTATION DEFINED value.

### Additional information

This register controls the Secure global bypass attributes used for transactions from Secure StreamIDs when SMMU\_S\_CR0.SMMUEN == 0. Transactions passing through the SMMU when it is disabled might have their attributes overridden or assigned using this register.

# Accessing SMMU\_S\_GBPA

SMMU\_S\_GBPA can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x8044 |

- When an access is not Secure, access on this interface is RAZ/WI.
- When SMMU\_S\_GBPA.Update == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

# 6.3.59 SMMU\_S\_AGBPA

The SMMU\_S\_AGBPA characteristics are:

#### **Purpose**

Secure Alternate Global ByPass Attribute.

#### Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1. Otherwise, direct accesses to SMMU\_S\_AGBPA are RESO.

## Attributes

SMMU\_S\_AGBPA is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

## Field descriptions

The SMMU\_S\_AGBPA bit assignments are:



## IMPLEMENTATION\_DEFINED, bits [31:0]

IMPLEMENTATION DEFINED attributes to assign.

### Additional information

- This register allows an implementation to apply an additional non-architected attributes or tag to bypassing transactions.
- If this field is unsupported by an implementation, it is RESO.
- Note: Arm does not recommend that this register further modifies existing architected bypass attributes.

The process used to change contents of this register in relation to SMMU\_S\_GBPA. Update is IMPLEMENTATION DEFINED.

## Accessing SMMU S AGBPA

SMMU\_S\_AGBPA can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x8048 |

- When an access is not Secure, access on this interface is RAZ/WI.
- Otherwise, access on this interface is **RW**.

# 6.3.60 SMMU\_S\_IRQ\_CTRL

The SMMU\_S\_IRQ\_CTRL characteristics are:

#### Purpose

Secure interrupt control and configuration register.

### Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1. Otherwise, direct accesses to SMMU\_S\_IRQ\_CTRL are RES0.

## Attributes

SMMU\_S\_IRQ\_CTRL is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

## Field descriptions

The SMMU\_S\_IRQ\_CTRL bit assignments are:



This register is similar to SMMU\_IRQ\_CTRL, but controls interrupts from the Secure programming interface. It relates to SMMU\_S\_IRQ\_CTRLACK in the same way that SMMU\_IRQ\_CTRL relates to SMMU\_IRQ\_CTRLACK.

## Bits [31:3]

Reserved, RESO.

## EVENTQ\_IRQEN, bit [2]

Secure Event queue interrupt enable.

| EVENTQ_IRQEN | Meaning  |
|--------------|--|
| 0b0          | Interrupts from the Secure Event queue are disabled. |
| 0b1          | Interrupts from the Secure Event queue are enabled.  |

The reset behavior of this field is:

• This field resets to 0b0.

## Bit [1]

Reserved, RESO.

# GERROR\_IRQEN, bit [0]

Secure GERROR interrupt enable.

| GERROR_IRQEN | Meaning  |
|--------------|--|
| 0b0          | Interrupts from Secure Global errors are disabled. |
| 0b1          | Interrupts from Secure Global errors are enabled.  |

The reset behavior of this field is:

• This field resets to 0b0.

# Accessing SMMU\_S\_IRQ\_CTRL

SMMU\_S\_IRQ\_CTRL can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x8050 |

- When an access is not Secure, access on this interface is RAZ/WI.
- Otherwise, access on this interface is **RW**.

## 6.3.61 SMMU\_S\_IRQ\_CTRLACK

The SMMU\_S\_IRQ\_CTRLACK characteristics are:

# **Purpose**

Provides acknowledgment of changes to configurations and controls of interrupts in SMMU S IRQ CTRL.

## Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1. Otherwise, direct accesses to SMMU\_S\_IRQ\_CTRLACK are RES0.


### Attributes

SMMU\_S\_IRQ\_CTRLACK is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_S\_IRQ\_CTRLACK bit assignments are:



Undefined bits read as zero. Fields in this register are RAZ if the corresponding SMMU\_S\_IRQ\_CTRL field is Reserved.

## Bits [31:3]

Reserved, RESO.

## EVENTQ\_IRQEN, bit [2]

Secure Event queue interrupt enable.

| EVENTQ_IRQEN | Meaning  |
|--------------|--|
| 0b0          | Interrupts from the Secure Event Queue are disabled. |
| 0b1          | Interrupts from the Secure Event Queue are enabled.  |

The reset behavior of this field is:

• This field resets to 0b0.

### Bit [1]

Reserved, RESO.

# GERROR\_IRQEN, bit [0]

Secure GERROR interrupt enable.

| GERROR_IRQEN | Meaning  |
|--------------|--|
| 0b0          | Interrupts from Secure Global errors are disabled. |
| 0b1          | Interrupts from Secure Global errors are enabled.  |

The reset behavior of this field is:

• This field resets to 0b0.

# Accessing SMMU\_S\_IRQ\_CTRLACK

SMMU\_S\_IRQ\_CTRLACK can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x8054 |

- When an access is not Secure, access on this interface is RAZ/WI.
- Otherwise, access on this interface is **RO**.

# 6.3.62 SMMU\_S\_GERROR

The SMMU\_S\_GERROR characteristics are:

#### Purpose

Reporting of Secure Global Error conditions.

#### Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1. Otherwise, direct accesses to SMMU\_S\_GERROR are RES0.


### **Attributes**

SMMU\_S\_GERROR is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

## Field descriptions

The SMMU\_S\_GERROR bit assignments are:



See SMMU\_GERROR for information on GERROR behavior. This register provides a similar facility to SMMU\_GERROR, except for errors relating to the Secure programming interface.

This register, in conjunction with SMMU\_S\_GERRORN, indicates whether global error conditions exist. See section 7.5 *Global error recording*.

An error is active if the value of SMMU\_S\_GERROR[x] is different to the corresponding SMMU\_S\_GERRORN[x] bit.

The SMMU toggles SMMU\_S\_GERROR[x] when an error becomes active. An external agent acknowledges the error by toggling the corresponding SMMU\_S\_GERRORN[x], making the GERRORN[x] bit the same value as the corresponding GERROR[x] bit. Acknowledging an error deactivates the error, allowing a new occurrence to be reported at a later time, however:

• SFM\_ERR indicates that Service failure mode has been entered. Acknowledging this GERROR bit does not exit Service failure mode which remains active and is resolved in an IMPLEMENTATION DEFINED way.

The SMMU does not toggle a bit when an error is already active. An error is only activated if it is in an inactive state

Note: Software is not intended to trigger interrupts by arranging for GERRORN[x] to differ from GERROR[x]. See section SMMU\_GERRORN.

Bits [31:10]

Reserved, RESO.

CMDQP\_ERR, bit [9]

When  $SMMU\_S\_IDR0.ECMDQ == 1$ :

#### 6.3. Register formats

When this bit is different to SMMU\_S\_GERRORN.CMDQP\_ERR, it indicates that one or more errors have been encountered on a Secure Command queue control page interface.

See section 3.5.6.3 Errors relating to an ECMDQ interface.

The reset behavior of this field is:

• This field resets to 0b0.

#### Otherwise:

RES<sub>0</sub>

## SFM\_ERR, bit [8]

- When this bit is different to SMMU\_S\_GERRORN[8], the SMMU has entered Service failure mode.
  - Traffic through the SMMU has stopped. The SMMU has stopped processing commands and recording events. The RAS registers describe the error.
  - Acknowledgement of this error through GERRORN does not clear the Service failure mode error, which
    is cleared in an IMPLEMENTATION DEFINED way. See Section 12.3 Service Failure Mode (SFM).
- SFM triggers SFM\_ERR in SMMU\_GERROR, and when SMMU\_S\_IDR1.SECURE\_IMPL == 1 in SMMU\_S\_GERROR.

The reset behavior of this field is:

• This field resets to 0b0.

## MSI\_GERROR\_ABT\_ERR, bit [7]

### When $SMMU\_IDR0.MSI == 1$ :

- When this bit is different to SMMU\_S\_GERRORN[7], a Secure GERROR MSI was terminated with abort.
  - Activation of this error does not affect future MSIs.

The reset behavior of this field is:

• This field resets to 0b0.

### Otherwise:

RES0

## Bit [6]

Reserved, RESO.

## MSI\_EVENTQ\_ABT\_ERR, bit [5]

## When $SMMU\_IDR0.MSI == 1$ :

- When this bit is different to SMMU\_S\_GERRORN[5], a Secure Event queue MSI was terminated with abort.
  - Activation of this error does not affect future MSIs.

The reset behavior of this field is:

• This field resets to 0b0.

## Otherwise:

RES0

### MSI\_CMDQ\_ABT\_ERR, bit [4]

## When $SMMU\_IDR0.MSI == 1$ :

- When this bit is different to SMMU\_S\_GERRORN[4], a Secure CMD\_SYNC MSI was terminated with abort.
  - Activation of this error does not affect future MSIs.

The reset behavior of this field is:

• This field resets to 0b0.

#### Otherwise:

RES0

## Bit [3]

Reserved, RESO.

## EVENTQ\_ABT\_ERR, bit [2]

- When this bit is different to SMMU\_S\_GERRORN[2], an access to the Secure Event queue was terminated with abort.
  - Event records might have been lost.

The reset behavior of this field is:

• This field resets to 0b0.

## Bit [1]

Reserved, RESO.

## CMDQ\_ERR, bit [0]

- When this bit is different to SMMU\_S\_GERRORN[0], a command has been encountered that cannot be processed on the Secure Command queue.
  - SMMU\_S\_CMDQ\_CONS.ERR has been updated with a reason code and command processing has stopped.
- Commands are not processed while this error is active.

The reset behavior of this field is:

• This field resets to 0b0.

# Accessing SMMU\_S\_GERROR

SMMU\_S\_GERROR can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x8060 |

- When an access is not Secure, access on this interface is RAZ/WI.
- Otherwise, access on this interface is **RO**.

# 6.3.63 SMMU\_S\_GERRORN

The SMMU\_S\_GERRORN characteristics are:

#### Purpose

Acknowledgement of Secure Global Error conditions.

### Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1. Otherwise, direct accesses to SMMU\_S\_GERRORN are RES0.


### **Attributes**

SMMU\_S\_GERRORN is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

## Field descriptions

The SMMU\_S\_GERRORN bit assignments are:



Software must not toggle fields in this register that correspond to errors that are inactive. It is CONSTRAINED UNPREDICTABLE whether or not an SMMU activates errors if this is done.

## Bits [31:10]

Reserved, RESO.

CMDQP\_ERR, bit [9]

When  $SMMU\_S\_IDR0.ECMDQ == 1$ :

See SMMU\_S\_GERROR.CMDQP\_ERR.

The reset behavior of this field is:

• This field resets to 0b0.

## Otherwise:

RES0

### SFM\_ERR, bit [8]

• When this bit is different to SMMU\_S\_GERROR[8], the SMMU has entered Service failure mode.

The reset behavior of this field is:

• This field resets to 0b0.

# MSI\_GERROR\_ABT\_ERR, bit [7]

### When $SMMU\_IDR0.MSI == 1$ :

- When this bit is different to SMMU\_S\_GERROR[7], a Secure GERROR MSI was terminated with abort.
  - Activation of this error does not affect future MSIs.

The reset behavior of this field is:

• This field resets to 0b0.

#### Otherwise:

RESO

### Bit [6]

Reserved, RESO.

## MSI\_EVENTQ\_ABT\_ERR, bit [5]

### When SMMU IDR0.MSI == 1:

- When this bit is different to SMMU\_S\_GERROR[5], a Secure Event queue MSI was terminated with abort.
  - Activation of this error does not affect future MSIs.

The reset behavior of this field is:

• This field resets to 0b0.

#### Otherwise:

RESO

### MSI\_CMDQ\_ABT\_ERR, bit [4]

### When $SMMU\_IDR0.MSI == 1$ :

- When this bit is different to SMMU\_S\_GERROR[4], a Secure CMD\_SYNC MSI was terminated with abort.
  - Activation of this error does not affect future MSIs.

The reset behavior of this field is:

• This field resets to 0b0.

#### Otherwise:

RESO

### Bit [3]

Reserved, RESO.

## EVENTQ\_ABT\_ERR, bit [2]

- When this bit is different to SMMU\_S\_GERROR[2], an access to the Secure Event queue was terminated with abort.
  - Event records might have been lost.

The reset behavior of this field is:

• This field resets to 0b0.

## Bit [1]

Reserved, RESO.

## CMDQ\_ERR, bit [0]

- When this bit is different to SMMU\_S\_GERROR[0], a command has been encountered that cannot be processed on the Secure Command queue.
  - SMMU\_S\_CMDQ\_CONS.ERR has been updated with a reason code and command processing has stopped.
  - Commands are not processed while this error is active.

The reset behavior of this field is:

• This field resets to 0b0.

## Additional information

Fields that are RESO in SMMU\_S\_GERROR are also RESO in this register.

# Accessing SMMU\_S\_GERRORN

SMMU\_S\_GERRORN can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x8064 |

- When an access is not Secure, access on this interface is RAZ/WI.
- Otherwise, access on this interface is RW.

## 6.3.64 SMMU\_S\_GERROR\_IRQ\_CFG0

The SMMU\_S\_GERROR\_IRQ\_CFG0 characteristics are:

#### Purpose

Secure Global Error interrupt configuration register.

#### Configuration

This register is present only when SMMU\_IDR0.MSI == 1 and SMMU\_S\_IDR1.SECURE\_IMPL == 1. Otherwise, direct accesses to SMMU\_S\_GERROR\_IRQ\_CFG0 are RES0.


### **Attributes**

SMMU\_S\_GERROR\_IRQ\_CFG0 is a 64-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

## **Field descriptions**

The SMMU\_S\_GERROR\_IRQ\_CFG0 bit assignments are:



## Bits [63:52]

Reserved, RESO.

## ADDR, bits [51:2]

Physical address of MSI target register, bits [51:2].

• If OAS, the system physical address size reported by SMMU\_IDR5.OAS, is less than 52 then bits ADDR[51:OAS] are RES0.

Note: An implementation is not required to store these bits.

- Bits [51:OAS] and [1:0] of the effective address that results from this field are zero.
- If ADDR == 0, no MSI is sent. This allows a wired IRQ, if implemented, to be used when SMMU\_S\_IRQ\_CTRL.GERROR\_IRQEN == 1 instead of an MSI.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

## Bits [1:0]

Reserved, RESO.

## Accessing SMMU\_S\_GERROR\_IRQ\_CFG0

SMMU\_S\_GERROR\_IRQ\_CFG0 is Guarded by SMMU\_S\_IRQ\_CTRL.GERROR\_IRQEN and must only be modified when SMMU\_S\_IRQ\_CTRL.GERROR\_IRQEN == 0.

See SMMU\_GERROR\_IRQ\_CFG0 for detailed behavior.

 $SMMU\_S\_GERROR\_IRQ\_CFG0 \ can \ be \ accessed \ through \ the \ \underline{SMMUv3\_PAGE\_0} \ block \ as \ follows:$ 

# 6.3. Register formats

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x8068 |

- When an access is not Secure, access on this interface is RAZ/WI.
- When SMMU\_S\_IRQ\_CTRL.GERROR\_IRQEN == 0 and SMMU\_S\_IRQ\_CTRLACK.GERROR\_IRQEN == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

# 6.3.65 SMMU\_S\_GERROR\_IRQ\_CFG1

The SMMU\_S\_GERROR\_IRQ\_CFG1 characteristics are:

#### Purpose

Secure Global Error interrupt configuration register.

### Configuration

This register is present only when SMMU\_IDR0.MSI == 1 and SMMU\_S\_IDR1.SECURE\_IMPL == 1. Otherwise, direct accesses to SMMU\_S\_GERROR\_IRQ\_CFG1 are RES0.


### **Attributes**

SMMU\_S\_GERROR\_IRQ\_CFG1 is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

## Field descriptions

The SMMU\_S\_GERROR\_IRQ\_CFG1 bit assignments are:



## DATA, bits [31:0]

Secure MSI Data Payload.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# Accessing SMMU\_S\_GERROR\_IRQ\_CFG1

SMMU\_S\_GERROR\_IRQ\_CFG1 is Guarded by SMMU\_S\_IRQ\_CTRL.GERROR\_IRQEN, and must only be modified when SMMU\_S\_IRQ\_CTRL.GERROR\_IRQEN == 0.

See SMMU\_GERROR\_IRQ\_CFG0 for detailed behavior.

SMMU\_S\_GERROR\_IRQ\_CFG1 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x8070 |

- When an access is not Secure, access on this interface is RAZ/WI.
- When SMMU\_S\_IRQ\_CTRL.GERROR\_IRQEN == 0 and SMMU\_S\_IRQ\_CTRLACK.GERROR\_IRQEN == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

## 6.3.66 SMMU\_S\_GERROR\_IRQ\_CFG2

The SMMU\_S\_GERROR\_IRQ\_CFG2 characteristics are:

#### Purpose

Secure Global Error interrupt configuration register.

### Configuration

This register is present only when SMMU\_IDR0.MSI == 1 and SMMU\_S\_IDR1.SECURE\_IMPL == 1. Otherwise, direct accesses to SMMU\_S\_GERROR\_IRQ\_CFG2 are RES0.

## **Attributes**

SMMU\_S\_GERROR\_IRQ\_CFG2 is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_S\_GERROR\_IRQ\_CFG2 bit assignments are:



### Bits [31:6]

Reserved, RESO.

## SH, bits [5:4]

Shareability.

| SH   | Meaning                    |
|------|----------------------------|
| 0b00 | Non-shareable.             |
| 0b01 | Reserved, treated as 0b00. |
| 0b10 | Outer Shareable.           |
| 0b11 | Inner Shareable.           |

• When MemAttr specifies a Device memory type, the contents of this field are IGNORED and the Shareability is effectively Outer Shareable.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

## MemAttr, bits [3:0]

Memory type.

• Encoded the same as the STE.MemAttr field.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

### Additional information

MemAttr and SH allow the memory type and Shareability of the MSI to be configured, see section 3.18 *Interrupts and notifications*. When a cacheable type is specified in MemAttr, the allocation and transient hints are IMPLEMENTATION DEFINED.

## Accessing SMMU\_S\_GERROR\_IRQ\_CFG2

SMMU\_S\_GERROR\_IRQ\_CFG2 is Guarded by SMMU\_S\_IRQ\_CTRL.GERROR\_IRQEN, and must only be modified when SMMU\_S\_IRQ\_CTRL.GERROR\_IRQEN == 0.

See SMMU\_GERROR\_IRQ\_CFG0 for detailed behavior.

SMMU\_S\_GERROR\_IRQ\_CFG2 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x8074 |

- When an access is not Secure, access on this interface is **RAZ/WI**.
- When SMMU\_S\_IRQ\_CTRL.GERROR\_IRQEN == 0 and SMMU\_S\_IRQ\_CTRLACK.GERROR\_IRQEN == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

## 6.3.67 SMMU\_S\_STRTAB\_BASE

The SMMU\_S\_STRTAB\_BASE characteristics are:

#### Purpose

Stream Table Base address register in Secure state.

### Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1. Otherwise, direct accesses to SMMU\_S\_STRTAB\_BASE are RESO.


## Attributes

SMMU\_S\_STRTAB\_BASE is a 64-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

## Field descriptions

The SMMU\_S\_STRTAB\_BASE bit assignments are:



## Bit [63]

Reserved, RESO.

## RA, bit [62]

Read-Allocate hint.

| RA  | Meaning           |
|-----|-------------------|
| 0b0 | No Read-Allocate. |
| 0b1 | Read-Allocate.    |

The reset behavior of this field is:

- When SMMU\_IDR1.TABLES\_PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

### Bits [61:52]

Reserved, RESO.

# ADDR, bits [51:6]

Physical address of Secure Stream table base, bits [51:6].

- Address bits above and below this field range are treated as zero.
- High-order bits of the ADDR field above the system physical address size, as reported by SMMU\_IDR5.OAS, are RES0.

- Note: An implementation is not required to store these bits.
- When a Linear Stream table is used, that is when SMMU\_S\_STRTAB\_BASE\_CFG.FMT == 0b00, the effective base address is aligned by the SMMU to the table size, ignoring the least-significant bits in the ADDR range as required to do so:

```
ADDR[LOG2SIZE + 5:0] = 0.
```

• When a 2-level Stream table is used, that is when SMMU\_S\_STRTAB\_BASE\_CFG.FMT == 0b01, the effective base address is aligned by the SMMU to the larger of 64 bytes or the first-level table size:

```
ADDR[MAX(5, (LOG2SIZE - SPLIT - 1 + 3)):0] = 0.
```

The alignment of ADDR is affected by the literal value of the respective SMMU\_S\_STRTAB\_BASE\_CFG.LOG2SIZE field and is not limited by S\_SIDSIZE.

Note: This means that configuring a table that is larger than required by the incoming StreamID span results in some entries being unreachable, but the table is still aligned to the configured size.

The reset behavior of this field is:

- When SMMU IDR1.TABLES PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

## Bits [5:0]

Reserved, RESO.

#### Additional information

Access attributes of the Stream table are set using the SMMU\_S\_CR1.TABLE\_\* fields, a Read-Allocate hint is provided for Stream table accesses with the RA field.

# Accessing SMMU\_S\_STRTAB\_BASE

SMMU\_S\_STRTAB\_BASE is Guarded by SMMU\_S\_CR0.SMMUEN and must only be written when SMMU S CR0.SMMUEN == 0.

See SMMU\_STRTAB\_BASE for detailed behavior.

SMMU\_S\_STRTAB\_BASE can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x8080 |

- When an access is not Secure, access on this interface is RAZ/WI.
- When SMMU\_IDR1.TABLES\_PRESET == 1, access on this interface is **RO**.
- When SMMU\_S\_CR0.SMMUEN == 0 and SMMU\_S\_CR0ACK.SMMUEN == 0, access on this interface is RW.
- Otherwise, access on this interface is **RO**.

E.a

# 6.3.68 SMMU\_S\_STRTAB\_BASE\_CFG

The SMMU\_S\_STRTAB\_BASE\_CFG characteristics are:

#### Purpose

Configuration of Secure Stream table.

### Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1. Otherwise, direct accesses to SMMU\_S\_STRTAB\_BASE\_CFG are RES0.

## **Attributes**

SMMU\_S\_STRTAB\_BASE\_CFG is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_S\_STRTAB\_BASE\_CFG bit assignments are:

| L | 31 18 | 17 16 | 15 11 | 10 6  | , 5 0 ,  |
|---|-------|-------|-------|-------|----------|
|   | RES0  | FMT   | RES0  | SPLIT | L0G2SIZE |

## Bits [31:18]

Reserved, RESO.

FMT, bits [17:16]

## When SMMU\_IDR0.ST\_LEVEL != 0b00:

Format of Secure Stream table.

| FMT  | Meaning  |
|------|--|
| 0b00 | Linear - ADDR points to an array of STEs.                              |
| 0b01 | 2-level - ADDR points to an array of Level 1 Stream Table Descriptors. |

• Other values are reserved, behave as 0b00.

The reset behavior of this field is:

- When SMMU\_IDR1.TABLES\_PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

#### Otherwise:

RESO

Bits [15:11]

Reserved, RESO.

SPLIT, bits [10:6]

When SMMU\_IDR0.ST\_LEVEL != 0b00:

StreamID split point for multi-level table.

This field determines the split point of a 2-level Stream table, selected by the number of bits at the bottom level.

| SPLIT   | Meaning                     |
|---------|-----------------------------|
| 0b00110 | 6 bits - 4KB leaf tables.   |
| 0b01000 | 8 bits - 16KB leaf tables.  |
| 0b01010 | 10 bits - 64KB leaf tables. |

- This field determines the split point of a 2-level Stream table, selected by the number of bits at the bottom level
- This field is IGNORED if FMT == 0b00.
- Other values are reserved, behave as 6 (0b0110).
- The upper-level L1STD is located using StreamID[LOG2SIZE 1:SPLIT] and this indicates the lowest-level table which is indexed by StreamID[SPLIT 1:0].
  - For example, selecting SPLIT == 6 (0b0110) causes StreamID[5:0] to be used to index the lowest level Secure Stream table and StreamID[LOG2SIZE 1:6] to index the upper level table.
- Note: If SPLIT >= LOG2SIZE, a single upper-level descriptor indicates one bottom-level Secure Stream table with 2<sup>LOG2SIZE</sup> usable entries. The valid range of the L1STD.Span value is up to SPLIT + 1, but not all of this Span is accessible, as it is not possible to use a StreamID >= 2<sup>LOG2SIZE</sup>.
- Note: Arm recommends that a Linear table, FMT == 0b00, is used instead of programming SPLIT > LOG2SIZE.

The reset behavior of this field is:

- When SMMU\_IDR1.TABLES\_PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

### Otherwise:

RESO

## LOG2SIZE, bits [5:0]

Table size as  $log_2(entries)$ .

• The maximum StreamID value that can be used to index into the Stream table is  $2^{\text{LOG2SIZE}}$ -1. The StreamID range is equal to the number of STEs in a linear Stream table or the maximum sum of the STEs in all second-level tables. The number of L1STDs in the upper level of a 2-level table is MAX(1,  $2^{\text{LOG2SIZE-SPLIT}}$ ). Except for readback of a written value, the effective LOG2SIZE is <= SMMU\_IDR1.SIDSIZE for the purposes of input StreamID range checking and upper/lower/linear Stream table index address calculation.

The reset behavior of this field is:

- When SMMU IDR1.TABLES PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

### Additional information

A transaction having a StreamID  $\geq$ =  $2^{\text{LOG2SIZE}}$  is out of range. Such a transaction is terminated with an abort and a C\_BAD\_STREAMID event is recorded if permitted by SMMU\_S\_CR2.RECINVSID.

# Accessing SMMU\_S\_STRTAB\_BASE\_CFG

SMMU\_S\_STRTAB\_BASE\_CFG is Guarded by SMMU\_S\_CR0.SMMUEN.

See SMMU\_STRTAB\_BASE for detailed behavior.

SMMU\_S\_STRTAB\_BASE\_CFG can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x8088 |

- When an access is not Secure, access on this interface is RAZ/WI.
- When SMMU\_IDR1.TABLES\_PRESET == 1, access on this interface is **RO**.
- When SMMU\_S\_CR0.SMMUEN == 0 and SMMU\_S\_CR0ACK.SMMUEN == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

## 6.3.69 SMMU\_S\_CMDQ\_BASE

The SMMU\_S\_CMDQ\_BASE characteristics are:

#### Purpose

Configuration of the Secure Command queue base address.

### Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1. Otherwise, direct accesses to SMMU\_S\_CMDQ\_BASE are RESO.


### **Attributes**

SMMU\_S\_CMDQ\_BASE is a 64-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

## Field descriptions

The SMMU\_S\_CMDQ\_BASE bit assignments are:



### Bit [63]

Reserved, RESO.

## RA, bit [62]

Read Allocate hint.

| RA  | Meaning           |
|-----|-------------------|
| 0b0 | No Read-Allocate. |
| 0b1 | Read-Allocate.    |

The reset behavior of this field is:

- When SMMU\_IDR1.QUEUES\_PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

### Bits [61:52]

Reserved, RESO.

# ADDR, bits [51:5]

Physical address of Secure Command queue base, bits [51:5].

- Address bits above and below this field range are implied as zero.
- High-order bits of the ADDR field above the system physical address size, as reported by SMMU\_IDR5.OAS, are RES0.

- Note: An implementation is not required to store these bits.
- The effective base address is aligned by the SMMU to the larger of the queue size in bytes or 32 bytes, ignoring the least-significant bits of ADDR as required.
  - Note: For example, a queue with 2<sup>8</sup> entries is 4096 bytes in size so software must align an allocation, and therefore ADDR, to a 4KB boundary.

The reset behavior of this field is:

- When SMMU IDR1.QUEUES PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

### LOG2SIZE, bits [4:0]

Queue size as  $log_2(entries)$ .

LOG2SIZE must be less than or equal to SMMU\_IDR1.CMDQS. Except for the purposes of readback of this register, any use of this field's value is capped at the maximum, SMMU\_IDR1.CMDQS.

The minimum size is 0, for one entry, but this must be aligned to a 32-byte (2 entry) boundary as above.

The reset behavior of this field is:

- When SMMU IDR1.QUEUES PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

#### Additional information

Upon initialization, if SMMU\_IDR1.QUEUES\_PRESET == 0 then the SMMU\_S\_CMDQ\_BASE.LOG2SIZE field might affect which bits of SMMU\_S\_CMDQ\_CONS.RD and SMMU\_S\_CMDQ\_PROD.WR can be written upon initialization. The registers must be initialized in this order:

- 1. Write SMMU\_S\_CMDQ\_BASE to set the queue base and size.
- 2. Write initial values to SMMU\_S\_CMDQ\_CONS and SMMU\_S\_CMDQ\_PROD.
- 3. Enable the queue with an Update of the respective SMMU\_S\_CR0.CMDQEN to 1.

This also applies to the initialization of Secure Event queue registers.

Access attributes of the Secure Command queue are set using the SMMU\_S\_CR1.QUEUE\_\* fields. A Read-Allocate hint is provided for Secure Command queue accesses with the RA field.

## Accessing SMMU S CMDQ BASE

This register is Guarded by SMMU\_S\_CR0.CMDQEN and must only be modified when SMMU\_S\_CR0.CMDQEN == 0.

See SMMU\_CMDQ\_BASE for detailed behavior.

SMMU\_S\_CMDQ\_BASE can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x8090 |

- When an access is not Secure, access on this interface is RAZ/WI.
- When SMMU\_IDR1.QUEUES\_PRESET == 1, access on this interface is **RO**.
- When SMMU\_S\_CR0.CMDQEN == 0 and SMMU\_S\_CR0ACK.CMDQEN == 0, access on this interface is RW.

Chapter 6. Memory map and registers 6.3. Register formats

• Otherwise, access on this interface is **RO**.

# 6.3.70 SMMU\_S\_CMDQ\_PROD

The SMMU\_S\_CMDQ\_PROD characteristics are:

#### Purpose

Allows Command queue producer to update the Secure write index.

#### Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1. Otherwise, direct accesses to SMMU\_S\_CMDQ\_PROD are RESO.

## **Attributes**

SMMU\_S\_CMDQ\_PROD is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

## Field descriptions

The SMMU\_S\_CMDQ\_PROD bit assignments are:



## Bits [31:20]

Reserved, RESO.

## WR, bits [19:0]

Secure Command queue write index.

This field is treated as two sub-fields, depending on the configured queue size:

Bit [QS]: WR\_WRAP - Secure Command queue write index wrap flag.

Bits [QS-1:0]: WR - Secure Command queue write index.

• Updated by the host PE (producer) indicating the next empty space in the queue after the new data.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

### Additional information

QS == SMMU\_S\_CMDQ\_BASE.LOG2SIZE, see SMMU\_S\_CMDQ\_CONS.

If QS < 19, bits [19:QS + 1] are RESO. If software writes a non-zero value to these bits, the value might be stored but has no other effect. In addition, if SMMU\_IDR1.CMDQS < 19, bits [19:CMDQS + 1] are UNKNOWN on read.

If QS == 0 the queue has one entry: zero bits of WR index are present and WR\_WRAP is bit zero.

When software increments WR, if the index would pass off the end of the queue it must be correctly wrapped to the queue size given by QS and WR\_WRAP toggled.

Note: In the limit case of a one-entry queue, an increment of WR consists solely of a toggle of WR\_WRAP.

There is space in the queue for additional commands if:

```
SMMU_S_CMDQ_CONS.RD != SMMU_S_CMDQ_PROD.WR ||
SMMU_S_CMDQ_CONS.RD_WRAP == SMMU_S_CMDQ_PROD.WR_WRAP
```

The value written to this register must only move the pointer in a manner consistent with adding N consecutive entries to the command queue, updating WR\_WRAP when appropriate.

When SMMU\_S\_CMDQ\_BASE.LOG2SIZE is increased within its valid range, the value of the bits of this register that were previously above the old wrap flag position are UNKNOWN and when it is decreased, the value of the bits from the wrap flag downward are the effective truncation of the value in the old field.

Arm recommends that software initializes the register to a valid value before SMMU\_S\_CR0.CMDQEN is transitioned from 0 to 1.

A write to this register causes the SMMU to consider the Command queue for processing if SMMU\_S\_CR0.CMDQEN == 1 and SMMU\_S\_GERROR.CMDQ\_ERR is not active.

## Accessing SMMU\_S\_CMDQ\_PROD

SMMU\_S\_CMDQ\_PROD can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x8098 |

- When an access is not Secure, access on this interface is RAZ/WI.
- Otherwise, access on this interface is RW.

## 6.3.71 SMMU\_S\_CMDQ\_CONS

The SMMU\_S\_CMDQ\_CONS characteristics are:

#### Purpose

Secure Command queue consumer read index.

### Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1. Otherwise, direct accesses to SMMU\_S\_CMDQ\_CONS are RESO.

## **Attributes**

SMMU\_S\_CMDQ\_CONS is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_S\_CMDQ\_CONS bit assignments are:



### Bit [31]

Reserved, RESO.

### ERR, bits [30:24]

Error reason code.

- When a command execution error is detected, ERR is set to a reason code and then the SMMU S GERROR.CMDQ ERR global error becomes active.
- The value in this field is UNKNOWN when the CMDQ\_ERR global error is not active.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

## Bits [23:20]

Reserved, RESO.

# RD, bits [19:0]

Secure Queue read index.

This field is treated as two sub-fields, depending on the configured queue size:

Bit [QS]: RD\_WRAP - Queue read index wrap flag.

Bits [QS-1:0]: RD - Queue read index.

• Updated by the SMMU (consumer) to point at the queue entry after the entry it has just consumed.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Additional information

QS == SMMU\_S\_CMDQ\_BASE.LOG2SIZE and SMMU\_S\_CMDQ\_BASE.LOG2SIZE <= SMMU\_IDR1.CMDQS <= 19.

This gives a configurable-sized index pointer followed immediately by the wrap bit.

If QS < 19, bits [19:QS + 1] are RAZ. When incremented by the SMMU, the RD index is always wrapped to the current queue size given by SMMU\_S\_CMDQ\_BASE.LOG2SIZE.

If QS == 0 the queue has one entry: zero bits of RD index are present and RD\_WRAP is bit zero.

When SMMU\_S\_CMDQ\_BASE.LOG2SIZE is increased within its valid range, the value of this register's bits that were previously above the old wrap flag position are UNKNOWN and when it is decreased, the value of the bits from the wrap flag downward are the effective truncation of the value in the old field.

Arm recommends that software initializes the register to a valid value before SMMU\_S\_CR0.CMDQEN is transitioned from 0 to 1.

Upon a write to this register, when SMMU\_S\_CR0.CMDQEN == 0, the ERR field is permitted to either take the written value or ignore the written value.

Note: There is no requirement for the SMMU to update this value after every command consumed, it might be updated only after an implementation specific number of commands have been consumed. However, an SMMU must ultimately update RD in finite time to indicate free space to software.

When a command execution error is detected, ERR is set to a reason code and then the respective SMMU\_S\_GERROR.CMDQ\_ERR error becomes active. RD remains pointing at the infringing command for debug. The SMMU resumes processing commands after the CMDQ\_ERR error is acknowledged, if the Secure Command queue is enabled at that time. SMMU\_S\_GERROR.CMDQ\_ERR has no other interaction with SMMU\_S\_CR0.CMDQEN than that a Secure Command queue error can only be detected when the queue is enabled and therefore consuming commands. A change to CMDQEN does not affect, or acknowledge, SMMU\_S\_GERROR.CMDQ\_ERR which must be explicitly acknowledged. See section 7.1 Command queue errors.

## Accessing SMMU\_S\_CMDQ\_CONS

This register is Guarded by SMMU\_S\_CR0.CMDQEN and must only be modified when SMMU\_S\_CR0.CMDQEN == 0.

See SMMU\_CMDQ\_BASE for detailed behavior.

SMMU S CMDQ CONS can be accessed through the SMMUv3 PAGE 0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x809C |

- When an access is not Secure, access on this interface is RAZ/WI.
- When SMMU\_S\_CR0.CMDQEN == 0 and SMMU\_S\_CR0ACK.CMDQEN == 0, access on this interface is RW.
- Otherwise, access on this interface is **RO**.

## 6.3.72 SMMU\_S\_EVENTQ\_BASE

The SMMU\_S\_EVENTQ\_BASE characteristics are:

#### Purpose

Secure Event queue base address register.

### Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1. Otherwise, direct accesses to SMMU\_S\_EVENTQ\_BASE are RESO.


## Attributes

SMMU\_S\_EVENTQ\_BASE is a 64-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

## Field descriptions

The SMMU\_S\_EVENTQ\_BASE bit assignments are:



## Bit [63]

Reserved, RESO.

## WA, bit [62]

Write Allocate hint.

| WA  | Meaning            |
|-----|--------------------|
| 0b0 | No Write-Allocate. |
| 0b1 | Write-Allocate.    |

The reset behavior of this field is:

- When SMMU\_IDR1.QUEUES\_PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

### Bits [61:52]

Reserved, RESO.

# ADDR, bits [51:5]

Physical address of Secure Event queue base, bits [51:5].

- Address bits above and below this field range are treated as zero.
- High-order bits of the ADDR field above the system physical address size, as reported by SMMU\_IDR5.OAS, are RES0.

- Note: An implementation is not required to store these bits.
- The effective base address is aligned by the SMMU to the larger of the queue size in bytes or 32 bytes, ignoring the least-significant bits of ADDR as required.

The reset behavior of this field is:

- When SMMU\_IDR1.QUEUES\_PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

### LOG2SIZE, bits [4:0]

Queue size as log<sub>2</sub>(entries).

• LOG2SIZE is less than or equal to SMMU\_IDR1.EVENTQS. Except for the purposes of readback of this register, any use of the value of this field is capped at the maximum, SMMU\_IDR1.EVENTQS.

The reset behavior of this field is:

- When SMMU\_IDR1.QUEUES\_PRESET == 1, this field resets to an IMPLEMENTATION DEFINED value.
- Otherwise, this field resets to an UNKNOWN value.

#### Additional information

See SMMU S CMDQ BASE for initialization order with respect to the PROD and CONS registers.

Events destined for an Event queue (for the appropriate Security state, if supported) are delivered into the queue if SMMU\_S\_CR0.EVENTQEN == 1 and the queue is writable. If SMMU\_S\_CR0.EVENTQEN == 0, no events are delivered into the queue. See section 7.2 Event queue recorded faults and events, some events might be lost in these situations.

Access attributes of the Secure Event queue are set using the SMMU\_S\_CR1.QUEUE\_\* fields. A Write-Allocate hint is provided for Secure Event queue accesses with the WA field.

## Accessing SMMU\_S\_EVENTQ\_BASE

SMMU\_S\_EVENTQ\_BASE is Guarded by SMMU\_S\_CR0.EVENTQEN and must only be modified when EVENTQEN == 0.

See SMMU\_EVENTQ\_BASE for detailed behavior.

SMMU\_S\_EVENTQ\_BASE can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x80A0 |

- When an access is not Secure, access on this interface is **RAZ/WI**.
- When SMMU IDR1.QUEUES PRESET == 1, access on this interface is **RO**.
- When SMMU\_S\_CR0.EVENTQEN == 0 and SMMU\_S\_CR0ACK.EVENTQEN == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

## 6.3.73 SMMU\_S\_EVENTQ\_PROD

The SMMU\_S\_EVENTQ\_PROD characteristics are:

#### Purpose

Secure Event queue producer write index.

### Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1. Otherwise, direct accesses to SMMU\_S\_EVENTQ\_PROD are RESO.

### **Attributes**

SMMU\_S\_EVENTQ\_PROD is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

## Field descriptions

The SMMU\_S\_EVENTQ\_PROD bit assignments are:



## OVFLG, bit [31]

Secure Event queue overflowed.

- A Secure Event queue overflow is indicated using this flag. This flag is toggled by the SMMU when a queue overflow is detected, if OVFLG == SMMU\_S\_EVENTQ\_CONS.OVACKFLG.
- This flag will not be updated until a prior overflow is acknowledged by setting <a href="mailto:SMMU\_S\_EVENTQ\_CONS.OVACKFLG">SMMU\_S\_EVENTQ\_CONS.OVACKFLG</a> equal to OVFLG.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

### Bits [30:20]

Reserved, RESO.

## WR, bits [19:0]

Secure Event queue write index.

This field is treated as two sub-fields, depending on the configured queue size:

Bit [QS]: WR\_WRAP - Queue write index wrap flag.

Bits [QS-1:0]: WR - Queue write index.

This field indicates the next space to be written by the SMMU.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Additional information

QS == SMMU\_S\_EVENTQ\_BASE.LOG2SIZE, see SMMU\_S\_EVENTQ\_CONS.

If QS < 19, bits [19:QS + 1] are RAZ. When incremented by the SMMU, the WR index is always wrapped to the current queue size given by QS.

If QS == 0 the queue has one entry: zero bits of WR index are present and WR\_WRAP is bit zero.

When SMMU\_S\_EVENTQ\_BASE.LOG2SIZE is increased within its valid range, the value of the bits of this register that were previously above the old wrap flag position are UNKNOWN and when it is decreased, the value of the bits from the wrap flag downward are the effective truncation of the value in the old field.

Arm recommends that software initializes the register to a valid value before SMMU\_S\_CR0.EVENTQEN is transitioned from 0 to 1.

Note: See section 7.4 Event queue overflow for details on queue overflow. An overflow condition is entered when a record has been discarded due to a full enabled Secure Event queue. The following conditions do not cause an overflow condition:

- Event records discarded when the Secure Event queue is disabled, that is when SMMU\_S\_CR0.EVENTQEN == 0.
- · A stalled faulting transaction, as stall event records do not get discarded when the queue is full or disabled.

# Accessing SMMU\_S\_EVENTQ\_PROD

This register is Guarded by SMMU\_S\_CR0.EVENTQEN and must only be modified when SMMU S CR0.EVENTQEN == 0.

See SMMU\_EVENTQ\_BASE for detailed behavior.

SMMU\_S\_EVENTQ\_PROD can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x80A8 |

- When an access is not Secure, access on this interface is RAZ/WI.
- When SMMU\_S\_CR0.EVENTQEN == 0 and SMMU\_S\_CR0ACK.EVENTQEN == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

## 6.3.74 SMMU\_S\_EVENTQ\_CONS

The SMMU\_S\_EVENTQ\_CONS characteristics are:

#### Purpose

Secure Event queue consumer read index.

### Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1. Otherwise, direct accesses to SMMU\_S\_EVENTQ\_CONS are RESO.


### **Attributes**

SMMU\_S\_EVENTQ\_CONS is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

## **Field descriptions**

The SMMU\_S\_EVENTQ\_CONS bit assignments are:



## OVACKFLG, bit [31]

Overflow acknowledge flag.

- Software must set this flag to the value of SMMU\_S\_EVENTQ\_PROD.OVFLG when it is safe for the SMMU to report a future Event queue overflow. Arm recommends that this is be done on initialization and after a previous Event queue overflow is handled by software.
- See section 7.4 Event queue overflow.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

## Bits [30:20]

Reserved, RESO.

## RD, bits [19:0]

Secure Event queue read index.

This field is treated as two sub-fields, depending on the configured queue size:

Bit [QS]: RD\_WRAP - Secure Event queue read index wrap flag.

Bits [QS-1:0]: RD - Secure Event queue read index.

• Updated by the PE to point at the queue entry after the entry it has just consumed.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Additional information

QS == SMMU\_S\_EVENTQ\_BASE.LOG2SIZE and SMMU\_S\_EVENTQ\_BASE.LOG2SIZE <= SMMU\_IDR1.EVENTQS <= 19.

This gives a configurable-sized index pointer followed immediately by the wrap bit.

If QS < 19, bits [19:QS + 1] are RESO. If software writes a non-zero value to these bits, the value might be stored but has no other effect. In addition, if SMMU\_IDR1.EVENTQS < 19, bits [19:EVENTQS + 1] are UNKNOWN on read.

If QS == 0 the queue has one entry: zero bits of RD index are present and RD\_WRAP is bit zero.

When software increments RD, if the index would pass off the end of the queue it must be correctly wrapped to the queue size given by QS and RD\_WRAP toggled.

Arm recommends that software initializes the register to a valid value before SMMU\_S\_CR0.EVENTQEN is transitioned from 0 to 1.

When SMMU\_S\_EVENTQ\_BASE.LOG2SIZE is increased within its valid range, the value of the bits of this register that were previously above the old wrap flag position are UNKNOWN and when it is decreased, the value of the bits from the wrap flag downward are the effective truncation of the value in the old field.

## Accessing SMMU\_S\_EVENTQ\_CONS

SMMU S EVENTO CONS can be accessed through the SMMUv3 PAGE 0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x80AC |

- When an access is not Secure, access on this interface is RAZ/WI.
- Otherwise, access on this interface is RW.

# 6.3.75 SMMU\_S\_EVENTQ\_IRQ\_CFG0

The SMMU\_S\_EVENTQ\_IRQ\_CFG0 characteristics are:

#### Purpose

Secure Event queue interrupt configuration register.

#### Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1 and SMMU\_IDR0.MSI == 1. Otherwise, direct accesses to SMMU\_S\_EVENTQ\_IRQ\_CFG0 are RES0.


### **Attributes**

SMMU\_S\_EVENTQ\_IRQ\_CFG0 is a 64-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_S\_EVENTQ\_IRQ\_CFG0 bit assignments are:



### Bits [63:52]

Reserved, RESO.

# ADDR, bits [51:2]

Physical address of the target MSI register, bits [51:2].

• If OAS, the system physical address size reported by SMMU\_IDR5.OAS, is less than 52 then bits ADDR[51:OAS] are RES0.

Note: An implementation is not required to store these bits.

- Bits [51:OAS] and [1:0] of the effective address that results from this field are zero.
- If ADDR == 0, no MSI is sent. This allows a wired IRQ, if implemented, to be used when SMMU\_S\_IRQ\_CTRL.EVENTQ\_IRQEN == 1 instead of an MSI.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

### Bits [1:0]

Reserved, RESO.

# Accessing SMMU\_S\_EVENTQ\_IRQ\_CFG0

 $SMMU\_S\_EVENTQ\_IRQ\_CFG0 \ is \ Guarded \ by \ \underline{SMMU\_S\_IRQ\_CTRL}. EVENTQ\_IRQEN \ and \ must \ only \ be \ modified \ when \ \underline{SMMU\_S\_IRQ\_CTRL}. EVENTQ\_IRQEN \ == 0.$ 

See SMMU\_GERROR\_IRQ\_CFG0 for detailed behavior.

SMMU\_S\_EVENTQ\_IRQ\_CFG0 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x80B0 |

- When an access is not Secure, access on this interface is RAZ/WI.
- When SMMU\_S\_IRQ\_CTRL.EVENTQ\_IRQEN == 0 and SMMU\_S\_IRQ\_CTRLACK.EVENTQ\_IRQEN == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

# 6.3.76 SMMU\_S\_EVENTQ\_IRQ\_CFG1

The SMMU\_S\_EVENTQ\_IRQ\_CFG1 characteristics are:

#### Purpose

Secure Event queue interrupt configuration register.

### Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1 and SMMU\_IDR0.MSI == 1. Otherwise, direct accesses to SMMU\_S\_EVENTQ\_IRQ\_CFG1 are RES0.


### **Attributes**

SMMU\_S\_EVENTQ\_IRQ\_CFG1 is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

### Field descriptions

The SMMU\_S\_EVENTQ\_IRQ\_CFG1 bit assignments are:



### DATA, bits [31:0]

MSI Data payload.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# Accessing SMMU\_S\_EVENTQ\_IRQ\_CFG1

SMMU\_S\_EVENTQ\_IRQ\_CFG1 is Guarded by SMMU\_S\_IRQ\_CTRL.EVENTQ\_IRQEN, and must only be modified when SMMU\_S\_IRQ\_CTRL.EVENTQ\_IRQEN == 0.

See SMMU\_GERROR\_IRQ\_CFG0 for detailed behavior.

SMMU\_S\_EVENTQ\_IRQ\_CFG1 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x80B8 |

- When an access is not Secure, access on this interface is RAZ/WI.
- When SMMU\_S\_IRQ\_CTRL.EVENTQ\_IRQEN == 0 and SMMU\_S\_IRQ\_CTRLACK.EVENTQ\_IRQEN == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

# 6.3.77 SMMU\_S\_EVENTQ\_IRQ\_CFG2

The SMMU\_S\_EVENTQ\_IRQ\_CFG2 characteristics are:

#### Purpose

Secure Event queue interrupt configuration register.

### Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1 and SMMU\_IDR0.MSI == 1. Otherwise, direct accesses to SMMU\_S\_EVENTQ\_IRQ\_CFG2 are RES0.

### **Attributes**

SMMU\_S\_EVENTQ\_IRQ\_CFG2 is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# Field descriptions

The SMMU\_S\_EVENTQ\_IRQ\_CFG2 bit assignments are:



### Bits [31:6]

Reserved, RESO.

### SH, bits [5:4]

Shareability.

| SH   | Meaning                    |
|------|----------------------------|
| 0b00 | Non-shareable.             |
| 0b01 | Reserved, treated as 0b00. |
| 0b10 | Outer Shareable.           |
| 0b11 | Inner Shareable.           |

When MemAttr specifies a Device memory type, the contents of this field are IGNORED and the Shareability is effectively Outer Shareable.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# MemAttr, bits [3:0]

Memory type.

• Encoded in the same way as the STE.MemAttr field.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

### Additional information

MemAttr and SH allow the memory type and Shareability of the MSI to be configured, see section 3.18 *Interrupts and notifications*.

Note: The encodings of all of the SMMU\_\*\_IRQ\_CFG2 MemAttr and SH fields are the same. When a cacheable type is specified in MemAttr, the allocation and transient hints are IMPLEMENTATION DEFINED.

# Accessing SMMU\_S\_EVENTQ\_IRQ\_CFG2

SMMU\_S\_EVENTQ\_IRQ\_CFG2 is Guarded by SMMU\_S\_IRQ\_CTRL.EVENTQ\_IRQEN, and must only be modified when SMMU\_S\_IRQ\_CTRL.EVENTQ\_IRQEN == 0.

See SMMU\_GERROR\_IRQ\_CFG0 for detailed behavior.

SMMU\_S\_EVENTQ\_IRQ\_CFG2 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x80BC |

- When an access is not Secure, access on this interface is RAZ/WI.
- When SMMU\_S\_IRQ\_CTRL.EVENTQ\_IRQEN == 0 and SMMU\_S\_IRQ\_CTRLACK.EVENTQ\_IRQEN == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

# 6.3.78 SMMU\_S\_GATOS\_CTRL

The SMMU\_S\_GATOS\_CTRL characteristics are:

#### Purpose

Secure Global ATOS translation control register.

#### Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1 and SMMU\_IDR0.ATOS == 1. Otherwise, direct accesses to SMMU\_S\_GATOS\_CTRL are RES0.

### **Attributes**

SMMU\_S\_GATOS\_CTRL is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

### Field descriptions

The SMMU\_S\_GATOS\_CTRL bit assignments are:



### Bits [31:1]

Reserved, RESO.

### **RUN, bit [0]**

Run ATOS translation.

- Arm recommends that software writes this bit to 1 to initiate the translation operation, after initializing the ATOS SID and ATOS ADDR registers.
- The SMMU clears the RUN flag after the translation completes and its result is visible in ATOS\_PAR.
- A write of 0 to this flag might change the value of the flag but has no other effect. Software must only write 0 to this flag when the flag is zero.

The reset behavior of this field is:

• This field resets to 0b0.

# Additional information

See Chapter 9 Address Translation Operations for more information on the overall behavior of ATOS operations.

# Accessing SMMU\_S\_GATOS\_CTRL

RUN is Guarded by SMMU\_S\_CR0.SMMUEN and must only be set when SMMUEN == 1 and RUN == 0.

See SMMU\_GATOS\_CTRL for more detailed behavior.

SMMU\_S\_GATOS\_CTRL can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x8100 |

# Chapter 6. Memory map and registers 6.3. Register formats

- When an access is not Secure, access on this interface is RAZ/WI.
- When SMMU\_S\_GATOS\_CTRL.RUN == 1, access on this interface is **RO**.
- When an access is Secure, access on this interface is RW.

# 6.3.79 SMMU\_S\_GATOS\_SID

The SMMU\_S\_GATOS\_SID characteristics are:

#### Purpose

Secure Global ATOS StreamID register.

### Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1 and SMMU\_IDR0.ATOS == 1. Otherwise, direct accesses to SMMU\_S\_GATOS\_SID are RES0.


### **Attributes**

SMMU\_S\_GATOS\_SID is a 64-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# Field descriptions

The SMMU\_S\_GATOS\_SID bit assignments are:



### Bits [63:54]

Reserved, RESO.

# SSEC, bit [53]

Secure stream lookup.

| SSEC | Meaning  |
|------|--|
| 0d0  | Non-secure stream lookup: STREAMID field is a Non-secure StreamID. |
| 0b1  | Secure stream lookup: STREAMID field is a Secure StreamID.         |

• Note: In SMMU S VATOS SID this field is RES1 and STREAMID is a Secure StreamID.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

### SSID\_VALID, bit [52]

# When SMMU\_IDR1.SSIDSIZE != 0:

SubstreamID valid.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Otherwise:

RESO

### SUBSTREAMID, bits [51:32]

SubstreamID of request.

• If SMMU\_IDR1.SSIDSIZE < 20, bits [51:32 + SMMU\_IDR1.SSIDSIZE] are RESO.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

### STREAMID, bits [31:0]

StreamID of request.

- This is written with the StreamID (used to locate translations/CDs) of the request later submitted to SMMU\_S\_GATOS\_ADDR.
- If SMMU\_IDR1.SID\_SIZE < 32 and SMMU\_S\_IDR1.S\_SIDSIZE < 32, bits [31:MAX(SMMU\_IDR1.SID\_SIZE, SMMU\_S\_IDR1.S\_SID\_SIZE)] are RES0.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

### Additional information

Bits of SUBSTREAMID and STREAMID outside of the supported range are RESO.

# Accessing SMMU\_S\_GATOS\_SID

This register is Guarded by SMMU\_S\_GATOS\_CTRL.RUN and must only be altered when RUN == 0.

See SMMU\_GATOS\_CTRL for more detailed behavior.

SMMU\_S\_GATOS\_SID can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x8108 |

- When an access is not Secure, access on this interface is RAZ/WI.
- When SMMU\_S\_GATOS\_CTRL.RUN == 1, access on this interface is **RO**.
- When an access is Secure, access on this interface is RW.

# 6.3.80 SMMU\_S\_GATOS\_ADDR

The SMMU\_S\_GATOS\_ADDR characteristics are:

#### Purpose

Secure Global ATOS translation address register.

### Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1 and SMMU\_IDR0.ATOS == 1. Otherwise, direct accesses to SMMU\_S\_GATOS\_ADDR are RES0.


### **Attributes**

SMMU\_S\_GATOS\_ADDR is a 64-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# Field descriptions

The SMMU\_S\_GATOS\_ADDR bit assignments are:



### ADDR, bits [63:12]

Requested input address, bits [63:12].

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

### TYPE, bits [11:10]

Request type.

| TYPE | Meaning                         |  |
|------|---------------------------------|--|
| 0b00 | Reserved.                       |  |
| 0b01 | Stage 1 (VA to IPA).            |  |
| 0b10 | Stage 2 (IPA to PA).            |  |
| 0b11 | Stage 1 and stage 2 (VA to PA). |  |

• Use of a Reserved value results in an INV\_REQ ATOS error.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# PnU, bit [9]

Privileged or User access.

| PnU | Meaning       |  |
|-----|---------------|--|
| 0b0 | Unprivileged. |  |
| 0b1 | Privileged.   |  |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# RnW, bit [8]

Read/Write access.

| RnW | Meaning |
|-----|---------|
| 0b0 | Write.  |
| 0b1 | Read.   |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# InD, bit [7]

Instruction/Data access.

| InD | Meaning      |
|-----|--------------|
| 0b0 | Data.        |
| 0b1 | Instruction. |

• This bit is IGNORED if RnW == 0, and the effective InD for writes is Data.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# HTTUI, bit [6]

Inhibit hardware update of the Access flag and dirty state.

| HTTUI | Meaning  |
|-------|--|
| 0b0   | Flag update (HTTU) might occur, where supported by the SMMU, according to the HA and HD configuration fields at stage 1 and stage 2. |

| HTTUI | Meaning  |
|-------|--|
| 0b1   | HTTU is inhibited, regardless of HA and HD configuration. • The ATOS operation causes no state change. |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

### Bit [5]

Reserved, RESO.

### NS, bit [4]

### When $SMMU\_S\_IDR1.SEL2 == 1$ :

Input NS attribute.

- This bit is used in the scenario where the selected stream is Secure and one of the following applies:
  - The stream is configured for stage 1 and stage 2 translation and an ATOS lookup is made for stage 1 and stage 2, but stage 1 translation is bypassed due to STE.S1DSS.
  - The stream is configured for stage 1 and stage 2 translation and an ATOS lookup is made for stage 2 only.
  - The stream is configured for stage 2 translation only and an ATOS lookup is made for stage 2 only.
- In these scenarios, this bit provides the IPA space determination required for a Secure stage 2 translation.
- This bit is ignored when stage 2 translation is not performed or when stage 1 translation is performed.
- Note: When stage 1 translation is performed, the IPA space determination provided to stage 2 comes from stage 1 translation tables.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

### Otherwise:

RES0

### Bits [3:0]

Reserved, RESO.

# Accessing SMMU\_S\_GATOS\_ADDR

This register is Guarded by SMMU\_S\_GATOS\_CTRL.RUN and must only be altered when RUN == 0.

See SMMU GATOS CTRL for more detailed behavior.

SMMU\_S\_GATOS\_ADDR can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x8110 |

# Chapter 6. Memory map and registers 6.3. Register formats

- When an access is not Secure, access on this interface is RAZ/WI.
- When SMMU\_S\_GATOS\_CTRL.RUN == 1, access on this interface is **RO**.
- When an access is Secure, access on this interface is **RW**.

# 6.3.81 SMMU\_S\_GATOS\_PAR

The SMMU\_S\_GATOS\_PAR characteristics are:

#### **Purpose**

Secure Global ATOS translation operation results register.

This result register encodes both successful results and error results. The format is determined by the FAULT field.

Unless otherwise specified, the fields of SMMU\_S\_GATOS\_PAR behave in an equivalent manner to the fields of SMMU\_GATOS\_PAR.

### Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1 and SMMU\_IDR0.ATOS == 1. Otherwise, direct accesses to SMMU\_S\_GATOS\_PAR are RES0.

#### Attributes


SMMU S GATOS PAR is a 64-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

### Field descriptions

The SMMU\_S\_GATOS\_PAR bit assignments are:

### When SMMU\_S\_GATOS\_PAR.FAULT == 0:



When FAULT == 0, a successful result is present:

# ATTR, bits [63:56]

Memory attributes, in MAIR format.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# Bits [55:52]

Reserved, RESO.

### ADDR, bits [51:12]

Result address, bits [51:12].

- Address bits above and below [51:12] are treated as zero.
- In SMMUv3.0, bits [51:48] are RES0.

The reset behavior of this field is:

· This field resets to an UNKNOWN value.

# Size, bit [11]

Translation page/block size flag.

| Size | Meaning  |
|------|--|
| 0b0  | Translation is 4KB.  |
| 0b1  | Translation is determined by position of lowest 1 bit in ADDR field. |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# NS, bit [10]

Final NS attribute.

• Note: This bit is RESO in SMMU\_GATOS\_PAR and SMMU\_VATOS\_PAR.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# SH, bits [9:8]

Shareability attribute.

| SH   | Meaning          |
|------|------------------|
| 0b00 | Non-shareable.   |
| 0b01 | Reserved.        |
| 0b10 | Outer Shareable. |
| 0b11 | Inner Shareable. |

• Note: Shareability is returned as Outer Shareable when ATTR selects any Device type.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# Bits [7:1]

Reserved, RESO.

# FAULT, bit [0]

Fault/error status.

| FAULT | Meaning   |
|-------|-----------|
| 0d0   | No fault. |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

### Additional information for When SMMU\_S\_GATOS\_PAR.FAULT == 0

The Size field allows the size of the translation to be determined, using an encoding in the ADDR field.

The translated address is aligned to the translation size (appropriate number of LSBs zeroed) and then, if the size is greater than 4KB, a single bit is set such that its position, N, denotes the translation size, where  $2^{(N+1)} ==$  size in bytes.


Note: For example, if Size == 1 and ADDR[14:12] == 0 and ADDR[15] == 1, the lowest set bit is 15 so the translation size is  $2^{15+1}$ , or 64KB. In this case, Arm expects software to align the actual output address to 64KB by masking out bit 15. Similarly, an output address with ADDR[13:12] == 0b10 denotes a page of size  $2^{13+1}$ , or 16KB, and the output address is taken from ADDR[47] upwards.

An implementation that does not support all of the defined attributes is permitted to return the behavior that the cache supports, instead of the exact value from the translation table entries. Similarly, an implementation might return the translation page or block size that is cached rather than the size that is determined from the translation table entries.

The returned memory attributes and Shareability are determined from the translation tables without including STE overrides that might be configured for the given stream.

- When ATOS\_ADDR.TYPE == stage 1, the stage 1 translation table attributes are returned.
- When ATOS\_ADDR.TYPE == stage 2, the stage 2 translation table attributes are returned. In this case, the allocation and transient hints in ATTR are:
  - RA == WA == 1.
  - TR == 0.
  - Note: The stage 2 TTD.MemAttr[3:0] field does not encode RA/WA/TR.
- When ATOS\_ADDR.TYPE == stage 1 and stage 2, the attributes returned are those from stage 1 combined with stage 2 (where combined is as defined in Chapter 13 Attribute Transformation).

# When SMMU\_S\_GATOS\_PAR.FAULT == 1:



When FAULT == 1, the translation has failed and a fault syndrome is present:

#### IMPDEF, bits [63:60]

IMPLEMENTATION DEFINED fault data

Bits [59:52]

Reserved, RESO.

FADDR, bits [51:12]

Stage 2 fault page address, bits [51:12].

#### 6.3. Register formats

- The value returned in FADDR depends on the cause of the fault. See section 9.1.4 ATOS\_PAR for details.
- In SMMUv3.0, bits [51:48] are RES0.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

### FAULTCODE, bits [11:4]

Fault/error code.

• See section 9.1.4 ATOS\_PAR for details.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

### NSIPA, bit [3]

### When $SMMU\_S\_IDR1.SEL2 == 1$ :

Stage 2 fault IPA NS attribute.

- When an IPA is recorded for a fault response of an ATOS request that is made to a Secure stream, that is, with ATOS\_SID.SSEC == 1, this field equals the final NS bit that was output from stage 1. This value indicates whether FADDR is in the Secure or Non-secure IPA space.
  - Note: When stage 1 translation is bypassed, NSIPA is the value of SMMU\_S\_GATOS\_ADDR.NS in the request.
- This field value is zero when any of the following are true:
  - FADDR takes the default value of 0 and does not report an IPA. See section 9.1.4 ATOS\_PAR for details.
  - A request is made through SMMU\_S\_GATOS\_PAR for a Non-secure stream. A reported IPA for a fault on a Non-secure stream is implicitly Non-secure.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

### Otherwise:

RES0

### REASON, bits [2:1]

Class of activity causing fault.

• This indicates the stage and reason for the fault. See section 9.1.4 ATOS\_PAR for details.

| REASON | Meaning   |
|--------|---|
| 0000   | Stage 1 translation-related fault occurred, or miscellaneous non-translation fault not attributable to a translation stage (for example F_BAD_STE). |
| 0b01   | CD: Stage 2 fault occurred because of a CD fetch.   |
| 0b10   | TT: Stage 2 fault occurred because of a stage 1 translation table walk.   |

| REASON | Meaning   |
|--------|---|
| 0b11   | IN: Stage 2 fault occurred because of the input address to stage 2 (output address from successful stage 1 translation table walk, or address given in ATOS_ADDR for stage 2-only translation). |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# FAULT, bit [0]

Fault/error status.

| FAULT | Meaning                     |
|-------|-----------------------------|
| 0b1   | Fault or translation error. |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# Accessing SMMU\_S\_GATOS\_PAR

The content of ATOS\_PAR registers is UNKNOWN if values in the ATOS register group are modified after a translation has been initiated by setting ATOS\_CTRL.RUN == 1. See section 9.1.4 ATOS\_PAR.

This register has an UNKNOWN value if read when SMMU\_S\_GATOS\_CTRL.RUN == 1.

SMMU\_S\_GATOS\_PAR can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x8118 |

- When an access is not Secure, access on this interface is RAZ/WI.
- When an access is Secure, access on this interface is **RO**.

# 6.3.82 SMMU\_S\_MPAMIDR

The SMMU\_S\_MPAMIDR characteristics are:

#### Purpose

MPAM capability identification register for Secure state.

### Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1 and SMMU\_IDR3.MPAM == 1. Otherwise, direct accesses to SMMU\_S\_MPAMIDR are RES0.


### **Attributes**

SMMU\_S\_MPAMIDR is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# Field descriptions

The SMMU\_S\_MPAMIDR bit assignments are:



Similar to SMMU\_MPAMIDR, but for MPAM capability identification for Secure state.

It is valid when SMMU\_IDR3.MPAM == 1 in the same manner as SMMU\_MPAMIDR.

# Bits [31:26]

Reserved, RESO.

# HAS\_MPAM\_NS, bit [25]

| HAS_MPAM_NS | Meaning  |
|-------------|--|
| 0b0         | The MPAM_NS mechanism for Secure state is not implemented. |
| 0b1         | The MPAM_NS mechanism for Secure state is implemented.     |

See section 17.7 Determination of PARTID space values.

### Bit [24]

Reserved, RESO.

### PMG\_MAX, bits [23:16]

• The maximum PMG value that is permitted to be used in Secure state.

### PARTID\_MAX, bits [15:0]

• The maximum PARTID value that is permitted to be used in Secure state.

#### Additional information

The PMG bit width is defined as the bit position of the most significant 1 in PMG\_MAX[7:0], plus one, or is defined as zero if PMG\_MAX is zero.

Note: For example, if PMG\_MAX ==  $0 \times 0$  f, the PMG bit width is 4.

The PARTID bit width is defined as the bit position of the most significant 1 in PARTID\_MAX[15:0], plus one, or is defined as zero if PARTID\_MAX is zero.

Note: For example, if PARTID\_MAX ==  $0 \times 0034$ , the PARTID bit width is 6.

Note: PMG\_MAX and PARTID\_MAX specify the maximum values of each ID type that can be configured in the corresponding Security state. These values do not describe properties of the rest of the system, which are discovered using mechanisms that are outside the scope of this specification.

Note: Either field is architecturally permitted to be zero-sized, but Arm recommends that PARTID\_MAX is non-zero when MPAM is implemented.

# Accessing SMMU\_S\_MPAMIDR

SMMU\_S\_MPAMIDR can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x8130 |

- When an access is not Secure, access on this interface is RAZ/WI.
- Otherwise, access on this interface is **RO**.

# 6.3.83 SMMU\_S\_GMPAM

The SMMU\_S\_GMPAM characteristics are:

#### Purpose

Global MPAM configuration register for SMMU-originated transactions relating to the Secure programming interface.

### Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1 and SMMU\_IDR3.MPAM == 1. Otherwise, direct accesses to SMMU\_S\_GMPAM are RES0.


### Attributes

SMMU\_S\_GMPAM is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_S\_GMPAM bit assignments are:



The fields and their behavior are the same as SMMU\_GMPAM, but for the Secure programming interface. Any references to Non-secure registers in the SMMU\_GMPAM definition are replaced by their corresponding Secure equivalent.

## Update, bit [31]

Update completion flag.

The reset behavior of this field is:

• This field resets to 0b0.

### Bits [30:25]

Reserved, RESO.

# MPAM\_NS, bit [24]

### When $SMMU\_S\_MPAMIDR.HAS\_MPAM\_NS == 1$ :

| MPAM_NS | Meaning   |
|---------|---|
| 0b0     | Accesses controlled by this register use Secure PARTID space.     |
| 0b1     | Accesses controlled by this register use Non-secure PARTID space. |

PARTID and PMG values for accesses for Secure state are determined according to section 17.7 Determination of PARTID space values.

The reset behavior of this field is:

• This field resets to 0b0.

#### Otherwise:

RES0

# SO\_PMG, bits [23:16]

PMG for SMMU-originated accesses.

- This field determines the PMG of the SMMU-originated transactions, for more information see SMMU\_GMPAM.
- If SMMU\_S\_MPAMIDR.HAS\_MPAM\_NS == 1 and MPAM\_NS == 1, the maximum PMG value is SMMU\_MPAMIDR.PMG\_MAX.
- Otherwise, the maximum PMG value is SMMU\_S\_MPAMIDR.PMG\_MAX.
- Bits above the supported PMG bit width are RES0.
- If a value is programmed that is greater than the maximum supported PMG value, an UNKNOWN PMG is
  used.

The reset behavior of this field is:

• This field resets to 0x00.

# SO\_PARTID, bits [15:0]

PARTID for SMMU-originated accesses.

- This field determines the PARTID of SMMU-originated transactions for Secure state. For more information see SMMU\_GMPAM.
- If SMMU\_S\_MPAMIDR.HAS\_MPAM\_NS == 1 and MPAM\_NS == 1, the maximum PARTID value is SMMU\_MPAMIDR.PARTID\_MAX.
- Otherwise, the maximum PARTID value is SMMU\_S\_MPAMIDR.PARTID\_MAX.
- Bits above the supported PARTID bit width are RESO.
- If a value is programmed that is greater than the maximum supported PARTID value, an UNKNOWN PARTID
  is used.

The reset behavior of this field is:

• This field resets to 0x0000.

# Accessing SMMU\_S\_GMPAM

SMMU\_S\_GMPAM can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x8138 |

- When an access is not Secure, access on this interface is RAZ/WI.
- When SMMU\_S\_GMPAM.Update == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

# 6.3.84 SMMU\_S\_GBPMPAM

The SMMU\_S\_GBPMPAM characteristics are:

#### Purpose

MPAM configuration register for global bypass transactions relating to the Secure programming interface.

### Configuration

This register is present only when SMMU\_S\_IDR1.SECURE\_IMPL == 1 and SMMU\_IDR3.MPAM == 1. Otherwise, direct accesses to SMMU\_S\_GBPMPAM are RESO.


### **Attributes**

SMMU\_S\_GBPMPAM is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# **Field descriptions**

The SMMU\_S\_GBPMPAM bit assignments are:



The fields and their behavior are the same as SMMU\_GBPMPAM, but for the Secure programming interface. Any references to Non-secure registers in the SMMU\_GBPMPAM definition are replaced by their corresponding Secure equivalent.

# Update, bit [31]

Update completion flag.

The reset behavior of this field is:

• This field resets to 0b0.

### Bits [30:25]

Reserved, RESO.

# MPAM\_NS, bit [24]

### When $SMMU\_S\_MPAMIDR.HAS\_MPAM\_NS == 1$ :

| MPAM_NS | Meaning   |
|---------|---|
| 0b0     | Accesses controlled by this register use Secure PARTID space.     |
| 0b1     | Accesses controlled by this register use Non-secure PARTID space. |

PARTID and PMG values for accesses for Secure state are determined according to section 17.7 Determination of PARTID space values.

The reset behavior of this field is:

• This field resets to 0b0.

### Otherwise:

RES0

### GBP\_PMG, bits [23:16]

PMG value for transactions in Global ByPass.

- This field determines the default PMG applied to all Secure client transactions that bypass translation, for more information see SMMU\_GBPMPAM.
- If SMMU\_S\_MPAMIDR.HAS\_MPAM\_NS == 1 and MPAM\_NS == 1, the maximum PMG value is SMMU\_MPAMIDR.PMG\_MAX.
- Otherwise, the maximum PMG value is SMMU\_S\_MPAMIDR.PMG\_MAX.
- Bits above the supported PMG bit width are RES0.
- If a value is programmed that is greater than the maximum supported PMG value, an UNKNOWN PMG is
  used.

The reset behavior of this field is:

• This field resets to 0x00.

# GBP\_PARTID, bits [15:0]

PARTID value for transactions in Global ByPass.

- This field determines the default PARTID applied to all Secure client transactions that bypass translation. For more information see SMMU\_GBPMPAM.
- If SMMU\_S\_MPAMIDR.HAS\_MPAM\_NS == 1 and MPAM\_NS == 1, the maximum PARTID value is SMMU\_MPAMIDR.PARTID\_MAX.
- Otherwise, the maximum PARTID value is SMMU\_S\_MPAMIDR.PARTID\_MAX.
- Bits above the supported PARTID bit width are RESO.
- If a value is programmed that is greater than the maximum supported PARTID value, an UNKNOWN PARTID
  is used.

The reset behavior of this field is:

• This field resets to 0x0000.

# Accessing SMMU\_S\_GBPMPAM

SMMU\_S\_GBPMPAM can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x813C |

- When an access is not Secure, access on this interface is RAZ/WI.
- When SMMU\_S\_GBPMPAM.Update == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

# 6.3.85 SMMU\_S\_VATOS\_SEL

The SMMU\_S\_VATOS\_SEL characteristics are:

#### **Purpose**

Secure VATOS VMID selection.

#### Configuration

This register is present only when SMMU\_IDR0.VATOS == 1 and SMMU\_S\_IDR1.SEL2 == 1. Otherwise, direct accesses to SMMU\_S\_VATOS\_SEL are RES0.


### **Attributes**

SMMU\_S\_VATOS\_SEL is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

### Field descriptions

The SMMU\_S\_VATOS\_SEL bit assignments are:



When requests are made through VATOS, this field is compared to the S2VMID field of the STE selected in the request. The request is denied if the STE configuration means that translations are not tagged with a VMID, or the VMID values do not match (indicating a lookup for a StreamID not assigned to the VM that has been granted access to the VATOS interface). See section 9.1.6 SMMU\_(S\_)VATOS\_SEL.

Note: The Secure VATOS interface does not support ATOS requests for Non-secure StreamIDs because SMMU\_S\_VATOS\_SEL checks that an STE.S2VMID field matches the secure VMID in SMMU\_S\_VATOS\_SEL.

### Bits [31:16]

Reserved, RESO.

### VMID, bits [15:0]

VMID associated with the VM that is using the VATOS interface.

• When SMMU\_IDR0.VMID16 == 0, bits [15:8] of this field are RES0.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

### Additional information

This register is similar to SMMU\_VATOS\_SEL, but configures a Secure VMID to associate with the Secure VATOS interface.

# Accessing SMMU\_S\_VATOS\_SEL

This register is Guarded by SMMU\_S\_VATOS\_CTRL.RUN and must only be altered when RUN == 0.

See SMMU GATOS CTRL for more detailed behavior.

SMMU\_S\_VATOS\_SEL can be accessed through the SMMUv3\_PAGE\_0 block as follows:

# 6.3. Register formats

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x8180 |

- When an access is not Secure, access on this interface is RAZ/WI.
- When SMMU\_S\_VATOS\_CTRL.RUN == 1, access on this interface is **RO**.
- When an access is Secure, access on this interface is RW.

# 6.3.86 SMMU\_S\_IDR6

The SMMU\_S\_IDR6 characteristics are:

#### **Purpose**

Provides information about the Enhanced Command queue interface for the SMMU Secure programming interface.

### Configuration

This register is present only when SMMU\_S\_IDR0.ECMDQ == 1. Otherwise, direct accesses to SMMU\_S\_IDR6 are RES0.


### Attributes

SMMU\_S\_IDR6 is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# Field descriptions

The SMMU\_S\_IDR6 bit assignments are:



### Bits [31:28]

Reserved, RESO.

### CMDQ\_CONTROL\_PAGE\_LOG2NUMP, bits [27:24]

Number of Secure Command queue control pages supported.

The number of Secure Command queue control pages supported is  $2^{\text{CMDQ\_CONTROL\_PAGE\_LOG2NUMP}}$ .

This field has a maximum value of 0b1000.

### Bits [23:20]

Reserved, RESO.

### CMDQ\_CONTROL\_PAGE\_LOG2NUMQ, bits [19:16]

Number of queues per Secure Command queue control page.

The number of queues supported per Secure Command queue control page is 2<sup>CMDQ\_CONTROL\_PAGE\_LOG2NUMQ</sup>.

This field has a maximum value of 0b1000.

# Bits [15:0]

Reserved, RESO.

### Additional information

See section 3.5.6 Enhanced Command queue interfaces.

# Accessing SMMU\_S\_IDR6

SMMU\_S\_IDR6 can be accessed through the SMMUv3\_PAGE\_0 block as follows:

# 6.3. Register formats

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_0 | 0x8190 |

- When an access is not Secure, access on this interface is RAZ/WI.
- Otherwise, access on this interface is **RO**.

# 6.3.87 SMMU\_S\_CMDQ\_CONTROL\_PAGE\_BASE<n>, n = 0 - 255

The SMMU\_S\_CMDQ\_CONTROL\_PAGE\_BASE<n> characteristics are:

### **Purpose**

Provides information about the Enhanced Command queue interface for the SMMU Secure programming interface.

## Configuration

This register is present only when SMMU\_S\_IDR0.ECMDQ == 1. Otherwise, direct accesses to SMMU\_S\_CMDQ\_CONTROL\_PAGE\_BASE<n> are RES0.


### Attributes

SMMU\_S\_CMDQ\_CONTROL\_PAGE\_BASE<n> is a 64-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# Field descriptions

The SMMU\_S\_CMDQ\_CONTROL\_PAGE\_BASE<n> bit assignments are:



# Bits [63:52]

Reserved, RESO.

#### ADDR, bits [51:16]

Base address of the Command queue control page, bits [51:16].

The bits [15:0] of the base address are 0.

Bits above the system physical address size, as advertised in SMMU\_IDR5.OAS, are RES0.

The value of this field is an offset from the base address of SMMU Register Page 0, not an absolute address.

The values of all SMMU\_S\_CMDQ\_CONTROL\_PAGE\_BASEn.ADDR are such that the pages occupy a contiguous region of address space within the SMMU register file, and they are arranged in ascending value of n.

### Bits [15:3]

Reserved, RESO.

### CMDQGS, bits [2:1]

Granule size to use for the Command queue control page.

### CMDQ\_CONTROL\_PAGE\_PRESET, bit [0]

Indicates whether queue controls for this interface are stored in Normal memory or registers.

| CMDQ_CONTROL_PAGE_PRESET | Meaning  |
|--------------------------|--|
| 0b1                      | The ECMDQ interfaces for this page are implemented as registers in the SMMU. |

This bit is 1 in implementations of SMMUv3.3.

# Accessing SMMU\_S\_CMDQ\_CONTROL\_PAGE\_BASE<n>

SMMU\_S\_CMDQ\_CONTROL\_PAGE\_BASE<n> can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset            |
|---------------|-------------------|
| SMMUv3_PAGE_0 | 0xC000 + (32 * n) |

- When an access is not Secure, access on this interface is RAZ/WI.
- Otherwise, access on this interface is **RO**.

# 6.3.88 SMMU\_S\_CMDQ\_CONTROL\_PAGE\_CFG<n>, n = 0 - 255

The SMMU\_S\_CMDQ\_CONTROL\_PAGE\_CFG<n> characteristics are:

#### **Purpose**

Control for Enhanced Command queue interface for the SMMU Secure programming interface.

### Configuration

This register is present only when SMMU\_S\_IDR0.ECMDQ == 1. Otherwise, direct accesses to SMMU\_S\_CMDQ\_CONTROL\_PAGE\_CFG<n> are RES0.


### **Attributes**

SMMU\_S\_CMDQ\_CONTROL\_PAGE\_CFG<n> is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# Field descriptions

The SMMU\_S\_CMDQ\_CONTROL\_PAGE\_CFG<n> bit assignments are:



### Bits [31:1]

Reserved, RESO.

### EN, bit [0]

Command queue control page enable.

| EN  | Meaning                                |
|-----|--|
| 0b1 | Command queue control page is enabled. |

This field is RES1.

# Accessing SMMU\_S\_CMDQ\_CONTROL\_PAGE\_CFG<n>

SMMU\_S\_CMDQ\_CONTROL\_PAGE\_CFG<n> can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset            |
|---------------|-------------------|
| SMMUv3_PAGE_0 | 0xC008 + (32 * n) |

- When an access is not Secure, access on this interface is **RAZ/WI**.
- Otherwise, access on this interface is **RO**.

# 6.3.89 SMMU\_S\_CMDQ\_CONTROL\_PAGE\_STATUS<n>, n = 0 - 255

The SMMU\_S\_CMDQ\_CONTROL\_PAGE\_STATUS<n> characteristics are:

#### **Purpose**

Status of Enhanced Command queue interface for the SMMU Secure programming interface.

### Configuration

This register is present only when SMMU\_S\_IDR0.ECMDQ == 1. Otherwise, direct accesses to SMMU\_S\_CMDQ\_CONTROL\_PAGE\_STATUS<n>> are RES0.

### **Attributes**

SMMU\_S\_CMDQ\_CONTROL\_PAGE\_STATUS<n> is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_0 block.

# Field descriptions

The SMMU\_S\_CMDQ\_CONTROL\_PAGE\_STATUS<n> bit assignments are:



### Bits [31:1]

Reserved, RESO.

# ENACK, bit [0]

Command queue control page enable.

| ENACK | Meaning                                |
|-------|--|
| 0b1   | Command queue control page is enabled. |

This field is RES1.

# Accessing SMMU S CMDQ CONTROL PAGE STATUS<n>

SMMU\_S\_CMDQ\_CONTROL\_PAGE\_STATUS<n> can be accessed through the SMMUv3\_PAGE\_0 block as follows:

| Frame         | Offset            |
|---------------|-------------------|
| SMMUv3_PAGE_0 | 0xC00C + (32 * n) |

- When an access is not Secure, access on this interface is RAZ/WI.
- Otherwise, access on this interface is **RO**.

# 6.3.90 SMMU\_EVENTQ\_PROD

The SMMU\_EVENTQ\_PROD characteristics are:

#### Purpose

Allows Event queue producer to update the read index.

#### **Attributes**

SMMU\_EVENTQ\_PROD is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_1 block.

# **Field descriptions**

The SMMU\_EVENTQ\_PROD bit assignments are:



## OVFLG, bit [31]

Event queue overflowed flag.

- An Event queue overflow is indicated using this flag. This flag is toggled by the SMMU when a queue overflow is detected, if OVFLG == SMMU\_EVENTQ\_CONS.OVACKFLG.
- This flag will not be updated until a prior overflow is acknowledged by setting SMMU\_EVENTQ\_CONS.OVACKFLG equal to OVFLG.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

### Bits [30:20]

Reserved, RESO.

### WR, bits [19:0]

Event queue write index.

This field is treated as two sub-fields, depending on the configured queue size:

Bit [QS]: WR\_WRAP - Queue write index wrap flag.

Bits [QS-1:0]: WR - Queue write index.

• Next space to be written by SMMU.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Additional information

QS == SMMU\_EVENTQ\_BASE.LOG2SIZE, see SMMU\_EVENTQ\_CONS.

If QS < 19, bits [19:QS+1] are RAZ. When incremented by the SMMU, the WR index is always wrapped to the current queue size given by QS.

If QS == 0 the queue has one entry. Zero bits of WR index are present and WR\_WRAP is bit zero.

When SMMU\_EVENTQ\_BASE.LOG2SIZE is increased within its valid range, the value of the bits of this registers that were previously above the old wrap flag position are UNKNOWN and when it is decreased, the value of the bits from the wrap flag downward are the effective truncation of the value in the old field.

Arm recommends that software initializes the register to a valid value before SMMU\_CR0.EVENTQEN is transitioned from 0 to 1.

Note: See section 7.4 Event queue overflow for details on queue overflow. An overflow condition is entered when a record has been discarded due to a full enabled Event queue. The following conditions do not cause an overflow condition:

- Event records discarded when the Event queue is disabled, that is when SMMU\_CR0.EVENTQEN == 0.
- A stalled faulting transaction, as stall event records do not get discarded when the Event queue is full or disabled.

# Accessing SMMU EVENTQ PROD

This register is Guarded by SMMU\_CR0.EVENTQEN and must only be modified when SMMU\_CR0.EVENTQEN == 0.

See SMMU\_EVENTQ\_BASE for detailed behavior.

SMMU\_EVENTQ\_PROD can be accessed through the SMMUv3\_PAGE\_1 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_1 | 0x00A8 |

- When SMMU\_CR0.EVENTQEN == 0 and SMMU\_CR0ACK.EVENTQEN == 0, access on this interface is RW.
- Otherwise, access on this interface is **RO**.

# 6.3.91 SMMU\_EVENTQ\_CONS

The SMMU\_EVENTQ\_CONS characteristics are:

#### Purpose

Event queue consumer read index.

#### **Attributes**

SMMU\_EVENTQ\_CONS is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_1 block.

# **Field descriptions**

The SMMU\_EVENTQ\_CONS bit assignments are:



### OVACKFLG, bit [31]

Overflow acknowledge flag.

- Software must set this flag to the value of SMMU\_EVENTQ\_PROD.OVFLG when it is safe for the SMMU to report a future EVENT queue overflow. Arm recommends that this is done on initialization and after a previous Event queue overflow is handled by software.
- See section 7.4 Event queue overflow.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

### Bits [30:20]

Reserved, RESO.

### RD, bits [19:0]

Event queue read index.

This field is treated as two sub-fields, depending on the configured queue size:

Bit [QS]: RD\_WRAP - Event queue read index wrap flag.

Bits [QS-1:0]: RD - Event queue read index.

• Updated by the PE to point at the queue entry after the entry it has just consumed.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Additional information

QS == SMMU\_EVENTQ\_BASE.LOG2SIZE and SMMU\_EVENTQ\_BASE.LOG2SIZE <= SMMU\_IDR1.EVENTQS <= 19.

This gives a configurable-sized index pointer followed immediately by the wrap bit.

If QS < 19, bits [19:QS + 1] are RESO. If software writes a non-zero value to these bits, the value might be stored but has no other effect. In addition, if SMMU\_IDR1.EVENTQS < 19, bits [19:EVENTQS + 1] are UNKNOWN on read.

If QS == 0 the queue has one entry. Zero bits of RD index are present and RD\_WRAP is bit zero.

When software increments RD, if the index would pass off the end of the queue it must be correctly wrapped to the queue size given by QS and RD\_WRAP toggled.

Arm recommends that software initializes the register to a valid value before SMMU\_CR0.EVENTQEN is transitioned from 0 to 1.

When SMMU\_EVENTQ\_BASE.LOG2SIZE is increased within its valid range, the value of the bits of this register that were previously above the old wrap flag position are UNKNOWN and when it is decreased, the value of the bits from the wrap flag downward are the effective truncation of the value in the old field.

# Accessing SMMU\_EVENTQ\_CONS

SMMU\_EVENTQ\_CONS can be accessed through the SMMUv3\_PAGE\_1 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_1 | 0x00AC |

Access on this interface is **RW**.

# 6.3.92 SMMU\_PRIQ\_PROD

The SMMU\_PRIQ\_PROD characteristics are:

#### Purpose

PRI queue write index status.

#### Configuration

This register is present only when SMMU\_IDR0.PRI == 1. Otherwise, direct accesses to SMMU\_PRIQ\_PROD are RES0.

#### **Attributes**

SMMU\_PRIQ\_PROD is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_1 block.

## Field descriptions

The SMMU\_PRIQ\_PROD bit assignments are:



## OVFLG, bit [31]

- This flag is toggled by the SMMU when a queue overflow is detected, in which case one or more requests have been lost.
- An overflow condition is present when this flag is different from SMMU\_PRIQ\_CONS.OVACKFLG. This
  flag is not updated until the overflow is acknowledged by setting SMMU\_PRIQ\_CONS.OVACKFLG equal
  to OVFLG.

The reset behavior of this field is:

• This field resets to 0b0.

### Bits [30:20]

Reserved, RESO.

## WR, bits [19:0]

Queue write index.

This field is treated as two sub-fields, depending on the configured queue size:

Bit [QS]: WR\_WRAP - Queue write index wrap flag.

Bits [QS-1:0]: WR - Queue write index.

• Next space to be written by SMMU.

The reset behavior of this field is:

#### Additional information

QS == SMMU\_PRIQ\_BASE.LOG2SIZE; see SMMU\_PRIQ\_CONS.

If QS < 19, bits [19:QS + 1] are RAZ. When incremented by the SMMU, the WR index is always wrapped to the current queue size given by QS.

If QS == 0 the queue has one entry: zero bits of WR index are present and WR\_WRAP is bit zero.

When SMMU\_PRIQ\_BASE.LOG2SIZE is increased within its valid range, the value of the bits of this register that were previously above the old wrap flag position are UNKNOWN and when it is decreased, the value of the bits from the wrap flag downward are the effective truncation of the value in the old field.

Arm recommends that software initializes the register to a valid value before transitioning SMMU\_CR0.PRIQEN from 0 to 1.

# Accessing SMMU\_PRIQ\_PROD

SMMU\_PRIQ\_PROD is Guarded by SMMU\_CR0.PRIQEN and must only be modified when PRIQEN == 0. See SMMU\_PRIQ\_BASE for detailed behavior.

SMMU\_PRIQ\_PROD can be accessed through the SMMUv3\_PAGE\_1 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_1 | 0x00C8 |

- When SMMU\_CR0.PRIQEN == 0 and SMMU\_CR0ACK.PRIQEN == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

# 6.3.93 SMMU\_PRIQ\_CONS

The SMMU\_PRIQ\_CONS characteristics are:

#### Purpose

PRI queue consumer read index.

#### Configuration

This register is present only when SMMU\_IDR0.PRI == 1. Otherwise, direct accesses to SMMU\_PRIQ\_CONS are RES0.

### **Attributes**

SMMU\_PRIQ\_CONS is a 32-bit register.

This register is part of the SMMUv3\_PAGE\_1 block.

## **Field descriptions**

The SMMU\_PRIQ\_CONS bit assignments are:



## OVACKFLG, bit [31]

Overflow acknowledge flag.

• Note: Software sets this flag to the value of SMMU\_PRIQ\_PROD.OVFLG when it is ready for the SMMU to report a new PRI queue overflow. Arm expects this to be done on initialization and after a previous PRI queue overflow has been handled by software.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

## Bits [30:20]

Reserved, RESO.

## RD, bits [19:0]

Queue read index.

This field is treated as two sub-fields, depending on the configured queue size:

Bit [QS]: RD\_WRAP - Queue read index wrap flag.

Bits [QS-1:0]: RD - Queue read index.

• Updated by the PE to point at the queue entry after the entry it has just consumed.

The reset behavior of this field is:

#### Additional information

QS == SMMU\_PRIQ\_BASE.LOG2SIZE and SMMU\_PRIQ\_BASE.LOG2SIZE <= SMMU\_IDR1.PRIQS <= 19. This gives a configurable-sized index pointer followed immediately by the wrap bit.

If QS < 19, bits [19:QS + 1] are RESO. If software writes a non-zero value to these bits, the value might be stored but has no other effect. In addition, if SMMU\_IDR1.PRIQS < 19, bits [19:PRIQS + 1] are UNKNOWN on read.

If QS == 0 the queue has one entry: zero bits of RD index are present and RD\_WRAP is bit zero.

When software increments RD, if the index would pass off the end of the queue it must be correctly wrapped to the queue size given by QS and RD\_WRAP toggled.

When SMMU\_PRIQ\_BASE.LOG2SIZE is increased within its valid range, the value of this register's bits that were previously above the old wrap flag position are UNKNOWN and when it is decreased, the value of the bits from the wrap flag downward are the effective truncation of the value in the old field.

Arm recommends that software initializes the register to a valid value before SMMU\_CR0.PRIQEN is transitioned from 0 to 1.

# **Accessing SMMU PRIQ CONS**

SMMU\_PRIQ\_CONS can be accessed through the SMMUv3\_PAGE\_1 block as follows:

| Frame         | Offset |
|---------------|--------|
| SMMUv3_PAGE_1 | 0x00CC |

Access on this interface is RW.

# 6.3.94 SMMU\_VATOS\_CTRL

The SMMU\_VATOS\_CTRL characteristics are:

#### **Purpose**

VATOS translation control register.

#### Configuration

This register is present only when SMMU\_IDR0.VATOS == 1. Otherwise, direct accesses to SMMU\_VATOS\_CTRL are RES0.

### Attributes

SMMU\_VATOS\_CTRL is a 32-bit register.

This register is part of the SMMUv3\_VATOS block.

# Field descriptions

The SMMU\_VATOS\_CTRL bit assignments are:



### Bits [31:1]

Reserved, RESO.

### **RUN, bit [0]**

Run ATOS translation.

- Software must write this bit to 1 to initiate the translation operation, after initializing the ATOS\_SID and ATOS\_ADDR registers.
- The SMMU clears the RUN flag after the translation completes and its result is visible in ATOS\_PAR.
- A write of 0 to this flag might change the value of the flag but has no other effect. Software must only write 0 to this flag when the flag is zero.

The reset behavior of this field is:

• This field resets to 0b0.

## Additional information

This register has a similar encoding and behavior to SMMU\_GATOS\_CTRL, except it applies to the Virtual ATOS interface. See Chapter 9 Address Translation Operations for details.

SMMU\_VATOS\_{CTRL, SID, ADDR, PAR} are only present if SMMU\_IDR0.VATOS == 1; otherwise, they are Reserved. See Chapter 9 *Address Translation Operations* for more information on the overall behavior of ATOS operations.

### Accessing SMMU VATOS CTRL

RUN is Guarded by SMMU\_CR0.SMMUEN and must only be set when SMMUEN == 1 and RUN == 0.

See SMMU GATOS CTRL for more detailed behavior.

SMMU\_VATOS\_CTRL can be accessed through the SMMUv3\_VATOS block as follows:

# 6.3. Register formats

| Frame        | Offset |
|--------------|--------|
| SMMUv3_VATOS | 0x0A00 |

- When SMMU\_VATOS\_CTRL.RUN == 1, access on this interface is **RO**.
- Otherwise, access on this interface is RW.

## 6.3.95 SMMU\_VATOS\_SID

The SMMU\_VATOS\_SID characteristics are:

#### **Purpose**

VATOS StreamID register.

#### Configuration

This register is present only when SMMU\_IDR0.VATOS == 1. Otherwise, direct accesses to SMMU\_VATOS\_SID are RES0.


### Attributes

SMMU\_VATOS\_SID is a 64-bit register.

This register is part of the SMMUv3\_VATOS block.

## Field descriptions

The SMMU\_VATOS\_SID bit assignments are:



This register has a similar encoding and behavior to SMMU\_GATOS\_SID, except it applies to the Virtual ATOS interface. See Chapter 9 Address Translation Operations for details.

### Bits [63:53]

Reserved, RESO.

## SSID\_VALID, bit [52]

## When SMMU\_IDR1.SSIDSIZE != 0:

SubstreamID valid.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# Otherwise:

RES0

### SUBSTREAMID, bits [51:32]

SubstreamID of request.

• If SMMU\_IDR1.SSIDSIZE < 20, bits [51:(32 + SMMU\_IDR1.SSIDSIZE)] are RESO.

The reset behavior of this field is:

## STREAMID, bits [31:0]

StreamID of request.

- This is written with the StreamID (used to locate translations/CDs) of the request later submitted to SMMU\_VATOS\_ADDR.
- If SMMU\_IDR1.SID\_SIZE < 32, bits [31:SMMU\_IDR1.SID\_SIZE] are RES0.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Additional information

• Bits of SubstreamID and StreamID outside of the supported range are RESO.

# Accessing SMMU\_VATOS\_SID

This register is Guarded by SMMU\_VATOS\_CTRL.RUN and must only be altered when RUN == 0.

See SMMU\_GATOS\_CTRL for more detailed behavior.

SMMU\_VATOS\_SID can be accessed through the SMMUv3\_VATOS block as follows:

| Frame        | Offset |
|--------------|--------|
| SMMUv3_VATOS | 0x0A08 |

- When SMMU\_VATOS\_CTRL.RUN == 1, access on this interface is **RO**.
- Otherwise, access on this interface is RW.

## 6.3.96 SMMU\_VATOS\_ADDR

The SMMU\_VATOS\_ADDR characteristics are:

#### **Purpose**

VATOS translation address register.

#### Configuration

This register is present only when SMMU\_IDR0.VATOS == 1. Otherwise, direct accesses to SMMU\_VATOS\_ADDR are RES0.


### **Attributes**

SMMU\_VATOS\_ADDR is a 64-bit register.

This register is part of the SMMUv3\_VATOS block.

# **Field descriptions**

The SMMU\_VATOS\_ADDR bit assignments are:



This register has a similar encoding and behavior to SMMU\_GATOS\_ADDR, except it applies to the Virtual ATOS interface.

# ADDR, bits [63:12]

Requested input address, bits [63:12].

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# TYPE, bits [11:10]

Request type.

| ТҮРЕ | Meaning              |
|------|----------------------|
| 0b00 | Reserved.            |
| 0b01 | Stage 1 (VA to IPA). |
| 0b10 | Reserved.            |
| 0b11 | Reserved.            |

• Use of a Reserved value results in an INV\_REQ ATOS error.

The reset behavior of this field is:

## PnU, bit [9]

Privileged or User access.

| PnU | Meaning       |
|-----|---------------|
| 0b0 | Unprivileged. |
| 0b1 | Privileged.   |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

## RnW, bit [8]

Read/Write access.

| RnW | Meaning |
|-----|---------|
| 0b0 | Write.  |
| 0b1 | Read.   |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# InD, bit [7]

Instruction/Data access.

| InD | Meaning      |
|-----|--------------|
| 0b0 | Data.        |
| 0b1 | Instruction. |

• This bit is IGNORED if RnW == 0, and the effective InD for writes is Data.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# HTTUI, bit [6]

Inhibit hardware update of the Access flag and dirty state.

| HTTUI | Meaning  |
|-------|--|
| 0b0   | Flag update (HTTU) might occur, where supported by the SMMU, according to HA:HD configuration fields at stage 1 and stage 2. |

| HTTUI | Meaning   |
|-------|---|
| 0b1   | <ul><li>HTTU is inhibited, regardless of HA/HD configuration.</li><li>The ATOS operation causes no state change and is passive.</li></ul> |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

## Bits [5:0]

Reserved, RESO.

### Additional information

The PnU and InD attributes are not affected by the STE.INSTCFG or STE.PRIVCFG overrides.

# Accessing SMMU\_VATOS\_ADDR

This register is Guarded by SMMU\_VATOS\_CTRL.RUN and must only be altered when RUN == 0.

See SMMU\_GATOS\_CTRL for more detailed behavior.

SMMU\_VATOS\_ADDR can be accessed through the SMMUv3\_VATOS block as follows:

| Frame        | Offset |
|--------------|--------|
| SMMUv3_VATOS | 0x0A10 |

- When SMMU\_VATOS\_CTRL.RUN == 1, access on this interface is **RO**.
- Otherwise, access on this interface is RW.

# 6.3.97 SMMU\_VATOS\_PAR

The SMMU\_VATOS\_PAR characteristics are:

#### **Purpose**

VATOS translation results register.

This register has a similar encoding and behavior to SMMU\_GATOS\_PAR, except it applies to the Virtual ATOS interface. See Chapter 9 Address Translation Operations for details.

This result register encodes both successful results and error results. The format is determined by the FAULT field.

## Configuration

This register is present only when SMMU\_IDR0.VATOS == 1. Otherwise, direct accesses to SMMU\_VATOS\_PAR are RES0.

#### Attributes


SMMU VATOS PAR is a 64-bit register.

This register is part of the SMMUv3\_VATOS block.

## Field descriptions

The SMMU\_VATOS\_PAR bit assignments are:

#### When SMMU\_VATOS\_PAR.FAULT == 0:



When FAULT == 0, a successful result is present:

# ATTR, bits [63:56]

Memory attributes, in MAIR format.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

### Bits [55:52]

Reserved, RESO.

#### ADDR, bits [51:12]

Result address, bits [51:12].

- Address bits above and below [51:12] are treated as zero.
- In SMMUv3.0, bits [51:48] are RES0.

The reset behavior of this field is:

## Size, bit [11]

Translation page/block size flag.

| Size | Meaning  |
|------|--|
| 0b0  | Translation is 4KB.  |
| 0b1  | Translation is determined by position of lowest 1 bit in ADDR field. |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# Bit [10]

Reserved, RESO.

# SH, bits [9:8]

Shareability attribute.

| SH   | Meaning          |
|------|------------------|
| 0b00 | Non-shareable.   |
| 0b01 | Reserved.        |
| 0b10 | Outer Shareable. |
| 0b11 | Inner Shareable. |

• Note: Shareability is returned as Outer Shareable when ATTR selects any Device type.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# Bits [7:1]

Reserved, RESO.


# FAULT, bit [0]

Fault/error status.

| FAULT | Meaning   |
|-------|-----------|
| 0b0   | No Fault. |

The reset behavior of this field is:

## When SMMU\_VATOS\_PAR.FAULT == 1:



When FAULT == 1, the translation has failed and a fault syndrome is present:

### IMPDEF, bits [63:60]

IMPLEMENTATION DEFINED fault data.

#### Bits [59:52]

Reserved, RESO.

#### FADDR, bits [51:12]

Fault page address, bits [51:12].

- The value returned in FADDR depends on the cause of the fault. See section 9.1.4 ATOS PAR for details.
- Note: Because the ATOS\_PAR.FADDR field returns a fault IPA only when an ATOS\_ADDR.TYPE == 0b10 request is made, and VATOS\_ADDR.TYPE must be 0b01, this field is always 0.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

## FAULTCODE, bits [11:4]

Fault/error code.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

## Bit [3]

Reserved, RESO.

## REASON, bits [2:1]

Class of activity causing fault.

• This indicates the stage and reason for the fault. The only value permitted in SMMU\_S\_VATOS\_PAR.REASON is 0b00. See section 9.1.4 *ATOS\_PAR* for details.

| DEACON | Maaning  |
|--------|--|
| REASON | Meaning  |
| 0000   | Stage 1 translation-related fault occurred, or miscellaneous non-translation fault not attributable to a translation stage (for example, F_BAD_STE). |
| 0b01   | Reserved.  |
| 0b10   | Reserved.  |

| REASON | Meaning   |
|--------|-----------|
| 0b11   | Reserved. |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

## FAULT, bit [0]

Fault/error status.

| FAULT | Meaning                     |
|-------|-----------------------------|
| 0b1   | Fault or translation error. |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# Accessing SMMU\_VATOS\_PAR

The content of ATOS\_PAR registers is UNKNOWN if values in the ATOS register group are modified after a translation has been initiated by setting ATOS\_CTRL.RUN == 1. See section 9.1.4 ATOS\_PAR.

This register has an UNKNOWN value if read when SMMU\_VATOS\_CTRL.RUN == 1.

SMMU\_VATOS\_PAR can be accessed through the SMMUv3\_VATOS block as follows:

| Frame        | Offset |
|--------------|--------|
| SMMUv3_VATOS | 0x0A18 |

Access on this interface is **RO**.

## 6.3.98 SMMU\_S\_VATOS\_CTRL

The SMMU\_S\_VATOS\_CTRL characteristics are:

#### **Purpose**

Provides Secure VATOS controls.

#### Configuration

This register is present only when SMMU\_IDR0.VATOS == 1 and SMMU\_S\_IDR1.SEL2 == 1. Otherwise, direct accesses to SMMU\_S\_VATOS\_CTRL are RES0.

### **Attributes**

SMMU\_S\_VATOS\_CTRL is a 32-bit register.

This register is part of the SMMUv3\_S\_VATOS block.

## Field descriptions

The SMMU\_S\_VATOS\_CTRL bit assignments are:



This register has a similar encoding and behavior to SMMU\_S\_GATOS\_CTRL, except it applies to the Secure Virtual ATOS interface. See Chapter 9 Address Translation Operations for details.

### Bits [31:1]

Reserved, RESO.

## RUN, bit [0]

Run ATOS translation.

The reset behavior of this field is:

• This field resets to 0b0.

#### Additional information

- Arm recommends that software writes this bit to 1 to initiate the translation operation, after initializing the ATOS\_SID and ATOS\_ADDR registers.
- The SMMU clears the RUN flag after the translation completes and its result is visible in ATOS\_PAR.
- A write of 0 to this flag might change the value of the flag but has no other effect. Software must only write 0 to this flag when the flag is zero.

# Accessing SMMU\_S\_VATOS\_CTRL

RUN is Guarded by  $SMMU_S_CR0.SMMUEN$  and must only be set when SMMUEN == 1 and RUN == 0.

See SMMU\_GATOS\_CTRL for more detailed behavior.

SMMU\_S\_VATOS\_CTRL can be accessed through the SMMUv3\_S\_VATOS block as follows:

## 6.3. Register formats

| Frame          | Offset |
|----------------|--------|
| SMMUv3_S_VATOS | 0x0A00 |

- When an access is not Secure, access on this interface is RAZ/WI.
- When SMMU\_S\_VATOS\_CTRL.RUN == 1, access on this interface is **RO**.
- When an access is Secure, access on this interface is RW.

## 6.3.99 SMMU\_S\_VATOS\_SID

The SMMU\_S\_VATOS\_SID characteristics are:

#### Purpose

Secure VATOS StreamID register.

#### Configuration

This register is present only when SMMU\_IDR0.VATOS == 1 and SMMU\_S\_IDR1.SEL2 == 1. Otherwise, direct accesses to SMMU\_S\_VATOS\_SID are RES0.


#### **Attributes**

SMMU\_S\_VATOS\_SID is a 64-bit register.

This register is part of the SMMUv3\_S\_VATOS block.

## Field descriptions

The SMMU\_S\_VATOS\_SID bit assignments are:



This register is encoded in a similar way to SMMU\_S\_GATOS\_SID, except it applies to the Secure Virtual ATOS interface. See Chapter 9 *Address Translation Operations* for details.

• Bit [53] is RES1 and the SMMU\_S\_VATOS\_SID.STREAMID field is taken as a Secure StreamID.

Note: The Secure VATOS interface does not support ATOS requests for Non-secure StreamIDs because SMMU\_S\_VATOS\_SEL checks that an STE.S2VMID field matches the secure VMID in SMMU\_S\_VATOS\_SEL.

### Bits [63:54]

Reserved, RESO.

## Bit [53]

Reserved, RES1.

# SSID\_VALID, bit [52]

# When SMMU\_IDR1.SSIDSIZE != 0:

SubstreamID valid.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Otherwise:

RES0

# SUBSTREAMID, bits [51:32]

SubstreamID of request.

• If SMMU\_IDR1.SSIDSIZE < 20, bits [51:32 + SMMU\_IDR1.SSIDSIZE] are RESO.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

### STREAMID, bits [31:0]

Secure StreamID of request.

- This is written with the StreamID (used to locate translations/CDs) of the request later submitted to SMMU\_S\_VATOS\_ADDR.
- If SMMU\_IDR1.SID\_SIZE < 32 and SMMU\_S\_IDR1.S\_SIDSIZE < 32, bits [31:MAX(SMMU\_IDR1.SIDSIZE, SMMU\_S\_IDR1.S\_SIDSIZE)] are RES0.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Additional information

Bits of SUBSTREAMID and STREAMID outside of the supported range are RESO.

# Accessing SMMU\_S\_VATOS\_SID

This register is Guarded by SMMU\_S\_VATOS\_CTRL.RUN and must only be altered when RUN == 0.

See SMMU\_GATOS\_CTRL for more detailed behavior.

SMMU\_S\_VATOS\_SID can be accessed through the SMMUv3\_S\_VATOS block as follows:

| Frame          | Offset |
|----------------|--------|
| SMMUv3_S_VATOS | 0x0A08 |

- When an access is not Secure, access on this interface is RAZ/WI.
- When SMMU\_S\_VATOS\_CTRL.RUN == 1, access on this interface is **RO**.
- When an access is Secure, access on this interface is RW.

## 6.3.100 SMMU\_S\_VATOS\_ADDR

The SMMU\_S\_VATOS\_ADDR characteristics are:

#### Purpose

Secure virtual ATOS translation address register

#### Configuration

This register is present only when SMMU\_IDR0.VATOS == 1 and SMMU\_S\_IDR1.SEL2 == 1. Otherwise, direct accesses to SMMU\_S\_VATOS\_ADDR are RES0.


#### **Attributes**

SMMU\_S\_VATOS\_ADDR is a 64-bit register.

This register is part of the SMMUv3\_S\_VATOS block.

## **Field descriptions**

The SMMU\_S\_VATOS\_ADDR bit assignments are:



This register is encoded in a similar way to SMMU\_S\_GATOS\_ADDR, except it applies to the Secure Virtual ATOS interface. See Chapter 9 *Address Translation Operations* for details.

- Field [4] of SMMU\_S\_VATOS\_ADDR is RES0.
- Note: As Secure VATOS translations are for stage 1 only, there is no need to supply an input NS attribute value. Input NS attributes are not considered when stage 1 is configured for translation. If stage 1 is configured for bypass, the output NS attribute, SMMU\_S\_VATOS\_PAR.NS, is IMPLEMENTATION DEFINED. See Section 9.1.3 ATOS\_ADDR.

#### ADDR, bits [63:12]

Requested input address, bits [51:12].

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### TYPE, bits [11:10]

Request type.

| ТҮРЕ | Meaning              |
|------|----------------------|
| 0b00 | Reserved.            |
| 0b01 | Stage 1 (VA to IPA). |
| 0b10 | Reserved.            |
| 0b11 | Reserved.            |

#### 6.3. Register formats

• Use of a Reserved value results in an INV\_REQ ATOS error.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

## PnU, bit [9]

Privileged or User access.

| PnU | Meaning       |
|-----|---------------|
| 0b0 | Unprivileged. |
| 0b1 | Privileged.   |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

## RnW, bit [8]

Read/write access.

| RnW | Meaning |
|-----|---------|
| 0b0 | Write.  |
| 0b1 | Read.   |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# InD, bit [7]

Instruction/data access.

| InD | Meaning      |
|-----|--------------|
| 0b0 | Data.        |
| 0b1 | Instruction. |

• This bit is IGNORED if RnW == 0, and the effective InD for writes is Data.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# HTTUI, bit [6]

Inhibit hardware update of the Access flag and dirty state.

| HTTUI | Meaning  |
|-------|--|
| 0b0   | Flag update (HTTU) might occur, where supported by the SMMU, according to HA and HD configuration fields at stage 1 and stage 2. |
| 0b1   | HTTU is inhibited, regardless of HA and HD configuration.  |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

### Bits [5:0]

Reserved, RESO.

# Accessing SMMU\_S\_VATOS\_ADDR

This register is Guarded by SMMU\_S\_VATOS\_CTRL.RUN and must only be altered when RUN == 0. See SMMU\_GATOS\_CTRL for more detailed behavior.

SMMU\_S\_VATOS\_ADDR can be accessed through the SMMUv3\_S\_VATOS block as follows:

| Frame          | Offset |
|----------------|--------|
| SMMUv3_S_VATOS | 0x0A10 |

- When an access is not Secure, access on this interface is RAZ/WI.
- When SMMU\_S\_VATOS\_CTRL.RUN == 1, access on this interface is **RO**.
- When an access is Secure, access on this interface is **RW**.

## 6.3.101 SMMU\_S\_VATOS\_PAR

The SMMU\_S\_VATOS\_PAR characteristics are:

### **Purpose**

Secure VATOS translation operation results register.

This result register encodes both successful results and error results. The format is determined by the FAULT field.

Unless otherwise specified, the fields of SMMU\_S\_VATOS\_PAR behave in an equivalent manner to the fields of SMMU\_VATOS\_PAR.

### Configuration

This register is present only when SMMU\_IDR0.VATOS == 1 and SMMU\_S\_IDR1.SEL2 == 1. Otherwise, direct accesses to SMMU\_S\_VATOS\_PAR are RES0.

#### Attributes


SMMU S VATOS PAR is a 64-bit register.

This register is part of the SMMUv3\_S\_VATOS block.

## Field descriptions

The SMMU\_S\_VATOS\_PAR bit assignments are:

When SMMU\_S\_VATOS\_PAR.FAULT == 0:



When FAULT == 0, a successful result is present:

This register has a similar encoding and behavior to SMMU\_VATOS\_PAR, except it applies to the Secure Virtual ATOS interface.

- Note: Because the ATOS\_PAR.FADDR field returns a fault IPA only when an ATOS\_ADDR.TYPE == 0b10 request is made, and VATOS\_ADDR.TYPE must be 0b01, the SMMU\_S\_VATOS\_PAR.FADDR and SMMU\_S\_VATOS\_PAR.NSIPA fields are always 0.
- See Chapter 9 Address Translation Operations for details.

This result register encodes both successful results and error results. The format is determined by the FAULT field.

## ATTR, bits [63:56]

Memory attributes, in MAIR format.

The reset behavior of this field is:

### Bits [55:52]

Reserved, RESO.

### ADDR, bits [51:12]

Result address, bits [51:12].

• Address bits above and below [51:12] are treated as zero.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

### Size, bit [11]

Translation page/block size flag.

The Size field allows the size of the translation to be determined, using an encoding in the ADDR field. The Size flag indicates that:

| Size | Meaning  |
|------|--|
| 0b0  | Translation is 4KB.  |
| 0b1  | Translation is determined by position of lowest 1 bit in ADDR field. |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# NS, bit [10]

Final NS attribute. - Note: This bit is RESO in SMMU\_GATOS\_PAR and SMMU\_VATOS\_PAR.

### SH, bits [9:8]

Shareability attribute.

| SH   | Meaning          |
|------|------------------|
| 0000 | Non-shareable.   |
| 0b01 | Reserved.        |
| 0b10 | Outer Shareable. |
| 0b11 | Inner Shareable. |

• Note: Shareability is returned as Outer Shareable when ATTR selects any Device type.

The reset behavior of this field is:

### Bits [7:1]

Reserved, RESO.

### FAULT, bit [0]


Fault/error status.

| FAULT | Meaning   |
|-------|-----------|
| 0b0   | No fault. |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

### When SMMU\_S\_VATOS\_PAR.FAULT == 1:



When FAULT == 1, the translation has failed and a fault syndrome is present:

## IMPDEF, bits [63:60]

IMPLEMENTATION DEFINED fault data.

### Bits [59:52]

Reserved, RESO.

# FADDR, bits [51:12]

Fault page address, bits [51:12].

• Note: Because the ATOS\_PAR.FADDR field returns a fault IPA only when an ATOS\_ADDR.TYPE == 0b10 request is made, and VATOS\_ADDR.TYPE must be 0b01, this field is always 0.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

## FAULTCODE, bits [11:4]

Fault/error code.

• See section 9.1.4 ATOS\_PAR for details.

The reset behavior of this field is:

## NSIPA, bit [3]

Fault IPA NS attribute.

• Note: Because the ATOS\_PAR.FADDR field returns a fault IPA only when an ATOS\_ADDR.TYPE == 0b10 request is made, and VATOS\_ADDR.TYPE must be 0b01, this field is always 0. See section 9.1.4 ATOS\_PAR for details.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

### REASON, bits [2:1]

Class of activity causing fault.

• This indicates the stage and reason for the fault. The only value permitted in SMMU\_S\_VATOS\_PAR.REASON is 0b00. See section 9.1.4 *ATOS\_PAR* for details.

| REASON | Meaning  |
|--------|--|
| 0000   | Stage 1 translation-related fault occurred, or miscellaneous non-translation fault not attributable to a translation stage (for example, F_BAD_STE). |
| 0b01   | Reserved.  |
| 0b10   | Reserved.  |
| 0b11   | Reserved.  |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# FAULT, bit [0]

Fault/error status.

| FAULT | Meaning                     |
|-------|-----------------------------|
| 0b1   | Fault or translation error. |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# Accessing SMMU\_S\_VATOS\_PAR

The content of ATOS\_PAR registers is UNKNOWN if values in the ATOS register group are modified after a translation has been initiated by setting ATOS\_CTRL.RUN == 1. See section 9.1.4 ATOS\_PAR.

This register has an UNKNOWN value if read when SMMU\_S\_VATOS\_CTRL.RUN == 1.

SMMU\_S\_VATOS\_PAR can be accessed through the SMMUv3\_S\_VATOS block as follows:

# 6.3. Register formats

| Frame          | Offset |
|----------------|--------|
| SMMUv3_S_VATOS | 0x0A18 |

- When an access is not Secure, access on this interface is RAZ/WI.
- When an access is Secure, access on this interface is **RO**.

# 6.3.102 SMMU\_ECMDQ\_BASE<n>, n = 0 - 255

The SMMU\_ECMDQ\_BASE<n> characteristics are:

### **Purpose**

Configuration of the Command queue base address.


## **Attributes**

SMMU\_ECMDQ\_BASE<n> is a 64-bit register.

This register is part of the SMMUv3\_CMDQCP block.

# **Field descriptions**

The SMMU\_ECMDQ\_BASE<n> bit assignments are:



## Bit [63]

Reserved, RESO.

### RA, bit [62]

Read-Allocate hint.

| RA  | Meaning           |
|-----|-------------------|
| 0b0 | No Read-Allocate. |
| 0b1 | Read-Allocate.    |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# Bits [61:52]

Reserved, RESO.

## ADDR, bits [51:5]

PA of Command queue base, bits [51:5].

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

### LOG2SIZE, bits [4:0]

Queue size as  $log_2(entries)$ .

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Additional information

The fields in this register all have equivalent meaning to the corresponding fields in SMMU\_CMDQ\_BASE.

LOG2SIZE must be less than or equal to SMMU\_IDR1.CMDQS, with the same constraints as SMMU\_CMDQ\_BASE.LOG2SIZE.

See section 3.5.6 Enhanced Command queue interfaces.

# Accessing SMMU\_ECMDQ\_BASE<n>

There are many copies of the SMMU\_ECMDQ\_\* registers.

The offset presented here is relative to each group of ECMDQ registers.

For the definition of how the groups are organised in memory, see section 6.2.5 *Registers in a Command queue control page*.

SMMU\_ECMDQ\_BASE<n> can be accessed through the SMMUv3\_CMDQCP block as follows:

| Frame         | Offset             |
|---------------|--------------------|
| SMMUv3_CMDQCP | 0x00 + (0x100 * n) |

- When SMMU\_ECMDQ\_PROD.EN == 0 and SMMU\_ECMDQ\_CONS.ENACK == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

# 6.3.103 SMMU\_ECMDQ\_PROD<n>, n = 0 - 255

The SMMU\_ECMDQ\_PROD<n> characteristics are:

#### **Purpose**

Allows Command queue producer to update the write index.

#### **Attributes**

SMMU\_ECMDQ\_PROD<n> is a 32-bit register.

This register is part of the SMMUv3\_CMDQCP block.

## **Field descriptions**

The SMMU\_ECMDQ\_PROD<n> bit assignments are:



### EN, bit [31]

Queue enable.

The reset behavior of this field is:

• This field resets to 0b0.

### Bits [30:24]

Reserved, RESO.

## ERRACK, bit [23]

Error status acknowledge.

The reset behavior of this field is:

• This field resets to 0b0.

#### Bits [22:20]

Reserved, RESO.

## WR, bits [19:0]

Command queue write index.

This field is treated as WR and WR\_WRAP sub-fields, with equivalent meaning to the corresponding fields in SMMU\_CMDQ\_PROD.

QS is derived from SMMU\_ECMDQ\_BASEn.LOG2SIZE with the same constraints as for other queues.

The reset behavior of this field is:

#### Additional information

See sections 3.5.6.2 Enabling and disabling an ECMDQ interface and 3.5.6.3 Errors relating to an ECMDQ interface.

# Accessing SMMU\_ECMDQ\_PROD<n>

There are many copies of the SMMU\_ECMDQ\_\* registers.

The offset presented here is relative to each group of ECMDQ registers.

For the definition of how the groups are organised in memory, see section 6.2.5 *Registers in a Command queue control page*.

SMMU\_ECMDQ\_PROD<n> can be accessed through the SMMUv3\_CMDQCP block as follows:

| Frame         | Offset             |
|---------------|--------------------|
| SMMUv3_CMDQCP | 0x08 + (0x100 * n) |

- When SMMU\_ECMDQ\_PROD.EN == 0 and SMMU\_ECMDQ\_CONS.ENACK == 0, access on this
  interface is RW.
- When SMMU\_ECMDQ\_PROD.EN == 1 and SMMU\_ECMDQ\_CONS.ENACK == 1, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

# 6.3.104 SMMU\_ECMDQ\_CONS< n >, n = 0 - 255

The SMMU\_ECMDQ\_CONS<n> characteristics are:

### **Purpose**

Command queue consumer read index.

#### **Attributes**

SMMU\_ECMDQ\_CONS<n> is a 32-bit register.

This register is part of the SMMUv3\_CMDQCP block.

# **Field descriptions**

The SMMU\_ECMDQ\_CONS<n> bit assignments are:



## ENACK, bit [31]

Queue enable acknowledge.

The reset behavior of this field is:

• This field resets to 0b0.

# Bits [30:27]

Reserved, RESO.

### ERR\_REASON, bits [26:24]

Error reason code

| ERR_REASON | Meaning   |
|------------|---|
| 0b000      | CERROR_NONE - No error.   |
| 0b001      | CERROR_ILL - Command illegal and cannot be correctly consumed.  |
| 0b010      | CERROR_ABT - Abort on command fetch.  |
| 0b011      | CERROR_ATC_INV_SYNC - A CMD_SYNC failed to successfully complete one or more previous CMD_ATC_INV commands. |

ERR\_REASON is UNKNOWN if an error is not active.

The CERROR\_NONE encoding is defined for completeness only, and is not provided by the SMMU in any error case.

The reset behavior of this field is:

#### ERR, bit [23]

Error status

The reset behavior of this field is:

• This field resets to 0b0.

## Bits [22:20]

Reserved, RESO.

### RD, bits [19:0]

Command queue read index.

This field is treated as RD and RD\_WRAP sub-fields, with equivalent meaning to the corresponding fields in SMMU\_CMDQ\_CONS.

QS is derived from SMMU\_ECMDQ\_BASEn.LOG2SIZE with the same constraints as for other queues.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Additional information

See sections 3.5.6.2 Enabling and disabling an ECMDQ interface and 3.5.6.3 Errors relating to an ECMDQ interface.

# Accessing SMMU\_ECMDQ\_CONS<n>

There are many copies of the SMMU\_ECMDQ\_\* registers.

The offset presented here is relative to each group of ECMDQ registers.

For the definition of how the groups are organised in memory, see section 6.2.5 *Registers in a Command queue control page*.

SMMU\_ECMDQ\_CONS<n> can be accessed through the SMMUv3\_CMDQCP block as follows:

| Frame         | Offset             |
|---------------|--------------------|
| SMMUv3_CMDQCP | 0x0C + (0x100 * n) |

- When SMMU\_ECMDQ\_PROD.EN == 0 and SMMU\_ECMDQ\_CONS.ENACK == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

# 6.3.105 SMMU\_ROOT\_IDR0

The SMMU\_ROOT\_IDR0 characteristics are:

#### Purpose

Feature identification register

#### Configuration

This register is present only when SMMU\_RME\_ROOT\_IMPL is implemented. Otherwise, direct accesses to SMMU\_ROOT\_IDR0 are RES0.


### **Attributes**

SMMU\_ROOT\_IDR0 is a 32-bit register.

This register is part of the SMMUv3\_ROOT block.

# **Field descriptions**

The SMMU\_ROOT\_IDR0 bit assignments are:



### Bits [31:3]

Reserved, RESO.

## RGPTM, bit [2]

Register TLBI by PA support.

| RGPTM | Meaning   |
|-------|---|
| 0b0   | SMMU_ROOT_TLBI and SMMU_ROOT_TLBI_CTRL are not present. |
| 0b1   | SMMU_ROOT_TLBI and SMMU_ROOT_TLBI_CTRL are present.     |

If BGPTM == 0, then RGPTM == 1.

See also:

- SMMU ROOT TLBI.
- SMMU\_ROOT\_TLBI\_CTRL.

### BGPTM, bit [1]

Broadcast TLBI by PA support.

| BGPTM | Meaning   |
|-------|---|
| 0b0   | This SMMU does not participate in broadcast TLBI *PA* operations. |

| BGPTM | Meaning  |
|-------|--|
| 0b1   | This SMMU does participate in broadcast TLBI $\star PA\star$ operations. |

This field indicates both that:

- The SMMU supports receipt of broadcast TLBI \*PA\* operations issued by PEs.
- The SMMU is integrated in the memory system such that TLBI \*PA\* operations issued to the Outer Shareable shareability domain by PEs correctly reach the SMMU.

The value of this field is independent of the value of SMMU\_IDR0.BTM, SMMU\_CR2.PTM, and SMMU\_S\_CR2.PTM.

See also:

• 3.17.7 Broadcast TLB maintenance for GPT information.

## ROOT\_IMPL, bit [0]

Presence of Root registers.

Reads as 0b1

Access to this field is RO.

# Accessing SMMU\_ROOT\_IDR0

SMMU\_ROOT\_IDR0 can be accessed through the SMMUv3\_ROOT block as follows:

| Frame       | Offset |
|-------------|--------|
| SMMUv3_ROOT | 0x0000 |

Access on this interface is RO.

# 6.3.106 SMMU\_ROOT\_IIDR

The SMMU\_ROOT\_IIDR characteristics are:

#### Purpose

Implementation identification register.

#### Configuration

This register is present only when SMMU\_RME\_ROOT\_IMPL is implemented. Otherwise, direct accesses to SMMU\_ROOT\_IIDR are RESO.

### Attributes

SMMU\_ROOT\_IIDR is a 32-bit register.

This register is part of the SMMUv3\_ROOT block.

# **Field descriptions**

The SMMU\_ROOT\_IIDR bit assignments are:

| L | 31        | 20 <sub>1</sub> | 19 16   | l 15 1   | L2 <sub>1</sub> | 11 0        |
|---|-----------|-----------------|---------|----------|-----------------|-------------|
|   | ProductID |                 | Variant | Revision | ı               | Implementer |

## ProductID, bits [31:20]

IMPLEMENTATION DEFINED value identifying the SMMU part.

## Variant, bits [19:16]

IMPLEMENTATION DEFINED value used to distinguish product variants, or major revisions of the product.

#### Revision, bits [15:12]

IMPLEMENTATION DEFINED value used to distinguish minor revisions of the product.

### Implementer, bits [11:0]

Contains the JEP106 code of the company that implemented the SMMU.

- SMMU\_ROOT\_IIDR[11:8] The JEP106 continuation code of the implementer.
- SMMU\_ROOT\_IIDR[7] Always 0.
- SMMU\_ROOT\_IIDR[6:0] The JEP106 identity code of the implementer.

For an Arm implementation, bits[11:0] are 0x43B.

# Accessing SMMU\_ROOT\_IIDR

SMMU\_ROOT\_IIDR can be accessed through the SMMUv3\_ROOT block as follows:

| Frame       | Offset |
|-------------|--------|
| SMMUv3_ROOT | 0x0008 |

Access on this interface is RO.

# 6.3.107 SMMU\_ROOT\_CR0

The SMMU\_ROOT\_CR0 characteristics are:

#### **Purpose**

Root Control Register

#### Configuration

This register is present only when SMMU\_RME\_ROOT\_IMPL is implemented. Otherwise, direct accesses to SMMU\_ROOT\_CR0 are RES0.

#### **Attributes**

SMMU\_ROOT\_CR0 is a 32-bit register.

This register is part of the SMMUv3\_ROOT block.

# Field descriptions

The SMMU\_ROOT\_CR0 bit assignments are:



#### Bits [31:2]

Reserved, RESO.

#### GPCEN, bit [1]

Enable Granule Protection Checks.

| GPCEN | Meaning  |
|-------|--|
| 0b0   | All accesses bypass granule protection checks.   |
| 0b1   | All client and SMMU-originated accesses, except for GPT walks, are subject to granule protection checks. |

When this bit is changed, the SMMU updates SMMU\_ROOT\_CR0ACK.GPCEN to match, once the following observability requirements are satisfied. This is referred to as completion of an Update.

Completion of an Update of GPCEN from 0 to 1 guarantees that:

- All future client-originated and SMMU-originated transactions are subject to granule protection checks.
- · All previous transactions that were issued without a granule protection check have completed.

Completion of an Update of GPCEN from 1 to 0 guarantees that:

- All future client-originated and SMMU-originated transactions will bypass granule protection checks.
- All prior faults to be reported in SMMU\_ROOT\_GPF\_FAR and SMMU\_ROOT\_GPT\_CFG\_FAR have been reported.
- The SMMU has completed all outstanding fetches of GPT information.

Note: Completion of an Update of GPCEN from 1 to 0 does not guarantee that outstanding accesses using the previous GPT configuration have completed. However, completion of a TLBI by PA with scope PAALL after the completion of the Update of GPCEN does guarantee this, including for Non-secure accesses made to Locations above the range configured in SMMU\_ROOT\_GPT\_BASE.PPS.

E.a

The reset behavior of this field is:

• This field resets to 0b0.

Accessing this field has the following behavior:

- Access is **RO** if any of the following are true:
  - SMMU\_ROOT\_CR0.ACCESSEN != SMMU\_ROOT\_CR0ACK.ACCESSEN
  - SMMU\_ROOT\_CR0.GPCEN != SMMU\_ROOT\_CR0ACK.GPCEN
- Otherwise, access to this field is **RW**

#### ACCESSEN, bit [0]

Enable accesses from the SMMU and client devices.

| ACCESSEN | Meaning   |
|----------|---|
| 0b0      | SMMU-originated accesses and client-originated accesses do not become observable.             |
| 0b1      | SMMU-originated accesses and client-originated accesses are not terminated by this mechanism. |

This bit has higher priority than GPCEN.

When this bit is changed, the SMMU updates SMMU\_ROOT\_CR0ACK.ACCESSEN to match, once the observability requirements below are satisfied. This is referred to as completion of an Update.

Completion of an Update of ACCESSEN from 0 to 1 guarantees that:

- Previous accesses that were to be terminated by this mechanism have been marked to be terminated.
- Future client-originated and SMMU-originated accesses might succeed, according to other architectural checks.

Completion of an Update of ACCESSEN from 1 to 0 guarantees that:

- Previous client-originated accesses not terminated by this mechanism are observable to their Shareability domain
- Previous SMMU-originated accesses, including GPT fetches, have completed.
- The SMMU will not issue GPT fetches.
- Future SMMU-originated accesses will be terminated as though experiencing a GPF as-reported in SMMU ROOT GPF FAR.
- Future client-originated accesses will be processed in a manner consistent with any access to a physical address experiencing a GPF. This includes:
  - An access is terminated with an external abort as a result of a configuration structure or translation table access experiencing a GPF.
  - An access is terminated with an external abort as a result of a GPF on the output address of that access.
  - If cached configuration information and information cached in TLBs would permit the access to be stalled, it is stalled.
  - If cached configuration information and information cached in TLBs would permit the access to be completed as RAZ/WI, it is completed as RAZ/WI.

Note: For an SMMU that supports stall model, advertised in SMMU\_(S\_)IDR0.STALL\_MODEL, there may be outstanding transactions affected by stall configuration if ACCESSEN is programmed to 0 while SMMU\_(S\_)CR0.SMMUEN == 1. Configuration of SMMU\_(S\_)CR0.SMMUEN to 0 guarantees termination of stalled transactions.

The reset behavior of this field is:

• This field resets to 0b0.

Accessing this field has the following behavior:

- Access is **RO** if any of the following are true:
  - SMMU\_ROOT\_CR0.ACCESSEN != SMMU\_ROOT\_CR0ACK.ACCESSENSMMU\_ROOT\_CR0.GPCEN != SMMU\_ROOT\_CR0ACK.GPCEN
- Otherwise, access to this field is **RW**

# Accessing SMMU\_ROOT\_CR0

SMMU\_ROOT\_CR0 can be accessed through the SMMUv3\_ROOT block as follows:

| Frame       | Offset |
|-------------|--------|
| SMMUv3_ROOT | 0x0020 |

Access on this interface is **RW**.

# 6.3.108 SMMU\_ROOT\_CR0ACK

The SMMU\_ROOT\_CR0ACK characteristics are:

#### Purpose

Provides acknowledgment of changes to configuration in SMMU\_ROOT\_CR0.

#### Configuration

This register is present only when SMMU\_RME\_ROOT\_IMPL is implemented. Otherwise, direct accesses to SMMU\_ROOT\_CR0ACK are RES0.

#### **Attributes**

SMMU\_ROOT\_CR0ACK is a 32-bit register.

This register is part of the SMMUv3\_ROOT block.

# **Field descriptions**

The SMMU\_ROOT\_CR0ACK bit assignments are:



#### Bits [31:2]

Reserved, RESO.

#### GPCEN, bit [1]

Acknowledgment that granule protection checks are enabled.

See: SMMU\_ROOT\_CR0.GPCEN.

The reset behavior of this field is:

• This field resets to 0b0.

#### ACCESSEN, bit [0]

Acknowledgment that SMMU-originated and client-originated accesses are enabled.

See: SMMU\_ROOT\_CR0.ACCESSEN.

The reset behavior of this field is:

• This field resets to 0b0.

# Accessing SMMU\_ROOT\_CR0ACK

 $SMMU\_ROOT\_CR0ACK\ can\ be\ accessed\ through\ the\ {\color{red}SMMUv3\_ROOT\ block\ as\ follows:}$ 

| Frame       | Offset |
|-------------|--------|
| SMMUv3_ROOT | 0x0024 |

Access on this interface is RO.

# 6.3.109 SMMU\_ROOT\_GPT\_BASE

The SMMU\_ROOT\_GPT\_BASE characteristics are:

#### **Purpose**

Control register for Granule Protection Table base address.

This register is analogous to GPTBR\_EL3.

#### Configuration

This register is present only when SMMU\_RME\_ROOT\_IMPL is implemented. Otherwise, direct accesses to SMMU\_ROOT\_GPT\_BASE are RES0.

#### **Attributes**

SMMU\_ROOT\_GPT\_BASE is a 64-bit register.

This register is part of the SMMUv3\_ROOT block.

#### Field descriptions

The SMMU\_ROOT\_GPT\_BASE bit assignments are:



#### Bits [63:52]

Reserved, RESO.

#### ADDR, bits [51:12]

Base address of the LOGPT, bits [51:12].

The SMMU always treats this address as being in the Root physical address space.

This field represents bits [51:12] of the level 0 GPT base address.

Bits that are taken to be zero are RESO and the SMMU treats them as zero when computing addresses for lookups.

Bits above the implemented output address size, advertised in SMMU\_IDR5.OAS, are RES0.

The level 0 GPT is aligned in memory to the greater of:

- The size of the level 0 GPT in bytes.
- 4KB.

Bits [x:0] of the base address are taken to be zero, where:

- x = Max(pps 10gptsz + 2, 11)
- pps is derived from SMMU\_ROOT\_GPT\_BASE\_CFG.PPS as follows:

| PPS   | pps |
|-------|-----|
| 0ь000 | 32  |
| 0b001 | 36  |
| 0b010 | 40  |
|       |     |

| PPS   | pps |
|-------|-----|
| 0b011 | 42  |
| 0b100 | 44  |
| 0b101 | 48  |
| 0b110 | 52  |

• 10gptsz is derived from SMMU\_ROOT\_GPT\_BASE\_CFG.L0GPTSZ as follows:

| L0GPTSZ | 10gptsz |
|---------|---------|
| 0ь0000  | 30      |
| 0b0100  | 34      |
| 0b0110  | 36      |
| 0b1001  | 39      |

If x is greater than 11, then BADDR[x - 12:0] are RESO.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

### Bits [11:0]

Reserved, RESO.

# Accessing SMMU\_ROOT\_GPT\_BASE

This register is writeable even when granule protection checks are enabled. After a write of this register, the SMMU is not required to use the new base address value until completion of a subsequent TLBI by PA ALL operation.

Completion of such a TLBI by PA ALL operation also guarantees that the SMMU has completed all outstanding GPT walks that used the old configuration.

SMMU\_ROOT\_GPT\_BASE can be accessed through the SMMUv3\_ROOT block as follows:

| Frame       | Offset |
|-------------|--------|
| SMMUv3_ROOT | 0x0028 |

Access on this interface is RW.

# 6.3.110 SMMU\_ROOT\_GPT\_BASE\_CFG

The SMMU\_ROOT\_GPT\_BASE\_CFG characteristics are:

#### **Purpose**

Control register for Granule Protection Checks.

The fields in SMMU\_ROOT\_GPT\_BASE\_CFG are the same as for GPCCR\_EL3, except there is no copy of GPCCR\_EL3.GPC. See SMMU\_ROOT\_CR0.GPCEN.

Configuration of reserved or invalid values leads to a GPT lookup error, reported as Invalid configuration of GPT configuration registers.

See also:

• 3.24.4 Reporting of GPC faults.

#### Configuration

This register is present only when SMMU\_RME\_ROOT\_IMPL is implemented. Otherwise, direct accesses to SMMU\_ROOT\_GPT\_BASE\_CFG are RESO.


#### **Attributes**

SMMU\_ROOT\_GPT\_BASE\_CFG is a 64-bit register.

This register is part of the SMMUv3\_ROOT block.

# **Field descriptions**

The SMMU\_ROOT\_GPT\_BASE\_CFG bit assignments are:



#### Bits [63:24]

Reserved, RESO.

### L0GPTSZ, bits [23:20]

Level 0 GPT entry size.

This field advertises the number of least significant address bits protected by each entry in the level 0 GPT.

| L0GPTSZ | Meaning  |
|---------|--|
| 0b0000  | 30-bits. Each entry covers 1GB of address space.   |
| 0b0100  | 34-bits. Each entry covers 16GB of address space.  |
| 0b0110  | 36-bits. Each entry covers 64GB of address space.  |
| 0b1001  | 39-bits. Each entry covers 512GB of address space. |

# Chapter 6. Memory map and registers 6.3. Register formats

Access to this field is **RO**.

Bits [19:18]

Reserved, RESO.

**GPCP**, bit [17]

Granule Protection Check Priority.

| GPCP | Meaning   |
|------|---|
| 0b0  | All GPC faults are reported with a priority consistent with the GPC being performed on any access to physical address space.  |
| 0b1  | A GPC fault for the fetch of a Table descriptor for a stage 2 translation table walk might not be generated or reported. All other GPC faults are reported with a priority consistent with the GPC being performed on any access to physical address space. |

This field is permitted to be cached in a TLB.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# Bit [16]

Reserved, RESO.

# PGS, bits [15:14]

Physical Granule size.

| PGS  | Meaning   |
|------|---|
| 0b00 | 4KB. Invalid if SMMU_IDR5.GRAN4K $== 0$ .       |
| 0b01 | $64KB$ . Invalid if SMMU_IDR5.GRAN $64K == 0$ . |
| 0b10 | 16KB. Invalid if $SMMU_IDR5.GRAN16K == 0$ .     |
| 0b11 | Reserved.                                       |

The value of this field is permitted to be cached in a TLB.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# SH, bits [13:12]

GPT fetch Shareability attribute

| SH   | Meaning          |
|------|------------------|
| 0b00 | Non-shareable.   |
| 0b01 | Reserved.        |
| 0b10 | Outer Shareable. |
| 0b11 | Inner Shareable. |

Fetches to the GPT are made to the shareability domain configured in this field.

If both ORGN and IRGN are configured with Non-cacheable attributes, it is invalid to configure this field to values other than Outer Shareable.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### ORGN, bits [11:10]

GPT fetch Outer cacheability attribute.

| ORGN | Meaning   |
|------|---|
| 0b00 | Normal memory, Outer Non-cacheable.   |
| 0b01 | Normal memory, Outer Write-Back Read-Allocate Write-Allocate Cacheable.       |
| 0b10 | Normal memory, Outer Write-Through Read-Allocate No Write-Allocate Cacheable. |
| 0b11 | Normal memory, Outer Write-Back Read-Allocate No Write-Allocate Cacheable.    |

Fetches of GPT information are made with the Outer cacheability attributes configured in this field.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### IRGN, bits [9:8]

GPT fetch Inner cacheability attribute.

| IRGN | Meaning   |
|------|---|
| 0b00 | Normal memory, Inner Non-cacheable.   |
| 0b01 | Normal memory, Inner Write-Back Read-Allocate Write-Allocate Cacheable.       |
| 0b10 | Normal memory, Inner Write-Through Read-Allocate No Write-Allocate Cacheable. |
| 0b11 | Normal memory, Inner Write-Back Read-Allocate No Write-Allocate Cacheable.    |

#### 6.3. Register formats

Fetches of GPT information are made with the Inner cacheability attributes configured in this field.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# Bits [7:3]

Reserved, RESO.

#### PPS, bits [2:0]

Protected physical address size.

The bit width of the memory region protected by the GPT.

| PPS   | Meaning                                 |
|-------|---|
| 0b000 | 32 bits, 4GB protected address space.   |
| 0b001 | 36 bits, 64GB protected address space.  |
| 0b010 | 40 bits, 1TB protected address space.   |
| 0b011 | 42 bits, 4TB protected address space.   |
| 0b100 | 44 bits, 16TB protected address space.  |
| 0b101 | 48 bits, 256TB protected address space. |
| 0b110 | 52 bits, 4PB protected address space.   |
| 0b111 | Reserved.                               |

Values exceeding the implemented physical address size, advertised in SMMU\_IDR5.OAS, are invalid.

This field is permitted to be cached in a TLB or Configuration cache.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# Accessing SMMU\_ROOT\_GPT\_BASE\_CFG

SMMU\_ROOT\_GPT\_BASE\_CFG can be accessed through the SMMUv3\_ROOT block as follows:

| Frame       | Offset |
|-------------|--------|
| SMMUv3_ROOT | 0x0030 |

- When SMMU\_ROOT\_CR0.GPCEN == 1 or SMMU\_ROOT\_CR0ACK.GPCEN == 1, access on this interface is **RO**.
- Otherwise, access on this interface is RW.

# 6.3.111 SMMU\_ROOT\_GPF\_FAR

The SMMU\_ROOT\_GPF\_FAR characteristics are:

#### Purpose

This register reports details of the originating access that experienced a GPF.

#### Configuration

This register is present only when SMMU\_RME\_ROOT\_IMPL is implemented. Otherwise, direct accesses to SMMU\_ROOT\_GPF\_FAR are RES0.


#### Attributes

SMMU\_ROOT\_GPF\_FAR is a 64-bit register.

This register is part of the SMMUv3\_ROOT block.

# Field descriptions

The SMMU\_ROOT\_GPF\_FAR bit assignments are:



### FPAS, bits [63:62]

The physical address space of the access that failed.

| FPAS | Meaning    |
|------|------------|
| 0b00 | Secure     |
| 0b01 | Non-secure |
| 0b10 | Root       |
| 0b11 | Realm      |

If FAULT == 0, the value of this field is 0b00.

Note: The encodings for Root and Realm are only applicable for NoStreamID devices.

#### Bits [61:52]

Reserved, RESO.

### FADDR, bits [51:12]

The physical address input to the Granule Protection Check that failed.

If FAULT == 0, the value of this field is zero.

#### FAULTCODE, bits [11:4]

If REASON == TRANSACTION, then the value of this field is zero.

#### If REASON == TRANSLATION, then:

| Value | Name          | Meaning                                  |
|-------|---------------|--|
| 0x03  | GPF_STE_FETCH | STE fetch experienced GPF                |
| 0x09  | GPF_CD_FETCH  | CD fetch experienced GPF                 |
| 0x0B  | GPF_WALK_EABT | Translation table access experienced GPF |
| 0x25  | GPF_VMS_FETCH | VMS fetch experienced GPF                |

# If REASON == GERROR, then:

| Value | Name           | Meaning  |
|-------|----------------|--|
| 0x00  | CMDQ_GPF       | Command queue read experienced a GPF                 |
| 0x02  | EVENTQ_GPF     | Event queue write experienced a GPF                  |
| 0x03  | PRIQ_GPF       | PRI queue write experienced a GPF                    |
| 0x04  | MSI_CMDQ_GPF   | Command queue MSI experienced a GPF                  |
| 0x05  | MSI_EVENTQ_GPF | Event queue MSI experienced a GPF                    |
| 0x06  | MSI_PRIQ_GPF   | PRI queue MSI experienced a GPF                      |
| 0x07  | MSI_GERROR_GPF | GERROR reporting MSI experienced a GPF               |
| 0x10  | OTHER_GPF      | An unknown SMMU-originated access experienced a GPF. |

If FAULT == 0, the value of this field is  $0 \times 00$ .

# REASON, bits [3:1]

Reports the originator of the access.

| REASON | Meaning   |
|--------|---|
| 0b001  | TRANSLATION, GPF on an SMMU-originated access required for translation of a client request. |
| 0b010  | GERROR, GPF on an SMMU-originated access not relating to a client translation.              |
| 0b011  | TRANSACTION, GPF on the output address of a client translation.                             |

If FAULT == 0, the value of this field is 0b000.

# FAULT, bit [0]

| FAULT | Meaning   |
|-------|---|
| 0d0   | There have been zero GPFs since this register was last cleared. |

| FAULT | Meaning  |
|-------|--|
| 0b1   | There have been one or more GPFs since this register was last cleared. |

A write of 1 to this bit is IGNORED, does not trigger the GPF\_FAR interrupt, and does not make this fault active. The reset behavior of this field is:

• This field resets to 0b0.

# Additional information

It is IMPLEMENTATION DEFINED which of the following encodings is used to report GPFs on MSI accesses from a PMCG or a RAS record interrupt:

- REASON = GERROR and FAULTCODE = OTHER\_GPF
- REASON = TRANSACTION

# Accessing SMMU\_ROOT\_GPF\_FAR

All writes to this register are IGNORED unless the write clears the FAULT bit.

When a write clears the FAULT bit, the whole register is cleared to zero.

SMMU\_ROOT\_GPF\_FAR can be accessed through the SMMUv3\_ROOT block as follows:

| Frame       | Offset |
|-------------|--------|
| SMMUv3_ROOT | 0x0038 |

Access on this interface is **RW**.

# 6.3.112 SMMU\_ROOT\_GPT\_CFG\_FAR

The SMMU\_ROOT\_GPT\_CFG\_FAR characteristics are:

#### Purpose

Reports details of the originating access that experienced a GPT lookup error.

#### Configuration

This register is present only when SMMU\_RME\_ROOT\_IMPL is implemented. Otherwise, direct accesses to SMMU\_ROOT\_GPT\_CFG\_FAR are RESO.


#### **Attributes**

SMMU\_ROOT\_GPT\_CFG\_FAR is a 64-bit register.

This register is part of the SMMUv3\_ROOT block.

# **Field descriptions**

The SMMU\_ROOT\_GPT\_CFG\_FAR bit assignments are:



# FPAS, bits [63:62]

The physical address space of the access that failed.

| FPAS | Meaning    |
|------|------------|
| 0b00 | Secure     |
| 0b01 | Non-secure |
| 0b10 | Root       |
| 0b11 | Realm      |

If FAULT == 0, the value of this field is 0b00.

Note: The encodings for Root and Realm are only applicable for NoStreamID devices.

#### Bits [61:60]

Reserved, RESO.

### CFG\_ERR, bits [59:56]

| Value | Meaning   |
|-------|---|
| 0x0   | Invalid configuration of GPT configuration registers. This corresponds to GPT walk fault at Level 0 arising from invalid configuration of GPCCR_EL3 in the RME specification. |

| Value | Meaning  |
|-------|--|
| 0x1   | SMMU_ROOT_GPT_BASE.ADDR exceeds the address size configured in SMMU_ROOT_GPT_BASE_CFG.PPS. This corresponds to GPT address size fault at Level 0 in the RME specification.         |
| 0x2   | External abort on GPT entry fetch. This corresponds to Synchronous External abort on GPT fetch in the RME specification.   |
| 0x3   | Invalid configuration of GPT entry. This corresponds to GPT walk fault arising from an invalid GPT entry in the RME specification.   |
| 0x4   | Next-level address in GPT entry exceeds the address size configured in SMMU_ROOT_GPT_BASE_CFG.PPS. This corresponds to GPT address size fault at Level 0 in the RME specification. |

If FAULT == 0, the value of this field is  $0 \times 0$ .

# Bits [55:52]

Reserved, RESO.

# FADDR, bits [51:12]

The physical address input to the Granule Protection Check that failed.

If FAULT == 0, the value of this field is zero.

# FAULTCODE, bits [11:4]

If REASON == TRANSACTION, then the value of this field is zero.

If REASON == TRANSLATION, then:

| Value | Name          | Meaning                                  |
|-------|---------------|--|
| 0x03  | GPF_STE_FETCH | STE fetch experienced GPF                |
| 0x09  | GPF_CD_FETCH  | CD fetch experienced GPF                 |
| 0x0B  | GPF_WALK_EABT | Translation table access experienced GPF |
| 0x25  | GPF_VMS_FETCH | VMS fetch experienced GPF                |

# If REASON == GERROR, then:

| Value | Name           | Meaning                                |  |
|-------|----------------|--|--|
| 0x00  | CMDQ_GPF       | Command queue read experienced a GPF   |  |
| 0x02  | EVENTQ_GPF     | Event queue write experienced a GPF    |  |
| 0x03  | PRIQ_GPF       | PRI queue write experienced a GPF      |  |
| 0x04  | MSI_CMDQ_GPF   | Command queue MSI experienced a GPF    |  |
| 0x05  | MSI_EVENTQ_GPF | Event queue MSI experienced a GPF      |  |
| 0x06  | MSI_PRIQ_GPF   | PRI queue MSI experienced a GPF        |  |
| 0x07  | MSI_GERROR_GPF | GERROR reporting MSI experienced a GPF |  |
|       |                |  |  |

| Value | Name      | Meaning  |
|-------|-----------|--|
| 0x10  | OTHER_GPF | An unknown SMMU-originated access experienced a GPF. |

If FAULT == 0, the value of this field is  $0 \times 00$ .

#### REASON, bits [3:1]

Reports the originator of the access.

| REASON | Meaning   |
|--------|---|
| 0b001  | TRANSLATION, GPF on an SMMU-originated access required for translation of a client request. |
| 0b010  | GERROR, GPF on an SMMU-originated access not relating to a client translation.              |
| 0b011  | TRANSACTION, GPF on the output address of a client translation.                             |

If FAULT == 0, the value of this field is 0b000.

# FAULT, bit [0]

| FAULT | Meaning   |
|-------|---|
| 0b0   | There have been zero GPT lookup errors since this register was last cleared.        |
| 0b1   | There have been one or more GPT lookup errors since this register was last cleared. |

A write of 1 to this bit is IGNORED, does not trigger the GPT\_CFG\_FAR interrupt, and does not make this fault active.

The reset behavior of this field is:

• This field resets to 0b0.

#### Additional information

It is IMPLEMENTATION DEFINED which of the following encodings is used to report GPFs on MSI accesses from a PMCG or a RAS record interrupt:

- REASON = GERROR and FAULTCODE = OTHER\_GPF
- REASON = TRANSACTION

# Accessing SMMU\_ROOT\_GPT\_CFG\_FAR

All writes to this register are IGNORED unless the write clears the FAULT bit.

When a write clears the FAULT bit, the whole register is cleared to zero.

SMMU\_ROOT\_GPT\_CFG\_FAR can be accessed through the SMMUv3\_ROOT block as follows:

# Chapter 6. Memory map and registers 6.3. Register formats

| Frame       | Offset |
|-------------|--------|
| SMMUv3_ROOT | 0x0040 |

Access on this interface is RW.

# 6.3.113 SMMU\_ROOT\_TLBI

The SMMU\_ROOT\_TLBI characteristics are:

#### **Purpose**

TLBI by PA attributes register.

#### Configuration

This register is present only when SMMU\_RME\_ROOT\_IMPL is implemented and SMMU\_RME\_RGPTM is implemented. Otherwise, direct accesses to SMMU\_ROOT\_TLBI are RES0.


#### Attributes

SMMU\_ROOT\_TLBI is a 64-bit register.

This register is part of the SMMUv3\_ROOT block.

# **Field descriptions**

The SMMU\_ROOT\_TLBI bit assignments are:



# Bits [63:52]

Reserved, RESO.

#### Address, bits [51:12]

Base address from which to start invalidation.

Bits [11:0] of the base address are taken to be zero.

If ALL == 1, this field is IGNORED.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Bits [11:8]

Reserved, RESO.

#### SIZE, bits [7:4]

Range of addresses to be invalidated.

| SIZE   | Meaning |
|--------|---------|
| 0b0000 | 4KB.    |
| 0b0001 | 16KB.   |
| 0b0010 | 64KB.   |

| SIZE   | Meaning |
|--------|---------|
| 0b0011 | 2MB.    |
| 0b0100 | 32MB.   |
| 0b0101 | 512MB.  |
| 0b0110 | 1GB.    |
| 0b0111 | 16GB.   |
| 0b1000 | 64GB.   |
| 0b1001 | 512GB.  |

All other values are reserved.

If ALL == 1, this field is IGNORED.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# Bits [3:2]

Reserved, RESO.

# L, bit [1]

GPT Last-level only.

| L   | Meaning  |
|-----|--|
| 0b0 | Invalidate GPT information from all levels of the GPT walk.          |
| 0b1 | Invalidate GPT information from only the last level of the GPT walk. |

If ALL == 1, this field is IGNORED.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# ALL, bit [0]

GPT All.

| ALL | Meaning   |
|-----|---|
| 0b0 | Invalidate GPT information from TLBs based on other fields. |
| 0b1 | Invalidate all GPT information from TLBs.                   |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

# Accessing SMMU\_ROOT\_TLBI

SMMU\_ROOT\_TLBI can be accessed through the SMMUv3\_ROOT block as follows:

| Frame       | Offset |
|-------------|--------|
| SMMUv3_ROOT | 0x0050 |

- When SMMU\_ROOT\_TLBI\_CTRL.RUN == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

# 6.3.114 SMMU\_ROOT\_TLBI\_CTRL

The SMMU\_ROOT\_TLBI\_CTRL characteristics are:

#### **Purpose**

TLBI by PA control register.

#### Configuration

This register is present only when SMMU\_RME\_ROOT\_IMPL is implemented and SMMU\_RME\_RGPTM is implemented. Otherwise, direct accesses to SMMU\_ROOT\_TLBI\_CTRL are RES0.

#### Attributes

SMMU\_ROOT\_TLBI\_CTRL is a 32-bit register.

This register is part of the SMMUv3\_ROOT block.

# Field descriptions

The SMMU\_ROOT\_TLBI\_CTRL bit assignments are:



#### Bits [31:1]

Reserved, RESO.

### **RUN**, bit [0]

| RUN | Meaning                       |
|-----|-------------------------------|
| 0b0 | Invalidation not in progress. |
| 0b1 | Invalidation in progress.     |

Writes to this register only have an effect if both of the following are true:

- The value of RUN in the register before the write is 0.
- The value of RUN in the write data payload is 1.

Any write that does not satisfy both these conditions is IGNORED.

When the requirements for RUN are met for a given write, the following all apply:

- The values provided for ALL, L, SIZE, and Address are taken from SMMU\_ROOT\_TLBI.
- The SMMU performs the TLBI by PA operation, interpreted as follows:
  - If ALL == 1, the operation behaves as TLBI PAALL as issued on a PE.
  - If ALL == 0 and L == 0, the operation behaves as TLBI RPAOS as issued on a PE, with SIZE and Address interpreted in the same manner as for TLBI RPAOS.
  - If ALL == 0 and L == 1, the operation behaves as TLBI RPALOS as issued on a PE, with SIZE and Address interpreted in the same manner as for TLBI RPALOS.

- A TLBI by PA operation is complete when all the following requirements are met:
  - All matching GPT information in TLB entries has been invalidated.
  - All SMMU-originated and client-originated accesses that were in progress to physical addresses targeted by the TLBI by PA operation, are globally observable to their Shareability domain.
- Once the TLBI by PA operation is complete, the SMMU clears the whole register to 0.

The reset behavior of this field is:

• This field resets to 0b0.

# Accessing SMMU\_ROOT\_TLBI\_CTRL

SMMU\_ROOT\_TLBI\_CTRL can be accessed through the SMMUv3\_ROOT block as follows:

| Frame       | Offset |
|-------------|--------|
| SMMUv3_ROOT | 0x0058 |

Access on this interface is RW.

# 6.3.115 ID REGS

Register offsets <code>0xFDO-0xFFC</code> are defined as a read-only identification register space. For Arm implementations of the SMMU architecture the assignment of this register space, and naming of registers in this space, is consistent with the Arm identification scheme for Arm CoreLink and Arm CoreSight components. Arm strongly recommends that other implementers also use this scheme to provide a consistent software discovery model.

For Arm implementations, the following assignment of fields, consistent with CoreSight ID registers [9], is used:

| Offset | Name                          | Field | Value  | Meaning                                       |
|--------|-------------------------------|-------|--------|---|
| 0xFF0  | SMMU_CIDR0,<br>Component ID0  | [7:0] | 0x0D   | Preamble                                      |
| 0xFF4  | SMMU_CIDR1,<br>Component ID1  | [7:4] | 0xF    | CLASS   |
|        |                               | [3:0] | 0x0    | Preamble                                      |
| 0xFF8  | SMMU_CIDR2,<br>Component ID2  | [7:0] | 0x05   | Preamble                                      |
| 0xFFC  | SMMU_CIDR3,<br>Component ID3  | [7:0] | 0xB1   | Preamble                                      |
| 0xFE0  | SMMU_PIDR0,<br>Peripheral ID0 | [7:0] | IMPDEF | PART_0: bits [7:0] of the Part number         |
| 0xFE4  | SMMU_PIDR1,<br>Peripheral ID1 | [7:4] | IMPDEF | DES_0: bits [3:0] of the JEP106 Designer code |
|        |                               | [3:0] | IMPDEF | PART_1: bits [11:8] of the Part number        |
| 0xFE8  | SMMU_PIDR2,<br>Peripheral ID2 | [7:4] | IMPDEF | REVISION                                      |

# Chapter 6. Memory map and registers 6.3. Register formats

| Offset | Name                          | Field | Value  | Meaning  |
|--------|-------------------------------|-------|--------|--|
|        |                               | [3]   | 1      | JEDEC-assigned value for DES always used           |
|        |                               | [2:0] | IMPDEF | DES_1: bits [6:4] bits of the JEP106 Designer code |
| 0xFEC  | SMMU_PIDR3,<br>Peripheral ID3 | [7:4] | IMPDEF | REVAND   |
|        |                               | [3:0] | IMPDEF | CMOD   |
| 0xFD0  | SMMU_PIDR4,<br>Peripheral ID4 | [7:4] | 0      | SIZE   |
|        |                               | [3:0] | IMPDEF | DES_2: JEP106 Designer continuation code           |
| 0xFD4  | SMMU_PIDR5,<br>Peripheral ID5 |       | RESO   | Reserved   |
| 0xFD8  | SMMU_PIDR6,<br>Peripheral ID6 |       | res0   | Reserved   |
| 0xFDC  | SMMU_PIDR7,<br>Peripheral ID7 |       | res0   | Reserved   |

Fields outside of those defined in this table are RESO.

Note: The Designer code fields (DES\_\*) fields for Arm-designed implementations use continuation code 0x4 and Designer code 0x3B.

Note: Non-Arm implementations that follow this CoreSight ID register layout must set the Designer fields appropriate to the implementer.

# Chapter 7

# Faults, errors and Event queue

There are three ways that unexpected or erroneous events can be reported to software:

- 1. Commands given to the SMMU might be in some way incorrect and the Command queue has a mechanism to report such problems.
- 2. A set of configuration errors and faults are recorded in the Event queue. These include events that arise from incoming device traffic, such as a configuration error (discovered when configuration is fetched on receipt of device traffic) or a page fault arising from the device traffic address.
- 3. A global register-based SMMU\_GERROR mechanism reports events arising from a failure to record into the Event or PRI queues and other catastrophic events that cannot be written to memory. This might happen when the Event queue base pointer incorrectly indicates non-existent memory, or queue overflow.

# 7.1 Command queue errors

The Command queue entry formats are described in Chapter 4 *Commands*, which defines what is considered to be a valid command. Commands are consumed in-order and when a command error or command fetch abort is detected:

- Command consumption stops.
- Older commands (prior to the erroneous command in the queue) have been consumed.
   Note: By definition, earlier commands must have been consumed for a later invalid command to be indicated using CMDQ\_CONS.
  - Note: See also section 4.7 Command Consumption summary.
- SMMU\_(S\_)CMDQ\_CONS.RD remains pointing to the erroneous command in the Command queue. The CONS index is not permitted to increment in the case where a command fetch experiences an external abort, meaning that external aborts on command read are synchronous.
- The SMMU (S )CMDO CONS.ERR field is updated to provide an error code.
- The global Command queue Error is triggered: SMMU\_(S\_)GERROR.CMDQ\_ERR is activated (indicating that SMMU\_(S\_)CMDQ\_CONS.ERR has been updated). Commands are not consumed from the affected queue while this error is active, see 7.5 Global error recording and SMMU\_GERROR.
- Commands newer than the erroneous command have no effect, and if they have been fetched they are discarded.

Note: A GPC fault on a Command queue is reported here as an external abort. See 3.24.5 SMMU behavior if a GPC fault is active for details on how other aspects of the GPC fault are reported.

Arm recommends that software rectifies the cause of the command error, then restarts command processing by acknowledging the CMDQ\_ERR by writing an appropriate value to SMMU\_(S\_)GERRORN. Software is not required to write SMMU\_(S\_)CMDQ\_PROD to re-trigger command processing.

While the error is active, additional commands might be submitted and CMDQ\_PROD might be moved backwards as far as the CMDQ\_CONS position so that previously-submitted but non-consumed commands are removed from the queue. This is the only condition in which it is permissible to change CMDQ\_PROD in a manner that is not an increment/wrap while the queue is enabled, see section 3.21.2 Queues.

Commands at or after the CMDQ\_CONS.RD position are fetched or re-fetched after command processing is restarted by acknowledging CMDQ\_ERR.

Note: A Command queue error is completely recoverable and, when the erroneous command is fixed or replaced with a valid command, consumption can be restarted. Older commands are unaffected by a later Command queue error. It is acceptable for software to change the contents of the erroneous command and newer commands while the error is active, as such commands are re-fetched when command processing is restarted.

The SMMU\_(S\_)CMDQ\_CONS.ERR field is updated with the error reason code after detecting a command error. The error reason code is made visible to software before the SMMU makes the global error visible.

Note: It is not possible for software to observe that an error has occurred through GERROR without being able to observe the error code.

Note: If software polls SMMU\_(S\_)CMDQ\_CONS waiting for prior commands to complete, Arm recommends that GERROR.CMDQ\_ERR is also be checked to avoid an infinite loop in the event of a command error.

A Command queue error can be raised for the following reasons:

| SMMU_(S_)CM | SMMU_(S_)CMDQ_CONS.ER |   |  |
|-------------|-----------------------|---|--|
| value       | R   Error name        | l Cause   |  |
| 0x00        | CERROR_NONE           | No error. This value is defined for completeness only, and is not provided by the SMMU in any error case. |  |

| SMMU_(S_)CM value | DQ_CONS.ER<br>R   Error name | l Cause   |
|-------------------|------------------------------|---|
| 0x01              | CERROR_ILL                   | Command illegal and cannot be correctly consumed because of an:  • Unknown command opcode, including architecture-defined commands irrelevant to an implementation without certain feature or Security state. For example, stage 1 invalidation commands on an SMMU without stage 1, Secure invalidation commands from the Non-secure command queue.  • Command valid but Reserved field or invalid value used. |
| 0x02              | CERROR_ABT                   | Abort on command fetch: an external abort was returned for a read of the command queue, if an interconnect can detect and report such an event.   |
| 0x03              | CERROR_ATC_INV_SYNC          | A CMD_SYNC failed to successfully complete one or more previous CMD_ATC_INV commands. This is the result of an ATS Invalidation Completion timeout. See section 3.9.1.2 ATC invalidation timeout.   |

# 7.2 Event queue recorded faults and events

Three categories of events might be recorded into the Event queue:

- Configuration errors.
- Faults from the translation process.
- · Miscellaneous.

Configuration errors result from improper register, STE or CD contents and are associated with the translation of an incoming transaction. An improper configuration in memory is not reported until the data structures are used in response to a transaction. A fault from translation is reported only when a transaction attempts a translation. Any incoming transaction might cause **at most one** event report which might be a configuration error or, if configuration is all valid, one of several kinds of translation fault (which might be applicable to stage 1 or stage 2).

An SMMU implementation might prefetch configuration and TLB entries in an implementation specific manner. A prefetched erroneous configuration does not record a configuration error (even if prefetched in response to an explicit CMD\_PREFETCH\_\* command). A translation fault or configuration error is recorded only on receipt of a transaction.

Miscellaneous events are recorded asynchronously to incoming data transactions, for example E\_PAGE\_REQUEST.

# 7.2.1 Recording of events and conditions for writing to the Event queue

Events are delivered into an Event queue if the queue is "writable". The Event queue is writable when all of the following are true:

- The queue is enabled, through SMMU\_(S\_)CR0.EVENTQEN for the Security state of the queue.
- The queue is not full (see section 7.4 Event queue overflow regarding overflow).
- No unacknowledged GERROR.EVENTQ\_ABT\_ERR condition exists for the queue.

When the queue is not writable, events not associated with stalled faults are silently discarded. In addition, a queue overflow condition is triggered when events are discarded because the queue is unwritable because it is full, see section 7.4 *Event queue overflow*.

Events caused by stalled transactions are not discarded. A stalled faulting transaction that has not recorded an event because the queue is unwritable has one of the following behaviors:

- If the stalled transaction is affected by a configuration or translation invalidation and CMD\_SYNC, the transaction must be retried after the queue becomes writable again (non-full, enabled and without a queue abort condition). This either results in the transaction succeeding (because of a new configuration or translation) in which case no event is recorded for the transaction, or the generation of a new fault (reflecting new configuration or translation) which attempts to record an event into the queue, see section 4.6.3 CMD\_SYNC(ComplSignal, MSIAddress, MSIData, MSIWriteAttributes).
  - A transaction that was not affected by an invalidation or CMD\_SYNC is permitted but not required to
    be retried in the same way as a transaction that is affected. The transaction might be retried at the point
    that the queue becomes writable.
- Alternatively, the transaction retries while the queue is unwritable:
  - If the retry translates successfully, the original event is permitted, but not required, to be recorded.
  - A fault that is encountered during a retry replaces any previous faults for the transaction. If the new fault causes the transaction to stall again, the new stall event is recorded in the Event queue when the queue becomes writable again. If the new fault causes the transaction to be terminated while the queue is still unwritable, the recording of the terminate event is lost.
- If the transaction is not retried, the original fault event record is recorded into the queue when it becomes writable.

Refer also to the event delivery effects of CMD\_STALL\_TERM ( 4.6.2 CMD\_STALL\_TERM(StreamID, SSec)), CMD\_SYNC ( 4.6.3 CMD\_SYNC(ComplSignal, MSIAddress, MSIData, MSIWriteAttributes)) and SMMUEN ( 6.3.9.6 SMMUEN).

An external abort on write of the Event queue might cause written event data to be lost, including stall event records. See section 7.2.2 Event queue access external abort.

An event is permitted, but not required, to be recorded for a stalled faulting transaction when:

• The stalled transaction has early-retried and translated successfully before the SMMU has attempted to write out its event record, see section 3.12.2.2 *Early retry of Stalled transactions*.

Note: As the transaction has completed, there is no benefit in recording the original stall to software because software intervention is not required to progress the transaction.

Events arising from terminated faulting transactions commit to being recorded into the Event queue if it is writable. When EVENTQEN is transitioned to 0, committed events are written out and guaranteed to be visible by the time the update completes and all uncommitted events from terminated faulting transactions are discarded. If accesses to the Event queue aborted (see section 7.2.2 *Event queue access external abort* below), the condition is made visible in GERROR by the time the EVENTQEN update completes. See sections 6.3.9.4 *EVENTQEN* and 6.3.9.6 *SMMUEN*.

Note: There is no dependency required between EVENTQEN and visibility of any GERROR MSI that might arise from completion of outstanding queue writes that abort.

Some events are permitted to be recorded when  $SMMU_(S_)CR0.SMMUEN == 0$  where explicitly stated in the event descriptions in this section. The remainder of events are related to the translation process and are not generated when translation is disabled with SMMUEN == 0.

Note: This means that SMMUEN == 0 does not imply EVENTQEN == 0.

# 7.2.2 Event queue access external abort

An external abort detected while accessing the Event queue, for example when writing a record, activates the SMMU\_(S\_)GERROR.EVENTQ\_ABT\_ERR Global Error. It is IMPLEMENTATION DEFINED as to whether the interconnect to the memory system can report transaction aborts. If EVENTQ\_ABT\_ERR is triggered, one or more events might have been lost, including stall fault event records.

An implementation is permitted to read any address within the bounds of the Event queue when the queue is enabled. In addition to writes of new records to the queue, such reads might also lead to an external abort.

The SMMU only writes to the Event queue when the queue is both enabled and writable, see section 7.2.1 *Recording of events and conditions for writing to the Event queue*.

It is IMPLEMENTATION DEFINED whether an external abort on write is synchronous or asynchronous:

- If a queue write abort is synchronous, queue entry validity semantics are maintained so that all entries up to the SMMU\_(S\_)EVENTQ\_PROD index are valid successfully-written event records. All outstanding queue writes are completed before the error is flagged in GERROR.EVENTQ\_ABT\_ERR. Where multiple outstanding record writes are performed simultaneously, records written at and beyond the queue location of the aborting record location are not visible to software even if they are written successfully, and are lost. The PROD index is not incremented for entries that caused a synchronous abort. In the scenario where a write of an event to an empty Event queue causes a synchronous abort, the PROD index is not incremented, the queue remains empty and the queue non-empty IRQ therefore is not triggered.
  - Note: Software can consume and process all valid entries in the Event queue.
- If a queue write abort is asynchronous, queue validity semantics are broken. The PROD index is permitted to be incremented for entries that caused an asynchronous abort. Software must assume all Event queue entries are invalid at the point of receiving the Global Error, and Arm strongly recommends that the queue is made empty either by re-initialization or by the consumption or discarding of all (invalid) entries.

Note: An IRQ might be observed for the activation of the SMMU\_(S\_)GERROR.EVENTQ\_ABT\_ERR
condition in any order relative to an IRQ relating to the Event queue going non-empty as a result of
the SMMU incrementing the PROD index for a queue entry that experiences an asynchronous external
abort.

If the stalling fault model is implemented and enabled, software must terminate all stalling transactions that could be present in the SMMU by using CMD\_STALL\_TERM or a transition of SMMU\_(S\_)CR0.SMMUEN through 0.

See section 8.2 Miscellaneous for similar PRI queue write abort behavior.

# 7.2.3 Secure and Non-secure Event queues

If Secure state is implemented, the Secure Event queue receives events relating to transactions from Secure streams.

The Non-secure Event queue receives events relating to transactions from Non-secure streams.

The Event queues for different Security states are independent.

Note: For example, this means that both:

- Non-secure faults or errors do not cause Secure event records.
- Secure faults or errors do not cause Non-secure event records.

#### 7.3 Event records

Event records are 32 bytes in size, and are defined later in this section. All Event records are little-endian. Event records are recorded into the Event queue appropriate to the Security status of the StreamID causing the event, unless otherwise specified.

Common fields provided in events are:

- StreamID: The StreamID of the requester that issued the incoming transaction that led to the event
- RnW: The Read/Write nature of the incoming transaction that led to the event
  - 0: Write
  - 1: Read

Note: The value of this field depends on what triggered the Event. For CMOs see 16.7.2 *Non-data transfer transactions*, for ATS TR see 3.9.1 *ATS Interface* and for transactions see 13.1.1 *Attribute definitions*.

- PnU: Privileged/Unprivileged (post-STE override)
  - 0: Unprivileged
  - 1: Privileged
- InD: Instruction/Data (post-STE override)
  - 0: Data
  - 1: Instruction
- InputAddr: The 64-bit address input to the SMMU for the transaction that led to the event. The address includes any sign-extension that might occur before the SMMU input, as described in section 3.4.1 *Input address size and Virtual Address size*. TBI does not affect the InputAddr field, which includes bits [63:56] in the same form as they were supplied to the SMMU.
  - Note: This field might be interpreted as a VA or an IPA depending on whether stage 1 translation is enabled.
- SSV: The SubstreamID validity flag
  - 0: No SubstreamID was provided with the transaction and the SubstreamID field is UNKNOWN.
  - 1: A SubstreamID was provided and the SubstreamID field is valid.
- SubstreamID: The SubstreamID provided with the transaction that led to the event
  - Note: Only valid if SSV == 1.
- S2: Stage of fault
  - 0: Stage 1 fault occurred
  - 1: Stage 2 fault occurred
- CLASS: The class of the operation that caused the fault
  - 0b00: CD, CD fetch.
  - 0b01: TTD, Stage 1 translation table fetch.
  - 0b10: IN, Input address caused fault.
  - 0b11: Reserved.
- NSIPA: Non-secure IPA
  - In events that record an IPA InputAddr relating to a Secure stream, an NSIPA bit is required to differentiate whether the fault occurred as part of accessing the Secure or Non-secure IPA space.
  - This bit is zero unless the event is recorded on the Secure event queue and S2 == 1, in which case this
    bit equals the NS bit that was output from stage 1 for the faulting access.

- Note: This evaluation is made from STE.NSCFG if stage 1 translation was bypassed, or uses the target IPA space from the stage 1 translation.
- Note: In the case of a stage 2 fault on a Secure stream, this bit indicates whether a translation attempt
  was made through STE.S2TTB or STE.S\_S2TTB.
- GPCF: Granule Protection Check Fault
  - 0: External abort did not arise from a GPC fault.
  - 1: The Event record arose from a GPC fault. See also 3.24.3 SMMU-originated accesses.

Note: Arm recommends that software treats receipt of any event that is not architected here as a non-fatal occurrence.

The F\_STE\_FETCH, F\_CD\_FETCH, F\_VMS\_FETCH and F\_WALK\_EABT events contain fields that report a fetch address, which is the address of a specific structure or descriptor that an aborting transaction was originally initiated to access. This STE, CD, VMS or TTD address is as was calculated by a Stream table, CD table or VMS access or translation table walk.

Portions of event records that are not explicitly defined in this section are RESO.

# 7.3.1 Event record merging

Events originating from a stream are permitted to be merged when the stream has not been configured to explicitly inhibit merging with STE.MEV == 0. A merged event record is a single record written to the Event queue representing more than one occurrence of an event.

Two or more events are permitted but not required to be merged by an implementation when:

- The events are identical, or differ only as explicitly stated in event record definitions, and
- If the event type has a Stall field, Stall == 0. Events with a Stall parameter are never merged if Stall == 1.
- The events are not separated by a significant amount of time.
  - Note: The merging feature is intended to rate-limit events occurring at an unusually high frequency.
     Arm strongly recommends that an implementation writes separate records for events that do not occur in quick succession.

For the purposes of merging events, events are considered identical if all defined fields are the same except where explicitly indicated by an event definition.

The STE.MEV flag controls whether events resulting from a particular stream are merged. When STE.MEV == 0, events (other than listed below) are not merged; this can be useful for debug visibility where one transaction can be matched to one fault event. As STE.MEV is contained in an STE, it can only control the merging of events that are generated after a valid STE is located. The following events might occur before an STE is located, so might always be merged:

- F UUT.
- C\_BAD\_STREAMID.
- F STE FETCH.
- C\_BAD\_STE.


Hardware implementations are required to respect STE.MEV == 0, so that (other than the four events listed in this section) no events are merged. Arm recommends that software expects that event records might be merged even if STE.MEV == 0.

Note: In particular, software running in a virtual machine might set STE.MEV == 0 but a hypervisor might deem merging to remain valuable and cause it to remain enabled.

Note: An event that is recorded when STE.MEV == 1 and where Stall == 0 can therefore be interpreted as representing one or more transactions that faulted for the same reason.

E.a


# 7.3.2 F\_UUT

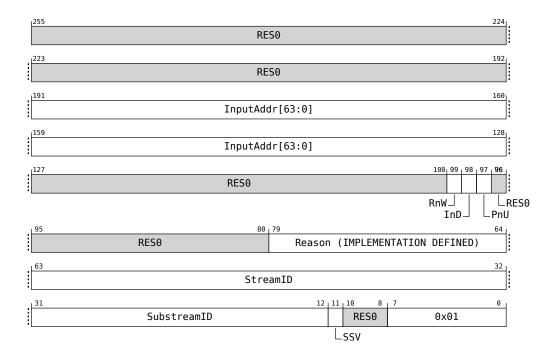

| Event number | Reason   |
|--------------|--|
| 0x01         | Unsupported Upstream Transaction.  This event is caused for IMPLEMENTATION DEFINED reasons, depending on the bus system, a client device might express an unsupported or illegal transaction type. See section 16.7.1 Reporting of Unsupported Client Transactions. An IMPLEMENTATION DEFINED cause is provided in Reason.  The InD/PnU attributes provided in this event are the incoming attributes, not the post-STE override versions. |

This event is permitted to be recorded when SMMUEN == 0.


# 7.3.3 C\_BAD\_STREAMID

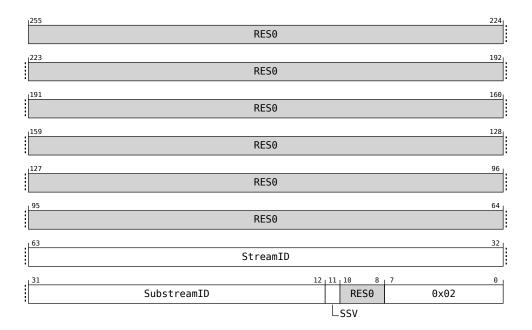

| Event number | Reason  |
|--------------|---|
| 0×02         | Transaction StreamID out of range.  Recorded when SMMU_(S_)CR2.RECINVSID == 1 and any of the following conditions arises:  1. Incoming StreamID >= 2 <sup>SMMU_(S_)STRTAB_BASE_CFG_LOG2SIZE</sup> 2. When SMMU_(S_)STRTAB_BASE_CFG_FMT == 2-level, given StreamID reaches a level 1 descriptor where:  a) L1STD_Span == 0  b) L1STD_Span == Reserved c) L1STD_Span > SMMU_(S_)STRTAB_BASE_CFG_SPLIT + 1  d) The given StreamID[SPLIT - 1:0] >= 2(L1STD_Span-1). |

For out-of-range Secure StreamIDs, this event is recorded on the Secure Event queue and for Non-secure StreamIDs, the Non-secure Event queue. Each Security state might have a different number of StreamIDs (controlled by SMMU\_STRTAB\_BASE\_CFG and SMMU\_S\_STRTAB\_BASE\_CFG.

# 7.3.4 F\_STE\_FETCH

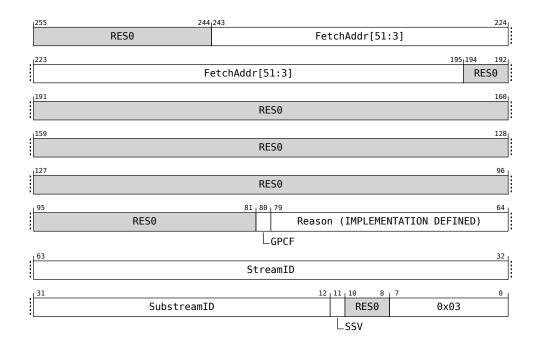


| Event number | Reason   |
|--------------|--|
| 0x03         | Fetch of STE caused external abort (access aborted by system/interconnect/Completer, or consumed external error where RAS features available), or the address was out of range as described in 3.4.3 Address sizes of SMMU-originated accesses.  FetchAddr is the Physical Address used for the fetch. In SMMUv3.0, bits [47:OAS] are UNKNOWN. In SMMUv3.1, bits [51:OAS] are UNKNOWN.  An IMPLEMENTATION DEFINED cause is provided in Reason. |

Note: This event might be injected into a guest VM, as though from a virtual SMMU, when a hypervisor detects invalid guest configuration that would cause a guest STE fetch from an illegal IPA.

Arm recommends that an implementation with RAS features differentiates a failure that arose because of the consumption of an error from a failure caused by the use of an illegal address.


In SMMUv3.0, FetchAddr bits [51:48] are RES0.

# 7.3.5 C\_BAD\_STE

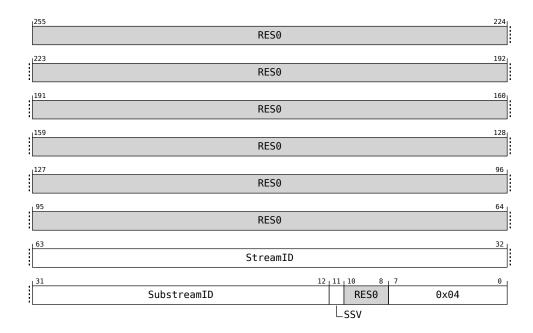

| Event number | Reason  |
|--------------|---|
| 0×04         | Used STE invalid (V == 0, Reserved field, incorrect configuration). |

# 7.3.6 F\_BAD\_ATS\_TREQ

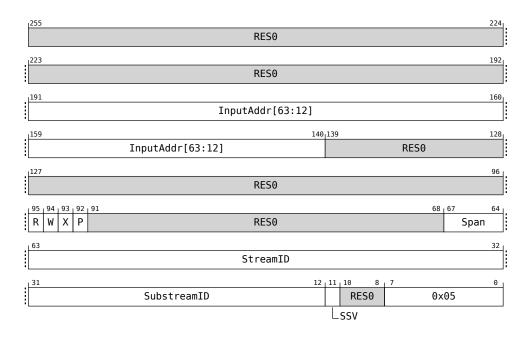

| Event number | Reason   |
|--------------|--|
| 0x05         | Address Translation Request disallowed for a StreamID and a PCIe ATS Translation Request received.  R/W/X/PRIV are the Read/Write/Execute/Privilege permissions requested in the ATS Translation Request, before STE.{INSTCFG/PRIVCFG} overrides are applied  • Write == !NW.  • For PCIe ATS, R (Read) is always 1 in a request.  Span equals the number of STUs requested. |

Reported in response to an ATS Translation Request in any of the following conditions:


- SMMU\_CR0.SMMUEN == 0
- STE.V == 1 and effective STE.EATS == 0b00
  - Note: See STE.EATS for details. The effective value of EATS is treated as 0b00 in some situations including if STE.Config == 0b100, or STE is Secure.
- If it is possible for an implementation to observe a Secure ATS Translation Request, this event is recorded.

Note: This event is intended to provide visibility of situations where an ATS Translation Request is prohibited, but an ordinary transaction to the same address from the same StreamID or SubstreamID might complete successfully (where a failure of a TR might otherwise be difficult to debug by issuing an ordinary transaction).

Translation Requests do not cause other events (such as C\_BAD\_STE) to be recorded.

A UR response is made for an ATS Translation Request that causes this event.


# 7.3.7 F\_STREAM\_DISABLED

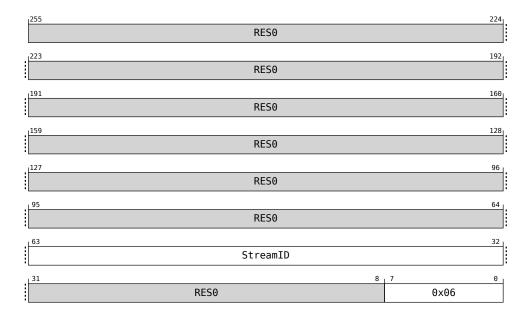

| Event number | Reason  |
|--------------|---|
| 0x06         | The STE of a transaction marks non-substream transactions disabled (when STE.Config[0] == 1 and STE.S1CDMax > 0 and STE.S1DSS == 0b00) and the transaction was presented without a SubstreamID.  Or, a transaction was presented with SubstreamID 0 when STE.Config[0] == 1 and STE.S1CDMax > 0 and STE.S1DSS == 0b10 (CD 0 is Reserved for non-substream traffic). |

If STE.V == 1 and STE.Config == 0b000, incoming traffic is terminated without recording an event.

#### 7.3.8 F\_TRANSL\_FORBIDDEN

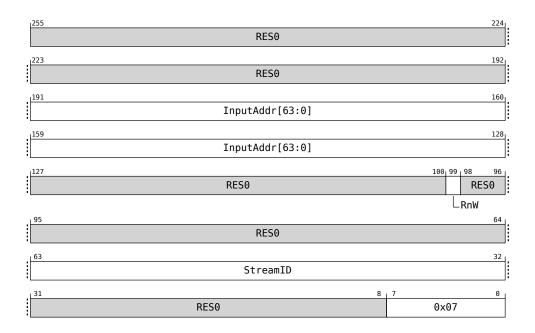

| Event number | Reason   |
|--------------|--|
| 0x07         | An incoming PCIe transaction is marked Translated but SMMU bypass is disallowed for this StreamID. |

This event is permitted to be recorded when SMMUEN == 0.


Reported in response to an ATS Translated transaction in any of the following conditions:

- SMMU\_CR0.ATSCHK == 1, STE is valid and either:
  - STE disallows ATS in STE.EATS.
  - STE selects stage 1 bypass & stage 2 bypass (STE.Config == 0b100).
- StreamID is Secure, according to SEC\_SID.
- SMMUEN == 0.

Note: This event is intended to provide visibility of situations where an ATS Translated transaction is prohibited, but an ordinary (Untranslated) transaction from the same StreamID or SubstreamID might complete successfully,

that is where behavior differs from an ordinary transaction because of the Translated nature of the transaction. InputAddr[11:0] are IGNORED for the purposes of determining identical events for merging.

#### 7.3.9 C BAD SUBSTREAMID

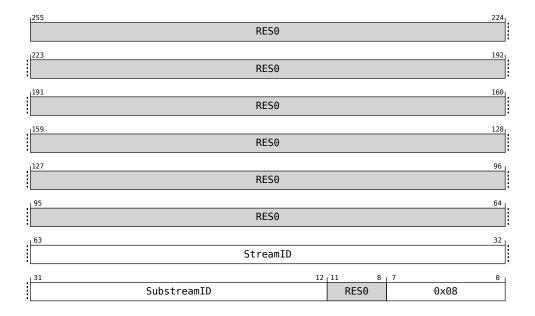

| Event number | Reason  |
|--------------|---|
| 0x08         | Incoming SubstreamID present and one of the following is true:              |
|              | <ul> <li>Stage 1 translation disabled (STE.Config[0] == 0).</li> </ul>      |
|              | <ul> <li>Substreams disabled (STE.S1CDMax == 0).</li> </ul>                 |
|              | • SubstreamID >= STE.S1CDMax.   |
|              | • A two-level CD fetch encounters an L1CD structure with V == 0, or an L1CD |

SMMU-originated accesses).


When caused by supply of a SubstreamID without stage 1 translation (STE.Config[0] == 0), this behavior arises independent of whether stage 2 translation is enabled.

structure that contains an L2Ptr that is out of range (see 3.4.3 Address sizes of

When this event is generated because of an L1CD.L2Ptr that is out of range, the SubstreamID field indicates the index of the CD that was intended to be fetched when the erroneous L1CD.L2Ptr was used. In the case that an incoming transaction without a SubstreamID caused (through use of STE.S1DSS == 0b10) an erroneous L1CD.L2Ptr to be encountered during fetch of the CD at index 0, the SubstreamID is recorded as 0. Otherwise, the SubstreamID that was input with the transaction is recorded.

Note: In this event, SubstreamID is always valid (there is no SSV qualifier).

### 7.3.10 F\_CD\_FETCH

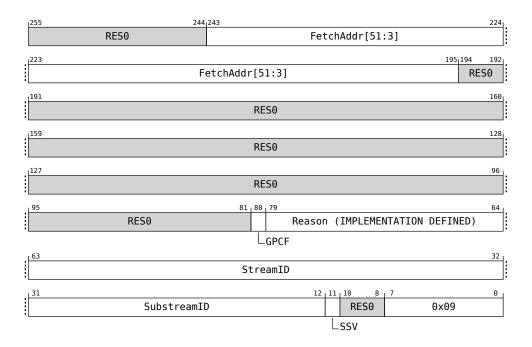

| Event number | Reason  |
|--------------|---|
| 0x09         | Fetch of CD caused external abort (access aborted by system/interconnect/Completer, or consumed external error where RAS features available), or in SMMUv3.0 the address was out of range as described in section 3.4.3 Address sizes of SMMU-originated accesses.  FetchAddr is the Physical Address used for the fetch. In SMMUv3.0, bits [47:OAS] are UNKNOWN.  An IMPLEMENTATION DEFINED cause is provided in Reason. |


Note: This event might be injected into a guest VM, as though from a virtual SMMU, when a hypervisor receives a stage 2 Translation-related fault indicating CD fetch as a cause (with CLASS == CD).

Note: F\_CD\_FETCH does not include an NS bit for FetchAddr. The effective value of NS for FetchAddr can be determined as follows:

- For the Non-secure event queue, Non-secure PA space.
- For the Secure event queue when stage 2 translation is disabled, Secure PA space.
- For the Secure event queue when stage 2 translation is enabled, the target PA space is determined by the value of STE.S2SA for the stream.


In SMMUv3.0, FetchAddr bits [51:48] are RES0.

### 7.3.11 C\_BAD\_CD

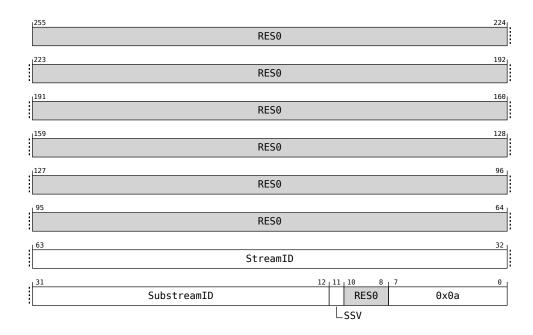

| Event number | Reason  |
|--------------|---|
| 0x0A         | Fetched CD invalid ( $V == 0$ , or $V == 1$ but ILLEGAL configuration). |

### 7.3.12 F\_WALK\_EABT

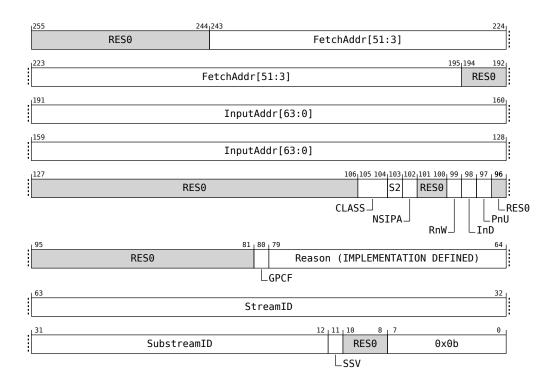

#### **Event number**

#### Reason

0x0B

An external abort occurred fetching (or updating) a translation table descriptor (access aborted by system/interconnect/Completer, or consumed external error where RAS features available).

The InD/PnU attributes are the post-STE override values. RnW pertains to the input transaction (InputAddr), not the access causing the abort. InD == 0 when RnW == 0 (see section 13.1.2 Attribute support).

A stage 1-only table walk that encounters EABT on physical access to a descriptor is reported as S2 == 0 (stage 1), CLASS == TT. The SMMU input transaction address (InputAddr) and descriptor fetch PA (FetchAddr) are provided.

Note: This behavior of CLASS == TT when S2 == 0 differs from other F\_TRANSLATION, F\_ADDR\_SIZE, F\_ACCESS, F\_PERMISSION events relating to a stage 1 fault.

A stage 2 table walk can encounter EABT accessing the physical address of a stage 2 descriptor, because of a:

- Translation of an IPA for CD fetch
  - S2 == 1 (stage 2), CLASS == CD
  - The SMMU input address (InputAddr) and S2 descriptor fetch PA (FetchAddr) are provided
- Translation of an IPA for Stage 1 descriptor fetch
  - S2 == 1 (stage 2), CLASS == TT
  - The SMMU input address (InputAddr) and S2 descriptor fetch PA (FetchAddr) are provided
- Translation of an IPA after successful stage 1 translation (or, in stage 2-only configuration, an input IPA)
  - S2 == 1 (stage 2), CLASS == IN (Input to stage)
  - The SMMU input address (InputAddr) and S2 descriptor fetch PA (FetchAddr) are provided.

In a nested configuration, a stage 1 walk can encounter EABT accessing the physical address of a stage 1 descriptors having successfully translated the IPA of the descriptor to a PA through stage 2:

- S2 == 0 (stage 1), CLASS == TT
- This is equivalent to the stage 1-only case.
- The SMMU input address (InputAddr) and S1 descriptor fetch PA (FetchAddr) are provided.

An IMPLEMENTATION DEFINED cause is provided in Reason.

Note: This event occurs because of an incorrect configuration or, for systems supporting RAS features, consumption of an external error. A stage 1-only translation failing to walk a translation table might result from use of an incorrect or out of range PA in the table. When virtualization is in use, stage 2 translations would normally be fetched correctly. In addition, Arm recommends that hypervisor software does not allow a stage 1 walk to fetch a descriptor from an IPA that successfully translates to PA that causes an abort on access.


When an AArch32 translation table descriptor fetch leads to an F\_WALK\_EABT on a system that has OAS < 40, a 40-bit descriptor address was truncated to the OAS to make the fetch. In this case, bits FetchAddr[47:OAS] are UNKNOWN.

Note: To create the illusion of a guest VM having a stage 1-only virtual SMMU, this event can be injected into the guest if a stage 2 Translation, Access flag, Permission or Address Size fault occurs because of an access made by a stage 1 translation table walk (CLASS == TT).

InputAddr[11:0] are IGNORED for the purposes of determining identical events for merging.

In SMMUv3.0, FetchAddr bits [51:48] are RES0.

#### 7.3.13 F\_TRANSLATION

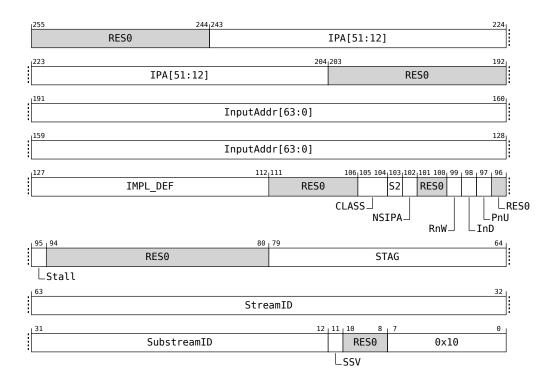

# Event number Reason

0x10

Translation fault: The address provided to a stage of translation failed the range check defined by TxSZ/SLx, the address was within a disabled TTBx, or a valid translation table descriptor was not found for the address.

The RnW, InD and PnU fields provide the access attributes of the input transaction. The InD/PnU attributes are the post-STE override values. InD == 0 when RnW == 0. If fault occurs at stage 1, S2 == 0 and:


• CLASS == IN, IPA is UNKNOWN.

If fault occurs at stage 2, S2 == 1 and:

- If fetching a CD, CLASS == CD, IPA is CD address
  - If walking stage 1 translation table, CLASS == TT, IPA is the stage 1 translation table descriptor address
  - If translating an IPA for a transaction (whether by input to stage 2-only configuration, or after successful stage 1 translation), CLASS == IN, and IPA is provided.

If Stall == 1, not merged. InputAddr[11:0] are IGNORED for the purposes of determining identical events for merging.


### 7.3.14 F\_ADDR\_SIZE

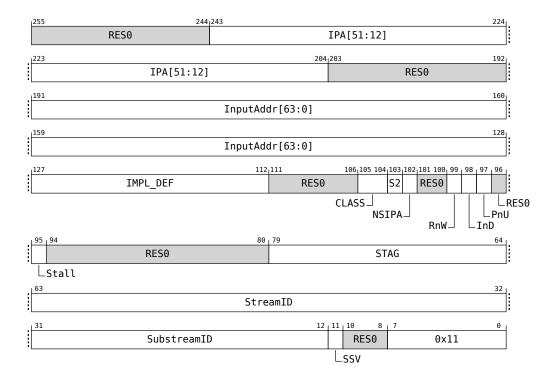

| Event number | Reason  |
|--------------|---|
| 0x11         | Address Size fault: Output address of a translation stage caused Address Size fault. When the stage performs translation, this fault occurs when an intermediate or leaf translation table descriptor outputs an address outside of the effective xPS associated with the translation table (see CD.IPS and STE.S2PS). This does not include a TTB address out of range before the TTW begins as, in this condition, the CD or STE is invalid which results in C_BAD_CD or C_BAD_STE. When stage 1 bypasses translation, this fault occurs when the output address (identical to the input address) is outside the address range implemented, see section 3.4 Address sizes.  Refer to F_TRANSLATION for the definition of the CLASS, IPA and S2 fields. The RnW, InD and PnU fields provide the access attributes of the input transaction. The InD/PnU attributes are the post-STE override values. InD == 0 when RnW == 0. If caused by stage 1 translation bypass (because of stage 1 being disabled, unimplemented, or bypassed when STE.S1DSS == 0b01), CLASS == IN and S2 == 0 (stage 2 bypass does not cause this fault). |

If Stall == 1, not merged. InputAddr[11:0] are IGNORED for the purposes of determining identical events for merging.


### 7.3.15 F\_ACCESS

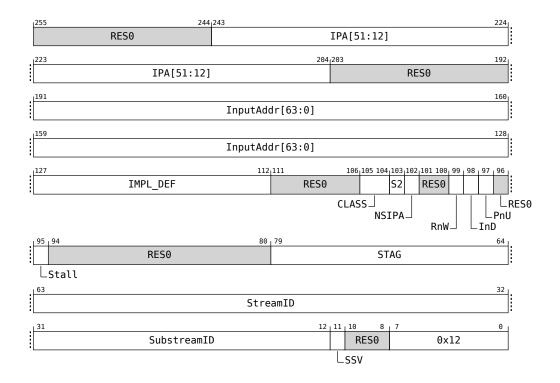

| <b>Event number</b> | Reason   |
|---------------------|--|
| 0x12                | Access flag fault due to AF == 0 in a Page or Block descriptor.  If HTTU is supported and enabled, a descriptor with AF == 0 is modified such that AF == 1 and this fault is not recorded.  Refer to F_TRANSLATION for the definition of the CLASS, IPA and S2 fields.  The RnW, InD and PnU fields provide the access attributes of the input transaction. The InD/PnU attributes are the post-STE override values. InD == 0 when RnW == 0. |

If Stall == 1, not merged. InputAddr[11:0] are IGNORED for the purposes of determining identical events for merging.


### 7.3.16 F\_PERMISSION

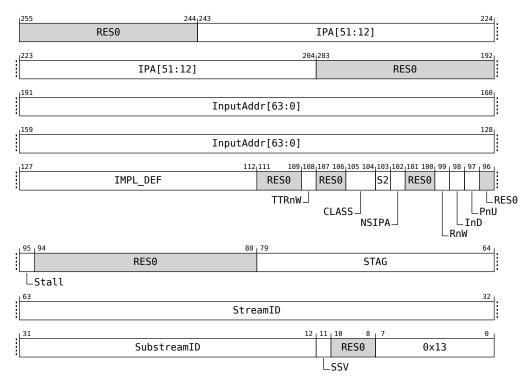

| Event number | Reason  |
|--------------|---|
| 0x13         | Permission fault occurred on page access.   |
|              | S2 indicates the stage at which fault occurred.   |
|              | The RnW, InD and PnU fields provide the access attributes of the input transaction. The |
|              | InD/PnU attributes are the post-STE override values. InD $== 0$ when RnW $== 0$ .       |
|              | Refer to F_TRANSLATION for the definition of the CLASS, IPA and S2 fields.              |
|              | The TTRnW field is valid when CLASS == TT, that is, a stage 1 translation table walk    |
|              | causes a Permission fault at stage 2. TTRnW is UNKNOWN when CLASS is not TT.            |
|              | TTRnW indicates the read/write property that actually caused the fault as follows:      |
|              | 0 Translation table descriptor Write caused S2 Permission fault.                        |
|              | 1 Translation table descriptor Read caused S2 Permission fault.                         |
|              | Note: For example, an input read might end up causing a translation table walk write    |
|              | permissions fault at stage 2, when HTTU updates a stage 1 Access flag.                  |
|              | Note: When CLASS == TT, the IPA field indicates the stage 1 translation table entry     |
|              | address.  |
|              | Note: Arm recommends that CLASS is used to determine the access properties causing      |
|              | the Permission fault. When CLASS == IN, RnW/InD/PnU were inappropriate for the          |
|              | access at the faulting stage. When CLASS == TT, the access is implicitly Data           |
|              | (regardless of the input property) and the faulting R/W property is given by TTRnW.     |
|              | When CLASS == CD, the access is implicitly Data and a read.                             |

If Stall == 1, not merged. InputAddr[11:0] are IGNORED for the purposes of determining identical events for merging.


### 7.3.17 F\_TLB\_CONFLICT

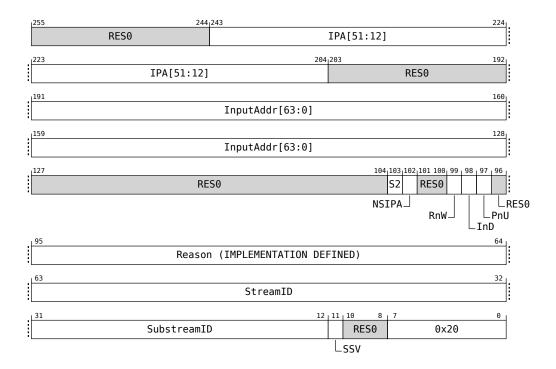

| Event number | Reason  |
|--------------|---|
| 0x20         | A TLB conflict occurred because of the transaction. The nature of this is IMPLEMENTATION DEFINED, defined by the TLB geometry of the implementation. The input address might not be the address that causes the issue, for example an IPA to PA TLB entry might experience the problem, so both addresses are provided. The RnW, InD and PnU fields provide the access attributes of the input transaction. The InD/PnU attributes are the post-STE override values. InD == 0 when RnW == 0. An IMPLEMENTATION DEFINED conflict reason is provided in Reason. This information might be specific to the TLB geometry of the implementation. IPA is valid when S2 == 1, otherwise it is UNKNOWN. |

InputAddr[11:0] are IGNORED for the purposes of determining identical events for merging. In SMMUv3.0, IPA bits [51:48] are RESO.

### 7.3.18 F\_CFG\_CONFLICT

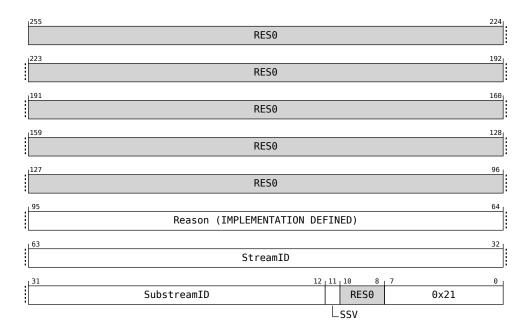


| Event number | Reason  |
|--------------|---|
| 0x21         | A configuration cache conflict occurred due to the transaction. The nature of this is IMPLEMENTATION DEFINED, defined by the configuration cache geometry of the implementation.  The STE.CONT property of an STE cache entry causes an overlap of another STE that is not identical, as described in STE.CONT, and this has caused a multiple-match on lookup.  An IMPLEMENTATION DEFINED conflict reason is provided in Reason. This information might be specific to the configuration cache geometry of the implementation. |

It is not possible to cause this error by any CD misconfiguration.

Note: A guest VM cannot arrange configuration that would affect any other streams.

### 7.3.19 E\_PAGE\_REQUEST

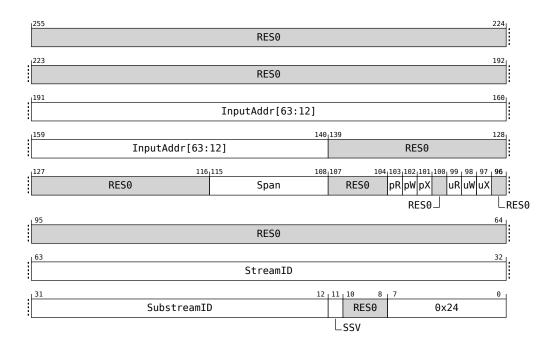


| Event number | Reason   |
|--------------|--|
| 0x24         | Speculative page request hint from a client device to system software, hinting that the given address span will be accessed by a device in the near future. The access is expected to require the read/write/execute properties provided for user/kernel privilege levels. |

No response or action is required, but system software might use this hint to begin a (potentially long-running) page-in of the given address, to decrease the chance of a subsequent access from the device experiencing a page miss.

| Flag fields | Access anticipated   |
|-------------|----------------------|
| pR          | Privileged Read      |
| pW          | Privileged Write     |
| pX          | Privileged Execute   |
| uR          | Unprivileged Read    |
| uW          | Unprivileged Write   |
| uX          | Unprivileged Execute |

Span is encoded as a positive integer where the size of the intended access span in bytes is (Span\*4096).

#### 7.3.20 F\_VMS\_FETCH

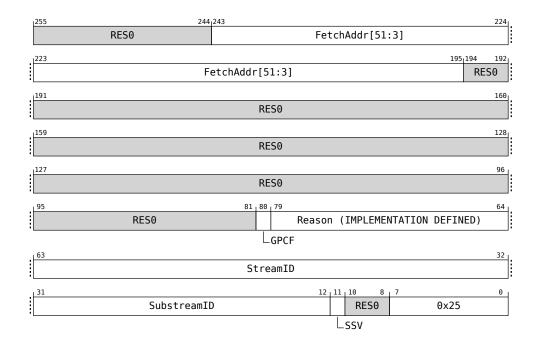

| Event number | Reason  |
|--------------|---|
| 0x25         | Fetch of VMS caused external abort (access aborted by system/interconnect/Completer, or consumed external error where RAS features available).  FetchAddr is the Physical Address used for the fetch. In SMMUv3.0, bits [47:OAS] are UNKNOWN. In SMMUv3.1 and later, bits [51:OAS] are UNKNOWN.  An IMPLEMENTATION DEFINED cause is provided in Reason. |

The F\_VMS\_FETCH event has a lower priority than the C\_BAD\_STE event. The priority with respect to subsequent possible events is IMPLEMENTATION DEFINED. See sections 7.3.22 *Event queue record priorities* and 9.1.5 *ATOS\_PAR.FAULTCODE encodings*.

Note: If a F\_VMS\_FETCH event is reported, a C\_BAD\_STE has not been reported because a valid STE is required to fetch the VMS. The point at which the VMS is fetched relative to the remainder of the configuration structure walk and translation process is not specified.

### 7.3.21 IMPDEF\_EVENTn

| Event number | Reason                                   |
|--------------|--|
| 0xE0-0xEF    | IMPLEMENTATION DEFINED event allocation. |

Notes: Arm recommends that software treats receipt of these events as a non-fatal occurrence even if the exact nature of the event is not recognized.

All other event numbers are Reserved.

Events with a Stall parameter (F\_TRANSLATION, F\_ADDR\_SIZE, F\_ACCESS, F\_PERMISSION) indicate whether a transaction is stalling as a result of the event. When a transaction causes any other event, the transaction is terminated and an abort returned to the client. If a transaction is stalled, the STAG parameter provides a token used to uniquely identify the transaction.

Note: The StreamID and STAG must be provided to a subsequent CMD\_RESUME. Every stall event must have either one associated CMD\_RESUME or a CMD\_STALL\_TERM.

A configuration error always terminates the instigating transaction with an abort to the device.

Multiple addresses might be reported in one event record:

- InputAddr is the address input with the transaction to the SMMU.
- IPA is the post-stage 1 address of the transaction, valid only if the fault occurred at stage 2.
- Fetch PA is the physical address accessed causing the fault to be raised.

The input address is the 64-bit address presented to the SMMU, see section 3.4.1 *Input address size and Virtual Address size*.

#### 7.3.22 Event queue record priorities

Events arising from an ordinary incoming transaction are recorded in the following order, listed from the first that might occur when a transaction is processed to the last that might occur before the transaction is deemed successful, unless otherwise specified. This means that if any event occurs, events prior to that event in this list cannot have occurred:

- 1. C BAD STREAMID
- 2. F\_STE\_FETCH
- 3. C\_BAD\_STE
- 4. F\_VMS\_FETCH

F\_VMS\_FETCH is only lower priority than C\_BAD\_STE. Its priority relative to other lower priority events in this list is IMPLEMENTATION DEFINED.

- 5. C\_BAD\_SUBSTREAMID
- 6. F STREAM DISABLED
- 7. Faults from translation (stage 2, for fetch of CD)
- 8. F\_CD\_FETCH
- 9. C BAD CD
- 10. Faults from translation (stage 1 or stage 2, for data access of a transaction)

Faults from translation can occur because of a fetch of a CD or stage 1 translation requiring a stage 2 translation, or the final translation for the given transaction address.

A single stage of translation table walk might experience faults in this order:

- 1. F\_TRANSLATION (for input address outside range defined by TxSZ/SL0, or EPDx == 1)
- 2. For each level of translation table walked:
  - a. F\_WALK\_EABT (on fetch of descriptor)
  - b. F\_TRANSLATION (from fetched descriptor)
  - c. F\_ADDR\_SIZE (for output of descriptor, indicating next descriptor or walk output address)
- 3. F\_ACCESS (On the final-level descriptor)
- 4. F PERMISSION (On the final-level descriptor)

A nested Stage 1 + Stage 2 translation table walk might experience faults in this order:

1. F\_TRANSLATION (For stage 1 input address outside range defined by stage 1 TxSZ/SL0, or EPDx == 1)

- 2. For each level of stage 1 translation table walked, the stage 2 translation for the descriptor of the stage 1s IPA might experience:
  - a. F\_TRANSLATION (For stage 2 input address outside range defined by stage 2 TOSZ/SL0)
  - b. F\_WALK\_EABT (For stage 2 descriptor fetch)
  - c. F\_TRANSLATION (From fetched stage 2 descriptor)
  - d. F\_ADDR\_SIZE (For output of stage 2 descriptor, indicating next descriptor or walk output address)
  - e. F\_ACCESS (On the final-level stage 2 descriptor)
  - f. F\_PERMISSION (On the final-level stage 2 descriptor)
- 3. For each level of stage 1 translation table walked, after the PA of the descriptor is determined the following might occur:
  - a. F\_WALK\_EABT (For stage 1 descriptor fetch)
  - b. F\_TRANSLATION (From fetched stage 1 descriptor)
  - c. F\_ADDR\_SIZE (For output of stage 1 descriptor)
- 4. For the final level stage 1 descriptor, the following might then occur:
  - a. F ACCESS
  - b. F\_PERMISSION
- 5. The IPA relating to the input VA has been determined and permissions have been checked, but the following might occur for each level of the stage 2 translation of that final IPA:
  - a. F\_TRANSLATION (For stage 2 input address outside range defined by stage 2 TOSZ/SL0)
  - b. F\_WALK\_EABT (For stage 2 descriptor fetch)
  - c. F TRANSLATION (From fetched stage 2 descriptor)
  - d. F\_ADDR\_SIZE (For output of stage 2 descriptor, indicating next descriptor or walk output address)
  - e. F\_ACCESS (On the final-level stage 2 descriptor)
  - f. F\_PERMISSION (On the final-level stage 2 descriptor)

Note: F\_TLB\_CONFLICT, F\_CFG\_CONFLICT and F\_UUT are raised with implementation specific prioritization.

For an SMMU with RME, then each of F\_STE\_FETCH, F\_CD\_FETCH, F\_VMS\_FETCH and F\_WALK\_EABT can also occur as the result of a granule protection check fault. This does not affect the error reporting priority described in this section. See also section 3.24.3 SMMU-originated accesses.

The flow of events that an incoming ordinary transaction might raise can be characterized as:

- An unsupported transaction fault from the client device might be raised on input.
- Configuration is fetched, in the order of STE then (if relevant) CD:
  - If a CD is fetched, it uses stage 2 translations to do so, if stage 2 is enabled.
  - Stage 2 walk occurs, which might experience an external abort on fetch.
  - Stage 2 page fault on the CD address might occur when the walk completes.
  - External abort on CD fetch might occur.
- When a CD is successfully fetched, start walking stage 1 TT. Stage 2 page faults (or external aborts) might arise from walking stage 1, in the same way as for the initial CD fetch
- When a S1 translation is determined, stage 1 might fault.
- Stage 2 walk occurs for a successful output of stage 1 translation, and this might also fault.

ATS Translation Requests do not lead to the same set of possible errors as, in general, ATS translation errors are reported to the requesting device using the ATS Translation Response rather than to software through the Event queue. The only Event queue record that can be generated is F\_BAD\_ATS\_TREQ, which can be raised at several points in the translation process.

ATS Translated transactions also differ from ordinary transactions and one of the following behaviors can occur:

- F\_TRANSL\_FORBIDDEN can be raised on input when ATS is disabled/invalid (see section 7.3.8 *F\_TRANSL\_FORBIDDEN* for reasons).
- Otherwise, ATS Translated transactions that locate correct configuration and then encounter stage 2 translation (through STE.EATS == 0b10 configuration) can raise stage 2 Translation-related faults.
- Otherwise, any other error on receipt of an ATS Translated transaction (for example, an invalid STE) causes the transaction to be silently terminated.

See Chapter 15 *Translation procedure* for more details on the translation procedure and possible events at each step.

### 7.4 Event queue overflow

An SMMU output queue is full if the consumer can observe that there are no free entries for the producer to add new entries to, see section 3.5.2 *Queue entry visibility semantics*. The Event queue is full if it can be observed that SMMU\_(S\_)EVENTQ\_PROD.WR == SMMU\_(S\_)EVENTQ\_CONS.RD and WRAP bits differ.

Note: If the SMMU can observe that a write it made for a new queue entry is visible in memory, but PROD.WR has not yet been updated to pass the position of the new entry, the new entry is not yet visible to software in terms of the queue visibility semantics.

Event queue overflow occurs when the Event queue is enabled (EVENTQEN == 1), the queue is full, and a pending event record is discarded because the queue is full. An Event queue overflow condition is entered to indicate that one or more event records have been lost:

- Fault information.
- Configuration errors.

It is not possible for an external agent to observe an Event queue overflow condition if it could not first observe the Event queue being full.

Note: An implementation must therefore prevent the overflow condition from being observable by software before an update to the PROD index is observable.

A configuration error record or fault record from a terminated transaction is discarded when the SMMU attempts to insert it into a full Event queue. However, a fault record from a stalled transaction is not discarded and an event is reported for the stalled transaction when the queue is next writable. In addition, as stall fault records are not discarded, stall fault records do not cause an overflow condition. Only discarded events cause overflow.

When EVENTQEN == 0, events are not delivered and non-stall event records might be discarded but do not cause an overflow condition.

The Event queue overflow condition is present when:

#### SMMU\_EVENTQ\_PROD.OVFLG != SMMU\_EVENTQ\_CONS.OVACKFLG

When an overflow occurs, the SMMU toggles the SMMU\_EVENTQ\_PROD.OVFLG flag if the overflow condition is not already present.

Note: Arm recommends that whenever software reads SMMU\_EVENTQ\_PROD, it checks OVFLG against its own copy. If different, the overflow condition arose. Arm recommends that software then updates its copy with the value of OVFLG, and processes the Event queue entries as quickly as possible, updating SMMU\_EVENTQ\_CONS in order to move on the RD pointer but also to acknowledge receipt of the overflow condition by setting OVACKFLG to the same value read from OVFLG.

Note: In terms of delivering events, a queue in an unacknowledged overflow state does not behave any differently to normal queue state. If software were to consume events and free space but leave overflow unacknowledged, new events could be recorded. Because a second overflow condition cannot be indicated, a subsequent queue overflow would be invisible therefore Arm expects software to acknowledge overflow upon the first consumption of events after the condition arose.

### 7.5 Global error recording

Global Errors pertaining to a programming interface are reported into the appropriate SMMU\_(S\_)GERROR register instead of into the memory-based Event queue.

SMMU\_(S\_)GERROR provides a one-bit flag for each of the following error conditions:

| Error flag         | Meaning  |
|--------------------|--|
| CMDQ_ERR           | Command queue error  |
| EVENTQ_ABT_ERR     | Event queue access aborted Delivery into the Event queue stops when an abort is flagged, see section 7.2 <i>Event queue recorded faults and events</i> .                           |
| PRIQ_ABT_ERR       | PRI queue access aborted Delivery into the PRI queue stops when an abort is flagged, see section 8.2 <i>Miscellaneous</i> .  |
| MSI_CMDQ_ABT_ERR   | CMD_SYNC MSI write aborted   |
| MSI_EVENTQ_ABT_ERR | Event queue MSI write aborted  |
| MSI_PRIQ_ABT_ERR   | PRI queue MSI write aborted (Non-secure GERROR only)   |
| MSI_GERROR_ABT_ERR | GERROR MSI write aborted   |
| SFM_ERR            | SMMU entered Service Failure Mode This error is common to both SMMU_GERROR and SMMU_S_GERROR, so that both Secure and Non-secure software are aware that the SMMU has entered SFM. |

When an error condition is triggered, the error is activated by toggling the corresponding flag in GERROR. In some cases, SMMU behavior changes while the error is active:

• Commands are not consumed from the Command queue while CMDQ\_ERR is active.

The presence of a Global Error is acknowledged by the agent controlling the SMMU by toggling the equivalent field in the GERRORN register.

An error is active when:  $SMMU_(S_)GERROR[x] := SMMU_(S_)GERRORN[x]$ 

The SMMU does not toggle bit[x] if the error is already active. If one or more new errors occur while a previous error of the same type is active, the new error is not logged.

Note: This handshake avoids a race condition that could otherwise lead to loss of error events. It follows that an error flag indicates that one or more of the indicated errors has occurred since the last acknowledgment.

It is IMPLEMENTATION DEFINED whether the interconnect to the memory system of an implementation returns abort completions for writes, which lead to \*\_ABT\_ERR global errors.

Note: A GPC fault can also result in reporting of \*\_ABT\_ERR global errors. See 3.24.5 SMMU behavior if a GPC fault is active for details on how other aspects of the GPC fault are reported.

#### 7.5.1 GERROR interrupt notification

A GERROR interrupt is triggered when the SMMU activates an error, with the exception of the following fields:

- MSI\_GERROR\_ABT\_ERR
  - Note: This error signifies that a prior attempt to raise a GERROR MSI had been aborted, and sending another to the same address might cause a second abort.

The GERROR interrupt is triggered only when SMMU\_(S\_)IRQ\_CTRL.GERROR\_IRQEN == 1. When MSIs are used, GERROR MSI notification is configured using SMMU\_(S\_)GERROR\_IRQ\_CFG{0,1,2}. If multiple errors activate at the same time, GERROR interrupts are permitted to be coalesced.


Where the architecture guarantees that a GERROR flag update is visible before the completion of an action that might have triggered an error, completion of such an action is not required to depend on the GERROR interrupt having been made visible.

Note: For example, an IRQ enable update from 1 to 0 does not complete until the abort of a prior MSI is recorded as GERROR.MSI\_\*\_ABT\_ERR, but the update is permitted to complete before the GERROR interrupt is triggered.

## Chapter 8

## Page request queue

The message format arriving on the PRI queue in response to an incoming PCIe PRI message closely follows the PCIe packet format. The field names have been generalized for consistency with terminology elsewhere in this specification. PRI messages are little-endian. The system must ensure that the mapping between StreamID and RequesterID or Root Complex is identical whether used in either incoming or outgoing directions for PRI, ATS or normal DMA traffic.

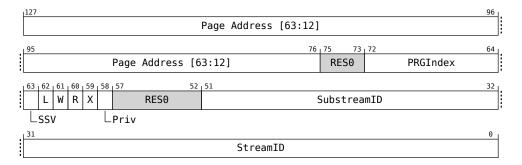

#### • StreamID[31:0]

- When used with ATS/PRI, StreamID[15:0] must equal PCIe RequesterID[15:0]. Bits StreamID[n:16] might indicate different Root Complex sources where more than 16 bits of StreamID are implemented.
- SSV: Substream valid
  - When 1, the Page Request was issued with a PASID TLP prefix.
  - When 0, the Page Request was not issued with a PASID. This value is also 0 when Substreams are not supported by the SMMU. When SSV == 0, the X and Priv bits are both 0.

- SubstreamID[19:0]
  - This value is UNKNOWN when SSV == 0.
- Page address[63:12]
- PRGIndex[8:0]
- Last, W, R, X, Priv: Last/Write/Read/eXecute/Privileged:
  - These bits encode requested page permissions
  - 'Last' is set on the last request in a PRG
  - The PCIe 'Stop PASID' marker message delimits Page Request message groups as a request with LWR == 0b100. Stop Markers have a PASID, that is, SSV == 1. A message that arrives without a PASID and that has LWR == 0b100 is not a Stop Marker, has SSV == 0, and is treated as a PRI Page Request.

Several related PRI Page Requests (PPRs) might arrive in batches, named Page Request Groups (PRGs). Several pages might be requested in a PRG and all arrive with the same PRGIndex value. The last page request in a PRG is marked by the Endpoint as Last == 1 and the PRI queue can be configured to send an interrupt when Last == 1 is received (see SMMU\_PRIQ\_IRQ\_CFG2. Member requests of a PRG are not guaranteed to be contiguous in the PRI queue as requests of more than one PRG might be interleaved. PPRs that are members of the PRG are not guaranteed to appear in the PRI queue in the order that they were issued from an endpoint, with the exception of the Last == 1 entry which is not re-ordered with respect to prior PPRs.

The SMMU is not required to track and verify that, for a given PRGIndex value, all entries received in a PRG have identical PASID TLP prefixes.

The CMD\_PRI\_RESP command causes a PRI response to be sent to an endpoint and takes a success or failure parameter to inform the endpoint of the overall status of the PRG. When Substreams (PASIDs in this context) are supported and this command is used with a valid SubstreamID (SSV == 1), a PASID tag is present on the response.

Note: Arm expects this command to be issued after all PPRs in a PRG have been processed, including the Last == 1 entry.

Note: The PRI queue does not overflow with correct software usage and endpoint credit management, because software grants credits to each device (using PCI configuration space) which sum to the amount of space in the PRI queue minus an allowance for any 'Stop PASID' markers that are required. The device can only issue as many outstanding PPRs as it has credits for.

The SMMU freely accepts incoming PRI messages and puts them in the PRI queue, if space is free and the queue is enabled and not in an error condition. If the queue is full a programming error (or protocol failure by PCIe endpoint) has occurred.

Note: A device is intended to always receive a response to a PRG, whether positive or negative.

Note: A CMD\_PRI\_RESP returns a credit to the Endpoint that could cause another PPR. This must be considered when calculating credit capability of a queue. If the number of credits granted to devices equals the queue capacity, a PPR must be consumed from the queue (freeing an entry) prior to issuing a CMD\_PRI\_RESP for that PPR.

The SMMU supports a maximum PRI queue size of 2<sup>19</sup> entries.

Note: When a guest VM manages a PRI queue for page request service from one or more devices assigned to that guest, it is up to the guest OS to allocate and size its local PRI queue. It will subsequently give credits to the devices to allow them to issue PPRs, using configuration space accesses. In this scenario, the hypervisor manages the actual SMMU PRI queue and the sum of the credits given to all clients of that queue must not be greater than the size of the queue. For safety, Arm expects that a hypervisor will trap the write of a credit value of a guest to a device, and substitute its own allocation if necessary. This would ensure that the total number of credits cannot exceed the PRI queue size, even if a guest OS requests a larger number of credits to be used. The hypervisor is also expected to choose an appropriate PRI queue size which will approximate the sum of credits reasonably expected to be used by all guest VMs using the PRI facilities of an SMMU.

### 8.1 PRI queue overflow

The PRI queue enters an overflow condition when the following conditions apply:

- The PRI queue is enabled, as indicated by the effective value of SMMU\_CR0.PRIQEN == 1.
- One or more PRI messages are received by the SMMU while the PRI queue is full, as determined by the general queue semantics.

The SMMU indicates that this has happened by toggling the SMMU\_PRIQ\_PROD.OVFLG flag, provided that an overflow condition is not already present. The overflow condition is acknowledged by writing the SMMU\_PRIQ\_CONS.OVACKFLG flag to the same value as OVFLG.

An active overflow condition inhibits new entries from being written to the PRI queue.

Note: This behavior differs from the active overflow condition on an Event queue. See also section 7.4 Event queue overflow.

Note: On detection of overflow, Arm recommends that software processes the received PRI queue entries as quickly as possible, and follows this with a single write of SMMU\_PRIQ\_CONS to simultaneously move on the RD pointer and acknowledge receipt of the overflow condition by setting OVACKFLG to the value read from OVFLG.

When an overflow condition is active, incoming PRI messages are discarded and:

• An automatic PRG Response is generated for Page Request messages having Last == 1, including the PRGI of the PPR that caused the overflow condition to become active. This response is returned to the endpoint that originated the PPR. The ResponseCode is defined below.

Note: This behavior occurs only for a Page Request message and does not occur when a Stop Marker is discarded in an overflow condition.

• PPRs having Last == 0 are silently ignored.

Note: The auto-response behavior can maintain safe operation when PCIe endpoints fail to fully adhere to the PRI credit mechanism.

Note: Although in an overflow condition the system software will not have addressed the cause of the PPR, on receipt of the automatic successful response Arm expects that the device will gracefully attempt an ATS request and PRI request again. On subsequent requests, system software might have had time to process the PRI queue contents and free space for the retries.

Note: Auto-responses might be sent because of an overflow condition, or for other reasons. See section 8.2 *Miscellaneous*.

When the SMMU supports PASIDs, an automatic PRG Response that is sent in response to a PRI queue overflow condition has the following properties:

- If the associated Page Request message did not have a PASID, the response has no PASID and the ResponseCode field of the response is Success (0b0000). SMMU\_IDR3.PPS and STE.PPAR do not affect this case.
- If the associated Page Request message had a PASID:
  - If SMMU\_IDR3.PPS == 1, then the response has the same PASID and the ResponseCode is Success (0b0000). STE.PPAR is not checked and its value is ignored.
  - If SMMU\_IDR3.PPS == 0, the STE.PPAR field associated with the StreamID of the PPR is checked.
     The PASID depends on the associated STE:
    - \* If the associated STE is valid, the response has the same PASID if STE.PPAR == 1 and it has no PASID if STE.PPAR == 0. In both cases, ResponseCode is Success (0b0000).

\* If the associated STE is inaccessible or invalid, such that STE.PPAR cannot be checked, no PASID is used and the ResponseCode is Failure (0b1111). This occurs if SMMU\_CR0.SMMUEN == 0, or the StreamID is out of range of the Stream table, or an External Abort was encountered during the STE fetch or VMS fetch, or the STE is ILLEGAL.

Note: In SMMUv3.2 or later, an STE access is permitted to also access the VMS if the VMS is enabled, which means that VMS access is permitted to occur as part of an STE.PPAR check and that access might give rise to this response failure case.

If SMMU\_CR2.RECINVSID == 1 and SMMU\_CR2.REC\_CFG\_ATS == 1, and the SMMU encounters C\_BAD\_STREAMID while attempting to check STE.PPAR, the event is recorded in the Event queue. If SMMU\_CR2.REC\_CFG\_ATS == 1, and the SMMU encounters F\_STE\_FETCH, F\_VMS\_FETCH, C\_BAD\_STE or F\_CFG\_CONFLICT while attempting to check STE.PPAR, the event is recorded in the Event queue. Otherwise, no event is recorded.

Note: For a normal transaction, the same conditions lead to C\_BAD\_STREAMID, F\_STE\_FETCH, and C\_BAD\_STE, respectively.

When PASIDs are not supported, an automatic response does not have a PASID prefix and the STE.PPAR field is not used. In this case, an implementation is permitted, but not required, to attempt to locate a valid STE and return either ResponseCode == Success or Failure in the manner described in this chapter even though STE.PPAR is not required. If the implementation does not perform this STE check, the ResponseCode == Success.

Note: A PRI-capable endpoint advertises whether it expects a PASID prefix to be present on a PRG response returned to it in response to a Page Request made with a PASID prefix, through the PRG Response PASID Required flag in the PRI Status register of the endpoint. Arm expects the STE.PPAR field associated with an endpoint to be programmed to the same value as this flag in the endpoint.

Stop PASID markers that arrive in an overflow condition are discarded and no auto-response is generated.

Note: The PCIe specification [1] does not consider PRI Stop PASID markers to be credited in the same way as PPRs. If endpoints disrespect Page Request allocation and credits, Stop PASID markers cannot be guaranteed to be visible to the system, given this rule. Software must use other means to determine PASID stop status in the presence of non-compliant PCIe endpoints.

#### 8.1.1 Recovery procedure

At the time that an overflow is detected, the PRI queue might contain several groups of page requests that are legitimate, but might contain one or more groups of requests that have been truncated so that their 'Last' event was among those lost when overflow occurred, and these groups have had a 'Success' auto-response sent when the 'Last' event was discarded.

Note: To re-synchronize and regain normal processing of page requests, one possible method is:

- Process the entire queue: Entries are read from the SMMU\_PRIQ\_CONS.RD index up to the SMMU\_PRIQ\_PROD.WR index, sending Page Request Group Response commands using the Command queue as appropriate, when 'Last' entries are encountered.
- The PRI queue might contain the start of groups of page requests whose Last requests were lost, having been received and auto-responded to after overflow. A group must be ignored by software if no Last event has been found for it up to the point that the SMMU last wrote (the SMMU\_PRIQ\_PROD.WR index).
- Update SMMU\_PRIQ\_CONS.RD, including OVACKFLG, to clear the overflow condition and mark the
  entire queue as empty or processed.

Note: After an overflow condition has been resolved, a PRGIndex value might be used in PPRs that later become visible, associated with a semantically different PRG to that of a PRG with entries in the pre-overflow PRI queue. This would occur when the queue enters overflow state before the Last PPR of the initial PRG can be recorded. The Last PPR has a successful auto-response sent, meaning the endpoint is free to re-use the PRGIndex value.

#### 8.2 Miscellaneous

An external abort detected while accessing the PRI queue, for example when writing a record, activates the SMMU\_GERROR.PRIQ\_ABT\_ERR Global Error. If PRIQ\_ABT\_ERR becomes active, one or more PRI records might have been lost. The behavior of PRIQ\_ABT\_ERR relates to entries written to the PRI queue as the behavior of EVENTQ\_ABT\_ERR relates to entries written to the Event queue, as described in section 7.2.2 Event queue access external abort. It is IMPLEMENTATION DEFINED whether an external abort that is triggered by a write to the PRI queue is synchronous or asynchronous. When the write of a PRI queue entry results in a synchronous external abort, an automatic PRG Response with ResponseCode == 0b1111 is generated for the associated PPR. When the write of a PRI queue entry results in an asynchronous external abort, one or more queue entries might have been lost and no automatic response is generated for the PPRs that are associated with these entries.

An implementation is permitted to read any address within the bounds of the PRI queue when the queue is enabled (that is, when the effective value of SMMU\_CR0.PRIQEN == 1). In addition to writes of new records to the queue, such reads might also lead to an external abort.

A PPR received from a Secure stream is discarded, is not recorded into the PRI queue and results in an automatic Response Message having ResponseCode == 0b1111.

If an active GERROR.PRIQ\_ABT\_ERR error condition exists, or if the effective value of SMMU\_CR0.PRIQEN == 0 (SMMU\_CR0.SMMUEN == 0 implies PRIQEN == 0) all of the following apply:

- No entries are written to the PRI queue.
- All incoming PPRs cause an automatic PRG Response having ResponseCode == 0b1111 ('Response Failure') and the messages are discarded.

Note: Incoming PRI Page Requests are not affected by SMMU\_CR0.ATSCHK or STE.EATS configuration.

The SMMU does not generate responses to Stop Marker messages.

Automatically-generated PRG responses have the following properties:

- Same StreamID as the PPR that triggered the response so that the message is returned to the originating RequesterID.
- Same Page Request Group Index as the PPR that triggered the response.
- Response Code depends on the cause of auto-generated response, see this section and sections 8.1 *PRI queue overflow* and 8.3 *PRG Response Message codes*.
- No PASID prefix is used on responses that were auto-generated because the effective value of PRIQEN == 0 or PRIQ ABT ERR occurred.
- A PASID prefix is used if all of the following are true:
  - The response was auto-generated because of PRI queue overflow.
  - The SMMU supports substreams.
  - SMMU IDR3.PPS == 1, or SMMU IDR3.PPS == 0 and STE.PPAR == 1.
  - The response will not have ResponseCode == 0b1111.
  - The PPR that triggered the auto-response had a PASID prefix.
- If a PASID prefix is used, its PASID value matches that of the PPR that triggered the response.

## 8.3 PRG Response Message codes

| ResponseCode | Status              | Returned for  |
|--------------|---------------------|---|
| 060000       | Success             | <ul><li>CMD_PRI_RESP with Resp == Success</li><li>Software has paged in all pages successfully.</li></ul>   |
|              |                     | This response is returned for an auto-response on overflow where no PASID was supplied on the associated request, or SMMU_IDR3.PPS == 1, or no error is encountered in checking STE.PPAR.   |
| 0b0001       | Invalid<br>Request  | <ul> <li>CMD_PRI_RESP with Resp == InvalidRequest</li> <li>Software failed to page-in all pages. It encountered one or more pages that do not exist or have insufficient privileges</li> </ul>  |
| 0b1111       | Response<br>Failure | <ul> <li>CMD_PRI_RESP with Resp == ResponseFailure</li> <li>• Software has determined that ATS is disabled for the stream, or some other (non-mapping-related) permanent failure.</li> <li>This response is returned for an auto-response on overflow where SMMU_IDR3.PPS == 0 and the associated request was supplied with a PASID and the SMMU is unable to locate a valid STE when checking STE.PPAR.</li> <li>This response is also returned for all incoming PPRs when any of the following conditions exist:</li> <li>• The effective value of PRIQEN == 0 (which might be because SMMU_CR0.SMMUEN == 0),</li> <li>• A GERROR.PRIQ_ABT_ERR error is active.</li> <li>• The PPR is received from a Secure stream.</li> </ul> |

## Chapter 9

## **Address Translation Operations**

The SMMU optionally supports a software-accessible Address Translation Operations (ATOS) facility. The presence of this facility is reported by SMMU\_IDRO.ATOS. The ATOS facility allows software to perform an address lookup to determine the output address that a transaction would take, given an input address, stream, substream and access properties. The requested lookup can be the full end-to-end, with all configured stages, or only a part of the configuration for the stream. The result of the request is either the output address or a fault status code, if a translation is unable to complete. Unlike transactions, ATOS requests are not affected by fault configuration bits in the STE or CD, and do not record fault events or stall.

If ATOS is supported, an optional virtual ATOS (VATOS) page might also be supported. This is reported by SMMU\_IDR0.VATOS. The VATOS page can be mapped through to a chosen software entity so that it might perform a limited set of stage 1-only ATOS lookups directly. The VATOS interface can make stage 1-only ATOS lookups for stage 1 and stage 2 nested configurations, or for stage 1-only configurations. The VATOS interface can only make lookups for configurations associated with the NS-EL1 StreamWorld.

Note: Arm expects VATOS to be used with stage 1 and stage 2 nested configurations.

When ATOS is supported, a group of SMMU\_GATOS\_SID, SMMU\_GATOS\_ADDR and SMMU\_GATOS\_PAR registers are available in the memory map. When SMMU\_S\_IDR1.SECURE\_IMPL == 1, a second group is present in SMMU\_S\_GATOS\_SID, SMMU\_S\_GATOS\_ADDR, SMMU\_S\_GATOS\_PAR. If VATOS is supported, a third group, SMMU\_VATOS\_SID, SMMU\_VATOS\_ADDR and SMMU\_VATOS\_PAR, are present in a distinct VATOS page, see Chapter 6 *Memory map and registers*. If both VATOS and Secure stage 2 are supported, a fourth group SMMU\_S\_VATOS\_SID, SMMU\_S\_VATOS\_ADDR and SMMU\_S\_VATOS\_PAR, are present in a distinct S\_VATOS page.

When Secure stage 2 is supported, the SMMU\_S\_GATOS interface can be used to issue stage 1+2 and stage 2 ATOS lookups to Secure streams, that is, when SMMU\_S\_GATOS\_SID.SSEC == 1. These lookups are subject to the same validity checks with respect to configured and enabled stages of translation as would be performed using the Non-secure GATOS interface.

Each group of registers might perform one lookup at a time, but all implemented sets of registers might perform independent lookups simultaneously. Access to a register that affects ATOS behavior only affects the group that is accessed, and programming of the registers (whether correct or incorrect) does not affect other groups.

Apart from differences in scope the groups of registers are equivalent and are referred to generically using ATOS\_prefixes in this chapter. The difference in scope between the ATOS registers is that the VATOS registers can only access stage 1 translations, the GATOS registers cannot access Secure stream information, and the S\_GATOS registers can access Secure stream information.

The ATOS registers might perform address lookups with the following properties as though a transaction were received through a given StreamID and SubstreamID:

- Read/Write.
- Unprivileged/Privileged.
- Instruction/Data.

The types of translations available are:

- VA to PA for a stage 1 and stage 2 configuration.
- VA to IPA for a stage 1 of a stage 1 and stage 2 configuration.
- VA to IPA or PA for a stage 1-only configuration.
- IPA to PA for a configuration with stage 2.

The lookup procedure is:

- 1. Ensure the ATOS interface is idle (ATOS\_CTRL.RUN == 0) and claimed for exclusive use in case several agents share the interface.
- 2. Ensure ATOS\_SID identifies the StreamID and SubstreamID that will be used for the lookup.
- 3. Write the source address and lookup action to ATOS ADDR.
- 4. Ensure the prior register writes are observed by the SMMU before the following write.
- 5. Write ATOS\_CTRL.RUN == 1 to initiate the lookup.
- 6. Poll ATOS\_CTRL.RUN; the SMMU clears the RUN flag when the result is ready.
- 7. The result appears in ATOS\_PAR. This might be a result address or a fault code, determined in the same way as for an ordinary input transaction.

The translation process for an ATOS request is not required to begin immediately when ATOS\_CTRL.RUN is written to 1, and will begin in finite time. Arm expects that any delay will be small.

An ATOS translation interacts with configuration and TLB invalidation in the same way as a translation that is performed for a transaction. The result of an ATOS translation that completes after an invalidation completes is not based on any stale data that was targeted by the invalidation. See section 3.21 *Structure access rules and update procedures* for more information.

Note: A CMD\_SYNC depends upon the visibility of HTTU updates performed by completed ATOS translations.

The completion of an invalidation operation is permitted, but not required, to depend on either of the following:

- The completion of an ATOS translation that has been requested by writing RUN to 1 but has not begun before the invalidation completion operation was observed.
- The completion of an ATOS translation that is unaffected by the invalidation.

The domain of the lookup, in Secure, Non-secure, hypervisor, EL3 or Monitor terms, is determined by the stream configuration. Translations from a Secure stream are only returned through the S\_ATOS interface. A Non-secure stream might be queried by either interface. The S\_ATOS interface contains a SSEC flag to indicate whether the requested StreamID is to be treated as Secure or Non-secure.

The lookup action provided in the write to ATOS\_ADDR determines the read/write, instruction/data and privilege attributes of the request.

The treatment of the input address that is provided by ATOS\_ADDR is governed by the same rules that affect an ordinary translation, in terms of range checks according to TxSZ, IPS, and PS SMMU properties. See section 3.4 *Address sizes*. ATOS\_ADDR.ADDR provides an input 64-bit address.

Note: As the full address is provided, a translation lookup could fail with a Translation fault because it is outside the configured input range for the initial stage or stages of lookup. This includes consideration of the Top Byte Ignore (TBI) configuration.

The permissions model used by an ATOS translation is the same as is used for an ordinary transaction, except that the read/write, instruction/data and privileged/unprivileged properties of the translation are taken directly from ATOS\_ADDR instead of coming from an input transaction or overrides in STE.{INSTCFG, PRIVCFG}.

Note: The ATOS permission attributes are not affected by the STE.INSTCFG or STE.PRIVCFG overrides.

In the case where an ATOS operation explicitly performs translation at only one stage when a stream is configured for stage 1 and stage 2 translation, only the permission configuration that is applicable to the requested translation stage is used.

Note: This means that CD-based permission controls such as PAN, UWXN and WXN are not used when an ATOS translation does not translate using stage 1. When stage 1 is in use, all of the CD-based permission controls are used by ATOS, in the same way as would be done for an ordinary transaction. These are CD.PAN, CD.UWXN, CD.WXN and CD.HAD{0,1}.

When ATOS\_ADDR.HTTUI == 0, ATOS operations perform HTTU when supported by the SMMU and configured for any of the translation regimes used to perform the lookup, in the same way as would occur for a read or write transaction to the same address of the same StreamID/SubstreamID, including fetch of CD and Stage 1 translation table descriptors through stage 2 translations.

When ATOS\_ADDR.HTTUI == 1, the request inhibits HTTU and the behavior is as follows:

- When an Access flag update is enabled for a stage of translation (STE.S2HA == 1 or CD.HA == 1), the SMMU is permitted but not required to set the Access flags in translation table descriptors for the requested address. If AF == 0, then the ATOS translation behaves as though AF == 1, even if the Access flag is not updated. If a translation-related fault or external abort occurs as a result of performing the Access flag update, it is IMPLEMENTATION DEFINED whether the ATOS operation reports the fault or whether the operation continues as though the Access flag was successfully updated.
- When update of the dirty state of a page is enabled for a stage of translation (STE.S2HD == 1 or CD.HD == 1) a translation table descriptor with DBM == 1, and without write permission at the required privilege level because of the value of AP[2] == 1 or S2AP[1] == 0, is considered to be writable by the ATOS mechanism but the AP[2]/S2AP[1] bits are not updated.

Setting ATOS\_ADDR.HTTUI == 1 has no effect when updates to both the Access flag and dirty state of the page are disabled.

Note: The behavior of an ATOS operation with HTTUI == 1 matches that of address translation operations in the PE, with respect to AF and dirty state of the page permissions.

Note: If HTTU is inhibited in order to translate without changing the translation table state, this inhibition includes stage 2 translation tables that back the stage 1 translation table in nested configurations.

When HTTU is enabled at stage 2 in a nested stage 1 and stage 2 configuration, and ATOS performs a stage 1-only VA to IPA translation and HTTU is enabled for ATOS, the SMMU does not mark the final IPA's page as dirty and is permitted but not required to mark the final IPA's page as accessed.

ATOS requests using SMMU\_GATOS\_\* or SMMU\_VATOS\_\* require SMMU\_CR0.SMMUEN == 1 and ATOS requests using SMMU\_S\_GATOS\_\* or SMMU\_S\_VATOS\_\* require SMMU\_S\_CR0.SMMUEN == 1. When an ATOS request is issued on the Secure SMMU\_S\_GATOS\_\* interface and SMMU\_S\_GATOS\_SID.SSEC == 0, the translation also requires SMMU\_CR0.SMMUEN == 1. See SMMU\_GATOS\_CTRL and SMMU\_S\_GATOS\_CTRL for more information.

An ATOS request is permitted to use and insert cached configuration structures and translations, consistent with any caches that are provided for transaction translation. Regardless of the value of ATOS\_ADDR.HTTUI, an ATOS request that uses a configuration that has HTTU enabled, that is a configuration with STE.S2HA == 1, CD.HA == 1, STE.S2HD == 1, or CD.HD == 1, does not insert or update TLB entries that would be marked as Accessed or Dirty when their associated translation table descriptors in memory are not.

When SMMU\_S\_IDR1.SECURE\_IMPL == 1, the SMMU does not allow:

- Secure information to be used to form a Non-secure ATOS\_PAR result
- A Non-secure ATOS request to affect SMMU\_S\_GATOS\_\* register values, including PAR, or active Secure ATOS translation requests.

#### 9.1 Register usage

#### 9.1.1 ATOS\_CTRL

Software writes ATOS\_CTRL.RUN to 1 to request a translation. The bit is cleared back to 0 by the SMMU when ATOS\_PAR has been updated with the result.

Software must not write any register in the ATOS group when ATOS\_CTRL.RUN == 1.

SMMUEN must not be cleared while one or more ATOS requests are in progress for the programming interface, otherwise ongoing requests might be terminated. ATOS\_CTRL.RUN is cleared by an Update of SMMUEN to 0.

Note: An ATOS request that is made through the Secure programming interface for a Non-secure StreamID might be affected by Non-secure software simultaneously clearing SMMU\_CR0.SMMUEN from another PE, so must accept spurious ATOS translation failures which might result.

See SMMU\_GATOS\_CTRL for more information on ATOS\_CTRL.RUN and alteration of the SMMUEN flags.

#### 9.1.2 ATOS\_SID

The StreamID and optional SubstreamID are written to ATOS\_SID.STREAMID, ATOS\_SID.SUBSTREAMID and ATOS\_SID.SSID\_VALID in preparation for a subsequent ATOS lookup. When ATOS\_CTRL.RUN is written to 1, the value of this register is used as input to the process.

The SMMU\_S\_GATOS\_SID register contains a SSEC flag that selects between Secure and Non-secure StreamID lookup for an ATOS request that is issued from the Secure interface. The SSEC flag is RES1 in the SMMU\_S\_VATOS\_SID register. A Secure VATOS request can only access Secure StreamIDs.

Note: Non-secure ATOS interfaces have no SSEC flag, so they can only look up Non-secure StreamIDs.

#### 9.1.3 ATOS ADDR

The address to be queried is written to ATOS\_ADDR.ADDR.

The type of lookup that is required is written to the ATOS\_ADDR.TYPE field:

| TYPE | Meaning   |
|------|---|
| 0b00 | Reserved Generates ATOS error INV REO.  |
| 0b01 | Stage 1 (Look up IPA/PA from VA) Only format available when SMMU supports only stage 1 translation.   |
|      | Only format available to VATOS interface.  Note: It is permissible to make a stage 1 request for a StreamID with either a stage 1-only or a stage 1 and 2 |
|      | configuration.  Generates ATOS error INV_REQ when SMMU does not support stage 1 translation.  |
|      | Generates ATOS error INV_STAGE when stage 1 is supported but not configured to translate for the given StreamID.  |
|      | Note: This does not require a stage 1-only configuration for the StreamID. This lookup returns the stage 1 information from a nested configuration.       |

| TYPE | Meaning   |
|------|---|
| 0b10 | Stage 2 (look up PA from IPA) Generates ATOS error INV_REQ when used from the SMMU_VATOS_ADDR interface, or when the SMMU does not support stage 2 translation. Generates ATOS error INV_STAGE when stage 2 is supported but not configured to translate for the given StreamID.  If SMMU_S_IDR1.SEL2 == 0, generates ATOS error INV_STAGE when issued from the Secure ATOS interface with SMMU_S_GATOS_SID.SSEC == 1.  Generates ATOS error INV_REQ if ATOS_SID.SSID_VALID (because no stage 1 translation is requested).  Note: This does not require a stage 2-only configuration for the StreamID. This lookup returns the stage 2 information from a nested configuration. |
| 0b11 | Stage 1 and stage 2 (Look up PA from VA) Generates ATOS error INV_REQ when used from SMMU_VATOS_ADDR interface, or when the SMMU does not support both stage 1 and stage 2. Generates ATOS error INV_STAGE when stage 1 and stage 2 are supported but not both configured to translate for the given StreamID.  If SMMU_S_IDR1.SEL2 == 0, generates ATOS error INV_STAGE when issued from the Secure ATOS interface with SMMU_S_GATOS_SID.SSEC == 1.  |

When TYPE == 0b01 or 0b11 (requesting stage 1), the generation of INV\_STAGE is determined from whether stage 1 is configured to translate by STE.Config[2:0] and is not caused by a STE.S1DSS == 0b01 configuration.

A request that is incompatible with the ATOS interface is an invalid request, and results in INV REQ.

Note: For example, a stage 1 request to an SMMU that does not support stage 1, or a stage 2 request to a VATOS interface, will cause INV\_REQ.

A valid request through any ATOS interface for information about a stream that has an invalid STE results in C\_BAD\_STE, if a higher priority fault has not occurred. See section 9.1.4 ATOS\_PAR.

If an STE is fetched successfully and the STE is valid, then one of the following will apply:

- A request through a GATOS interface for information about a stream that has STE.Config[2:0] == 0b0xx or 0b100 results in INV\_STAGE.
- A request through a VATOS interface for information about a stream that has STE.Config[2:0] == 0b0xx → or 0b100 results in C\_BAD\_STE, because the STE.S2VMID field is not valid and cannot match the VATOS\_SEL.VMID value. See section 9.1.6 SMMU\_(S\_)VATOS\_SEL.

A request with ATOS\_SID.SSID\_VALID == 0 on a stream with STE.S1DSS == 0b01 leads to one of the following:

• A stage 1 lookup (TYPE == 0b01) behaves according to stage 1-bypass, which returns the address provided in ATOS\_ADDR.ADDR without translation, or returns a stage 1 fault.

If no fault occurs and a result is returned, the result contains the following properties:

- ATOS\_PAR.ADDR is the input address plus a translation size encoded in conjunction with ATOS\_PAR.Size. The translation size is permitted to be any value between the minimum implemented granule size and the IAS.
- ATOS\_PAR.ATTR and ATOS\_PAR.SH are IMPLEMENTATION DEFINED.
- SMMU S GATOS PAR.NS is IMPLEMENTATION DEFINED.

Note: It is possible for an Address Size fault to result from stage 1 in bypass. It is also possible for the configuration of SMMU\_S\_CR0.SIF to cause a stage 1 permission fault on a Secure stream.

• A stage 1 and stage 2 lookup (TYPE == 0b11) behaves according to stage 1-bypass, and stage 2-translates, returning the address provided in ATOS\_ADDR.ADDR translated at stage 2, or a stage 1 fault or a stage 2 fault.

The required read/write, instruction/data and privileged/unprivileged properties of the ATOS request are written to ATOS\_ADDR.RnW, ATOS\_ADDR.InD and ATOS\_ADDR.PnU, respectively. These attributes are not affected by the STE.INSTCFG or STE.PRIVCFG overrides.

The required NS attribute of the ATOS request is written to ATOS\_ADDR.NS. The supplied NS attribute is not affected by the STE.NSCFG override.

#### 9.1.4 ATOS PAR

ATOS\_PAR contains the result of the translation request, which provides either a translated address and attributes or an error result.

The content of ATOS\_PAR is only valid when a translation has been both initiated and completed through the sequence of the corresponding RUN bit having been set to 1 by software, and then cleared to 0 by the SMMU.

If ATOS\_PAR.FAULT == 0, the translation was successful and ATOS\_PAR.ADDR returns the translated address, in addition to the page size, and other fields provide the determined access attributes. See SMMU\_GATOS\_PAR for details of the fields.

The attributes that are returned in ATOS\_PAR.ATTR and ATOS\_PAR.SH are those that are determined from the translation for a stage 1-only or a stage 2-only request or for a stage 1 and stage 2 request. See section 13.1.5 *Combine* for definition of attribute combination. Because the SH field in the descriptor only encodes a Shareability for Normal memory, a Shareability of OSH is always provided in ATOS\_PAR.SH when a Device memory type is determined from this procedure. The memory attributes do not include STE.{SHCFG, MTCFG, MemAttr} overrides and are permitted to reflect the attributes that are stored in TLB entries. The attributes that are stored in the TLB entries might be an IMPLEMENTATION DEFINED subset of the architectural TTD/MAIR attributes/types, see SMMU\_GATOS\_PAR.

Consistent with the rules for SMMU-originated accesses in a system that supports RME, configuration structure fetches and translation table walks arising from use of the ATOS registers are subject to granule protection checks. See 3.24.3 SMMU-originated accesses.

If a configuration structure fetch or translation table walk fails with a granule protection check fault, this is reported in both:

- The appropriate SMMU\_ROOT\_GPF\_FAR or SMMU\_ROOT\_GPT\_CFG\_FAR register, if that register does not already contain an active fault.
- The appropriate ATOS\_PAR register, as though the failed access experienced an External abort.

When performing an ATOS operation, the SMMU does not perform a granule protection check on the final output address of a successful translation.

If ATOS\_PAR.FAULT == 1, an error or fault occurred during translation. In this case, ATOS\_PAR.FAULTCODE reports whether there was:

- An error in invocation, which is INV\_REQ or INV\_STAGE, as described in section 9.1.3 ATOS\_ADDR.
- A fault or error during translation, corresponding to a standard SMMU event type, for example C\_BAD\_STE or F\_TRANSLATION.
- An internal error. For example, a RAS error that caused the translation to terminate, or the case where SMMUEN was cleared to 0, thereby terminating the translation.

Other fields in ATOS\_PAR determine the following:

- REASON. This field determines whether the issue was encountered at stage 1, or at stage 2 because of the incoming IPA, or because of fetching a stage 1 translation or a CD through an IPA that caused a stage 2 fault.
- FADDR. This field determines the IPA that caused a stage 2 fault.

The validity of the REASON and FADDR fields changes depending on the type of request that is made and the kind of fault encountered. In the following table:

- **TRF** means any of the Translation Related Faults (F\_TRANSLATION, F\_ADDR\_SIZE, F\_ACCESS, F\_PERMISSION).
- MISC means all other faults, with the exception of  $F_WALK_EABT$ ,  $F_CD_FETCH$ ,  $INV_REQ$  and  $INV_STAGE$ .

Note: MISC therefore represents: INTERNAL\_ERR, C\_BAD\_STREAMID, F\_STE\_FETCH, F\_VMS\_FETCH, C\_BAD\_STE, F\_STREAM\_DISABLED, C\_BAD\_SUBSTREAMID, C\_BAD\_CD, F\_TLB\_CONFLICT, F\_CFG\_CONFLICT.

| ATOS_ADDR.<br>TYPE                           | Possible FAULTCODE values  | Possible PAR.REASON values | FADDR<br>contents | Notes  |
|--|--|----------------------------|-------------------|--|
| Any  | INV_REQ, INV_STAGE   | 0 0 ძ0 0                   | 0                 | Error in invocation.<br>See section 9.1.3<br>ATOS_ADDR                                       |
| 0b01 (stage 1)<br>on stage 1-only<br>stream  | F_WALK_EABT  | 0b00 (S1)                  | 0                 | descriptor fetch abort   |
|  | F_CD_FETCH   | -                          |                   | CD fetch abort   |
|  | TRF, MISC  | -                          |                   |  |
| 0b01 (stage 1)<br>on stage 1 and 2<br>stream | F_WALK_EABT  | 0b00 (S1)                  | 0                 | Stage 1 descriptor fetch abort (actual bus abort)  |
|  | F_CD_FETCH   | _                          |                   | CD fetch abort (actual bus abort)  |
|  | F_CD_FETCH, if stage 2<br>F_WALK_EABT or stage<br>2 TRF is caused by CD<br>fetch         | -                          |                   | CD fetch abort<br>(synthetic, because of<br>a stage 2 translation<br>failure)                |
|  | F_WALK_EABT, if stage 2 F_WALK_EABT or stage 2 TRF is cased by stage 1 descriptor fetch. | -                          |                   | Stage 1 descriptor<br>fetch abort (synthetic<br>because of a stage 2<br>translation failure) |

| ATOS_ADDR.<br>TYPE         | Possible FAULTCODE values   | Possible PAR.REASON values | FADDR<br>contents                                  | Notes   |
|----------------------------|---|----------------------------|--|---|
|                            | TRF, MISC   |                            |  | Configuration or miscellaneous fault, or stage 1 TRF. Note: The IPA that is determined from a Stage 1 translation is not further translated to a PA, therefore stage 2 TRFs on an illegal IPA do not occur. |
| 0b10 (stage 2)             | F_ADDR_SIZE   | 0b11 (S2, IN)              | 0  | Stage 2 Address Size fault.   |
|                            | F_ADDR_SIZE   | 0b00 (S1)                  | 0  | Stage 1 Address Size fault. It is IMPLEMENTATION DEFINED whether an SMMUv3.0 implementation reports this fault as REASON = 0b00 or 0b01   |
|                            | F_TRANSLATION,<br>F_ACCESS,<br>F_PERMISSION,<br>F_WALK_EABT, MISC | 0b11 (S2, IN)              | 0  |   |
| 0b11 (stage 1 and stage 2) | TRF   | 0b00 (S1)                  | 0  | Stage 1 translation-<br>related fault   |
|                            |   | 0b01 (S2, CD fetch)        | IPA input to<br>stage 2 (CD<br>address)            | Stage 2 fault on CD fetch   |
|                            |   | 0b10 (S2, TT fetch)        | IPA input to<br>stage 2<br>(descriptor<br>address) | Stage 2 fault on stage 1 descriptor fetch   |
|                            |   | 0b11 (S2, IN)              | IPA input to stage 2 (stage 1 output)              | Stage 2 fault on IPA  |
|                            | F_WALK_EABT   | 0000                       | 0  | Stage 1 descriptor fetch abort  |

| ATOS_ADDR. TYPE | Possible FAULTCODE values | Possible PAR.REASON values | FADDR<br>contents | Notes  |
|-----------------|---------------------------|----------------------------|-------------------|--|
|                 |                           | 0b01,<br>0b10,<br>0b11     | 0                 | Stage 2 descriptor<br>fetch abort (for<br>CD/TT/IN, as as<br>indicated by the<br>REASON field) |
|                 | F_CD_FETCH                | 0b00                       | 0                 | CD fetch abort   |
|                 | MISC                      | 0b00                       | 0                 |  |

### 9.1.5 ATOS\_PAR.FAULTCODE encodings

ATOS\_PAR.FAULTCODE has the following values:

| Type | Meaning           | Notes   |  |
|------|-------------------|---|--|
| 0xFF | INV_REQ           | Malformed ATOS request  |  |
| 0xFE | INV_STAGE         | Request for stage of translation that is not present  |  |
| 0xFD | INTERNAL_ERR      | Translation was terminated for miscellaneous reason.  |  |
| 0x02 | C_BAD_STREAMID    | ATOS_SID.STREAMID out of range of configured Stream table.  Note: ATOS_SID.STREAMID might not store bits above the implemented  StreamID size. An implementation is permitted but not required to record this error if ATOS_SID.STREAMID is greater than the implemented StreamID size, or might truncate STREAMID to the implemented StreamID size.        |  |
| 0x03 | F_STE_FETCH       | External abort or error on STE fetch  |  |
| 0x04 | C_BAD_STE         | Selected STE invalid or illegal   |  |
| 0x06 | F_STREAM_DISABLED | Non-substream request was made (ATOS_SID.SSID_VALID == 0) on configuration with Config[0] == 1 and STE.S1CDMax > 0 and STE.S1DSS == 0b00, or a request with SubstreamID 0 was made on configuration with Config[0] == 1 and STE.S1CDMax > 0 and STE.S1DSS == 0b10.  |  |
| 0x08 | C_BAD_SUBSTREAMID | D ATOS_SID.SSID out of range of configured CD table.  Note: ATOS_SID.SUBSTREAMID might not store bits above the implemented SubstreamID size. An implementation is permitted but not required to record th error if ATOS_SID.SUBSTREAMID is greater than the implemented Substream size, or might truncate SUBSTREAMID to the implemented SubstreamID size. |  |
| 0x09 | F_CD_FETCH        | External abort or error on CD fetch For a VATOS (or other stage 1-only) request, this is returned where the CD fetch caused a stage 2 fault.  |  |
| 0x0A | C_BAD_CD          | Selected CD invalid or illegal  |  |

| Type | Meaning        | Notes  |  |
|------|----------------|--|--|
| 0x0B | F_WALK_EABT    | External abort or error on translation table walk For a VATOS (or other stage 1-only) request, this is returned where the stage 1 walk caused a stage 2 fault. |  |
| 0x10 | F_TRANSLATION  | Translation fault  |  |
| 0x11 | F_ADDR_SIZE    | Address Size fault   |  |
| 0x12 | F_ACCESS       | Access flag fault  |  |
| 0x13 | F_PERMISSION   | Permission fault   |  |
| 0x20 | F_TLB_CONFLICT | Translation caused TLB conflict condition  |  |
| 0x21 | F_CFG_CONLICT  | Translation caused configuration cache conflict condition  |  |
| 0x25 | F_VMS_FETCH    | External abort or error on VMS fetch   |  |

All other values are Reserved.

The priority order of the  $C_*$  and  $F_*$  errors and faults follow the same order that is set out for Event queue events in 7.3.22 *Event queue record priorities*, with the relative priorities for INV\_REQ and INV\_STAGE as shown here:

- 1. INV\_REQ
  - Note: Whether INV\_REQ is to be reported is determined statically before access of configuration structures.
- 2. INV\_STAGE (point A, see below)
- 3. C\_BAD\_STREAMID
- 4. F\_STE\_FETCH
- 5. C\_BAD\_STE
- 6. F\_VMS\_FETCH
  - a. Note: Relative priority of F\_VMS\_FETCH is defined below.
- 7. INV\_STAGE (point B, see below)
- 8. C\_BAD\_SUBSTREAMID
- 9. F\_STREAM\_DISABLED
- 10. Translation faults (stage 2, for fetch of a CD)
- 11. F\_CD\_FETCH
- 12. C\_BAD\_CD
- 13. Translation-related faults (stage 1 or stage 2, for input address)

INV\_STAGE is reported after the STE is fetched and valid, at point B, after C\_BAD\_STREAMID, F\_STE\_FETCH and C\_BAD\_STE are checked, if the enabled set of stages of the STE are determined to be incompatible with the request. INV\_STAGE takes precedence over C\_BAD\_SUBSTREAMID, F\_STREAM\_DISABLED, F\_CD\_FETCH, C\_BAD\_CD and all Translation-related faults.

When SMMU\_S\_IDR1.SEL2 == 0 and a Secure ATOS request is made with SMMU\_S\_GATOS\_SID.SSEC == 1, then INV\_STAGE is permitted to be determined statically at point A prior to checking for C\_BAD\_STREAMID.

Note: This is because a Secure stream cannot have stage 2 enabled when SMMU\_S\_IDR1.SEL2 == 0, so an ATOS request for stage 2 information from a Secure stream is always invalid. When SMMU\_S\_IDR1.SEL2 == 1, Secure stage 2 is supported which means that this check cannot be performed statically and must take the STE configuration into consideration at point B, in the same way as for a Non-secure stream.

F\_VMS\_FETCH is reported after C\_BAD\_STE, but its priority relative to other events is IMPLEMENTATION DEFINED.

### 9.1.6 SMMU (S )VATOS SEL

The VATOS interface provides a mechanism to limit the scope of VATOS requests so that VATOS responses only provide information relating to the VMID of the Virtual Machine that is associated with that interface.

Note: Arm expects the VATOS interface to be exposed to one virtual machine at a time.

Note: Arm expects the VATOS interface to be used in scenarios where a Virtual Machine is able to make queries using a physical StreamID number and where a system-specific mechanism describes the presence of the VATOS page in the Virtual Machine address space.

The scope of a VATOS interface is limited to STEs configured to tag translations with a VMID that matches the corresponding SMMU\_(S\_)VATOS\_SEL.VMID field. If the values match, a VATOS request is permitted to return information using that STE. If the values do not match, or the STE does not contain a VMID, a request is denied with C\_BAD\_STE.

A request made through a VATOS interface is checked using this procedure:

- 1. The VATOS\_ADDR.TYPE of the request is checked, leading to INV\_REQ if it is invalid for a VATOS interface. See section 9.1.3 ATOS\_ADDR.
- 2. The STE is fetched for the StreamID requested using SMMU\_(S\_)VATOS\_SID. This process might lead to C\_BAD\_STREAMID, F\_STE\_FETCH or C\_BAD\_STE.
- 3. In some STE configurations, translations are not tagged with a VMID. This is described in the definition of STE.S2VMID. In this case, the result is C\_BAD\_STE.
- 4. If the configuration of the STE means that translations are tagged with a VMID, the effective STE.S2VMID value is compared against the corresponding SMMU\_(S\_)VATOS\_SEL.VMID value. If the values do not match, the result is C\_BAD\_STE.
- 5. If the values match, the VATOS request is permitted to return StreamID-specific information. If the STE configuration is not appropriate for the request, the result is INV\_STAGE.
  - Note: For example, an STE with stage 2-only translation cannot be queried using VATOS.
- 6. Any other ATOS response is now possible, for example a fault or error with lower priority than C\_BAD\_STE, or a successful result.

Note: For a Non-secure STE with an effective NS-EL1 StreamWorld, the STE.S2VMID field is used even when stage 1-only translation is used. For a Secure STE with an effective Secure StreamWorld and stage 1-only translation, an effective value of 0 is used for VMID tagging and STE.S2VMID is IGNORED.

# Chapter 10

# **Performance Monitors Extension**

# 10.1 Support and discovery

Performance monitoring facilities are optional. When implemented, the SMMU has one or more Performance Monitor Counter Groups (PMCG) associated with it. The discovery and enumeration of a base address for each group is IMPLEMENTATION DEFINED. The Performance Monitor Counter Groups are standalone monitoring facilities and, as such, can be implemented in separate components that are all associated with (but not necessarily part of) an SMMU.

Note: A centralized ID scheme to identify common properties is not currently exploited because PMCGs might be independently-designed, and contain their own identification facilities.

## 10.2 Overview of counters and groups

The SMMU performance monitoring facility provides:

- A number of specified events can be detected that correspond to behavior of aspects of the SMMU or the implementation.
- A number of counters that increment when their configured event occurs.

An implementation has one or more counter groups, and each group contains 1 - 64 counters. Each group has a discoverable set of supported events which can be counted by the counters within the group. All counters in a group can be configured to count any of the supported events. Different groups are not required to support the same set of events.

For example, a particular distributed SMMU implementation might have two groups:

- A group for a unit performing translation table walks and counting translation-related events
- A group for a separate unit containing TLBs and counting TLB-related events.

Some event types are not attributable to one traffic StreamID and are considered to be common to all. Other events are generated by a specific stream and can be filtered by StreamID so that a counter increment is enabled when the StreamID filter matches the event's originating StreamID.

Counters associated with a group are not required to be able to count events that originate from all possible StreamIDs. A counter group is permitted to be affiliated with a subset of incoming StreamIDs. Arm strongly recommends that the incoming StreamID namespace is covered by the union of all counter groups, so that events from any StreamID can be counted using a counter in a group appropriate to the StreamID value. The discovery of whether a given group counts events from a given StreamID, that is the mapping of a StreamID to supporting group or groups, is IMPLEMENTATION DEFINED.

Multiple counter groups might count events that originate from the same StreamID or StreamIDs, or from overlapping sets of StreamIDs.

Note: Because counter groups are not required to support the same kinds of events, events that originate from a given StreamID might be counted in several groups, if multiple groups are associated with that StreamID.

Note: Taking the previous example of the distributed implementation, activity from a given StreamID might cause TLB miss events that can be counted in the group associated with a TLB unit, whereas the same StreamID might cause translation table fetch events that can only be counted in the other counter group associated with the translation table walk unit.




Figure 10.1: Example counter groups filtered on events from different StreamID spans

Figure 10.1 illustrates these rules. In this example system, five counter groups exist and any event A, B, C, D or E can be counted for any StreamID. For events A, B and C, any counter in Group 0 can count events that originate from any input StreamID. However, events D and E are counted by groups 1-4 and the group that is selected depends on which services the relevant StreamIDs. For example, to count event D originating from StreamID N, a counter in Group 4 must be used.

Note: Although a counter can be configured to count an event that is filtered by StreamID N, a counter can also be configured to count an event without the StreamID filter. In the example in Figure 10.1, a counter in Group 4 could count an event that occurs from any of the StreamIDs associated with Group 4.

If a counter group exists that is associated with all StreamIDs, Arm recommends that Group 0 is used.

The association between counter groups and ranges of StreamIDs is fixed at design time and no mechanism is provided to re-configure this mapping.

A counter group is conceptually free-standing and has no interdependency on the behavior of other counter groups or even on the SMMU configuration itself. This means that:

- A counter group can be dissimilar to other groups, for example if implemented in a different IP block to another group.
- The capabilities of a given counter group (events captured, number of counters, MSI support) might be unique in the SMMU

If the SMMUEN for a Security state is zero, it is IMPLEMENTATION DEFINED whether events that can be filtered by stream are counted for activity on the streams that are associated with that Security state. The Secure Observation rules in 10.6 Support for Secure state also apply if the implementation supports counting the event in this scenario.

For events that cannot be filtered by stream, it is IMPLEMENTATION DEFINED whether they are counted when all traffic through the SMMU is treated as global bypass, as indicated by SMMU\_CR0.SMMUEN == 0 and, if implemented, SMMU\_S\_CR0.SMMUEN == 0.

Note: Event 0, "Clock cycle" is the only architectural event in this category.

Unless otherwise specified, when the configuration is changed, there is an implementation-specific delay between the observation of the register write by the PMCG and the configuration change taking effect. The change is not required to affect transactions that have been observed and might be partly processed by the SMMU.

Note: Arm expects that any delay is small. Register accesses and client transactions that occur after the completion of a register access that alters the configuration are expected to observe the new configuration.

### 10.2.1 Overflow, interrupts and capture

An individual counter overflows when an increment causes a carry-out to be generated, that is when the counter wraps beyond its maximum unsigned value to a smaller value. When this happens, a bit is set in the Overflow Status array that corresponds to the counter that overflowed. An overflow condition does not prevent a counter from counting.

Note: Software can read the Overflow Status (OVS) array using the SMMU\_PMCG\_OVS{SETn,CLRn} registers to determine which counters have overflowed.

A counter can be programmed to assert a common per-counter group interrupt, when enabled, on overflow. In addition, the counter group interrupt has a per-group overall enable flag.

Note: Whether an overflow occurs is independent of, and not prevented by, the OVS status. If a counter overflow occurs, any side effects of interrupting and capturing it, if enabled, occur regardless of the value of the corresponding OVS bit.

The counter group interrupt is an edge-triggered wired interrupt output, an MSI interrupt, or both. Because counter groups might represent distinct IP blocks, MSI support can differ between counter groups that are associated with one SMMU. However, Arm strongly recommends that all counter groups support MSIs if the core SMMU supports MSIs.

Note: As with the core SMMU MSI IRQs, an implementation that supports MSIs can still supply a wired IRQ output, giving the system the choice of using the wired IRQ and leaving the MSI disabled, or using the MSI.

Optionally, a PMCG can allow all counter registers in a group to be simultaneously sampled by a capture mechanism that copies the counter values to their respective shadow register. The presence of support for this mechanism

is discovered via SMMU\_PMCG\_CFGR.CAPTURE == 1. The capture mechanism is triggered by one of the following:

- A write of 1 to SMMU PMCG CAPR.CAPTURE.
- Overflow of a counter configured with SMMU\_PMCG\_EVTYPERn.OVFCAP == 1.
  - Note: The counter that causes the capture due to overflow is captured with a post-overflow value.
- An external IMPLEMENTATION DEFINED mechanism.

When capture is triggered by a write to SMMU\_PMCG\_CAPR.CAPTURE, the captured values are observable to an access that is performed after the write to SMMU\_PMCG\_CAPR completes.

Note: One use model for the PMCG might be to program a counter to overflow within a known number of counts and, on overflow a capture is triggered and an interrupt is sent. The interrupt handler reads out the captured counter values.

Note: In addition, counter values and their overflow events can be exported in an IMPLEMENTATION DEFINED manner to external profiling logic. Export and capture of counter values through a mechanism that is invisible to the SMMU PMCG programming interface are unrelated to the presence of the programmatic capture mechanism indicated by SMMU\_PMCG\_CFGR.CAPTURE.

If an MSI is configured with a cacheable, shareable attribute, whether the PMCG is able to perform a cache-coherent MSI write is IMPLEMENTATION DEFINED. The core SMMU\_IDR0.COHACC field does not apply to PMCG MSI writes.

When a counter that overflows is configured to trigger an interrupt, the interrupt is made observable after all of the following have become observable:

- The update to OVS.
- The new counter value.
- The captured values, if the overflow that caused the interrupt also triggered a capture.

# 10.3 Monitor events

Performance events are indicated by a numeric ID, in the following ranges:

- 0x0000 to 0x007F: Architected events
- 0x0080 to 0xffff: IMPLEMENTATION DEFINED events

The architecture defines the following event types and their causes. Unless otherwise specified, "translation request" includes both ATS Translation Requests and non-ATS translation requests.

| Event ID | Description  | Notes   | Mandatory | Can filter on StreamID |
|----------|--|---|-----------|------------------------|
| 0        | Clock cycle  | The period between these events is IMPLEMENTATION DEFINED. It is IMPLEMENTATION DEFINED whether this event is derived from a continuous time base or an SMMU clock which might be subject to implementation specific gating based on SMMU activity.   | Y         | N                      |
| 1        | Translation or request   | For a component processing client device transactions, this event counts once for each transaction.  For a component performing translation services, this event counts once for each translation request received from another component.  This event includes transactions or translation requests that lead to TLB or cache misses. This event may include any or all of the following:  - terminated transactions,  - prefetch transactions,  - CMOs,  - ATOS requests. (1) (2) | Y         | Y                      |
| 2        | TLB miss caused<br>by incoming<br>transaction or<br>translation<br>request | This event is counted once when translation for an incoming transaction or translation request cannot be satisfied from internal TLB caching, and depends on a translation table access procedure or translation request to a different component.  This event may include any or all of the following:  - terminated transactions,  - prefetch transactions,  - CMOs,  - ATOS requests. (1) (2)  | Y         | Y                      |

| Event ID | Description   | Notes  | Mandatory        | Can filter on StreamID |
|----------|---|--|------------------|------------------------|
| 3        | Configuration cache miss caused by transaction or translation request | This event is counted once when translation for an incoming transaction or translation request cannot be satisfied from internal configuration caching, and depends on a configuration table access procedure or request to a different component that provides configuration structure access services.  This event may include any or all of the following: - terminated transactions, - prefetch transactions, - CMOs, - ATOS requests. (1) (2) | Y                | Y                      |
| 4        | Translation table walk accesses                                       | External transactions performed by a translation table walker, including accesses performed speculatively.  This applies to translation table walks performed for any reason (transactions, non-ATS translation requests, ATS Translation Requests, ATOS, HTTU or prefetch operations).  | Y                | Y                      |
| 5        | Configuration structure access  | External transactions performed by a configuration table walker, including accesses performed speculatively.  This applies to configuration fetches performed for any reason.  | Y                | Y                      |
| 6        | PCIe ATS<br>Translation<br>Request received                           | Independent of success/failure of response.  Note: ATS translation failures are visible at the endpoint, either through an error or because of the endpoint causing a software-visible PRI Page Request.   | If ATS supported | Y                      |
| 7        | PCIe ATS<br>Translated<br>Transaction<br>passed through<br>SMMU       | An ATS Translated transaction was received by the component. This event includes both ATS Translated transactions subject to further Stage 2 translation because EATS=0b10, whether TLB/cache misses occurred or not, and those that bypass translation. This event may include terminated transactions (1). Note: Translated transactions might bypass or be subject to further translation, as STE.EATS dictates.                                | If ATS supported | Y                      |

<sup>(1)</sup> It is IMPLEMENTATION DEFINED whether events 1, 2, 3 and 7 include transactions terminated by the SMMU. Arm recommends that terminated transactions are included in all of, or none of, events 1, 2, 3 and 7.

<sup>(2)</sup> For each of the following, it is IMPLEMENTATION DEFINED whether they are included in events 1, 2 and 3:

<sup>•</sup> Speculative transactions, prefetch transactions or prefetch commands from client devices or other components.

<sup>•</sup> ATOS requests.

• Cache Maintenance Operations (CMOs).

Arm recommends that each of these options are either included in all of, or none of, events 1, 2 and 3.

If granule protection checks are enabled, Event IDs 2 and 4 count accesses to the GPT, if a GPT access is required for the Security state configured in SMMU\_PMCG\_SCR.SO and SMMU\_PMCG\_EVTYPERn.FILTER\_SEC\_SID. The other architected PMCG events do not count accesses to the GPT. IMPLEMENTATION DEFINED events are permitted to count GPT accesses, GPT-related TLB hits or GPT-related TLB misses for the appropriate Security state.

It is IMPLEMENTATION DEFINED whether a transaction that is retried (for any reason) is re-counted. If it is re-counted, it appears exactly like a new transaction and all relevant events are re-counted. If it is not re-counted, no counters are triggered.

When an event is mandatory, the following are both true:

- The event is supported in at least one counter group.
- The event is supported in as many groups as required to make the event countable for all possible StreamIDs in use.
- Note: In a component that only caches TLB and configuration data in a single combined cache, events 2 and 3 count the same occurrence (a miss of the combined cache is a miss of both configuration and translation).

Note: As an example, a distributed implementation might have different roles for different components (and therefore different PMCGs), so that one component might translate transactions from client devices and another component handles translation requests for the former. The first component has no table walker so it is not required to count events 4 and 5. These events are instead counted by the second component, which performs configuration and translation table walks. The second component could still include TLBs and configuration caches, in which case it would also count events 2 and 3.

## 10.4 StreamIDs and filtering

Some event types might be filtered by StreamID, so that events are only counted if they are associated with transactions that match the configured StreamID filter. Other event types are considered unrelated to any particular StreamID and are counted by any counter that is configured to count the event (any StreamID filtering configuration is ignored). An implementation provides a StreamID filter per counter, or one StreamID filter that applies to all counters in the PMCG. This is identified through the SMMU\_PMCG\_CFGR.SID\_FILTER\_TYPE field.

When SMMU\_PMCG\_CFGR.SID\_FILTER\_TYPE == 0, the StreamID filter configuration is controlled by register fields for each counter. SMMU\_PMCG\_EVTYPERn.{FILTER\_SID\_SPAN,FILTER\_SEC\_SID} and SMMU\_PMCG\_SMRn.STREAMID are associated with counter n as accessed through SMMU\_PMCG\_EVCNTRn.

When SMMU\_PMCG\_CFGR.SID\_FILTER\_TYPE == 1, the fields SMMU\_PMCG\_EVTYPERO.{FILTER\_SID\_SPAN, FILTER\_SEC\_SID} and SMMU\_PMCG\_SMRO.STREAMID apply to all counters in the group.

When the corresponding counter is configured to count an event type that can be filtered by StreamID, this configuration allows filtering by:

- Exact StreamID match.
- Partial StreamID match where a variable span of StreamID[N:0] are ignored and only upper StreamID bits are required to match the given filter.
- Match any StreamID (filtering disabled).

When SMMU\_PMCG\_EVTYPERn.FILTER\_SID\_SPAN == 0, SMMU\_PMCG\_SMRn.STREAMID is programmed with a StreamID that is matched exactly. Events that are associated with other StreamIDs do not cause an increment of the counter.

When SMMU\_PMCG\_EVTYPERn.FILTER\_SID\_SPAN == 1:

- To match a partial StreamID where the X most-significant bits must match but the 'Y' least-significant bits might differ, SMMU\_PMCG\_SMRn.STREAMID is programmed with a value that contains:
  - STREAMID[Y 1] == 0.
  - STREAMID[Y 2:0] == 1 (where Y > 1).
  - The remainder of implemented bits of STREAMID (X bits, from bit Y upwards) contain a value to match from the corresponding bits of event StreamID.
  - Examples (in binary):

- To match any StreamID, SMMU\_PMCG\_SMRn.STREAMID is programmed with 1 for all implemented bits:
  - Note: The STREAMID field might implement fewer bits than the SMMU StreamID size. Arm recommends that 0xfffffffff is written to this field to ensure that all implemented bits are set without first determining how many bits to write.
  - Note: A value with 0 in the most-significant implemented bit and 1 in all bits below that point is an alternative encoding that matches any StreamID. This is the maximum mask given the encoding of the variable mask size, but requires knowledge of the implemented field size. When Secure state is supported, this encoding behaves differently to the "all 1" encoding in terms of the scope of filtering according to SEC\_SID.

When the PMCG implements support for Secure state (see section 10.6 Support for Secure state):

- The SMMU\_PMCG\_EVTYPERn.FILTER\_SEC\_SID flag determines whether the StreamID filter configuration (as determined by SMMU\_PMCG\_EVTYPERn.FILTER\_SID\_SPAN and SMMU\_PMCG\_SMRn.STREAMID) applies to the Secure or the Non-secure StreamID namespace. Secure observation can be disabled so that StreamID matching can only match events that are associated with Non-secure StreamIDs, overriding the effective value of this flag.
- When SMMU\_PMCG\_EVTYPERn.FILTER\_SID\_SPAN == 1 and SMMU\_PMCG\_SMRn.STREAMID field is programmed with 1 in all implemented bits, the filter matches all StreamIDs for both Secure and Non-secure namespaces if Secure observation is enabled, and matches all Non-secure StreamIDs if Secure observation is not enabled. In SMMUv3.0, it is IMPLEMENTATION DEFINED whether:
  - The filter matches all StreamIDs in one of the Secure or Non-secure namespaces as determined by the effective value of the SMMU\_PMCG\_EVTYPERn.FILTER\_SEC\_SID flag.
  - The filter matches all StreamIDs for both Secure and Non-secure namespaces if Secure observation is enabled, and matches all Non-secure StreamIDs if Secure observation is not enabled.
- When SMMU\_PMCG\_EVTYPERn.FILTER\_SID\_SPAN == 1 and SMMU\_PMCG\_SMRn.STREAMID is programmed with 0 in the most-significant implemented bit and 1 in all other implemented bits, the filter matches all StreamIDs for the Secure or the Non-secure namespace as determined by the effective value of the SMMU\_PMCG\_EVTYPERn.FILTER\_SEC\_SID flag.

### 10.4.1 Counter Group StreamID size

The StreamID that is handled by a PMCG is not required to be the full SMMU-architectural StreamID as seen by the SMMU programming interface. This arises from the possibility that a PMCG represents a sub-component of the SMMU and, in a distributed implementation, the component might only service a subset of the StreamID space of the SMMU. In such an implementation, the upper bits of StreamID might be considered fixed for a given sub-component. For example, block 0 serves clients with StreamIDs  $0 \times 0.00$  to  $0 \times 0.00$  and block 1 serves clients with StreamIDs  $0 \times 1.00$  to  $0 \times 1.00$ 

In all cases, the low-order PMCG StreamID bits [N:0] must be equivalent to the SMMU StreamID[N:0]. Where a PMCG StreamID filter is programmed, SMMU\_PMCG\_SMRn.STREAMID might implement fewer bits than indicated by SMMU\_IDR1.SIDSIZE in the SMMU with which the PMCG is associated. The implemented size of the SMMU\_PMCG\_SMRn.STREAMID field is IMPLEMENTATION DEFINED. The association between the span of StreamIDs served by a given PMCG and the overall SMMU StreamID namespace is IMPLEMENTATION DEFINED.

For example, an SMMU with a 17-bit StreamID might be composed of two components A and B, which support client devices with StreamIDs 0 to 0xfffff and 0x10000 to 0xfffff respectively. In order to count events from the client device with StreamID 0x12345, software programs a counter in the PMCG that is associated with component B to filter on StreamID 0x12345. However, SMMU\_PMCG\_SMRn.STREAMID might only implement 16 bits and read back the value 0x02345.

Software must not depend on readback of SMMU\_PMCG\_SMRn.STREAMID returning the full SMMU StreamID. The readback value might be truncated to the PMCG StreamID size.

### 10.4.2 Couting of NoStreamID accesses

NoStreamID accesses are permitted to cause events to be counted, subject to all of the following constraints:

- For the purposes of PMCG filtering, the target PA space of NoStreamID accesses is treated as indicating the effective Security state of the accesses.
- NoStreamID accesses are only counted if counting of events for their effective Security state is enabled.
- NoStreamID accesses are only counted if SMMU\_PMCG\_EVTYPERn.FILTER\_SID\_SPAN == 1, and SMMU\_PMCG\_SMRn.STREAMID is programmed to count accesses from all streams, and that selection

of all streams includes the effective Security state of the NoStreamID accesses. Note: This is when SMMU\_PMCG\_SMRn.STREAMID is all-ones in all implemented bits, or all-ones in all implemented bits except for the most-significant bit.

Note: These requirements mean that no PMCG events are counted for accesses from NoStreamID devices to Root or Realm physical address spaces.

When a NoStreamID access is permitted to cause events to be counted, then it can count:

- Event ID 1 for the NoStreamID transaction.
- Event IDs 2 and 4 for the GPT-related events, as described in section 10.3 *Monitor events*.
- IMPLEMENTATION DEFINED GPT-related events.

#### See also:

• 3.24.1.1 GPC for client devices without a StreamID.

### 10.4.3 PARTID- and PMG-based filtering

If SMMU\_PMCG\_CFGR.FILTER\_PARTID\_PMG == 1, then the PMCG supports filtering of events by MPAM PARTID and PMG.

When PARTID- or PMG-based filtering is enabled in a particular SMMU\_PMCG\_EVTYPERn register, the SMMU PMCG uses the PARTID and/or PMG values configured in the corresponding SMMU\_PMCG\_SMRn register to filter events that are counted in the corresponding SMMU\_PMCG\_EVTYPERn register.

Filtering by PARTID and PMG can be enabled independently, using the configuration bits SMMU\_PMCG\_EVTYPERn.{FILTER\_PARTID, FILTER\_PMG, FILTER\_MPAM\_NS}.

If filtering by PARTID and/or PMG is enabled, then filtering by StreamID is not available.

When filtering by PARTID, the SMMU compares the PARTID value configured in SMMU\_PMCG\_SMRn to the output PARTID of each transaction or SMMU-originated access, whether that comes from SMMU\_(S\_)GBPMPAM, SMMU\_(S\_)GMPAM, the STE or the CD.

When filtering by PMG, the SMMU compares the PMG value configured in SMMU\_PMCG\_SMRn to the output PMG of each transaction or SMMU-originated access, whether that comes from SMMU\_(S\_)GBPMPAM, the STE or the CD.

It is IMPLEMENTATION DEFINED whether an SMMU PMCG can filter events 3 and 5 by PARTID and PMG.

For each IMPLEMENTATION DEFINED event, it is IMPLEMENTATION DEFINED whether an SMMU PMCG can filter that event by PARTID and PMG.

If an SMMU PMCG is configured to filter an event that it cannot filter by PARTID or PMG, the event is counted without filtering.

If an SMMU PMCG is configured to filter a filterable event by PARTID or PMG values exceeding those advertised in SMMU\_PMCG\_(S\_)MPAMIDR, it counts no events.

| Event ID | Description   | Can filter by PARTID   |
|----------|---|------------------------|
| 0        | Clock cycle   | No                     |
| 1        | Transaction or request  | Yes                    |
| 2        | TLB miss caused by incoming transaction or translation request        | Yes                    |
| 3        | Configuration cache miss caused by transaction or translation request | IMPLEMENTATION DEFINED |
| 4        | Translation table walk access   | Yes                    |

# Chapter 10. Performance Monitors Extension 10.4. StreamIDs and filtering

| Event ID | Description   | Can filter by PARTID   |
|----------|---|------------------------|
| 5        | Configuration structure access                      | IMPLEMENTATION DEFINED |
| 6        | PCIe ATS Translation Request received               | Yes                    |
| 7        | PCIe ATS Translated Transaction passed through SMMU | Yes                    |

## 10.5 Registers

The total number of counter groups that are associated with one SMMU is IMPLEMENTATION DEFINED. Each counter group is represented by one 4KB page (Page 0) with one optional additional 4KB page (Page 1), both of which are at IMPLEMENTATION DEFINED base addresses.

If Page 1 is present, the registers for counter values, overflow status and shadow capture control appear in Page 1 instead of Page 0. Presence is indicated by SMMU\_PMCG\_CFGR.RELOC\_CTRS. Arm recommends that Page 1 is implemented and, if so, Arm strongly recommends that Page 1 is located within an aligned 64KB system address span that is otherwise unused.

Note: This permits a hypervisor to use a 64KB stage 2 granule to expose the Page 1 counter values for direct access by a virtual machine. Arm expects that guest access to stage 1 registers (for counter configuration) will be trapped and controlled by the hypervisor, rather than accessed directly.

Access behaviors follow the same rules as for the SMMU registers described in section 6.2 *Register overview*. In particular:

- Aligned 32-bit access is permitted to 64-bit registers.
- It is IMPLEMENTATION DEFINED whether 64-bit accesses to 64-bit registers are atomic.
- All registers are little-endian.

Unless otherwise specified, software is permitted to read or write a register at any time. Writes to read-only registers are IGNORED.

### 10.5.1 SMMU PMCGn address map

The map of the base PMCG register Page 0 is shown here:

| Offset   | Register           | Notes   |
|--|--------------------|---|
| 0x000<br>+<br>stride*n<br>(0x000<br>to<br>0x1FF) | SMMU_PMCG_EVCNTRn  | 32- or 64-bit, RW, 0 <= n < 64 Registers placed on a 4-byte stride if SMMU_PMCG_CFGR.SIZE <= 31 (counters 32-bit or smaller), otherwise an 8-byte stride. |
| 0x400<br>+ 4*n<br>(0x400<br>to<br>0x4FF)         | SMMU_PMCG_EVTYPERn | 32-bit, RW, $0 \le n \le 64$  |
| 0x600<br>+<br>stride*n<br>(0x600<br>to<br>0x7FF) | SMMU_PMCG_SVRn     | 32- or 64-bit, RO, 0 <= n < 64 Stride same as for SMMU_PMCG_EVCNTRn.  |
| 0xA00<br>+ 4*n<br>(0xA00<br>to<br>0xAFF)         | SMMU_PMCG_SMRn     | 32-bit, RW, $0 \le n \le 64$  |

Chapter 10. Performance Monitors Extension 10.5. Registers

| Offset     | Register               | Notes                  |
|------------|------------------------|------------------------|
| 0xC00      | SMMU_PMCG_CNTENSET0    | 64-bit, RW             |
| 0xC20      | SMMU_PMCG_CNTENCLR0    | 64-bit, RW             |
| 0xC40      | SMMU_PMCG_INTENSET0    | 64-bit, RW             |
| 0xC60      | SMMU_PMCG_INTENCLR0    | 64-bit, RW             |
| 0xC80      | SMMU_PMCG_OVSCLR0      | 64-bit, RW             |
| 0xCC0      | SMMU_PMCG_OVSSET0      | 64-bit, RW             |
| 0xD88      | SMMU_PMCG_CAPR         | 32-bit, WO             |
| 0xDF8      | SMMU_PMCG_SCR          | 32-bit, Secure, RW     |
| 0xE00      | SMMU_PMCG_CFGR         | 32-bit, RO             |
| 0xE04      | SMMU_PMCG_CR           | 32-bit, RW             |
| 0xE08      | SMMU_PMCG_IIDR         | 32-bit, RO             |
| 0xE20      | SMMU_PMCG_CEID0        | 64-bit, RO             |
| 0xE28      | SMMU_PMCG_CEID1        | 64-bit, RO             |
| 0xE50      | SMMU_PMCG_IRQ_CTRL     | 32-bit, RW             |
| 0xE54      | SMMU_PMCG_IRQ_CTRLACK  | 32-bit, RO             |
| 0xE58      | SMMU_PMCG_IRQ_CFG0     | 64-bit, RW             |
| 0xE60      | SMMU_PMCG_IRQ_CFG1     | 32-bit, RW             |
| 0xE64      | SMMU_PMCG_IRQ_CFG2     | 32-bit, RW             |
| 0xE68      | SMMU_PMCG_IRQ_STATUS   | 32-bit, RO             |
| 0xE6C      | SMMU_PMCG_GMPAM        | 32-bit, RW             |
| 0xE70      | SMMU_PMCG_AIDR         | 32-bit, RO             |
| 0xE74      | SMMU_PMCG_MPAMIDR      | 32-bit, RO             |
| 0xE78      | SMMU_PMCG_S_MPAMIDR    | 32-bit, Secure, RO     |
| 0xE80      | IMPLEMENTATION DEFINED |                        |
| -<br>0xEFF |                        |                        |
| 0xFB0      | SMMU_PMCG_ID_REGS      | IMPLEMENTATION DEFINED |
| -<br>0xFFF |                        |                        |

When Page 1 is present (SMMU\_PMCG\_CFGR.RELOC\_CTRS == 1), the following registers are relocated to Page 1 and their corresponding Page 0 locations become RESO. Offsets are shown relative to the base address of Page 1.

| Offset  | Register          | Notes  |
|---|-------------------|--|
| 0x000 +<br>n*stride<br>(0x000<br>to<br>0x1FF) | SMMU_PMCG_EVCNTRn | Same as for corresponding locations in Page 0. |
| 0x600 +<br>n*stride<br>(0x600<br>to<br>0x7FF) | SMMU_PMCG_SVRn    |  |
| 0xC80   | SMMU_PMCG_OVSCLR0 |  |
| 0xCC0   | SMMU_PMCG_OVSSET0 |  |
| 0xD88   | SMMU_PMCG_CAPR    |  |

# 10.5.2 Register details

### 10.5.2.1 SMMU\_PMCG\_EVCNTR<n>, n = 0 - 63

The SMMU\_PMCG\_EVCNTR<n> characteristics are:

#### **Purpose**

Provides Counters for PMCG events.

### Configuration

When counter size is <= 32 bits (SMMU\_PMCG\_CFGR.SIZE <= 31), these registers are 32 bits in size. Otherwise, these registers are 64 bits in size. Present in an array of n registers, all of size 32 or 64, each corresponding to counter n.

The counter value is incremented when an event matching SMMU\_PMCG\_EVTYPERn.EVENT occurs, the counter is enabled (the respective CNTEN == 1) and, if the event type is filterable by StreamID, filters match. See section 10.4 StreamIDs and filtering for information on filtering.

When a counter value is incremented by the PMCG, the increment is atomic with respect to external writes to this register.

Registers corresponding to unimplemented counters are RESO.

#### **Attributes**

SMMU\_PMCG\_EVCNTR<n> is a:

- 32-bit register when UInt(SMMU\_PMCG\_CFGR.SIZE) <= 31
- 64-bit register when UInt(SMMU\_PMCG\_CFGR.SIZE) > 31

This register is part of the SMMUv3\_PMCG block.

#### Field descriptions

The SMMU PMCG EVCNTR<n> bit assignments are:

When UInt(SMMU\_PMCG\_CFGR.SIZE) <= 31:



### COUNTER\_VALUE, bits [31:0]

Counter value[N:0].


 $R == SMMU_PMCG_CFGR.SIZE + 1.$ 

If R < 32, bits [31:R] are RES0.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

### When UInt(SMMU\_PMCG\_CFGR.SIZE) > 31:



COUNTER\_VALUE, bits [63:0]

# Chapter 10. Performance Monitors Extension 10.5. Registers

Counter value[N:0].

 $R == SMMU_PMCG_CFGR.SIZE + 1.$ 

If R > 32 and R < 64, bits [63:R] are RESO.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

### Accessing SMMU\_PMCG\_EVCNTR<n>

SMMU\_PMCG\_EVCNTR<n> can be accessed through the SMMUv3\_PMCG block as follows:

| Frame       | Offset          |
|-------------|-----------------|
| SMMUv3_PMCG | 0x000 + (4 * n) |

- When UInt(SMMU\_PMCG\_CFGR.SIZE) <= 31, access on this interface is **RW**.
- Otherwise, access on this interface is RAZ/WI.

| Frame       | Offset          |
|-------------|-----------------|
| SMMUv3_PMCG | 0x000 + (8 * n) |

- When UInt(SMMU\_PMCG\_CFGR.SIZE) > 31, access on this interface is **RW**.
- Otherwise, access on this interface is RAZ/WI.

### 10.5.2.2 SMMU\_PMCG\_EVTYPER<n>, n = 0 - 63

The SMMU\_PMCG\_EVTYPER<n> characteristics are:

#### **Purpose**

These registers contain per-counter configuration, in particular the event type counted.


#### **Attributes**

SMMU\_PMCG\_EVTYPER<n> is a 32-bit register.

This register is part of the SMMUv3\_PMCG block.

### Field descriptions

The SMMU\_PMCG\_EVTYPER<n> bit assignments are:



### OVFCAP, bit [31]

### When SMMU\_PMCG\_CFGR.CAPTURE == 1:

Overflow capture.

| OVFCAP | Meaning   |
|--------|---|
| 0b0    | An overflow of counter n does not trigger a capture of all counters.                                      |
| 0b1    | An overflow of counter n triggers a capture of all counters in the same way as by SMMU_PMCG_CAPR.CAPTURE. |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Otherwise:

RESO

### FILTER\_SEC\_SID, bit [30]

#### When n == 0 or $SMMU\_PMCG\_CFGR.SID\_FILTER\_TYPE == 0$ :

Filter Secure StreamIDs.

| FILTER_SEC_SID | Meaning   |
|----------------|---|
| 0b0            | Count events originating from Non-secure StreamIDs. |
| 0b1            | Count events originating from Secure StreamIDs.     |

- This bit is RES0 if the PMCG does not implement support for Secure state. Otherwise, this bit is effectively 0 if support for Secure state is implemented but Secure observation is disabled (SMMU\_PMCG\_SCR.SO == 0).
- For event types that can be filtered on StreamID, this bit is considered in conjunction with FILTER\_SID\_SPAN and SMMU\_PMCG\_SMRn.STREAMID to determine how filtering is applied, based on StreamID and SEC\_SID. See section 10.4 StreamIDs and filtering.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Otherwise:

RES0

### FILTER\_SID\_SPAN, bit [29]

When n == 0 or  $SMMU\_PMCG\_CFGR.SID\_FILTER\_TYPE == 0$ :

Filter StreamID.

| FILTER_SID_SPAN | Meaning  |
|-----------------|--|
| 000             | SMMU_PMCG_SMRn.STREAMID filters event on an exact StreamID match, if the event type can be filtered on StreamID. |
| 0b1             | The SMMU_PMCG_SMRn.STREAMID field encodes a match span of StreamID values. See 10.4 StreamIDs and filtering.     |

Note: The span can encode ALL, equivalent to disabling filtering on StreamID.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Otherwise:

RES0

### Bits [28:20]

Reserved, RESO.

FILTER\_MPAM\_NS, bits [19:18]

When  $SMMU\_PMCG\_CFGR.FILTER\_PARTID\_PMG == 1$  and  $(n == 0 \text{ or } SMMU\_PMCG\_CFGR.SID\_FILTER\_TYPE == 0)$ 

Bit [1]

Reserved, RESO.

FILTER\_MPAM\_NS, bit [0]

Select MPAM\_NS for SMMU\_PMCG\_SMRn.{PARTID, PMG}.

| FILTER_MPAM_NS | Meaning   |
|----------------|---|
| 0b0            | SMMU_PMCG_SMRn.{PARTID, PMG} are Secure PARTID and PMG values respectively.     |
| 0b1            | SMMU_PMCG_SMRn.{PARTID, PMG} are Non-secure PARTID and PMG values respectively. |

If SMMU\_PMCG\_SCR.SO == 0 (Secure observation disabled), this bit is RESO and SMMU\_PMCG\_SMRn.{PARTID, PMG} are Non-secure PARTID and PMG values respectively.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Otherwise:

RESO

### FILTER\_PMG, bit [17]

When  $SMMU\_PMCG\_CFGR.FILTER\_PARTID\_PMG == 1$  and  $(n == 0 \text{ or } SMMU\_PMCG\_CFGR.SID\_FILTER\_TYPE == 0)$ :

Filter events by the value specified in SMMU\_PMCG\_SMRn.PMG.

| FILTER_PMG | Meaning  |
|------------|--|
| 0b0        | Events are not filtered by PMG.  |
| 0b1        | Only count events associated with the PMG specified in SMMU_PMCG_SMRn.PMG. |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Otherwise:

RESO

#### FILTER\_PARTID, bit [16]

When  $SMMU\_PMCG\_CFGR.FILTER\_PARTID\_PMG == 1$  and  $(n == 0 \text{ or } SMMU\_PMCG\_CFGR.SID\_FILTER\_TYPE == 0)$ :

Filter events by the value specified in SMMU\_PMCG\_SMRn.PARTID.

| FILTER_PARTID | Meaning  |
|---------------|--|
| 0b0           | Events are not filtered by PARTID.   |
| 0b1           | Only count events associated with the PARTID specified in SMMU_PMCG_SMRn.PARTID. |

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Otherwise:

RES<sub>0</sub>

### **EVENT**, bits [15:0]

Event.

- Event type that causes this counter to increment.
- An IMPLEMENTATION DEFINED number of low-order bits of this register are implemented, unimplemented upper bits are RESO.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Additional information

When SMMU\_PMCG\_CFGR.SID\_FILTER\_TYPE == 0, the field FILTER\_SID\_SPAN and, if Secure state is supported, FILTER\_SEC\_SID, are present in every implemented SMMU\_PMCG\_EVTYPERn register and correspond to counter SMMU\_PMCG\_EVCNTRn for all implemented values of n.

When SMMU\_PMCG\_CFGR.SID\_FILTER\_TYPE == 1, these fields are present only in SMMU\_PMCG\_EVTYPER0 and the FILTER\_SID\_SPAN and FILTER\_SEC\_SID fields in SMMU\_PMCG\_EVTYPERx, for x >= 1, are RES0.

The same relationship with SMMU\_PMCG\_CFGR.SID\_FILTER\_TYPE applies to FILTER\_PARTID, FILTER\_PMG and FILTER\_MPAM\_NS.

See SMMU\_PMCG\_SMRn and 10.4 *StreamIDs and filtering* for information on StreamID filtering. When filtering is enabled, an event is counted only if it matches the filter conditions for the counter.

Note: Event types that cannot be filtered on StreamID are always counted, as they cannot be filtered out using FILTER\_\* configuration.

If FILTER\_PARTID == 1 or FILTER\_PMG == 1, FILTER\_SID\_SPAN is IGNORED and events are not filtered by StreamID.

If FILTER\_PARTID == 0 and FILTER\_PMG == 0, FILTER\_MPAM\_NS is IGNORED.

See SMMU\_PMCG\_SMRn and 10.4.3 *PARTID-* and *PMG-based* filtering for information on PARTID- and PMG-based filtering. When filtering is enabled, an event is counted only if it matches the filter conditions for the counter.

Note: Event types that cannot be filtered on PARTID and PMG are always counted, as they cannot be filtered out using FILTER\_\* configuration.

Registers corresponding to unimplemented counters are RESO.

### Accessing SMMU\_PMCG\_EVTYPER<n>

SMMU\_PMCG\_EVTYPER<n> can be accessed through the SMMUv3\_PMCG block as follows:

| Frame       | Offset          |
|-------------|-----------------|
| SMMUv3_PMCG | 0x400 + (4 * n) |

### 10.5.2.3 SMMU\_PMCG\_SVR<n>, n = 0 - 63

The SMMU\_PMCG\_SVR<n> characteristics are:

#### **Purpose**

PMCG Shadow value,  $0 \le n \le 64$ .

### Configuration

When counter size is <= 32 bits (SMMU\_PMCG\_CFGR.SIZE <= 31), these registers are 32 bits in size. Otherwise, these registers are 64 bits in size. Present in an array of registers (all of size 32 or 64) each corresponding to counter n.

When counter value capture is implemented (SMMU\_PMCG\_CFGR.CAPTURE == 1), these registers hold the captured counter values of the corresponding entries in SMMU\_PMCG\_EVCNTRn. Registers corresponding to unimplemented counters are RESO.

If counter value capture is not implemented (SMMU\_PMCG\_CFGR.CAPTURE == 0), all SMMU\_PMCG\_SVRn registers are RES0.

This register is present only when SMMU\_PMCG\_CFGR.CAPTURE == 1. Otherwise, direct accesses to SMMU\_PMCG\_SVR<n> are RAZ/WI.

#### **Attributes**

SMMU\_PMCG\_SVR<n> is a:

- 32-bit register when UInt(SMMU\_PMCG\_CFGR.SIZE) <= 31
- 64-bit register when UInt(SMMU\_PMCG\_CFGR.SIZE) > 31

This register is part of the SMMUv3\_PMCG block.

#### Field descriptions

The SMMU\_PMCG\_SVR<n> bit assignments are:

When UInt(SMMU\_PMCG\_CFGR.SIZE) <= 31:



#### SHADOW\_COUNTER\_VALUE, bits [31:0]

Shadow counter value[N:0].


 $R == SMMU_PMCG_CFGR.SIZE + 1.$ 

If R < 32, bits [31:R-1] are RES0.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

### When UInt(SMMU\_PMCG\_CFGR.SIZE) > 31:



### SHADOW\_COUNTER\_VALUE, bits [63:0]

Shadow counter value[N:0].

 $R == SMMU_PMCG_CFGR.SIZE + 1.$ 

If R > 32 and R < 64, bits [63:R-1] are RESO.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

### Accessing SMMU\_PMCG\_SVR<n>

SMMU\_PMCG\_SVR<n> can be accessed through the SMMUv3\_PMCG block as follows:

| Frame       | Offset          |
|-------------|-----------------|
| SMMUv3_PMCG | 0x600 + (4 * n) |

- When UInt(SMMU\_PMCG\_CFGR.SIZE) <= 31, access on this interface is **RO**.
- Otherwise, access on this interface is RAZ/WI.

| Frame       | Offset          |
|-------------|-----------------|
| SMMUv3_PMCG | 0x600 + (8 * n) |

- When UInt(SMMU\_PMCG\_CFGR.SIZE) > 31, access on this interface is **RO**.
- Otherwise, access on this interface is RAZ/WI.

### 10.5.2.4 SMMU\_PMCG\_SMR<n>, n = 0 - 63

The SMMU\_PMCG\_SMR<n> characteristics are:

#### **Purpose**

PMCG Counter stream match filter,  $0 \le n \le 64$ .

### Configuration

This register is present only when n == 0 or SMMU\_PMCG\_CFGR.SID\_FILTER\_TYPE == 0. Otherwise, direct accesses to SMMU\_PMCG\_SMR<n> are RAZ/WI.

#### **Attributes**


SMMU\_PMCG\_SMR<n> is a 32-bit register.

This register is part of the SMMUv3\_PMCG block.

#### Field descriptions

The SMMU\_PMCG\_SMR<n> bit assignments are:

When SMMU\_PMCG\_EVTYPER<n>.FILTER\_PARTID == 1 or SMMU\_PMCG\_EVTYPER<n>.FILTER\_PMG == 1:



Filtering by MPAM PARTID and/or PMG values occurs.

Filtering by StreamID does not occur.

See section 10.4.3 PARTID- and PMG-based filtering.

#### Bits [31:24]

Reserved, RESO.

### PMG, bits [23:16]

PMG value by which PMCG filters events.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### **PARTID, bits [15:0]**

PARTID value by which PMCG filters events.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Otherwise:



### STREAMID, bits [31:0]

• When the corresponding SMMU\_PMCG\_EVTYPERn.EVENT indicates an event that cannot be filtered on StreamID, the value in this field is IGNORED.

#### • Otherwise:

- When the corresponding SMMU\_PMCG\_EVTYPERn.FILTER\_SID\_SPAN == 0, the respective counter
  only counts events associated with a StreamID matching this field exactly.
- When FILTER\_SID\_SPAN == 1, this field encodes a mask value that allows a span of least-significant StreamID bits to be ignored for the purposes of filtering on a StreamID match. When all implemented bits of this field are written to 1, any StreamID is matched. See section 10.4 StreamIDs and filtering.
- When Secure observation is enabled, SMMU\_PMCG\_EVTYPERn.FILTER\_SEC\_SID determines whether the StreamID is matched from Secure or Non-secure StreamID spaces, see section 10.4 StreamIDs and filtering for the behavior of the match-all encodings with respect to Secure/Non-secure namespaces.
- This field implements an IMPLEMENTATION DEFINED number of contiguous bits (from 0 upwards) corresponding to the PMCG StreamID size, see section 10.4.1 *Counter Group StreamID size*. Bits outside this range read as zero, writes ignored (RAZ/WI).

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### **Additional information for Otherwise**

These registers contain StreamID-match configuration for filtering events on StreamID.

When SMMU\_PMCG\_CFGR.SID\_FILTER\_TYPE == 0, each SMMU\_PMCG\_SMRn corresponds to counter SMMU\_PMCG\_EVCNTRn for all implemented values of n.

When SMMU\_PMCG\_CFGR.SID\_FILTER\_TYPE == 1, SMMU\_PMCG\_SMR0 applies to all counters in the group and registers SMMU\_PMCG\_SMRx for  $x \ge 1$  are RES0.

See section 10.4 StreamIDs and filtering for more information on StreamIDs in PMCGs.

Note: To count events for a given StreamID, software must choose a counter in the appropriate counter group to use for the required event type (which is determined in an IMPLEMENTATION DEFINED manner) and then write the full StreamID value into the STREAMID field of this register.

Registers corresponding to unimplemented counters are RESO.

### Accessing SMMU\_PMCG\_SMR<n>

SMMU\_PMCG\_SMR<n> can be accessed through the SMMUv3\_PMCG block as follows:

| Frame       | Offset          |
|-------------|-----------------|
| SMMUv3_PMCG | 0xA00 + (4 * n) |

### 10.5.2.5 SMMU\_PMCG\_CNTENSET0

The SMMU\_PMCG\_CNTENSET0 characteristics are:

#### **Purpose**

Counter enable, SET.


#### **Attributes**

SMMU\_PMCG\_CNTENSET0 is a 64-bit register.

This register is part of the SMMUv3\_PMCG block.

### Field descriptions

The SMMU\_PMCG\_CNTENSET0 bit assignments are:



### CNTEN, bits [63:0]

Counter enable.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

Access to this field is W1S.

### Additional information

64-bit register containing a bitmap of per-counter enables. Bit CNTEN[n] corresponds to counter n, which is enabled if CNTEN[n] == 1 and  $SMMU\_PMCG\_CR.E == 1$ .

Write 1 to a bit location to set the per-counter enable. Reads return the state of enables. High-order bits of the bitmap beyond the number of implemented counters are RESO.

### Accessing SMMU\_PMCG\_CNTENSET0

SMMU\_PMCG\_CNTENSET0 can be accessed through the SMMUv3\_PMCG block as follows:

| Frame       | Offset |
|-------------|--------|
| SMMUv3_PMCG | 0xC00  |

### 10.5.2.6 SMMU\_PMCG\_CNTENCLR0

The SMMU\_PMCG\_CNTENCLR0 characteristics are:

#### **Purpose**

Counter enable, CLEAR.

#### **Attributes**

SMMU\_PMCG\_CNTENCLR0 is a 64-bit register.

This register is part of the SMMUv3\_PMCG block.

### Field descriptions

The SMMU\_PMCG\_CNTENCLR0 bit assignments are:



### CNTEN, bits [63:0]

Counter enable.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

Access to this field is W1C.

### Additional information

Bitmap indexed similar to SMMU\_PMCG\_CNTENSET0.

Write 1 to a bit location to clear the per-counter enable. Reads return the state of enables. High-order bits of the bitmap beyond the number of implemented counters are RESO.

### Accessing SMMU\_PMCG\_CNTENCLR0

SMMU\_PMCG\_CNTENCLR0 can be accessed through the SMMUv3\_PMCG block as follows:

| Frame       | Offset |
|-------------|--------|
| SMMUv3_PMCG | 0xC20  |

### 10.5.2.7 SMMU\_PMCG\_INTENSET0

The SMMU\_PMCG\_INTENSET0 characteristics are:

#### **Purpose**

Counter interrupt contribution enable, SET.

#### **Attributes**

SMMU\_PMCG\_INTENSET0 is a 64-bit register.

This register is part of the SMMUv3\_PMCG block.

### Field descriptions

The SMMU\_PMCG\_INTENSET0 bit assignments are:



#### INTEN, bits [63:0]

Per counter interrupt enable.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

Access to this field is W1S.

### Additional information

Bitmap indexed similar to SMMU\_PMCG\_CNTENSET0.

Write 1 to a bit location to set the per-counter interrupt enable. Reads return the state of interrupt enables. High-order bits of the bitmap beyond the number of implemented counters are RESO.

Overflow of counter n triggers a PMCG interrupt if, at the time that the overflow occurs, the corresponding INTEN[n] == 1 && SMMU\_PMCG\_IRQ\_CTRL.IRQEN == 1.

### Accessing SMMU\_PMCG\_INTENSET0

SMMU\_PMCG\_INTENSET0 can be accessed through the SMMUv3\_PMCG block as follows:

| Frame       | Offset |
|-------------|--------|
| SMMUv3_PMCG | 0xC40  |

### 10.5.2.8 SMMU\_PMCG\_INTENCLR0

The SMMU\_PMCG\_INTENCLR0 characteristics are:

#### **Purpose**

Counter interrupt contribution enable CLEAR.

#### **Attributes**

SMMU\_PMCG\_INTENCLR0 is a 64-bit register.

This register is part of the SMMUv3\_PMCG block.

### Field descriptions

The SMMU\_PMCG\_INTENCLR0 bit assignments are:



#### INTEN, bits [63:0]

Per counter interrupt enable.

Bitmap indexed similar to SMMU\_PMCG\_CNTENSET0.

Write 1 to a bit location to clear the per-counter interrupt enable. Reads return the state of interrupt enables. High-order bits of the bitmap beyond the number of implemented counters are RESO.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

Access to this field is W1C.

#### Accessing SMMU PMCG INTENCLR0

SMMU\_PMCG\_INTENCLR0 can be accessed through the SMMUv3\_PMCG block as follows:

| Frame       | Offset |
|-------------|--------|
| SMMUv3_PMCG | 0xC60  |

### 10.5.2.9 SMMU\_PMCG\_OVSCLR0

The SMMU\_PMCG\_OVSCLR0 characteristics are:

#### **Purpose**

Overflow status, CLEAR.


#### **Attributes**

SMMU PMCG OVSCLR0 is a 64-bit register.

This register is part of the SMMUv3\_PMCG block.

### Field descriptions

The SMMU\_PMCG\_OVSCLR0 bit assignments are:



#### OVS, bits [63:0]

Overflow counter status.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

Access to this field is W1C.

### Additional information

Bitmap indexed similar to SMMU\_PMCG\_CNTENSET0.

Write 1 to a bit location to clear the per-counter overflow status. Reads return the state of overflow status. High-order bits of the bitmap beyond the number of implemented counters are RESO.

Overflow of counter n (a transition past the maximum unsigned value of the counter causing the value to become, or pass, zero) sets the corresponding OVS[n] bit. In addition, this event can trigger the PMCG interrupt and cause a capture of the PMCG counter values (see SMMU\_PMCG\_EVTYPERn.

### Accessing SMMU\_PMCG\_OVSCLR0

SMMU\_PMCG\_OVSCLR0 can be accessed through the SMMUv3\_PMCG block as follows:

| Frame       | Offset |
|-------------|--------|
| SMMUv3_PMCG | 0xC80  |

### 10.5.2.10 SMMU\_PMCG\_OVSSET0

The SMMU\_PMCG\_OVSSET0 characteristics are:

#### **Purpose**

Overflow status, SET.


#### **Attributes**

SMMU\_PMCG\_OVSSET0 is a 64-bit register.

This register is part of the SMMUv3\_PMCG block.

### Field descriptions

The SMMU\_PMCG\_OVSSET0 bit assignments are:



#### OVS, bits [63:0]

Overflow counter status.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

Access to this field is W1S.

### Additional information

Bitmap indexed similar to SMMU\_PMCG\_CNTENSET0.

Write 1 to a bit location to set the per-counter overflow status. Reads return the state of overflow status. High-order bits of the bitmap beyond the number of implemented counters are RESO.

Software setting an OVS bit is similar to an OVS bit becoming set because of a counter overflow, except it is implementation specific whether enabled overflow side-effects of triggering the PMCG interrupt or causing a capture of the PMCG counter values are performed.

### Accessing SMMU\_PMCG\_OVSSET0

SMMU\_PMCG\_OVSSET0 can be accessed through the SMMUv3\_PMCG block as follows:

| Frame       | Offset |
|-------------|--------|
| SMMUv3_PMCG | 0xCC0  |

### 10.5.2.11 SMMU\_PMCG\_CAPR

The SMMU\_PMCG\_CAPR characteristics are:

#### **Purpose**

Counter shadow value capture.

#### **Attributes**

SMMU\_PMCG\_CAPR is a 32-bit register.

This register is part of the SMMUv3\_PMCG block.

### Field descriptions

The SMMU\_PMCG\_CAPR bit assignments are:



### Bits [31:1]

Reserved, RESO.

### CAPTURE, bit [0]

Capture.

- When counter capture is supported (SMMU\_PMCG\_CFGR.CAPTURE == 1), a write of 1 to this bit triggers a capture of all SMMU\_PMCG\_EVCNTRn values within the PMCG into their respective SMMU\_PMCG\_SVRn shadow register.
- This register reads as zero.
- When SMMU\_PMCG\_CFGR.CAPTURE == 0, this field is RESO.

The reset behavior of this field is:

• This field resets to 0b0.

### Accessing SMMU\_PMCG\_CAPR

SMMU\_PMCG\_CAPR can be accessed through the SMMUv3\_PMCG block as follows:

| Frame       | Offset |
|-------------|--------|
| SMMUv3_PMCG | 0xD88  |

### 10.5.2.12 SMMU\_PMCG\_SCR

The SMMU\_PMCG\_SCR characteristics are:

#### **Purpose**

PMCG Secure control register.

### Configuration

This register is present only when SMMU\_PMCG\_SCR[31] == 1. Otherwise, direct accesses to SMMU\_PMCG\_SCR are RAZ/WI.


#### **Attributes**

SMMU\_PMCG\_SCR is a 32-bit register.

This register is part of the SMMUv3\_PMCG block.

### Field descriptions

The SMMU\_PMCG\_SCR bit assignments are:



### READS\_AS\_ONE, bit [31]

| READS_AS_ONE | Meaning  |
|--------------|--|
| 0b1          | <ul> <li>Secure software can use READS_AS_ONE to<br/>discover support for Secure state in the PMCG.</li> </ul> |

Access to this field is RO.

### Bits [30:4]

Reserved, RESO.

### MSI\_MPAM\_NS, bit [3]

### When $SMMU\_PMCG\_S\_MPAMIDR.HAS\_MPAM\_NS == 1$ :

| MSI_MPAM_NS | Meaning  |
|-------------|--|
| 0b0         | PMCG MSIs that target a Secure PA use Secure PARTID space.     |
| 0b1         | PMCG MSIs that target a Secure PA use Non-secure PARTID space. |

This bit is RESO if SMMU\_PMCG\_SCR. {NSMSI, NSRA} are configured for Non-secure MSIs.

See section 17.5 Assignment of PARTID and PMG for PMCG-originated MSIs.

# Chapter 10. Performance Monitors Extension 10.5. Registers

The reset behavior of this field is:

• This field resets to 0b0.

### Otherwise:

RESO

### NSMSI, bit [2]

### When $SMMU\_PMCG\_CFGR.MSI == 1$ :

Non-secure MSIs.

| NSMSI | Meaning                                    |
|-------|--|
| 0b0   | Generated MSIs target Secure PA space.     |
| 0b1   | Generated MSIs target Non-secure PA space. |

The reset behavior of this field is:

• This field resets to 0b1.

#### Otherwise:

RESO

### NSRA, bit [1]

Non-secure register access.

| NSRA | Meaning   |
|------|---|
| 0b0  | Non-secure Register Access is disabled.  • Non-secure access to any PMCG register is RAZ/WI.                    |
| 0b1  | Non-secure Register Access is enabled.  • If the PMCG supports MSIs, generated MSIs target Non-secure PA space. |

The reset behavior of this field is:

• This field resets to 0b1.

### SO, bit [0]

Secure observation

| so  | Meaning                                |
|-----|--|
| 0d0 | Secure observation is disabled.        |
|     | • SMMU_PMCG_EVTYPERn.FILTER_SEC_SID is |
|     | effectively 0.                         |

| so  | Meaning                        |
|-----|--------------------------------|
| 0b1 | Secure observation is enabled. |

• See 10.6 Support for Secure state.

The reset behavior of this field is:

• This field resets to 0b0.

#### Additional information

If the PMCG does not implement support for Secure state, this register is RAZ/WI.

If the PMCG does not implement Secure state but the system does, both Secure and Non-secure accesses are permitted to PMCG registers. In this case, any MSIs generated from the PMCG must be issued to the Non-secure PA space.

Note: If software transitions control of a PMCG between Security states, Arm recommends following this procedure:

- Set NSRA == 0 and NSMSI == 1.
  - Non-secure register access is disabled, but any active MSI configuration remains Non-secure.
- Clear SMMU\_PMCG\_IRQ\_CTRL.IRQEN and wait for Update of SMMU\_PMCG\_IRQ\_CTRLACK.
  - Outstanding Non-secure MSIs are complete.
- Set NSMSI == 0 and reprogram MSI registers as required.

### Accessing SMMU\_PMCG\_SCR

SMMU\_PMCG\_SCR can be accessed through the SMMUv3\_PMCG block as follows:

| Frame       | Offset |
|-------------|--------|
| SMMUv3_PMCG | 0xDF8  |

- When an access is Secure, access on this interface is **RW**.
- Otherwise, access on this interface is RAZ/WI.

### 10.5.2.13 SMMU\_PMCG\_CFGR

The SMMU\_PMCG\_CFGR characteristics are:

#### **Purpose**

PMCG Configuration identification register.


#### **Attributes**

SMMU\_PMCG\_CFGR is a 32-bit register.

This register is part of the SMMUv3\_PMCG block.

### Field descriptions

The SMMU\_PMCG\_CFGR bit assignments are:



### Bits [31:26]

Reserved, RESO.

### FILTER\_PARTID\_PMG, bit [25]

This bit is Reserved, RESO prior to SMMUv3.3.

| FILTER_PARTID_PMG | Meaning   |
|-------------------|---|
| 0b0               | This PMCG cannot filter events by PARTID nor PMG. |
| 0b1               | This PMCG can filter events by PARTID and PMG.    |

See section 10.4 StreamIDs and filtering.

### MPAM, bit [24]

### When $SMMU\_PMCG\_CFGR.MSI == 1$ :

Memory Partitioning And Monitoring (MPAM) support.

| MPAM | Meaning                            |
|------|------------------------------------|
| 0b0  | MPAM is not supported by the PMCG. |
| 0b1  | MPAM is supported by the PMCG.     |

- MPAM support is optional.
- If the system supports MPAM but the PMCG does not, the PARTID and PMG values for PMCG-originated MSIs are zero.
- This bit is Reserved, RESO prior to SMMUv3.2.

• Note: This field indicates that the PMCG supports issuing MSIs with PARTID and PMG information. Support for filtering of events by PARTID and PMG values is indicated in FILTER\_PARTID\_PMG.

#### Otherwise:

RES0

# SID\_FILTER\_TYPE, bit [23]

#### StreamID filter type.

| SID_FILTER_TYPE | Meaning   |
|-----------------|---|
| 0b0             | Separate StreamID or MPAM filtering is supported for each counter in the PMCG.  |
| 0b1             | The StreamID or MPAM filter configured by SMMU_PMCG_SMR0 and SMMU_PMCG_EVTYPERn.{FILTER_SID_SPAN, FILTER_SEC_SID, FILTER_PARTID, FILTER_PMG, FILTER_MPAM_NS} applies to all counters in the PMCG. |

#### CAPTURE, bit [22]

#### Capture.

| CAPTURE | Meaning   |
|---------|---|
| 0d0     | Capture of counter values into SVRn registers not supported.  • SMMU_PMCG_SVRn and SMMU_PMCG_CAPR are RES0. |
| 0b1     | Capture of counter values supported.  |

#### MSI, bit [21]

Counter group supports Message Signalled Interrupt.

| MSI | Meaning                     |
|-----|-----------------------------|
| 0b0 | Group does not support MSI. |
| 0b1 | Group can send MSI.         |

#### RELOC\_CTRS, bit [20]

Relocation controls.

- When 1, Page 1 is present and the following registers are relocated to the equivalent offset on Page 1 (their Page 0 locations become RES0):
  - SMMU\_PMCG\_EVCNTRn.
  - SMMU\_PMCG\_SVRn.

# Chapter 10. Performance Monitors Extension 10.5. Registers

- SMMU\_PMCG\_OVSCLR0.
- SMMU\_PMCG\_OVSSET0.
- SMMU\_PMCG\_CAPR.

# Bits [19:14]

Reserved, RESO.

#### SIZE, bits [13:8]

Size

• Size of PMCG counters in bits, minus one. Valid values are:

| SIZE     | Meaning               |
|----------|-----------------------|
| 0b011111 | 31 (32-bit counters). |
| 0b100011 | 35 (36-bit counters). |
| 0b100111 | 39 (40-bit counters). |
| 0b101011 | 43 (44-bit counters). |
| 0b101111 | 47 (48-bit counters). |
| 0b111111 | 63 (64-bit counters). |

• Other values are Reserved.

# Bits [7:6]

Reserved, RESO.

#### NCTR, bits [5:0]

N counters.

• The number of counters available in the group is given by NCTR+1.

#### Additional information

The capability of each counter group to send MSIs is specific to the group and is not affected by the core SMMU MSI capability (SMMU\_IDR0.MSI).

#### Accessing SMMU\_PMCG\_CFGR

SMMU\_PMCG\_CFGR can be accessed through the SMMUv3\_PMCG block as follows:

| Frame       | Offset |
|-------------|--------|
| SMMUv3_PMCG | 0xE00  |

# 10.5.2.14 SMMU\_PMCG\_CR

The SMMU\_PMCG\_CR characteristics are:

#### **Purpose**

PMCG Control Register.

#### **Attributes**

SMMU\_PMCG\_CR is a 32-bit register.

This register is part of the SMMUv3\_PMCG block.

#### Field descriptions

The SMMU\_PMCG\_CR bit assignments are:



#### Bits [31:1]

Reserved, RESO.

#### E, bit [0]

Global counter enable.

• Global counter enable, where 1 == Enabled. When 0, no events are counted and values in SMMU\_PMCG\_EVCNTRn registers do not change. This bit takes precedence over the CNTEN bits set through SMMU\_PMCG\_CNTENSETO.

The reset behavior of this field is:

• This field resets to 0b0.

#### Accessing SMMU\_PMCG\_CR

SMMU\_PMCG\_CR can be accessed through the SMMUv3\_PMCG block as follows:

| Frame       | Offset |
|-------------|--------|
| SMMUv3_PMCG | 0xE04  |

#### 10.5.2.15 SMMU\_PMCG\_IIDR

The SMMU\_PMCG\_IIDR characteristics are:

#### **Purpose**

SMMU PMCG Implementation Identification Register

#### Configuration

This register is present only when an implementation implements SMMU\_PMCG\_IIDR. Otherwise, direct accesses to SMMU\_PMCG\_IIDR are RAZ/WI.

#### Attributes

SMMU\_PMCG\_IIDR is a 32-bit register.

This register is part of the SMMUv3 PMCG block.

#### Field descriptions

The SMMU\_PMCG\_IIDR bit assignments are:

| <sub>L</sub> 3 |           | 19 16   | 15 12    | 11 0        |
|----------------|-----------|---------|----------|-------------|
|                | ProductID | Variant | Revision | Implementer |

#### ProductID, bits [31:20]

Identifies the PMCG part.

Matches the {SMMU\_PMCG\_PIDR1.PART\_1, SMMU\_PMCG\_PIDR0.PART\_0} fields, if SMMU\_PMCG\_PIDR0 and SMMU\_PMCG\_PIDR1 are present.

This field reads as an IMPLEMENTATION DEFINED value.

#### Variant, bits [19:16]

Distinguishes product variants, or major revisions of the product.

Matches the SMMU\_PMCG\_PIDR2.REVISION field, if SMMU\_PMCG\_PIDR2 is present.

This field reads as an IMPLEMENTATION DEFINED value.

#### Revision, bits [15:12]

Distinguishes minor revisions of the product.

Matches the SMMU PMCG PIDR3.REVAND field, if SMMU PMCG PIDR3 is present.

This field reads as an IMPLEMENTATION DEFINED value.

#### Implementer, bits [11:0]

SMMU\_PMCG\_IIDR[11:8] contain the JEP106 continuation code for the implementer.

SMMU\_PMCG\_IIDR[7] is zero.

SMMU PMCG IIDR[6:0] contain the JEP106 identification code for the implementer.

SMMU\_PMCG\_IIDR[11:8] match SMMU\_PMCG\_PIDR4.DES\_2 and SMMU\_PMCG\_IIDR[6:0] match the {SMMU\_PMCG\_PIDR2.DES\_1, SMMU\_PMCG\_PIDR1.DES\_0} fields, if SMMU\_PMCG\_PIDR{1, 2, 4} are present.

This field reads as an IMPLEMENTATION DEFINED value.

#### Additional information

Note: Zero is not a valid JEP106 identification code. A value of zero for SMMU\_PMCG\_IIDR indicates this register is not implemented.

Note: For an Arm implementation, bits[11:0] are 0x43B.

# Accessing SMMU\_PMCG\_IIDR

SMMU\_PMCG\_IIDR can be accessed through the SMMUv3\_PMCG block as follows:

| Frame       | Offset |
|-------------|--------|
| SMMUv3_PMCG | 0xE08  |

# 10.5.2.16 SMMU\_PMCG\_CEID0

The SMMU\_PMCG\_CEID0 characteristics are:

#### **Purpose**

Common Event ID bitmap, lower.


#### **Attributes**

SMMU\_PMCG\_CEID0 is a 64-bit register.

This register is part of the SMMUv3\_PMCG block.

#### Field descriptions

The SMMU\_PMCG\_CEID0 bit assignments are:



#### N, bits [63:0]

Event N.

Lower half of 128-bit bitmap comprised of two consecutive 64-bit registers.

In this register, bit (N & 63) relates to event number N, for  $0 \le N \le 64$ .

For each bit:

- 0b0: Event N cannot be counted by counters in this group.
- 0b1: Event N can be counted by counters in this group.

See section 10.3 Monitor events for event numbers.

#### Accessing SMMU\_PMCG\_CEID0

SMMU\_PMCG\_CEID0 can be accessed through the SMMUv3\_PMCG block as follows:

| Frame       | Offset |
|-------------|--------|
| SMMUv3_PMCG | 0xE20  |

# 10.5.2.17 SMMU\_PMCG\_CEID1

The SMMU\_PMCG\_CEID1 characteristics are:

#### **Purpose**

Common Event ID bitmap, Upper.


#### **Attributes**

SMMU\_PMCG\_CEID1 is a 64-bit register.

This register is part of the SMMUv3\_PMCG block.

#### Field descriptions

The SMMU\_PMCG\_CEID1 bit assignments are:



#### N, bits [63:0]

Event N.

Upper half of 128-bit bitmap comprised of two consecutive 64-bit registers.

In this register, bit (N & 63) relates to event number N, for  $64 \le N \le 128$ .

For each bit

- 0b0: Event N cannot be counted by counters in this group.
- 0b1: Event N can be counted by counters in this group.

See section 10.3 Monitor events for event numbers.

#### Accessing SMMU\_PMCG\_CEID1

SMMU\_PMCG\_CEID1 can be accessed through the SMMUv3\_PMCG block as follows:

| Frame       | Offset |
|-------------|--------|
| SMMUv3_PMCG | 0xE28  |

### 10.5.2.18 SMMU\_PMCG\_IRQ\_CTRL

The SMMU\_PMCG\_IRQ\_CTRL characteristics are:

#### **Purpose**

PMCG IRQ enable and control register.

#### **Attributes**

SMMU\_PMCG\_IRQ\_CTRL is a 32-bit register.

This register is part of the SMMUv3\_PMCG block.

#### Field descriptions

The SMMU\_PMCG\_IRQ\_CTRL bit assignments are:



#### Bits [31:1]

Reserved, RESO.

#### IRQEN, bit [0]

IRQ enable

The reset behavior of this field is:

• This field resets to 0b0.

#### Additional information

Each field in this register has a corresponding field in SMMU\_PMCG\_IRQ\_CTRLACK, with the same Update semantic as fields in SMMU\_CR0 versus SMMU\_CR0ACK.

This register contains the main IRQ enable flag for a per-counter group interrupt source. This enable allows or inhibits both edge-triggered wired outputs (if implemented) and MSI writes (if supported by the counter group). When IRQEN == 0, no interrupt is triggered regardless of individual per-counter overflow INTEN flags (that is, they are overridden). IRQEN also controls overall interrupt completion and MSI configuration changes.

When MSIs are supported, as indicated by SMMU\_PMCG\_CFGR.MSI == 1, IRQ enable flags Guard the MSI address and data payload registers, which must only be changed when their respective enable flag is 0. See SMMU\_PMCG\_IRO\_CFG0 for details.

Completion of Update to IRQ enables guarantees the following side-effects:

- Completion of an Update of IRQEN from 0 to 1 guarantees that the MSI configuration in SMMU\_PMCG\_IRQ\_CFG{0,1,2} will be used for all future MSIs generated from the counter group.
- An Update of IRQEN from 1 to 0 completes when all prior MSIs have become visible to their Shareability domain (have completed). Completion of this Update guarantees that no new MSI writes or wired edge events will later become visible from this source.

An IRQ is triggered from the PMCG if all of the following occur:

- SMMU\_PMCG\_IRQ\_CTRL.IRQEN == 1.
- A counter overflows and sets an OVS bit, whose corresponding INTEN bit was set through SMMU\_PMCG\_INTENSETO.

# Accessing SMMU\_PMCG\_IRQ\_CTRL

SMMU\_PMCG\_IRQ\_CTRL can be accessed through the SMMUv3\_PMCG block as follows:

| Frame       | Offset |
|-------------|--------|
| SMMUv3_PMCG | 0xE50  |

#### 10.5.2.19 SMMU\_PMCG\_IRQ\_CTRLACK

The SMMU\_PMCG\_IRQ\_CTRLACK characteristics are:

#### **Purpose**

Provides acknowledgment of changes to PMCG IRQ enable and control register, SMMU\_PMCG\_IRQ\_CTRL.

#### **Attributes**

SMMU\_PMCG\_IRQ\_CTRLACK is a 32-bit register.

This register is part of the SMMUv3\_PMCG block.

#### Field descriptions

The SMMU\_PMCG\_IRQ\_CTRLACK bit assignments are:



#### Bits [31:1]

Reserved, RESO.

#### IRQEN, bit [0]

IRQ enable.

Acknowledge bit for SMMU\_PMCG\_IRQ\_CTRL.IRQEN.

The reset behavior of this field is:

• This field resets to 0b0.

#### Additional information

Undefined bits read as zero. Fields in this register are RESO if their corresponding SMMU\_PMCG\_IRQ\_CTRL field is Reserved.

#### Accessing SMMU\_PMCG\_IRQ\_CTRLACK

SMMU\_PMCG\_IRQ\_CTRLACK can be accessed through the SMMUv3\_PMCG block as follows:

| Frame       | Offset |
|-------------|--------|
| SMMUv3_PMCG | 0xE54  |

#### 10.5.2.20 SMMU\_PMCG\_IRQ\_CFG0

The SMMU\_PMCG\_IRQ\_CFG0 characteristics are:

#### **Purpose**

PMCG MSI configuration register.

#### Configuration

This register is present only when SMMU\_PMCG\_CFGR.MSI == 1. Otherwise, direct accesses to SMMU\_PMCG\_IRQ\_CFG0 are RAZ/WI.


#### **Attributes**

SMMU\_PMCG\_IRQ\_CFG0 is a 64-bit register.

This register is part of the SMMUv3\_PMCG block.

#### Field descriptions

The SMMU\_PMCG\_IRQ\_CFG0 bit assignments are:



#### Bits [63:52]

Reserved, RESO.

#### ADDR, bits [51:2]

Physical address of MSI target, bits [51:2].

• If OAS, the system physical address size reported by SMMU\_IDR5.OAS, is less than 52 then bits ADDR[51:OAS] are RES0.

Note: An implementation is not required to store these bits.

• Bits [63:OAS] and [1:0] of the effective address that results from this field are zero.

If ADDR == 0, no MSI is sent. This allows a wired IRQ, if implemented, to be used instead of an MSI.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Bits [1:0]

Reserved, RESO.

#### Additional information

When an implementation does not support MSIs, all fields are RESO.

See SMMU\_PMCG\_SCR.NSMSI for control of the target PA space of the MSI.

#### Accessing SMMU\_PMCG\_IRQ\_CFG0

SMMU\_PMCG\_IRQ\_CFG0 is Guarded by SMMU\_PMCG\_IRQ\_CTRL.IRQEN and must only be modified when IRQEN == 0. SMMU\_PMCG\_IRQ\_CFG $\{0,1,2\}$  have the same behaviors as SMMU\_\*\_IRQ\_CFG $\{0,1,2\}$  with respect to their enables, including the permitted behaviors of writes when IRQEN == 1.

SMMU\_PMCG\_IRQ\_CFG0 can be accessed through the SMMUv3\_PMCG block as follows:

| Frame       | Offset |
|-------------|--------|
| SMMUv3_PMCG | 0xE58  |

- When SMMU\_PMCG\_IRQ\_CTRL.IRQEN == 1 or SMMU\_PMCG\_IRQ\_CTRLACK.IRQEN == 1, access on this interface is **RO**.
- Otherwise, access on this interface is **RW**.

# 10.5.2.21 SMMU\_PMCG\_IRQ\_CFG1

The SMMU\_PMCG\_IRQ\_CFG1 characteristics are:

#### **Purpose**

PMCG MSI configuration register.

#### Configuration

This register is present only when SMMU\_PMCG\_CFGR.MSI == 1. Otherwise, direct accesses to SMMU\_PMCG\_IRQ\_CFG1 are RAZ/WI.

#### **Attributes**

SMMU\_PMCG\_IRQ\_CFG1 is a 32-bit register.

This register is part of the SMMUv3\_PMCG block.

#### Field descriptions

The SMMU\_PMCG\_IRQ\_CFG1 bit assignments are:



When an implementation does not support MSIs, all fields are RESO.

#### DATA, bits [31:0]

MSI data payload.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Accessing SMMU\_PMCG\_IRQ\_CFG1

 $SMMU\_PMCG\_IRQ\_CFG1$  is Guarded by  $SMMU\_PMCG\_IRQ\_CTRL$ . IRQEN and must only be modified when IRQEN == 0.

SMMU\_PMCG\_IRQ\_CFG1 can be accessed through the SMMUv3\_PMCG block as follows:

| Frame       | Offset |
|-------------|--------|
| SMMUv3_PMCG | 0xE60  |

- When SMMU\_PMCG\_IRQ\_CTRL.IRQEN == 1 or SMMU\_PMCG\_IRQ\_CTRLACK.IRQEN == 1, access on this interface is **RO**.
- Otherwise, access on this interface is RW.

#### 10.5.2.22 SMMU\_PMCG\_IRQ\_CFG2

The SMMU\_PMCG\_IRQ\_CFG2 characteristics are:

#### **Purpose**

PMCG MSI configuration register.

#### Configuration

This register is present only when SMMU\_PMCG\_CFGR.MSI == 1. Otherwise, direct accesses to SMMU\_PMCG\_IRQ\_CFG2 are RAZ/WI.

#### **Attributes**

SMMU\_PMCG\_IRQ\_CFG2 is a 32-bit register.

This register is part of the SMMUv3\_PMCG block.

#### Field descriptions

The SMMU\_PMCG\_IRQ\_CFG2 bit assignments are:



#### Bits [31:6]

Reserved, RESO.

#### SH, bits [5:4]

Shareability.

| SH   | Meaning                    |  |
|------|----------------------------|--|
| 0b00 | Non-shareable.             |  |
| 0b01 | Reserved, behaves as 0b00. |  |
| 0b10 | Outer Shareable.           |  |
| 0b11 | Inner Shareable.           |  |

• When MemAttr encodes a Device memory type, the value of this field is IGNORED and the Shareability is effectively Outer Shareable.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### MEMATTR, bits [3:0]

Memory type.

• Encoded the same as the STE.MemAttr field.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Additional information

When an implementation does not support MSIs, all fields are RESO.

#### Accessing SMMU\_PMCG\_IRQ\_CFG2

SMMU\_PMCG\_IRQ\_CFG2 is Guarded by SMMU\_PMCG\_IRQ\_CTRL.IRQEN and must only be modified when IRQEN == 0.

SMMU\_PMCG\_IRQ\_CFG2 can be accessed through the SMMUv3\_PMCG block as follows:

| Frame       | Offset |
|-------------|--------|
| SMMUv3_PMCG | 0xE64  |

- When SMMU\_PMCG\_IRQ\_CTRL.IRQEN == 1 or SMMU\_PMCG\_IRQ\_CTRLACK.IRQEN == 1, access on this interface is **RO**.
- Otherwise, access on this interface is RW.

#### 10.5.2.23 SMMU\_PMCG\_IRQ\_STATUS

The SMMU\_PMCG\_IRQ\_STATUS characteristics are:

#### **Purpose**

PMCG MSI Status register.

#### Configuration

This register is present only when SMMU\_PMCG\_CFGR.MSI == 1. Otherwise, direct accesses to SMMU\_PMCG\_IRQ\_STATUS are RAZ/WI.


#### **Attributes**

SMMU\_PMCG\_IRQ\_STATUS is a 32-bit register.

This register is part of the SMMUv3\_PMCG block.

#### Field descriptions

The SMMU\_PMCG\_IRQ\_STATUS bit assignments are:



#### Bits [31:1]

Reserved, RESO.

# IRQ\_ABT, bit [0]

MSI abort.

- The SMMU sets this bit to 1 if it detects that an MSI has terminated with an abort.
- This bit is RESO when SMMU PMCG CFGR.MSI == 0.
- It is IMPLEMENTATION DEFINED whether an implementation can detect this condition.
- This bit is cleared to 0 when SMMU\_PMCG\_IRQ\_CTRL.IRQEN is Updated from 0 to 1.
  - Note: An IRQEN transition from 1 to 0 does not clear this bit, as this transition also ensures visibility of outstanding MSI writes and clearing IRQ\_ABT at this point might mask possible abort completions of those MSI writes.

The reset behavior of this field is:

• This field resets to an UNKNOWN value.

#### Accessing SMMU\_PMCG\_IRQ\_STATUS

In SMMUv3.0, this register location is RES0.

SMMU\_PMCG\_IRQ\_STATUS can be accessed through the SMMUv3\_PMCG block as follows:

| Frame       | Offset |
|-------------|--------|
| SMMUv3_PMCG | 0xE68  |

#### 10.5.2.24 SMMU\_PMCG\_GMPAM

The SMMU\_PMCG\_GMPAM characteristics are:

#### **Purpose**

MPAM configuration for PMCG-originated MSI transactions.

#### Configuration

This register is present only when SMMU\_PMCG\_CFGR.MPAM == 1. Otherwise, direct accesses to SMMU\_PMCG\_GMPAM are RAZ/WI.

#### **Attributes**

SMMU\_PMCG\_GMPAM is a 32-bit register.

This register is part of the SMMUv3\_PMCG block.

#### Field descriptions

The SMMU\_PMCG\_GMPAM bit assignments are:



The configuration of SMMU\_PMCG\_SCR.NSMSI and SMMU\_PMCG\_SCR.NSRA affects whether this register configures Non-secure or Secure PARTID and PMG values, and therefore the maximum supported values for PARTID and PMG.

See section 17.5 Assignment of PARTID and PMG for PMCG-originated MSIs for details.

#### Update, bit [31]

Update completion flag.

The reset behavior of this field is:

• This field resets to 0b0.

#### Bits [30:24]

Reserved, RESO.

## PO\_PMG, bits [23:16]

PMG of PMCG-orientated MSI transactions.

- This field determines the PMG of PMCG-originated MSI transactions.
- Bits above the combined PMG bit width, as indicated by the greater of SMMU\_PMCG\_MPAMIDR.PMG\_MAX and SMMU\_PMCG\_S\_MPAMIDR.PMG\_MAX, are RESO.
- If a value is programmed that is greater than the corresponding PMG\_MAX limit, an UNKNOWN PMG is
  used.

The reset behavior of this field is:

• This field resets to 0x00.

#### PO\_PARTID, bits [15:0]

PARTID of PMCG-originated MSI transactions

- This field determines the PARTID of PMCG-originated MSI transactions.
- Bits above the combined PARTID bit width, as indicated by the greater of <a href="mailto:SMMU\_PMCG\_MPAMIDR.PARTID\_MAX">SMMU\_PMCG\_MPAMIDR.PARTID\_MAX</a>, and <a href="mailto:SMMU\_PMCG\_S\_MPAMIDR.PARTID\_MAX">SMMU\_PMCG\_S\_MPAMIDR.PARTID\_MAX</a>, are RESO.
- If a value is programmed that is greater than the corresponding PARTID\_MAX limit, an UNKNOWN PARTID
  is used.

The reset behavior of this field is:

• This field resets to 0x0000.

#### Additional information

The PO\_PMG and PO\_PARTID values determine the MPAM attributes applied to PMCG MSI write transactions.

The Update flag is similar to the SMMU\_(S\_)GMPAM. Update mechanism. It indicates that a change to the register has been accepted and when the Update flag is observed to be zero after a correct update procedure, the new values are guaranteed to be applied to future PMCG-originated accesses.

This register must only be written when Update == 0. A write when an Update == 1, that is when a prior update is underway, is CONSTRAINED UNPREDICTABLE and has one of the following behaviors:

- Update completes with any value.
  - Note: The effective IDs in use might not match those read back from this register.
- The write is ignored and update completes using the initial value.

If this register is written without simultaneously setting Update to 1, the effect is CONSTRAINED UNPREDICTABLE and has one of the following behaviors:

- The write is ignored.
- The written value is stored and is visible to future reads of the register, but does not affect transactions.
- The written value affects transactions at an UNPREDICTABLE update point:
  - There is no guarantee that all future PMCG-originated accesses after the write will take the new value.

When a write to this register correctly follows the requirements in this section, the new value is observable to future reads of the register even if they occur before the Update has completed.

Note: The Update mechanism provides a way to guarantee that future MSI accesses will use the configured MPAM IDs. It does not synchronize prior or ongoing accesses, which must be completed using existing facilities. For example, prior MSI writes can be completed by updating the corresponding IRQEN to a disabled state.

Note: If a change is made to the Non-secure Register Access, SMMU\_PMCG\_SCR.NSRA, or MSI target PA space configuration, SMMU\_PMCG\_SCR.NSMSI, then the configuration in this register might be invalid in the new configuration.

Note: For example, a Secure PARTID value might not be valid if it is later treated as a Non-secure PARTID value. Or, the existing value might be greater than the corresponding PARTID\_MAX in the new configuration and will be treated as an UNKNOWN value.

Note: When the Security state of the MSI changes, this configuration should be Updated to the required value. Because this scenario might occur when ownership of the MSI configuration changes, a new owner must consider that a previous Update initiated by the previous owner might still be ongoing and must check that this Update has completed before performing a new Update.

E.a

# Accessing SMMU\_PMCG\_GMPAM

SMMU\_PMCG\_GMPAM can be accessed through the SMMUv3\_PMCG block as follows:

| Frame       | Offset |
|-------------|--------|
| SMMUv3_PMCG | 0xE6C  |

- When SMMU\_PMCG\_GMPAM.Update == 0, access on this interface is **RW**.
- Otherwise, access on this interface is **RO**.

#### 10.5.2.25 SMMU\_PMCG\_AIDR

The SMMU\_PMCG\_AIDR characteristics are:

#### **Purpose**

This register identifies the SMMU architecture version to which the PMCG implementation conforms.

#### **Attributes**

SMMU\_PMCG\_AIDR is a 32-bit register.

This register is part of the SMMUv3\_PMCG block.

#### Field descriptions

The SMMU\_PMCG\_AIDR bit assignments are:



#### Bits [31:8]

Reserved, RESO.

ArchMajorRev, bits [7:4]

ArchMinorRev, bits [3:0]

#### Additional information

When considered as {ArchMajorRev, ArchMinorRev}:

- $[7:0] == 0 \times 00 == SMMUv3.0 PMCG.$
- $[7:0] == 0 \times 01 == SMMUv3.1 PMCG.$
- $[7:0] == 0 \times 02 == SMMUv3.2 PMCG.$
- $[7:0] == 0 \times 03 == SMMUv3.3 PMCG.$
- All other values Reserved.

# Accessing SMMU\_PMCG\_AIDR

SMMU\_PMCG\_AIDR can be accessed through the SMMUv3\_PMCG block as follows:

| Frame       | Offset |
|-------------|--------|
| SMMUv3_PMCG | 0xE70  |

#### 10.5.2.26 SMMU\_PMCG\_MPAMIDR

The SMMU\_PMCG\_MPAMIDR characteristics are:

#### **Purpose**

Per-PMCG Non-secure MPAM capability identification when the PMCG supports MSIs.

#### Configuration

This register is present only when SMMU\_PMCG\_CFGR.MPAM == 1 or SMMU\_PMCG\_CFGR.FILTER\_PARTID\_PMG == 1. Otherwise, direct accesses to SMMU\_PMCG\_MPAMIDR are RAZ/WI.


#### **Attributes**

SMMU\_PMCG\_MPAMIDR is a 32-bit register.

This register is part of the SMMUv3\_PMCG block.

#### Field descriptions

The SMMU\_PMCG\_MPAMIDR bit assignments are:



#### Bits [31:24]

Reserved, RESO.

#### PMG MAX, bits [23:16]

Maximum Non-secure PMG value.

• The maximum Non-secure PMG value that is permitted to be used by this PMCG for Non-secure MSIs. This field is RES0 when MPAM is not supported, as indicated by SMMU\_PMCG\_CFGR.MPAM == 0.

# PARTID\_MAX, bits [15:0]

Maximum Non-secure PARTID value.

• The maximum Non-secure PARTID value that is permitted to be used by this PMCG for Non-secure MSIs. This field is RESO when MPAM is not supported, as indicated by SMMU\_PMCG\_CFGR.MPAM == 0.

#### Additional information

The PMCG Non-secure PMG bit width is defined as the bit position of the most-significant 1 in PMG\_MAX[7:0], plus one, or is defined as zero if PMG\_MAX is zero.

Note: For example, if PMG MAX ==  $0 \times 0$ f, the PMG bit width is 4.

The PMCG Non-secure PARTID bit width is defined as the bit position of the most-significant 1 in PARTID\_MAX[15:0], plus one, or is defined as zero if PARTID\_MAX is zero.

Note: For example, if PARTID\_MAX ==  $0 \times 0034$ , the PARTID bit width is 6.

Note: PMG\_MAX and PARTID\_MAX specify the maximum values of each ID type that can be configured in the PMCG for a Non-secure MSI. These values do not describe properties of the rest of the system, which are discovered using mechanisms that are outside the scope of this specification.

Note: PMG\_MAX is architecturally permitted to be zero-sized when MPAM is supported by the PMCG.

Note: Because a PMCG might be implemented in a component related to, but separate from the main SMMU, the MPAM capabilities of each PMCG are independent from the MPAM capabilities of the main SMMU.

#### Accessing SMMU\_PMCG\_MPAMIDR

SMMU\_PMCG\_MPAMIDR can be accessed through the SMMUv3\_PMCG block as follows:

| Frame       | Offset |
|-------------|--------|
| SMMUv3_PMCG | 0xE74  |

#### 10.5.2.27 SMMU\_PMCG\_S\_MPAMIDR

The SMMU\_PMCG\_S\_MPAMIDR characteristics are:

#### **Purpose**

Per-PMCG Secure MPAM capability identification when the PMCG supports MSIs.

#### Configuration

This register is present only when SMMU\_PMCG\_SCR[31] == 1 and (SMMU\_PMCG\_CFGR.MPAM == 1 or SMMU\_PMCG\_CFGR.FILTER\_PARTID\_PMG == 1). Otherwise, direct accesses to SMMU\_PMCG\_S\_MPAMIDR are RAZ/WI.


#### **Attributes**

SMMU\_PMCG\_S\_MPAMIDR is a 32-bit register.

This register is part of the SMMUv3\_PMCG block.

# Field descriptions

The SMMU\_PMCG\_S\_MPAMIDR bit assignments are:



#### Bits [31:26]

Reserved, RESO.

#### HAS\_MPAM\_NS, bit [25]

See SMMU\_PMCG\_SCR.MSI\_MPAM\_NS.

| HAS_MPAM_NS | Meaning  |
|-------------|--|
| 0b0         | The MPAM_NS mechanism for Secure state is not implemented. |
| 0b1         | The MPAM_NS mechanism for Secure state is implemented.     |

If SMMU\_PMCG\_CFGR.MSI == 0, HAS\_MPAM\_NS is RESO.

#### Bit [24]

Reserved, RESO.

#### PMG\_MAX, bits [23:16]

Maximum Secure PMG value.

• The maximum Secure PMG value that is permitted to be used by this PMCG for Secure MSIs. This field is RESO when MPAM is not supported, as indicated by SMMU\_PMCG\_CFGR.MPAM == 0.

# PARTID\_MAX, bits [15:0]

Maximum Secure PARTID value.

• The maximum Secure PARTID value that is permitted to be used by this PMCG for Secure MSIs. This field is RES0 when MPAM is not supported, as indicated by SMMU\_PMCG\_CFGR.MPAM == 0.

#### Additional information

This register is similar to SMMU\_PMCG\_MPAMIDR except describes the Secure MPAM facilities of the PMCG.

The PMCG Secure PMG bit width is defined as the bit position of the most-significant 1 in PMG\_MAX[7:0], plus one, or is defined as zero if PMG\_MAX is zero.

The PMCG Secure PARTID bit width is defined as the bit position of the most-significant 1 in PARTID\_MAX[15:0], plus one, or is defined as zero if PARTID\_MAX is zero.

#### Accessing SMMU\_PMCG\_S\_MPAMIDR

SMMU\_PMCG\_S\_MPAMIDR can be accessed through the SMMUv3\_PMCG block as follows:

| Frame       | Offset |
|-------------|--------|
| SMMUv3_PMCG | 0xE78  |

- When an access is not Secure, access on this interface is RAZ/WI.
- When an access is Secure, access on this interface is **RO**.

## 10.5.2.28 SMMU\_PMCG\_ID\_REGS

SMMU\_PMCG register offsets <code>0xfb0-0xffC</code> are defined as a read-only identification register space. For Arm implementations of the SMMU architecture the assignment of this register space, and naming of registers in this space, is consistent with the Arm identification scheme for CoreLink and CoreSight components. Arm strongly recommends that other implementers also use this scheme to provide a consistent software discovery model.

For Arm implementations, the following assignment of fields, consistent with CoreSight ID registers [9], is used:

|        | Name<br>(SMMU_PMCG    |       |         |   |
|--------|-----------------------|-------|---------|---|
| Offset | Prefixed)             | Field | Value   | Meaning                                       |
| 0xFF0  | CIDR0, Component ID0  | [7:0] | 0x0D    | Preamble                                      |
| 0xFF4  | CIDR1, Component ID1  | [7:4] | 0×9     | CLASS   |
|        |                       | [3:0] | 0x0     | Preamble                                      |
| 0xFF8  | CIDR2, Component ID2  | [7:0] | 0x05    | Preamble                                      |
| 0xFFC  | CIDR3, Component ID3  | [7:0] | 0xB1    | Preamble                                      |
| 0xFE0  | PIDR0, Peripheral ID0 | [7:0] | IMP DEF | Part_0: bits [7:0] of the Part number         |
| 0xFE4  | PIDR1, Peripheral ID1 | [7:4] | IMP DEF | DES_0: bits [3:0] of the JEP106 Designer code |

Chapter 10. Performance Monitors Extension 10.5. Registers

| Offset  | Name<br>(SMMU_PMCG<br>Prefixed) | Field   | Value   | Meaning  |
|---------|---------------------------------|---------|---------|--|
|         | Trenacu                         | Ticiu   | value   | Meaning  |
|         |                                 | [3:0]   | IMP DEF | PART_1: bits [11:8] of the Part number             |
| 0xFE8   | PIDR2, Peripheral ID2           | [7:4]   | IMP DEF | REVISION   |
|         |                                 | [3]     | 1       | JEDEC-assigned value for DES always used           |
|         |                                 | [2:0]   | IMP DEF | DES_1: bits [6:4] bits of the JEP106 Designer code |
| 0xFEC   | PIDR3, Peripheral ID3           | [7:4]   | IMP DEF | REVAND   |
|         |                                 | [3:0]   | IMP DEF | CMOD   |
| 0xFD0   | PIDR4, Peripheral ID4           | [7:4]   | 0       | SIZE   |
|         |                                 | [3:0]   | IMP DEF | DES_2: JEP106 Designer continuation code           |
| 0xFD4   | PIDR5, Peripheral ID5           |         | RES0    | Reserved   |
| 0xFD8   | PIDR6, Peripheral ID6           |         | RES0    | Reserved   |
| 0xFDC   | PIDR7, Peripheral ID7           |         | RES0    | Reserved   |
| 0xFB8   | PMAUTHSTATUS                    | [7:0]   | _       | See below  |
| 0xFBC P | PMDEVARCH                       | [31:21] | 0x23B   | ARCHITECT (0x23B is Arm's JEP106 code)             |
|         |                                 | [20]    | 1       | PRESENT  |
|         |                                 | [19:16] | 0       | REVISION   |
|         |                                 | [15:0]  | 0x2A56  | ARCHID   |
| 0xFCC   | PMDEVTYPE                       | [7:4]   | 5       | Sub-type: Associated with an SMMU                  |
|         |                                 | [3:0]   | 6       | Class: Performance monitor device type             |

Fields outside of those defined in this table are RESO.

Note: The Designer code fields (DES\_\*) fields for Arm-designed implementations use continuation code 0x4 and Designer code 0x3B.

Note: Non-Arm implementations that follow this CoreSight ID register layout must set the Designer fields

appropriate to the implementer.

#### 10.5.2.28.1 SMMU\_PMCG\_PMAUTHSTATUS

SMMU\_PMCG\_PMAUTHSTATUS is equivalent to the AUTHSTATUS register that is described in the CoreSight Architecture Specification [9]. It is IMPLEMENTATION DEFINED whether a PMCG supports an authentication interface, as described in [9].

A PMCG might also provide IMPLEMENTATION DEFINED facilities to limit visibility of PMCG events relating to Secure and Non-secure streams, independent of the CoreSight authentication interface.

# 10.6 Support for Secure state

Support for Secure state in a PMCG is optional. If supported, it comprises of:

- Whether the PMCG registers can be accessed by both Non-secure and Secure accesses, or only Secure accesses.
- Whether the counters can observe events associated with Secure StreamIDs or Secure state.
- Whether an MSI targets the Secure or Non-secure PA space.

The SMMU\_PMCG\_SCR.NSRA flag controls whether Non-secure accesses can be made to the registers of a given group. Secure accesses can always be made to the registers.

Note: As counter groups might exist in separate components, the SMMU does not contain a centralized mechanism for assigning counter groups to a Security state.

The SMMU\_PMCG\_SCR.SO flag controls whether counters can observe events associated with Secure state or Secure StreamIDs.

When SMMU PMCG SCR.SO == 1, Secure observation is enabled and:

- Counters using event types that can be filtered by StreamID might count events that are associated
  with a Secure or Non-secure StreamID. See section 10.4 StreamIDs and filtering and the
  SMMU\_PMCG\_EVTYPERn.FILTER\_SEC\_SID bit.
- Counters using other event types are able to count events that are associated with Secure or Non-secure state, as appropriate for the event.

Note: IMPLEMENTATION DEFINED events might be associated with StreamIDs or a Security state even if they might not be directly associated with a specific StreamID. The architected global events are not specific to a Security state.

When SMMU\_PMCG\_SCR.SO == 0, Secure observation is disabled and:

- Counters using event types that can be filtered by StreamID only count events associated with Non-secure StreamIDs
- Counters using other event types only count events that are associated with the Non-secure state.

When a counter uses an event type able to be filtered by StreamID but the StreamID filter matches all, events from all StreamIDs associated with the Security state selected by the <a href="SMMU\_PMCG\_EVTYPERn.FILTER\_SECSID">SMMU\_PMCG\_EVTYPERn.FILTER\_SECSID</a> bit are counted, if permitted by the 'SO' flag.

If a counter group supports MSIs:

- If Secure state is not supported in the PMCG, the target PA space of the MSI is Non-secure.
- If Secure state is supported in the PMCG, the target PA space of the MSI is given by:

```
NS = SMMU_PMCG_SCR.NSMSI | SMMU_PMCG_SCR.NSRA
```

See section SMMU PMCG SCR.

If a PMCG does not support Secure state but the system does, then the PMCG only observes events that are associated with Non-secure streams. If a PMCG supports Secure state but the system does not, then all streams are considered to be Non-secure.

# Chapter 11 **Debug/Trace**

The SMMU architecture does not require the provision of debug support features. An implementation might provide its own debug features, subject to the following constraints:

- If an implementation supports Secure state, then a Non-secure debug agent must not be able to access any facilities related to Secure transaction handling.
- If an implementation supports the Root programming interface, then any agent not associated with Root state must not be able to access any facilities related to Root state.

Arm recommends that an implementation provides an IMPLEMENTATION DEFINED mechanism to read the contents of translation and configuration cache structures. If such a mechanism is provided, then it must not violate the general Security state constraints described above.

# Chapter 12

# Reliability, Availability and Serviceability (RAS)

Note: In this chapter, the term RAS fault is used to distinguish a fault in the sense defined by the RAS architecture from an SMMU translation fault.

The SMMU might support optional RAS features as part of the overall Arm RAS System Architecture, which is described in [10]. The Arm RAS System Architecture:

- Describes the following concepts:
  - Faults, errors, and failures.
  - Error correction, error propagation, poisoning, and error containment.
- Defines the following classifications for errors:
  - Corrected error (CE).
  - Deferred error (DE).
  - Uncorrected errors (UE), which are further classified as and Uncontainable (UC), Unrecoverable (UEU), Recoverable (UER), and Restartable (UEO) errors.
- Defines standards for:
  - Error recovery and fault handling interrupts.
  - A standard error record, with a memory-mapped interface for a group of error records for one or more components (nodes).

Arm recommends that SMMUv3 implementations that include RAS features implement RAS System Architecture v1.1, as specified in [10].

When supported, RAS fault handling registers according to the Arm RAS System Architecture are present, into which errors are recorded.

#### Chapter 12. Reliability, Availability and Serviceability (RAS)

If the SMMU does not support RAS but the system does, it is possible for the SMMU to consume an external error which is presented to the SMMU driver software as an external abort.

The SMMU might, but is not required to, record errors that it does not itself consume or detect, such as those reported directly from the system to a client device, for example, a device reading a memory location that translates without issue, but ultimately causes the device to consume corrupt data.

# 12.1 Error propagation, consumption and containment in the SMMU

This guidance section relates SMMU-specific concepts to the Arm RAS System Architecture.

Generally, SMMU activity can be considered to be driven on demand from incoming transactions from client devices. Consequently, an external transaction might cause the SMMU to consume errors from:

- 1. Internal state errors.
- 2. External state errors, for example reading a translation table entry, configuration structure or command with an associated error.

If the SMMU consumes an error while performing translation for an external transaction, containment of the error can be achieved by deferring the error to the source of the transaction. This might involve terminating the transaction with an abort, or otherwise returning error information to the client. A detected error that is silently propagated might lead to silent data corruption (SDC). The termination of a transaction that could be affected by an SMMU error ensures isolation of the error and represents a non-silent error propagation from the SMMU to the client device.

When the SMMU consumes an error from either internal or external state, Arm expects the implementation to report the error and enter error recovery in addition to containment by deferring the error.

Note: An example of an error propagation on write is a write of queue records affected by the error. The error might be propagated with affected data. An implementation might non-silently propagate the error so that the system can poison the data in memory.

An error can be consumed by the SMMU in a way that can affect external or internal state. This includes:

- 1. Reading a register containing an error in order to calculate an address for access to a queue entry.
- 2. Reading a register containing an error in order to write the data of a written queue entry.
- 3. Consuming an error from the system when reading from the Command queue.
- 4. Reading a cache entry containing an error in response to an incoming transaction.
- 5. Reading a register containing an error in response to an incoming transaction.
- 6. Consuming an error from the system when fetching data into a cache in response to an incoming transaction.

Containment of these errors avoids silently affecting external or internal state. The effect of the error means, for the corresponding scenarios in the previous list:

- 1. Internal consistency is lost.
- 2. The error might be transient (for example, it is overwritten when the queue entry is written), in which case internal consistency is not lost. The error is deferred into the memory system (error on write) and an implementation might record the error. If the error is non-transient, internal consistency might be lost.
- 3. An implementation might have unsuccessfully tried to correct the error, or might accept the error. However, internal consistency is not lost.
- 4. The transaction (and therefore other agents in the system) would be affected, and isolation broken, unless the transaction is terminated. The error can therefore be deferred to the client. SMMU internal consistency might not be lost.
- 5. An error in a register might not be correctable. The error can be deferred to the client and recorded. Internal consistency might have been lost if the register could affect future transactions.
- 6. The transaction would be affected by the error, unless the transaction is terminated (deferring the error to the client). SMMU internal consistency might not be lost.

If internal consistency is lost, invoking a Service Failure Mode (SFM) can isolate further errors from the system. This might reduce the severity of the error by ceasing subsequent duplicate error reports caused by the same failure, and by reducing the chance that the loss of internal consistency can silently propagate an error.

# 12.2 Error consumption visible through the SMMU programming interface

On consumption of an external error, an SMMU supporting RAS is expected to report a RAS event through the RAS register interface. Alternatively, consumption of an external error by an SMMU that does not support RAS presents it with an external abort. In both cases, the SMMU records the event through the Event queue (pertaining to the Security state of the transaction that caused the error to be consumed) or GERROR as appropriate:

- F\_WALK\_EABT where a translation table walk consumed an error.
- F\_STE\_FETCH where an STE fetch consumed an error.
- F\_CD\_FETCH where a CD fetch consumed an error.
- SMMU\_(S\_)GERROR errors:
  - GERROR.CMDQ\_ERR triggered and CERROR\_ABT reported in SMMU\_(S\_)CMDQ\_CONS.ERR, where a command fetch consumed an error.
  - GERROR.PRIQ\_ABT\_ERR triggered when a PRI queue access is aborted because of an external error.
  - GERROR.EVENTQ\_ABT\_ERR triggered when an Event queue access is aborted because of an external error.

# 12.3 Service Failure Mode (SFM)

If internal consistency is known to have been lost (for example, detection of a UE in internal register state), or there is a likelihood that it has been lost, and the functionality of the SMMU will be impaired or would risk silent data corruption or silent propagation of errors, Service Failure Mode must be entered. The SMMU must terminate client transactions after this mode is entered, and stop accessing its queues. If an SMMU is in Service Failure Mode (SFM) it responds to PCIe requests as CA wherever possible. Arm recommends that the SMMU registers are still readable in this mode to aid diagnosis. The mechanism to exit or recover from this mode is IMPLEMENTATION DEFINED, but must include system reset.

Note: An implementation might have specific isolation features or safety guarantees. For example, a partitioning system in which some client devices are guaranteed to be unaffected by a loss of consistency in a different portion of the SMMU. When a Detected Uncorrected Error occurs in an isolated manner like this, the SMMU does not enter the general Service Failure Mode, and does not raise the SMMU\_(S\_)GERROR.SFM\_ERR error.

Entry to Service Failure Mode is signaled by all of the following means:

- The Global Errors SMMU\_GERROR.SFM and SMMU\_S\_GERROR.SFM are triggered for both Non-secure and Secure programming interfaces (if implemented).
- An IMPLEMENTATION DEFINED notification such as recording syndrome into RAS registers and asserting an Error Recovery Interrupt or system-wide error interrupt.

Diagnosis of the reason for entering SFM is made through IMPLEMENTATION DEFINED means.

# 12.4 RAS fault handling/reporting

When RAS facilities are implemented, an implementation must provide at least one group of memory-mapped error recording registers in accordance with the RAS error record format defined in the RAS System Architecture [10].

The exact layout and operation of the RAS registers is IMPLEMENTATION DEFINED, including:

- Discovery and identification registers.
- The number of RAS error records and association to nodes.
- Whether Corrected error counters are implemented.

Error Recovery Interrupts and Fault Handling Interrupts must be provided.

Note: Interrupts in SMMUv3 are required to be edge-triggered or MSIs.

Arm recommends that interrupts for SMMUv3 RAS features are also edge-triggered.

The mechanism for determining whether RAS facilities are implemented, base addresses for RAS registers and the extent of RAS register frames is IMPLEMENTATION DEFINED. Note: For example, IMPLEMENTATION DEFINED identification registers or firmware descriptions.

One RAS register interface might be provided for each supported Security state, or a subset of the Security states, subject to the constraints described in the RAS System Architecture [10].

# 12.5 Confidential information in RAS Error Records

The RME specification [5] provides implementation requirements for RAS in PEs and system components using the Arm RAS architecture [10].

The RME specification [5] describes the concept of *confidential information* and provides the requirements on the content that can be recorded in RAS error record registers.

In an SMMU with RME, the same requirements apply to RAS Error Record registers in that SMMU.

# 12.6 Recommendations for reporting of SMMU events in RAS registers

This section is only a recommendation and is not normative. The *Arm* ® *RAS Specification* [10] is the authoritative source.

#### 12.6.1 SMMU architectural events

In all of the below, the following approach is used:

- Reporting of the MV field is not captured here.
- Setting the OF field should be performed according to the rules in the RAS Specification [10].
- All the error record values in this chapter are captured as though there were no prior errors reported in the error record register. Irrelevant fields are described as "N/A" for "not applicable".
- Implementations must follow the rules in the RAS Specification [10] around reporting multiple errors in the same record register.
- None of the errors listed here should be critical, so CI == 0 or unchanged in all the below.

#### 12.6.1.1 Deferred error on structure fetch

RAS event: SMMU receives a Deferred error (for example, a poisoned read response) on configuration structure or translation table fetch, leading to F\_WALK\_EABT, F\_STE\_FETCH, F\_CD\_FETCH, F\_VMS\_FETCH.

Signaled to requester as: CA for PCIe requests. Equivalent "Abort" on other protocols. Note: The RAS architecture permits a mechanism where the value of ERR<n>CTRL.{UE,RUE,WUE} might suppress signaling of External Aborts. Suppressing these External Aborts is not permitted for the SMMU.

Implementation notes: Some SMMUs or memory systems may not support Deferred errors (poison) and therefore cannot detect and report this error.

Reported in RAS error record as:

| ERR <n>STATUS field</n> | Notes  |
|-------------------------|--|
| AV == 1                 | If the physical address details for the error are reported in ERR <n>ADDR.</n>         |
| AV == 0                 | If ERR <n>ADDR is RES0 or not updated.</n>   |
| V == 1                  | The record is valid.   |
| UE == 1                 | There was an Uncorrected error.  |
| ER == 1                 | The SMMU is required to signal the error to the requester as an abort, or CA for PCIe. |
| PN == 1                 | The SMMU observed the Deferred error.  |
| UET == 0b11             | The SMMU Signaled the error to the client and it is Recoverable.                       |
| SERR == 21              | The SMMU cannot further defer the error.   |
| DE, CE, OF, CI          | N/A  |

#### 12.6.1.2 Uncorrectable error on structure fetch

RAS event: SMMU detects Uncorrectable (i.e. not Deferred) error on configuration structure or translation table fetch, leading to F\_WALK\_EABT, F\_STE\_FETCH, F\_CD\_FETCH, F\_VMS\_FETCH.

Implementation notes: Some SMMUs may not be able to distinguish a regular External Abort from a RAS error and therefore cannot detect and report this error.

Signaled to requester as: CA for PCIe requests. Equivalent "Abort" on other protocols. Note: The RAS architecture permits a mechanism where the value of ERR<n>CTRL.{UE,RUE,WUE} might suppress signaling of External Aborts. Suppressing these External Aborts is not permitted for the SMMU.

Reported in RAS error record as:

| ERR <n>STATUS field</n> | Notes  |
|-------------------------|--|
| AV == 1                 | If the physical address details for the error are reported in ERR <n>ADDR.</n>         |
| AV == 0                 | If ERR <n>ADDR is RES0 or not updated.</n>   |
| V == 1                  | The record is valid.   |
| UE == 1                 | There was an Uncorrected error.  |
| ER == 1                 | The SMMU is required to signal the error to the requester as an abort, or CA for PCIe. |
| PN == 0                 | The SMMU did not observe any poison.   |
| UET == 0b11             | The SMMU Signaled the error to the client and it is Recoverable.                       |
| SERR == 12              | The error was on data from memory.   |
| DE, CE, OF, CI          | N/A  |

## 12.6.1.3 Error on Command queue fetch

RAS event: SMMU experiences a RAS error on a CMDQ fetch, leading to SMMU\_(S\_)GERROR.CMDQ\_ERR with CERROR\_ABT reported in SMMU\_(S\_)CMDQ\_CONS.ERR.

Implementation notes: Some SMMUs may not be able to distinguish a regular External Abort from a RAS error and therefore cannot detect and report this error.

Reported in RAS error record as:

| ERR <n>STATUS field</n> | Notes  |
|-------------------------|--|
| AV == 1                 | If the physical address details for the error are reported in ERR <n>ADDR.</n> |
| AV == 0                 | If ERR <n>ADDR is RES0 or not updated.</n>                                     |
| V == 1                  | The record is valid.   |
| UE == 1                 | There was an Uncorrected error.  |
| ER == 0                 | The error was not signaled as an External Abort by the SMMU.                   |
| PN == 0  or  1          | Depending on whether the SMMU saw corrupt data vs poisoned response.           |
| UET == 0b11             | The SMMU Signaled the error to the client and it is Recoverable.               |
| SERR IN {12, 21}        | 12 corrupted data, 21 for poisoned data.                                       |
| DE, CE, OF, CI          | N/A  |

#### 12.6.2 Common SMMU microarchitectural events

## 12.6.2.1 ECC or EDC error on TLB or configuration cache

RAS event: SMMU needs to use a TLB or Configuration Cache entry but detects that it has been corrupted. This is a Latent error as it does not need to be consumed. In the case of an ECC error, the SMMU corrects the entry. In the case of an EDC error, the SMMU invalidates the entry and performs a fresh configuration fetch or translation table walk.

Implementation notes: Some SMMUs may not have ECC or EDC on TLBs or configuration caches and therefore could never detect this error.

Reported in RAS error record as:

| ERR <n>STATUS field</n> | Notes   |
|-------------------------|---|
| AV == 0                 | The entry is not associated with an address any more. |
| V == 1                  | The record is valid.                                  |
| ER == 0                 | No error to signal.                                   |
| CE != 0b00              | The error was corrected.                              |
| SERR IN {1, 6, 7, 8, 9} | As appropriate.                                       |
| UE, DE, OF, UET, CI, PN | N/A   |

## 12.6.2.2 Error on data payload of a client transaction

RAS event: SMMU observes corruption on the data payload of a transaction

Implementation notes: Some SMMUs may not have visibility of the data payload at all and therefore cannot detect this error. Even if an SMMU can detect this error, it is IMPLEMENTATION DEFINED whether it reports it. Some SMMUs or memory systems may not support poison. An example range of implementation styles is listed in the second table below.

Reported in RAS error record as:

| ERR <n>STATUS field</n> | Notes  |
|-------------------------|--|
| AV == 1                 | If the physical address details for the error are reported in ERR <n>ADDR.</n> |
| AV == 0                 | If ERR <n>ADDR is RES0 or not updated.</n>                                     |
| V == 1                  | The record is valid.   |
| CI == 0                 | The error is localized and SMMU can continue operation.                        |
| CE, OF, CI              | N/A  |

| Scenario                                   | SMMU action | ERR <n>STATUS values</n>               | SERR |
|--|-------------|--|------|
| SMMU does not observe data path            | None        | Not reported in SMMU<br>RAS registers. | N/A  |
| SMMU ignores poison on client transactions | None        | Not reported in SMMU RAS registers.    | N/A  |

| Scenario                                   | SMMU action         | ERR <n>STATUS values</n>                          | SERR       |
|--|---------------------|---|------------|
| Data is poisoned before it arrives at SMMU | Upgrade to<br>Abort | UE == 1, ER == 1, DE N/A,<br>PN == 1, UET == 0b11 | 10         |
| Data is poisoned before it arrives at SMMU | Propagate poison    | UE N/A, ER == 0, DE == 1,<br>PN == 1              | 10, 23, 24 |
| Data corrupted in SMMU data buffer         | Upgrade to<br>Abort | UE == 1, ER == 1, DE N/A,<br>PN == 0, UET == 0b11 | 2          |
| Data corrupted in SMMU data buffer         | Propagate poison    | UE N/A, ER == 0, DE == 1,<br>PN == 0              | 2          |

# Chapter 13

# **Attribute Transformation**

The Arm architecture supports a set of attributes that accompanies each external access that is made by a PE. These attributes map onto attributes carried by the interconnect in an interconnect-specific manner. The SMMU supports a set of attributes that is identical to that supported by the PE. These attributes govern the behavior of each client transaction and are presented from the SMMU to the memory system. The interconnect from the client device might also present attributes to the SMMU. This section describes how the attributes output with a transaction are determined from the SMMU configuration and the attributes supplied with the transaction on input.

To avoid interconnect-specific language, this section uses attribute terminology and concepts as defined in the Arm Architecture Reference Manual [2]. The mapping of these attributes onto interconnect implementations that support a subset of the attributes is IMPLEMENTATION DEFINED.

This section covers the attributes that are applied in the four conditions under which a transaction can pass through an SMMU:

- 1. Global bypass. The SMMU is disabled ( $SMMU_(S_)CR0.SMMUEN == 0$ ).
- 2. STE bypass. The SMMU is enabled but all stages of translation are disabled by an STE.
- 3. Normal translation flow. An STE configures one or more stages of translation.
- 4. PCIe ATS Translated. A device requests a 'pre-translation', caches the result, and subsequently presents a transaction with an address that has been translated but has not had SMMU attributes applied.

This section additionally covers accesses that originate from the SMMU, such as fetching configuration or walking translation tables.

Depending on the path taken, attributes might be overridden or modified by SMMU configuration registers, STE fields or translation table entries. Some of the attributes are used when checking access permissions in translation table entries, others are provided for the memory system.

At the highest level, the attribute determination for the normal translation flow is:

#### Chapter 13. Attribute Transformation

- 1. Input attributes are obtained from the incoming transaction and any attributes that are not provided are generated from constant default values.
- 2. The STE might then override incoming attributes for a specific stream.
- 3. The stage 1 and stage 2 translation table permissions are checked against the attributes determined from the previous step, where a stage is enabled.
- 4. If stage 1 is enabled, the stage 1 translation table attributes replace any input and STE override values.
- 5. If stage 2 is enabled, the stage 2 translation table attributes are combined with the stage 1 attributes if stage 1 is enabled, or combined with the overridden input attributes if stage 1 is not enabled.
- 6. The attribute is output with the translated transaction.

# 13.1 SMMU handling of attributes

### 13.1.1 Attribute definitions

A transaction has the attributes that are defined by the Arm architecture [2]:

| Attribute             | Shorthand | Values   |  |
|-----------------------|-----------|--|--|
| Memory Type           | MT        | Normal i{WB, WT, NC}-o{WB, WT, NC} – generally Normal, Device-{GRE, nGRE, nGnRE, nGnRnE} – generally any-Device.                   |  |
| Shareability          | SH        | Non-shareable (NSH),Inner shareable (ISH), Outer shareable (OSH)<br>Note: Device types and Normal iNC-oNC are considered to be OSH |  |
| Read Allocation hint  | RA        | Inner read allocate/no-allocate, Outer read allocate/no-allocate   |  |
| Write Allocation hint | WA        | Inner write allocate/no-allocate, Outer write allocate/no-allocate   |  |
| Transient hint        | TR        | Inner transient/non-transient, Outer transient/non-transient   |  |
| Read/Write            | R/W       | Read, Write  |  |
| Inst/Data             | INST      | Instruction, Data  |  |
| Privilege             | PRIV      | Privileged/Unprivileged  |  |
| Non-secure            | NS        | Secure, Non-secure   |  |

#### Key:

- i = Inner,
- o = Outer,
- WB = Write-Back cacheable,
- WT = Write-Through cacheable,
- NC = Non-Cacheable,

In this document, a Normal memory type is expressed as:

- iNC-oNC, or
- i{ NC, {WB, WT}/[n]RA[n]WA[n]TR }-o{ NC, {WB, WT}/[n]RA[n]WA[n]TR }-{NSH,ISH,OSH} (Syntax: {a,b} = Choose one of a or b, [x] = x is optional.)

This means that:

- Normal-iWB/RAnWATR-oNC-ISH:
  - Is Inner writeback cacheable/Read-Allocate/no-Write-Allocate/transient, outer non-cacheable inner-shareable.
  - The (outer) NC type has no RA/WA or TR attributes.
- Normal-iWB/RAWAnTR-oWB/RAWAnTR-OSH:
  - Is inner/outer writeback read/write allocate non-transient, outer-shareable.
- Normal-iNC-oNC
  - Is architecturally non-cacheable, always OSH
  - NC has no RA/WA or TR attributes.

Note: System shareable is an AMBA interconnect term and is not used in this document. Device memory is OSH according to the Arm architecture, but the AMBA interconnect Device type is System shareable. Similarly, a PE Normal-iNC-oNC attribute becomes Non-Cacheable System shareable in AMBA interconnect. Armv8-A memory attribute terminology is used in this document.

While some interconnects might support an IMPLEMENTATION DEFINED subset of these attributes, R/W is mandatory.

The R/W, INST and PRIV attributes are used to check transaction permissions against the read/write and execute access permissions returned by the translation process. Some memory systems might also use INST, PRIV, RA, WA and TR attributes to influence cache allocation or prioritization policies but such usage is outside the scope of this document.

Some interconnects support atomic transactions. These are treated as performing both a data read and a write for permission checking purposes independent of STE.INSTCFG. For Event records generated due to atomic accesses:

- In the event of a permission fault due to having write access but not read access, including the case where a descriptor is writeable-clean, the value of the F\_PERMISSION event's RnW field is:
  - SMMUV3.0: IMPLEMENTATION DEFINED.
  - SMMUv3.1 and later: 1.
- Note: In the event of a permission fault in response to not having write access, or having no access, the F PERMISSION event is recorded with RnW == 0.
- For all other causes that trigger F\_PERMISSION, and for all other event types, RnW == 0.

When the SMMU supports Secure state, the output NS attribute is used by the memory system to distinguish between Secure PA space and Non-secure PA space. At stage 1, distinction between Secure and Non-secure addresses is used to check against SMMU\_S\_CR0.SIF.

The access permission attributes of an incoming transaction are only used by the SMMU to enforce access permissions against the permissions determined by translation table descriptors and SMMU\_S\_CR0.SIF. They do not interact with the memory type in any way.

Note: In AArch32 state, a PE is permitted to raise a Permission fault when an instruction fetch is made to Device memory and execute-never is not set. The SMMU does not raise a Permission fault in this case, and the output attribute remains Device. An access is permitted if the permission checks succeed, regardless of the final memory type.

#### 13.1.2 Attribute support

The SMMU defines behavior for all architected attributes. However, where an interconnect from the SMMU to the memory system supports only a subset of these attributes, the SMMU is not required to generate attributes that it does not use. With the exception of R/W, INST, and PRIV all configuration fields that affect unused attributes are IGNORED.

When **SMMU\_S\_IDR1**.SECURE\_IMPL == 1:

- Override fields that are associated with the input NS attribute might be supported.
- Any transaction that belongs to a Non-secure stream targets the Non-secure PA space.

When  $SMMU_S_IDR1.SECURE_IMPL == 0$ :

- Override fields that are associated with the input NS attribute are not supported.
- Where supported by the memory system, all transactions target the Non-secure PA space.

If an interconnect supports attributes but does not differentiate inner and outer in the same way as the architecture, the mapping onto the architecturally-defined set of attributes is IMPLEMENTATION DEFINED.

In some implementations, a client device might request translation services from an SMMU and later perform transactions separately, based on the translations and attributes determined by the SMMU. The behavior of the

E.a

client device transactions with respect to attributes presented to the system are outside the scope of the SMMU architecture. Where such a client device does not support certain memory types or attributes that are returned by the SMMU translation process, behavior on accesses with these memory types is defined by the device implementation. However, the page permission protection model of the SMMU translations must always be fully observed.

Note: For example, a client device must never use a read-only translation to issue a write transaction into the system. If a client device does not support a particular memory type, a valid behavior might be to alter the type in an architecturally-safe manner. This could be strengthening a Device-GRE access to a Device-nGnRnE access. If this is not possible, another valid behavior might be for the client device to abort the access in a client device-specific manner.

Note: A composite device that contains an SMMU, such as an intelligent accelerator, is conceptually identical to a client device making requests of an external SMMU.

The SMMU makes its own accesses to memory, for example to fetch configuration or perform translation table walks. Each access has a memory type and attributes that are configured using SMMU registers or structure fields. Where an SMMU and the memory system support only a subset of memory types, and where access to an unsupported type can be reported to the SMMU, the SMMU will record an external abort for the cause of the access in question in the architected manner. If such an access is instigated by an incoming transaction, the transaction will be terminated with an abort.

A fetch from unsupported memory types generates the following fault and errors:

• STE: F\_STE\_FETCH

• CD: F\_CD\_FETCH

• Command queue read entry: GERROR.CMDQ\_ERR and Command queue CERROR\_ABT

• Event queue access: GERROR.EVENTQ\_ABT\_ERR

• PRI queue access: GERROR.PRIQ\_ABT\_ERR

• MSIs: GERROR.MSI\_\*\_ABT\_ERR

• Translation table walk: F\_WALK\_EABT

Arm strongly recommends that an SMMU supports all architected access types (for both its own structure accesses and for client transactions) so that it is compatible with generic driver software.

The SMMU considers all incoming writes to be Data, even if the client device marks the incoming write as Instruction. This is done on input, prior to any translation table permission checks. In addition, STE.INSTCFG and SMMU\_(S\_)GBPA.INSTCFG can only change the instruction/data marking of reads. Where an implementation outputs an INST attribute to the memory system, this reflects the output of the INSTCFG fields for reads and is fixed as DATA for writes.

All reads that originate from the SMMU, for example structure fetch, are represented as Privileged-Data if INST/PRIV attributes are supported by the memory system.

All SMMU writes of output queue data and MSIs are represented as Privileged-Data if INST/PRIV attributes are supported by the memory system.

### 13.1.3 Default input attributes

Where the SMMU is not supplied with an attribute because the interconnect between the client device and SMMU does not have the ability to convey it, the SMMU constructs a default input value:

| Attribute | Input generated as: |  |
|-----------|---------------------|--|
| MT        | Normal iWB-oWB      |  |
| SH        | NSH                 |  |
| RA        | Allocate            |  |
| WA        | Allocate            |  |
| TR        | Non-transient       |  |
| INST      | Data                |  |
| PRIV      | Unprivileged        |  |
| NS        | Non-secure          |  |

These values are used when any configuration path is set to 'Use incoming' attribute, but the attribute is not supplied.

Note: The SMMU architecture only includes configuration of inner and outer properties for the Cacheability of a memory type. No separate inner or outer configuration is provided for RA, WA or TR in any location aside from the translation table descriptor. Attribute overrides for RA, WA and TR affect both inner and outer allocation and transient hints at the same time.

#### **13.1.4** Replace

The Replace operation discards any input attribute, replacing a specific attribute with a configured value. For example, the SMMU\_GBPA.SHCFG field allows the input Shareability to be discarded and replaced by NSH/ISH/OSH values, or used directly without override, for the purposes of global bypass when the SMMU is disabled.

In this document, the term Override refers to a configuration field that causes an attribute to be replaced with a specific value.

The STE fields INSTCFG, PRIVCFG, NSCFG, SHCFG, ALLOCCFG, MTCFG/MemAttr contain override fields that can cause individual input attributes to be replaced with values given in these fields. Similar fields in SMMU\_(S\_)GBPA allow override of attributes when transactions globally bypass. Whether overrides in these fields take effect is indicated by SMMU\_IDR1.ATTR\_TYPES\_OVR and SMMU\_IDR1.ATTR\_PERMS\_OVR. See SMMU\_IDR1 and the field descriptions in 5.2 Stream Table Entry for more information.

When stage 1 translation is used, memory type attributes that are provided by translation table entries replace the attributes provided by the input transaction and any input overrides, if appropriate.

This operation is represented by replace\_attrs() in pseudocode.

Global or STE input overrides are not permitted to make output attributes inconsistent. Because allocation and transient hints are only relevant to Normal cacheable memory types, their overrides in either SMMU\_(S\_)GBPA or in the STEs do not affect memory types that are not Normal-WB or Normal-WT. The override value is ignored. Similarly, an input type of Device or Normal-iNC-oNC, whether supplied by the client device or overridden in SMMU\_(S\_)GBPA or in the STE, will always be OSH regardless of any SHCFG override.

When an input transaction provides a memory type that is not cacheable and an STE or GBPA input override

changes the inner or outer type to a cacheable type, the input RA, WA and TR attributes are taken to be 'RA, WA, nTR' (consistent with 13.1.3 *Default input attributes*), unless these attributes are also overridden.

#### 13.1.5 Combine

The result of combining one attribute value with another is governed by rules that are similar to those that apply to SMMUv2 [4] and the Arm Architecture's [2] combining of stage 1 and stage 2 attributes. The SMMUv3 behavior is the same as that of a PE in that stage 2 translation, when enabled, combines its attribute with those from stage 1, or with the incoming attributes when stage 1 is not enabled.

This operation is represented by combine\_attrs() in pseudocode.

Note: The SMMUv3 behavior with respect to Read-Allocate, Write-Allocate and transient hints with stage 2 differs from SMMUv2 in that SMMUv3 has no stage 2 overrides of RA/WA/TR. However, an order of precedence is defined here to make the pseudocode clearer.

The permission-related attributes (R/W, INST, PRIV, NS) are not subject to combine operations. These attributes are only used in the SMMU to check against each enabled stage of translation descriptor permissions. Only MT, SH, RA/WA and TR are combined.

For any one attribute, an order of strength is observed. For each attribute, a combine operation takes the stronger of the values presented.

| Weakest      |               |               |                |                 |                  | Strongest         |
|--------------|---------------|---------------|----------------|-----------------|------------------|-------------------|
| Normal-WB    | Normal-<br>WT | Normal-<br>NC | Device-<br>GRE | Device-<br>nGRE | Device-<br>nGnRE | Device-<br>nGnRnE |
|              |               |               |                |                 |                  |                   |
| Weakest      |               |               |                |                 |                  | Strongest         |
| NSH          |               |               | ISH            |                 |                  | OSH               |
|              |               |               |                |                 |                  |                   |
| Weakest      |               |               |                |                 |                  | Strongest         |
| Allocate     |               |               |                |                 |                  | No-allocate       |
|              |               |               |                |                 |                  |                   |
| Weakest      |               |               |                |                 |                  | Strongest         |
| Non-transien | t             |               |                |                 |                  | Transient         |

The order for allocate and transient hints is chosen so that allocate and non-transient are the normal cases that are pulled down for no-allocate or transient special cases.

### 13.1.5.1 Combine examples

Normal-iWB/RAWAnTR-oNC-ISH + Device-nGnRE = Device-nGnRE

Device-nGnRE + Device-nGnRnE = Device-nGnRnE

Normal-iWB/RAWAnTR-oNC-ISH + Normal-iWT/RAWAnTR-oWT/RAnWATR-OSH

= Normal-iWT/RAWAnT-oNC-OSH

• (Note: outer non-transient even though onTR+oTR = oTR, as outer non-cacheable - see below.)

## 13.1.6 Stage 2 control of memory types and cacheability

Armv8.4 [2] adds the ability for a stage 2 translation to override a stage 1 memory type and Cacheability in order to force a virtual machine access to be a Normal-WB shareable type regardless of the stage 1 configuration.

This feature is supported if SMMU\_IDR3.FWB == 1.

This feature is enabled for a particular stream by setting STE.S2FWB == 1. When enabled, the behavior is as described for the FWB feature in Armv8.4 [2].

Note: The S2FWB bit is per-stream, but is cacheable in the TLB (see section 5.2 *Stream Table Entry*). In effect, the FWB property is specific to a particular VMID.

S2FWB affects the attribute of a translation that is returned using ATOS.

For PCI Express systems, transactions with the No\_snoop attribute are not affected by STE.S2FWB. See section 13.6.1.1 *No\_snoop*.

Note: To achieve the effect of all transactions relating to a PCIe function being forced to be coherent WB cacheable, then No\_snoop must be disabled in the configuration space of the function and the SMMU configured with STE.S2FWB == 1.

This operation is represented by the function combine\_attrs\_fwb() in the pseudocode.

## 13.1.7 Ensuring consistent output attributes

The SMMU does not allow the output of inconsistent attribute combinations. If overrides, translation table configuration or bad input results in inconsistent attributes, the SMMU ensures consistency:

- Any-Device and Normal iNC-oNC are output as Outer Shareable
- For Normal types, NC at either inner or outer cache level have no RA/WA or TR attributes at that level. A non-cached access is considered to be read-no-allocate, write-no-allocate, non-transient, regardless of programmed read/write allocate and transient configuration.
- For Normal types, a cacheable type that is read-no-allocate and write-no-allocate has no TR attribute. Such a type is considered to be non-transient, regardless of any input or programmed override configuration.

This also applies to the result of ATOS translation operations. See Chapter 9 Address Translation Operations.

Note: In addition to these architectural attribute consistency rules, an implementation might include interconnect-specific consistency rules. See section 16.7.5 SMMU and AMBA attribute differences.

# 13.2 SMMU disabled global bypass attributes

When the SMMU is disabled for a given Security state, transactions that belong to that Security state are subject to global bypass attribute overrides.

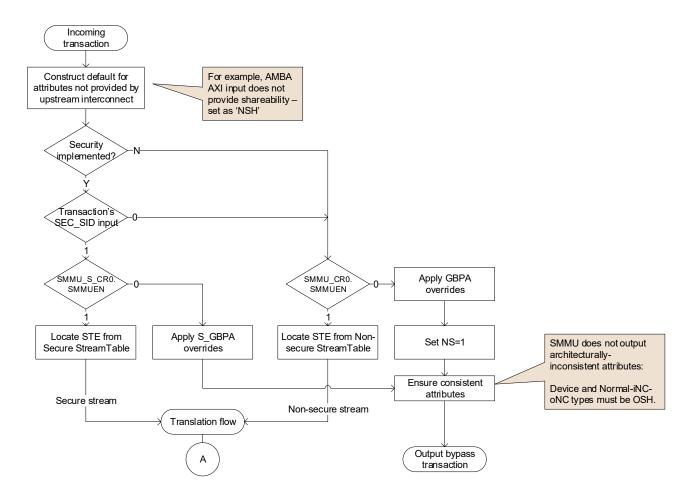


Figure 13.1: Input attribute flow - SMMU disabled bypass and start of translation flow

When SMMU\_S\_IDR1.SECURE\_IMPL == 0 and SMMU\_CR0.SMMUEN == 0, all untranslated transactions bypass the translation and configuration facilities of the SMMU. The memory type, Shareability, Read/Write allocate, Transient, Inst/Data and Privilege attributes of the transaction might be individually replaced by the MTCFG/MemAttr, SHCFG, ALLOCCFG, INSTCFG and PRIVCFG override fields of the SMMU\_GBPA register, respectively. Each attribute might take a set value or select to Use incoming. In the latter case, the attribute is either taken from the incoming interconnect or, when not supplied, the default input attribute constructed in the SMMU. Apart from these overrides, the transaction is output directly. For some classes of transaction, for example Cache Maintenance Operations, the SMMU may apply protocol-specific normalization on the output transaction attributes.

Note: When the SMMU is disabled, ATS Translation Requests and ATS-translated transactions are terminated by the SMMU. See section 3.9.1.1 *Responses to ATS Translation Requests and Translated transactions*.

Alternatively, when SMMU\_S\_IDR1.SECURE\_IMPL == 0 and SMMU\_CR0.SMMUEN == 1, an STE is located and the translation flow begins.

When SMMU\_S\_IDR1.SECURE\_IMPL == 1, the behavior of a transaction on arrival at the SMMU is determined

by the Security state of its StreamID, as determined by the SEC\_SID input, see section 3.10.1 StreamID Security state (SEC\_SID). If the stream is Non-secure and SMMU\_CR0.SMMUEN == 0, the attributes are overridden by SMMU\_GBPA as described earlier in this section. If the stream is Secure and SMMU\_S\_CR0.SMMUEN == 0, the attributes are determined by SMMU\_S\_GBPA in the same way, otherwise a Secure STE is located and the translation flow begins. The output NS attribute is determined by SMMU\_S\_GBPA.NSCFG, it can use the incoming value or be overridden to either state.

The reset state of the bypass attribute register SMMU\_GBPA, and when SMMU\_S\_IDR1.SECURE\_IMPL == 1 SMMU\_S\_GBPA, is IMPLEMENTATION DEFINED.

Note: The SMMU might provide an implementation-time configuration of the default bypass attributes which allows a system designer to ensure that device DMA has useful attributes even if system software has not initialized the SMMU.

Arm recommends that the default attributes are set as appropriate for the system in accordance with relevant base system architecture definitions.

This case is illustrated by this pseudocode:

```
// See 13.1.3:
Attrs input_attrs = add_defaults_for_unsupplied(upstream_attrs);
bool secure = (SEC_SID == SEC_SID_Secure);
if (secure) {
        output_attrs = replace_attrs(SMMU_S_GBPA, input_attrs);
} else {
        output_attrs = replace_attrs(SMMU_GBPA, input_attrs);
        output_attrs.NS = 1;
}
// MT, SH, RA, WA, TR, INST, PRIV are unchanged or overridden,
// depending on respective register field.
//
// NS is unchanged or overridden if secure stream, otherwise
// fixed at 1.
// See 13.1.7:
output_attrs = ensure_consistent_attrs(output_attrs);
```

# 13.3 Translation flow, STE bypasses stage 1 and stage 2

A second type of SMMU bypass is available when the SMMU is enabled. This is when a StreamID selects an STE configured to bypass (STE.Config == 0b100). SMMU\_GBPA and SMMU\_S\_GBPA are not used, and a finer-grained per-STE configuration is available. Refer to the no-translate case of Figure 13.2.

The STE fields MTCFG, MemAttr, ALLOCCFG, SHCFG, NSCFG, PRIVCFG and INSTCFG can override any attribute before the transaction is passed to the memory system. This provides per-StreamID granularity of attribute settings.

Each attribute might take a set value or select to Use incoming. Where the incoming attribute is use, the attribute is either taken from the incoming interconnect or, when not supplied, the default input attribute constructed in the SMMU.

#### Pseudocode:

## 13.4 Normal translation flow

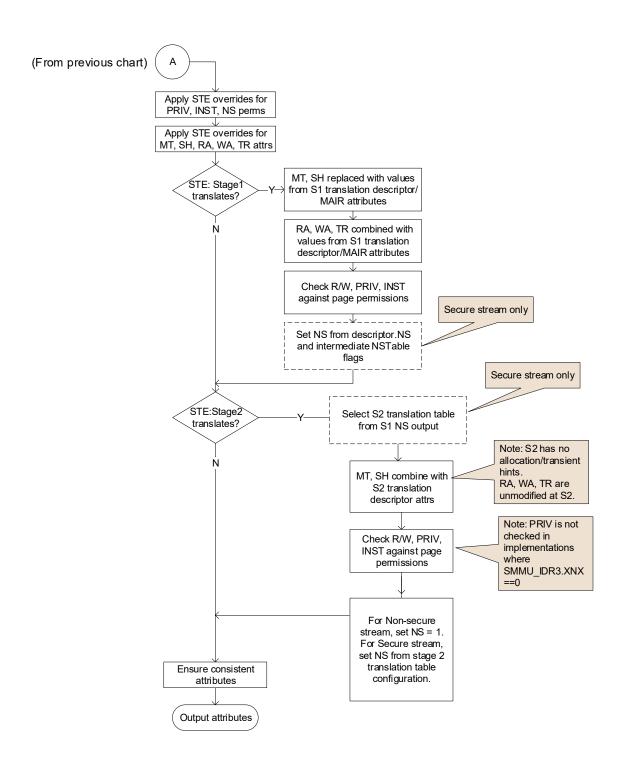


Figure 13.2: Attribute determination in translation

When the StreamID of a transaction selects an STE configuration with two stages of translation, the memory attribute of the transaction is determined by the stage 1 AttrIndex descriptor attribute and the MAIR fields, and combined with the stage 2 MemAttr descriptor attribute. For stage 1-only translations, the memory attributes are determined solely by the stage 1 descriptor attributes. For stage 2-only translations, the memory attributes are determined by the input attribute, with STE overrides, combined with the stage 2 descriptor attributes.

First, the incoming attributes, with defaults constructed for any unsupplied attributes, are subject to the STE override described in section 13.3 *Translation flow, STE bypasses stage 1 and stage 2*. These attributes are provided to the first enabled stage of translation. If stage 1 bypasses, these attributes are provided to stage 2 directly.

If stage 1 translates, the stage 1 descriptor, in combination with the MAIR fields of the CD, determine the stage 1 attributes and page permissions. The R/W, PRIV and INST attributes, (as modified by STE overrides, are checked against the page permissions.

## 13.4.1 Stage 1 page permissions

The effect of the lower bit of the stage 1 descriptor AP[2:1] field, AP[1], changes depending on the translation regime under which the translation is performed, as determined by StreamWorld. For Secure or Non-secure EL1 or for any-EL2-E2H, the AP[1] bit controls the EL0 access permissions of the page (PRIV == 0). However, when StreamWorld == any-EL2 or StreamWorld == EL3, the AP[1] bit is ignored and treated as if it were 1. This has the same effect as treating PRIV == 1 for the purposes of permission checking, which means that input PRIV attributes and any STE.PRIVCFG overrides are ignored for these checks.

When PRIV and INST attributes are output to the memory system, they are presented as the result of applying the STE.PRIVCFG and STE.INSTCFG overrides to the input attribute. They are not modified after this point.

#### 13.4.2 Stage 1 memory attributes

The attributes determined from the stage 1 translation table descriptor and CD.MAIR are provided directly to the stage 2 translation. The incoming attributes, including any STE overrides, are discarded and replaced by the stage 1 attributes, with the exception of RA/WA/TR.

When the translation is from a Secure StreamID, the target IPA or PA space from stage 1 is determined directly from the effective NS bit of the descriptor, which must take into account the value of NSTable flags on intermediate Table descriptors in addition to the final descriptor NS flag, in the same way as on the PE. In addition, CDs that are used with Secure streams contain NSCFGx flags that determine the starting NS attribute of translation table walks performed through CD.TTB0/1. When a translation is fetched using a CD.TTB0/1 with a corresponding NSCFGx == 1, the stage 1 targets Non-secure IPA or PA space. When a translation is from a Non-secure stream, the output NS attribute that is output is always 1 and the NS attribute that was input with the transactions is ignored.

When Secure stage 2 is supported and enabled, the final transaction NS bit depends on the configuration of the stage 2 IPA space, STE.{S2NSA, S2NSW, S2SA, S2SW}. See section 3.10.3 Secure EL2 and support for Secure stage 2 translation. Otherwise, the final transaction uses the target IPA space from stage 1, or stage 1 bypass.

Note: The behavior of the input NS attribute in a stage 1-only configuration matches the SMMUv2 [4] behavior in that the input NS attribute is wholly determined by the stage 1 descriptor and translation table walk configuration. The input NS attribute and STE override only affect the target IPA or PA space when no stage 1 translation is configured.

When the attribute input to stage 1 is a Normal-cacheable type, the RA/WA/TR attributes are not discarded and instead are combined with those determined from the stage 1 translation descriptor and MAIR. Any other type does not communicate RA/WA/TR hints, in which case the stage 1 translation RA/WA/TR attributes are used directly. All other attributes must be overridden by stage 1 translation table attributes.

Note: This property, combined with STE.ALLOCCFG == 0b0xxx configuration, allows a client device to influence per-transaction allocation/transient attributes when using stage 1 translation tables, allowing sub-page control.

### 13.4.3 Stage 2

If stage 2 bypasses, the attributes provided by the incoming transaction or the stage 1 translation are forwarded unchanged to the memory system.

If stage 2 translates, the MT and SH attributes input to stage 2 undergo a combine operation with the stage 2 translation descriptor attributes to produce the output attributes. If STE.S2FWB == 1, then the combine operation uses the encoding and behavior of the stage 2 translation descriptor attributes for the FWB feature as described in Armv8.4 [2].

Stage 2 descriptors do not include read/write allocate or transient hints so the RA/WA/TR attributes provided to stage 2 are passed on unchanged.

The INST attribute is checked, along with R/W, against the descriptor page permissions. In implementations where SMMU\_IDR3.XNX == 0, the PRIV attribute is not used to evaluate stage 2 permissions. Where SMMU\_IDR3.XNX == 1, the PRIV attribute is used to evaluate stage 2 permissions. The values of INST and PRIV are passed on unchanged.

## 13.4.4 Output

The transaction is output after ensuring consistency of the attributes and forcing NS == 1 for transactions on Non-secure streams.

Pseudocode, which also illustrates the cases describe in sections 13.2 SMMU disabled global bypass attributes and 13.3 Translation flow, STE bypasses stage 1 and stage 2 in more detail, is show below:

```
Attrs input_attrs = add_defaults_for_unsupplied(upstream_attrs);
bool secure = (SEC_SID == SEC_SID_Secure);
if (secure && SMMU_S_CRO.SMMUEN == 0) {
    output_attrs = replace_attrs(SMMU_S_GBPA, input_attrs);
    // See 13.1.7:
    output_attrs = ensure_consistent_attrs(output_attrs);
    output_transaction(output_attrs); // Address, direction not shown
    // Done.
} // Else carry on below
if (!secure && SMMU_CRO.SMMUEN == 0) {
    output_attrs = replace_attrs(SMMU_GBPA, input_attrs);
    output_attrs.NS = 1;
    // See 13.1.7:
    output_attrs = ensure_consistent_attrs(output_attrs);
    output_transaction(output_attrs);
                                       // Address, direction not shown
    // Done.
} // Else carry on below
// If we get to here, the appropriate SMMU interface is enabled and
// configuration can be fetched:
STE ste = get_STE_for_stream(StreamID);
Attrs i;
// Starting attributes are as input, with STE overrides:
i = replace_attrs(ste, input_attrs);
if (ste.s1_translates()) {
    Attrs s1_attrs;
```

```
TTD s1_ttd;
   CD cd = get_CD(ste, StreamID, SubstreamID, SubstreamID_valid);
   s1_ttd = s1_translation(cd, ste);
    // Address not shown; IPA determined from VA. NS of stage 1 translation
   // table walk depends on CD.NSCONFIGx and is not shown here.
   s1_attrs = s1_ttd.lookup_attrs();
    // The returned s1_attrs contains attributes determined from the
   // translation descriptor and MAIR, including RA/WA and TR.
   if (s1_ttd.translation_fault()) {
       // XXXX Stage 1 translation fault
       // Note: A speculative read transaction is simply terminated
       // with abort here, without recording an event.
    }
   // Note: Permission checking must consider HTTU configuration,
   // and update Access/Dirty flags instead of signaling a related fault
   // when HTTU enabled:
   if (check_perms_and_httu(cd, s1_ttd, i.RW, i.INST, i.PRIV) == FAULT) {
       // XXXX Stage 1 permissions or Access flag fault
       // Note: EL2 or AArch64 EL3 stage 1 do not check PRIV,
       // i.e. client traffic behaves as if PRIV == 1. However,
       // the PRIV attribute is not modified.
   // Note: See section 13.4.2; when a cached type is input to Stage 1,
   // s1_attrs.{RA,WA,TR} are combined with i.{RA,WA,TR} instead of
   // replacement (non-cached/Device types do not express RA/WA/TR
    // attributes):
   if (is_cached_type(i.MT)) {
       i.{RA,WA,TR} = combine_attrs(i.{RA,WA,TR}, s1_attrs.{RA,WA,TR});
    } else {
       // An input NC/Device type does not provide these attributes,
       // so take these attributes from S1:
       i.{RA,WA,TR} = s1_attrs.{RA,WA,TR};
   // MT and SH are taken directly from Stage 1:
   i.{MT,SH} = s1_attrs.{MT,SH};
   // NS is taken from the 'effective' value calculated from
   // S1 Block or Page descriptor, CD.NSCONFIGx and appropriate NSTable bits:
   i.NS = s1_ttd.get_effective_NS();
   // RW, INST, PRIV do not change.
} else {
    // MT, SH, RA, WA, TR unchanged; and RW, INST, PRIV, NS
    // permissions passed through.
if (ste.s2_translates()) {
   Attrs s2_attrs;
   TTD s2_ttd;
   // Fetch stage 2 translation table descriptor.
```

```
// Address not shown; PA determined from IPA and HTTU is performed.
   if (secure) {
       // Perform S-IPA or NS-IPA translation table walk with given NS:
               sipa_s2_ttw_ns = ste.S2SW;
       bool
               nsipa_s2_ttw_ns = ste.S2NSW;
       // Final NS is a function of the walk NS:
       bool
               sipa_ns = sipa_s2_ttw_ns || ste.S2SA;
       bool
                nsipa_ns = nsipa_s2_ttw_ns || sipa_ns || ste.S2NSA;
       // The NS input to stage 2 indicates the NS or S IPA space.
       if (i.NS) {
            s2_ttd = s2_translation_ns_ipa(ste, nsipa_s2_ttw_ns);
            i.NS = nsipa_ns;
        } else {
            s2_ttd = s2_translation_s_ipa(ste, sipa_s2_ttw_ns);
            i.NS = sipa_ns;
    } else {
       // Non-secure stream
       s2_ttd = s2_translation(ste);
   s2_attrs = s2_ttd.lookup_attrs();
   if (s2_ttd.translation_fault()) {
           // XXX Stage 2 translation fault
            // Note: On any fault, a speculative read transaction is simply
            // terminated with abort.
            // Note: HTTU at Stage 1 is permitted, even if we fault @S2
       }
   // S2 does not encode RA/WA/TR; these values plus combine_attrs() below
    // result in "take input from S1/previous step" behavior for RA/WA/TR:
   s2_attrs.RA_inner = true;
   s2_attrs.RA_outer = true;
   s2_attrs.WA_inner = true;
   s2_attrs.WA_outer = true;
   s2_attrs.TR_inner = false;
   s2_attrs.TR_outer = false;
   if (s2\_ttd.S2FWB == 0) {
   // MT, SH, RA, WA, TR updated via combine:
            i = combine_attrs(i, s2_attrs);
    } else {
            // combine_attrs_fwb() treats the encoding of stage 2
            // attribues as defined for the FWB features in Armv8.4
            i = combine_attrs_fwb(i, s2_attrs);
    }
    // See HTTU note in Stage 1:
   if (check_perms_and_httu(ste, s2_ttd, i.RW, i.INST, i.PRIV) == FAULT) {
       // XXXX Stage 2 permissions or Access flag fault
       // Note: S2 checks PRIV if SMMU_IDR3.XNX == 1.
} else {
   // MT, SH, RA, WA, TR unchanged; and RW, INST, PRIV, NS
```

# Chapter 13. Attribute Transformation 13.4. Normal translation flow

```
// permissions passed through.
// Finally, a Non-secure stream is not permitted to output NS == 0;
// the overrides and page attribute are ignored:
if (!secure) {
    output_attrs.NS = 1;
}
\ensuremath{//} MT, SH, RA, WA, TR may be modified by translations and overrides.
// INST, PRIV may be modified by STE overrides.
// For a secure stream, stage 1 output NS is determined from the Stage 1
// translation (if present), otherwise is the STE override or input value.
// This is used to select an IPA space in stage 2, or output directly if no
// stage 2.
// See 13.1.7:
output_attrs = ensure_consistent_attrs(output_attrs);
output_transaction(output_attrs); // Address, direction not shown
// Done.
```

# 13.5 Summary of attribute/permission configuration fields

The attributes output from the SMMU are determined as follows.

|                                  | If translation occurs  |  |   | If bypass                                 |  |
|----------------------------------|--|--|---|---|--|
| Attribute                        | Stage 1-only   | Stage 1 + stage 2  | Stage 2-only  | SMMUEN == 1<br>but STE.Config ==<br>0b100 | SMMUEN == 0                            |
| INST                             | STE.INSTCFG  |  |   |   | SMMU_(S_) GBPA. INSTCFG                |
| PRIV                             | STE.PRIVCFG  |  |   |   | SMMU_(S_) GBPA.<br>PRIVCFG             |
| NS<br>(Secure<br>stream)         | Effective<br>S1_TTD.NS,<br>NSTable and<br>CD.NSCFGx  | Effective<br>S1_TTD.NS,<br>NSTable<br>CD.NSCFGx and<br>STE.{S2NSA,<br>S2NSW, S2SA<br>S2SW}   | STE.NSCFG and<br>STE.{S2NSA,<br>S2NSW, S2SA<br>S2SW}                  | STE.NSCFG                                 | SMMU_S_GBPA<br>.NSCFG                  |
| NS<br>(Non-<br>secure<br>stream) | Fixed, Non-secure PA   | \ space  |   |   |  |
| MT                               | CD.MAIR[<br>S1_TTD.AttrIndx]   | Combine(<br>CD.MAIR[<br>S1_TTD.AttrIndx],<br>S2_TTD.MemAttr,<br>STE.S2FWB)   | Combine(STE.<br>{MemAttr,<br>MTCFG},<br>S2_TTD.MemAttr,<br>STE.S2FWB) | STE. {MemAttr, MTCFG}                     | SMMU_(S_) GBPA.<br>{MemAttr,<br>MTCFG} |
| RA,<br>WA,<br>TR                 | CD.MAIR[ S1_TTD.AttrIndx], if STE.{MemAttr, MTCFG} provide any-Device or NC input to Stage 1, otherwise: Combine( STE.ALLOCCFG, CD.MAIR[ S1_TTD.AttrIndx]) | CD.MAIR[ S1_TTD.AttrIndx], if STE.{MemAttr, MTCFG} provide any-Device or NC input to Stage 1, otherwise: Combine( STE.ALLOCCFG, CD.MAIR[ S1_TTD.AttrIndx]) | Combine(<br>STE.ALLOCCFG,<br>S2_TTD.MemAttr)                          | STE.ALLOCCFG                              | SMMU_(S_) GBPA.<br>ALLOCCFG            |
| SH                               | S1_TTD.SH  | Combine (<br>S1_TTD.SH,<br>S2_TTD.SH)  | Combine (<br>STE.SHCFG<br>S2_TTD.SH)                                  | STE.SHCFG                                 | SMMU_(S_)<br>GBPA.SHCFG                |

#### Notes:

• Permission checking of InD and PnU against translation descriptor fields is not shown here. Also, many systems might not require InD/PnU to be output into the system.

- References to INSTCFG, PRIVCFG, NSCFG, MTCFG/MemAttr and ALLOCCFG refer to the effective output of these override fields, which might always be the incoming attribute depending on SMMU\_IDR1.ATTR\_PERMS\_OVR and SMMU\_IDR1.ATTR\_TYPES\_OVR. This table does not show the effect of one field on another field. For example, the configuration used to determine allocation/transient hints or Shareability is irrelevant if the MemType is of any-Device type. See section 16.7.5 SMMU and AMBA attribute differences for other interconnect-specific dependencies between attributes.
- (a): If stage 2 translation is enabled, and STE.S2FWB==1, the Combine() operation for memory is instead an override operation for some values of the stage 2 MemAttr field.

# 13.6 PCle and ATS attribute/permissions handling

This section covers an area of system architecture that intersects with the SMMU operation. Integration of PCIe, particularly with ATS, requires consideration of the presentation of transactions to the SMMU from the Root Complex and the overall system architecture, including platform definitions such as Server Base System Architecture [11], in addition to that of the SMMU itself.

In many systems it will be typical to have a discrete Root Complex IP block connected to a downstream SMMU IP block by a standard piece of interconnect fabric, for example using AXI. This section considers the attributes provided to the SMMU by the Root Complex on such an upstream interconnect in relation to the output attributes provided by the SMMU downstream into the system.

## 13.6.1 PCle memory type attributes

PCIe does not contain memory type attributes, and each transaction takes a system-defined memory type when it progresses into the system. The Server Base System Architecture [11] requires the base memory type to be cacheable shared (IO-coherent).

Note: When PCIe is used with an SMMU, the SMMU can assign a different attribute if necessary, but the common usage model is for PCIe DMA to remain cacheable shared and the SMMU is primarily used for address transformation/protection rather than attribute assignment.

Note: SBSA requires that, when no SMMU is present or an SMMU is present and in global or stream bypass mode, a transaction from a Root Complex targeted at memory is presented to the memory system with a fixed attribute of cached, shared. The exact attribute will be Normal-iWB-oWB-ISH or OSH and is system-dependent, but is considered fixed/static because PCIe does not encode different memory types. The system must treat transactions that are targeted at devices (such as MSIs) as Device type accesses.

When an SMMU is used with translation (i.e. not in bypass mode), its configuration might use Stage 1/Stage 2 translation and/or STE input overrides, determining an output attribute from a function of the input, translation table descriptor and override attributes as described previously in this chapter. The final attribute is defined by software configuration.

Note: See No\_snoop below, which might alter the output final attribute.

Note: See SMMU\_GBPA and STE.{MTCFG,ALLOCCFG,SHCFG}: it is IMPLEMENTATION DEFINED whether attribute overrides affect streams associated with PCIe devices or whether the incoming attribute is used. Arm does not expect attribute overrides to be required for PCIe devices.

#### 13.6.1.1 No\_snoop

Note: In PCIe, No\_snoop is not guaranteed to be supported by a device or Root Complex, and if it is supported by a device, it might be disabled via configuration space. When a transaction includes a No\_snoop == 1 flag, it indicates that the transaction is allowed to "opt-out" of hardware cache coherency; software cache coherency ensures the access would not hit in a cache, so the I/O access is permitted to avoid snooping caches.

In an Arm system, a No\_snoop access corresponds to Normal-iNC-oNC-OSH.

Support for No\_snoop is system-dependent and, if implemented, No\_snoop transforms a final access attribute of a Normal cacheable type to Normal-iNC-oNC-OSH downstream of (or appearing to be performed downstream of) the SMMU. No\_snoop does not transform a final access attribute of any-Device.

No\_snoop applies after the application of the STE.S2FWB bit.

Note: This is consistent with SBSA's requirements of No\_snoop.

Note: To achieve this 'pull-down' behavior, the No\_snoop flag might be carried through the SMMU and used to transform the SMMU output downstream.

#### 13.6.2 ATS attribute overview

It is IMPLEMENTATION DEFINED whether an SMMU implementation assigns attributes (of memory type, Shareability and allocation hints) to ATS "Translated" transactions consistent with the result of an "Untranslated" transaction to the same address, or whether ATS Translated transactions have the fixed cached, shared attribute applied.

Note: An ATS client makes a Translation Request to the SMMU and caches the resulting Physical Address in its local Address Translation Cache (PCI terminology for a remote TLB). When a client has successfully received a translation, it might use it later to make direct physically-addressed ("Translated") accesses to the page, which are intended to bypass SMMU translation altogether. However, the PCIe [1] ATS protocol does not explicitly provide a field to convey a memory type/access attribute to the client in the completion of the Translation Request, therefore the subsequent Translated transaction is issued from the endpoint with no attributes (beyond R/W).

When a regular "Untranslated" (non-ATS) transaction is forwarded to the SMMU by the Root Complex, the incoming attribute is constant, fixed at cacheable shareable as above. The SMMU applies an outgoing attribute determined from a function of input, input overrides and translation table descriptors, so the outgoing attribute is address-dependent.

When a Translated transaction (from ATS) is forwarded to the SMMU, it is intended to bypass address translation in the SMMU and, if ATS attributes are supported, the SMMU modifies the transaction's attributes as appropriate for the accessed page.

Note: If ATS attributes are not supported, the resulting output attribute from a Translated transaction might not match that of a non-ATS/Untranslated access to the same address. This is acceptable in systems for which an attribute mismatch does not present a loss of correctness, or where it is expected that the SMMU-assigned attribute will always be consistent with the fixed cached, shared attribute.

If ATS attributes are supported, the mechanism for assigning an attribute to a Translated transaction is implementation specific.

Note: Because the Arm architecture does not support a 64-bit PA space, the MSBs of the 64-bit Translated Address field are ordinarily unused and an implementation might encode attribute information into this space. In compliance with the PCIe ATS architecture [1], a PCIe function with ATS must not modify any Translated Address that is returned in a Translation Completion in any way, and must cache all bits [63:12] of address. If a non-compliant function were to exist that illegally drops some of the Translated Address bits, or otherwise modifies them, it is not able to use ATS with this scheme.

#### 13.6.2.1 Supporting No snoop with ATS

Arm recommends that, in systems that support No\_snoop, it behaves as though the flag passes through the SMMU to downgrade any output cacheable shareable type into non-cached post-SMMU, consistent with SBSA.

If the SMMU supports the encoding of attributes into ATS, the mechanism for determining the ATS Translated attribute in the SMMU is independent of the subsequent application of a No\_snoop non-cacheable/downgraded attribute.

The N field in ATS Translation Completions is always 0. The SMMU does not provide means to control No\_snoop per-page.

#### 13.6.3 Split-stage (STE.EATS == 0b10) ATS behavior and responses

When Split-stage ATS is enabled for a stream (that is, when STE.EATS == 0b10, SMMU\_CR0.ATSCHK == 1 and STE.Config[2:0] == 0b111), the response to an ATS Translation Request contains an IPA. When a Translated transaction is emitted as a result of this response, its IPA then undergoes stage 2 translation in the SMMU.

Note: In effect, the stage 1 VA to IPA translation is held in the ATC but stage 2 IPA to PA translation is still performed in the SMMU. This can be used to increase security/isolation over regular nested EATS == 0b01 ATS, where the system does not trust the endpoint to use physical addresses directly.

The behavior of Split-stage ATS is the same as regular EATS ==0b01 ATS with nested translation, except:

- The completion contains the IPA result from the Stage 1 translation of the requested VA (instead of the output PA from stage 1+stage 2 translation of the requested VA).
- If the SMMU supports the encoding of attributes into ATS (see section 13.6.2 ATS attribute overview), an attribute is returned that gives a final output equivalent to the Stage 1+Stage 2 combined attribute when the resulting ATS Translated transaction is subject to stage 2 translation in the SMMU.
  - Note: This might be implemented as returning a Stage 1 attribute which is later combined with that of stage 2 in the SMMU, or might be implemented as returning a stage 1+2 combined attribute which might later be passed through stage 2 (or combined with stage 2 a second time, which gives the same result).
- HTTU might be performed by the stage 2 translation that occurs as part of the ATS Translation Request, or it might be performed at the time of the stage 2 translation for a subsequent Translated transaction.

All other aspects are identical to regular EATS == 0b01 ATS with nested translation:

- Permissions are granted from the combination of the stage 1 and stage 2 translation permissions (see 13.7
   *PCIe permission attribute interpretation*), with respect to the permissions requested in the Translation Request.
- The maximum permissible translation size is derived from the intersection of stage 1 and stage 2 page/block sizes. Arm recommends that, for performance reasons, the maximum translation size is returned where possible.
  - Note: The largest translation size is the minimum of the stage 1 and stage 2 translation sizes for the given address, such that the returned translation represents a single span with constant permission and translation

See 13.6.5 Split-stage ATS skipping stage 1 for behavior of STE.S1DSS skipping stage 1.

The behavior of an incoming Translated transaction differs when the EATS configuration of the StreamID presenting the transaction is 0b10:

- When EATS == 0b01, the Translated transaction is presented directly to the output. The given address is treated as a PA. If the SMMU supports the encoding of attributes into ATS, the attribute encoded in the Translated transaction is used as the output attribute, otherwise the (fixed) input attribute is output.
- When EATS == 0b10, the Translated transaction provides an IPA. This IPA is subject to stage 2 translation (which might generate faults and events) and, if successful, provides the PA for output. If the SMMU supports the encoding of attributes into ATS, the attribute encoded in the Translated transaction is input to stage 2, otherwise the transaction's (fixed) input attribute is input to stage 2. The stage 2 translation's attribute combines with the input to stage 2 to form the output, in the same way as for any other stage 2 translation. The overrides that are configured in STE.INSTCFG and STE.PRIVCFG are applied to the Translated transaction prior to stage 2 translation and permission checking.

Note: PRIVCFG only affects stage 2 permission checking if SMMU\_IDR3.XNX == 1.

EATS == 0b10 configuration is only usable when SMMU\_CR0.ATSCHK == 1.

Note: ATSCHK == 1 causes Translated transactions to look up and be checked against STE configuration, which for EATS == 0b10 provides the stage 2 with which to translate and for EATS == 0b01 allows the transaction to bypass without translation.

### 13.6.4 Full ATS skipping stage 1

When all of the following are true, transactions arriving without a PASID are configured to skip stage 1 translation:

| STE.Config[0] == 1 | (Stage 1 translation enabled)           |
|--------------------|---|
| STE.EATS == 0b01   | ("Full ATS" enabled)                    |
| STE.S1CDMax != 0   | (Substreams/PASIDs enabled)             |
| STE.S1DSS == 0b01  | (non-PASID transactions bypass Stage 1) |

If stage 2 translation is enabled (STE.Config[1] == 1), an ATS Translation Request without a PASID is translated stage 2-only as though STE.Config[1:0] == 0b10. The Translation Completion returns a PA from the stage 2-only translation.

Where a stage 1 + stage 2 configuration has the first stage skipped due to STE.S1DSS == 0b01, the translation process behaves as though stage 1 were not configured (corresponding to Config[0] == 0). If ATS attributes are supported, the final attribute is therefore determined by the (fixed) upstream input attribute, replaced by STE overrides where configured, and combined with the attribute from the stage 2 translation table descriptor.

If stage 2 is not enabled, an ATS Translation Request without a PASID made to this configuration skips the single translation stage and, if a fault or configuration error has not occurred, its Translation Completion returns a direct-mapped "pass-through" of the stage. Responses to requests that lead to faults and configuration errors are described in section 3.9.1.1 Responses to ATS Translation Requests and Translated transactions.

This is encoded as an identity-mapped Translation Completion containing:

- U == 0
- R == 1
- W == 1
- TranslatedAddress 1:1/identity-mapped with Translation Request's Untranslated Address
- Translation size containing at least the requested Untranslated Address
  - Note: An implementation might return a larger identity-mapped region, as any address accessed under the same StreamID/configuration conditions will result in this type of response. A larger region might avoid future page-by-page translation requests.
  - The maximum permissible translation size is the same as the OAS (see section 3.4 Address sizes).
- Note: As this response is made for an ATS Translation Request received without a PASID, the request cannot contain Execute\_Requested == 1 or Privileged\_Mode\_Requested == 1 as these fields are carried in a PASID. The response is made with Execute\_Permitted and Privileged\_Mode\_Access both 0.
- Note: This response causes the function to make 1:1 accesses to physical addresses, equivalent to the behavior
  of untranslated non-ATS transactions from the same stream.

The output attribute is a function of the (fixed) upstream input attribute replaced by STE overrides (where configured); this can be evaluated at the time of the Translation Request and encoded into the returned Translated Address as per section 13.6.2 ATS attribute overview.

#### 13.6.5 Split-stage ATS skipping stage 1

Where all of the following are true, a Translation Request without a PASID is configured to skip stage 1 translation, but the ATS configuration is for stage 1-only:

- STE.Config[1:0] == 0b11 (Stage 1 and 2 translation enabled)
- STE.EATS == 0b10 (Split-stage ATS enabled)
- STE.S1CDMax > 0 (Substreams/PASIDs enabled)
- STE.S1DSS == 0b01, (non-PASID transactions bypass stage 1)

The Translation Request might lead to a fault or configuration error that triggers an ATS response as described in section 3.9.1.1 Responses to ATS Translation Requests and Translated transactions.

Note: Even if stage 1 is effectively bypassed, a stage 1 Address Size Fault might occur if the input address supplied in the Translation Request is greater than the IAS.

Note: A Permission fault leads to one or more of R, W and X permissions being denied in the response, as shown in the next paragraph.

Where a Translation Request with a Split-stage ATS configuration skips stage 1, the Translation Request supplies an IPA address and, if a fault or configuration error does not occur, an identity-mapped Translation Completion is returned, which contains:

- U == 0
- R and W permissions are granted from the stage 2 permissions for the IPA, with respect to the permissions requested in the Translation Request.
- TranslatedAddress 1:1/identity-mapped with the Translation Request's IPA.
- The maximum permissible translation size is that of the stage 2 translation. Arm recommends that, for performance reasons, the maximum translation size is returned where possible.
- Note: See 13.6.4 *Full ATS skipping stage 1*; this response is made with Execute\_Permitted and Privileged\_Mode\_Access both 0 as it is in response to a request made without a PASID.

If the SMMU supports the encoding of attributes into ATS (see 13.6.2 ATS attribute overview), an attribute is returned that causes the resulting ATS Translated transaction to have a final output (after Stage 2 translation in the SMMU) equivalent to the (fixed) upstream input attribute, replaced by STE overrides (where configured), combined with the Stage 2 translation's attribute.

Note: This might be implemented by returning the constant input attribute (cached, shareable) replaced by STE overrides, and later combining that during stage 2 translation. Or, this might be implemented by returning the input (with STE overrides) combined with stage 2 translation and either passing the Translated transaction's attribute through or combining it with stage 2 translation again (which gives the same result).

The function then performs Translated accesses with IPAs and these are translated stage 2-only in the same way as described above for Split-stage ATS that does not skip stage 1.

# 13.7 PCle permission attribute interpretation

PCIe-domain permissions are interpreted by the SMMU as described in this section.

Base PCIe interconnect expresses only a Read/Write access permission. The PASID TLP prefix adds the following access permissions:

- Execute (In the PASID, Execute Requested, hereafter referred to as 'Exe')
- Privileged (In the PASID, Privileged\_Mode\_Requested, hereafter referred to as 'Priv')

For normal transactions, the SMMU can use R/W and Privileged directly as incoming R/W and PRIV attributes. Note: The PASID TLP prefix can only encode an 'Execute' attribute for Memory Read Requests; this is compatible with the SMMU's behavior in considering all write transactions to be Data.

The SMMU interprets the INST and PRIV attributes of a normal transaction without a PASID TLP prefix as "Data" and "non-privileged", respectively.

For an ATS Translation Request, base PCIe supplies:

- Read access is implied in all ATS Translation Requests
  - An ATS Translation Completion might grant per-page Read access, depending on page permissions.
- No-Write (NW)
  - NW == 0 signals the intention of the device to perform write accesses. When NW == 0, the Translation Completion sent by the SMMU grants Write permission if the page permission from the AP field in the descriptor contains permission for write. (Note: pages marked Dirty have write permission). When NW == 1, Write permission is permitted but not required to be granted if the page permissions contain permission for write.
  - When HTTU is not enabled, Write permission is not granted when the page permissions do not contain permission for write regardless of the request's NW bit or the translation table descriptor DBM state.
  - When HTTU is enabled, a request having NW == 0 to a page marked Writable Clean updates the page to be marked Dirty and then grants Write permission in the response. See 3.13.6 ATS, PRI and translation table flag update.

Note: Referring to the above, a request with NW == 1 might grant write access if the page is already marked Dirty (as the page permissions contain write permission).

- HTTU does not mark a page Dirty in response to a Translation Request with NW == 1.

The PASID TLP prefix adds the following to an ATS Translation Request:

- Execute (Exe)
  - This flag requests execute permission. If this flag is set, the response might grant execute permission. The response must not grant execute permission if this flag is not set in the request. A valid translation might or might not grant the requested Execute permission, depending on actual page 'X' permission. Note: A request might be made with Exe == 1 and NW == 0, meaning an endpoint requests access for write and execute. This does not imply that the endpoint will perform 'instruction writes' to the page.
  - Exe implies R in an ATS response.

Certain configurations of AArch64 translation tables allow an 'XO' execute-only permission. A translation that requests Exe permission through ATS is not compatible with an XO page and will result in no access, unless STE.INSTCFG == Instruction. Similarly, care must be taken when using the Stage 2 'XO' permission with ATS; a guest might map all executable pages as RX but a hypervisor Stage 2 can further modify this down to execute-only. See section 13.7.1 Permission attributes granted in ATS Translation Completions below for more information on ATS Exe permission.

• Privileged (Priv)

This flag marks the request as being made from a privileged or unprivileged entity in the endpoint. The
Priv flag in an ATS Translation Completion Data Entry has the same value as the Priv flag provided
with the corresponding ATS Translation Request and the entry contains permissions granted only to that
entity/privilege level.

Note: The PCIe Specification [1] states: "The ATC must not assume any correlation between the Privileged Mode and Non-Privileged Mode permissions associated with a translation."

For an ATS Translation Request without a PASID TLP prefix, the INST and PRIV attributes must be provided to the SMMU as "Data" and "non-privileged", respectively. Translated transactions do not have a PASID TLP prefix and must also be provided to the SMMU with "Data", "non-privileged" attributes.

The following table of example ATS Translation Requests shows the access permissions granted for the request on several different page permission combinations:

| <b>Example Request</b>            | Page permissions                    | Response  |
|-----------------------------------|-------------------------------------|---|
| NW == 1, Exe == 0, Priv == 0      | User-RO, Priv-RW, XN == 0           | R == 1, W == 0, Exe == 0, Priv == 0   |
| NW == 0, $Exe == 0$ , $Priv == 0$ | User-RW, Priv-RW, $XN == 0$         | R == 1, W == 1, Exe == 0, Priv == 0   |
| NW == 0, $Exe == 0$ , $Priv == 0$ | User-RO, Priv-RW, $XN == 0$         | R == 1, W == 0, Exe == 0, Priv == 0   |
| NW == 0, $Exe == 0$ , $Priv == 1$ | User-RO, Priv-RW, $XN == 0$         | R == 1, W == 1, Exe == 0, Priv == 1   |
| NW == 1, Exe == 1, Priv == 0      | User-RW, Priv-RW, XN == 1           | R == 1, W == 0 or 1, Exe == 0, Priv == 0  Note: The SMMU is permitted to return Write permission if the page is writable, even if NW == 1.                      |
| NW == 0, $Exe == 0$ , $Priv == 0$ | User-RW, Priv-RW, $XN == 1$         | R == 1, W == 1, Exe == 0, Priv == 0   |
| NW == 0, $Exe == 1$ , $Priv == 0$ | User-RW, Priv-RW, $XN == 0$         | R == 1, W == 1, Exe == 1, Priv == 0   |
| NW == 0, $Exe == 1$ , $Priv == 0$ | User-X, Priv-RW, UXN == 0 (AArch64) | R == 0, W == 0, Exe == 0, Priv == 0   |
| NW == any, Exe == any, Priv ==p   | Translation-related fault           | R == 0, W == 0, Exe == 0, Priv == $p$<br>Note: See 3.9.1 ATS Interface; this<br>Translation Completion is marked with<br>'Success' status, as opposed to UR/CA. |

When the STE.INSTCFG and STE.PRIVCFG override fields are supported (SMMU\_IDR1.ATTR\_PERMS\_OVR == 1), they affect ATS Translation Requests as described in 13.7.1 *Permission attributes granted in ATS Translation Completions* below.

Note: Arm recommends that an STE does not override INST and PRIV when the system supports PCIe PASID prefixes, in order for this attribute to be communicated from the device to the SMMU translation lookup. However, when a PASID TLP prefix is not used and the INST and PRIV attributes are provided as "Data" and "non-privileged", as required above, software might override these attributes using the STE input overrides. For example, it might configure a stream to be privileged. When PASIDs/SubstreamIDs are configured for a translating Stage 1 configuration, traffic without a PASID is deemed unexpected if STE.S1DSS == 0b00, and aborted. If STE.S1DSS == 0b01, traffic without a PASID skips Stage 1 and translation behaves as though the STE is configured for Stage 2-only translation. In this case, the PRIV attribute is ignored by Stage 2 and the "Data" default is sensible.

When HTTU is in use, an ATS TR that generates a response with  $R == 1 \parallel W == 1 \parallel Exe == 1$  also sets the AF flag in the descriptor to 1. When HTTU is enabled for dirty state update (using HD flags), an ATS TR having NW == 0 to a Writable-Clean page accessible at the requested permission level (permissions are read-only, with DBM == 1) will make the page permissions read/write (Writable-Dirty) and generates a response with W == 1. An ATS TR

having NW == 1 must not mark a page as Writable-Dirty.

Note: TTW in nested stage 1+stage 2 scenarios might cause stage 2 pages to be marked Writable-Dirty where Stage 1 translation table descriptors are updated.

Note: As STE.{INSTCFG,PRIVCFG} overrides might affect the permissions granted in an ATS response, a change to these overrides must be accompanied by an invalidation of associated ATCs.

Note: When Split-stage ATS is in use, stage 2 translation is performed on incoming Translated transactions. A Translated transaction is presented from PCIe as Data, Unprivileged. This means that it is possible to configure stage 2 execute permissions so that the ATS Translation Request succeeds, but the subsequent Translated transaction is not permitted. For example:

- 1. A Split-stage ATS Translation Request from a stream with STE.INSTCFG == Instruction is made to an address where stage 1 has RWX permissions and stage 2 has Privileged-XO permissions.
- 2. The ATS Translation Request succeeds because the combined stage 1+2 permission is Privileged-XO and the STE.INSTCFG configuration treats all accesses as execute.
- 3. The Translated transaction is translated at stage 2, but is presented to the SMMU as Unprivileged, which causes a stage 2 permission fault.

Note: Use of Split-stage ATS with STE.INSTCFG, or stage 2 permissions that are not expressible in PCIe, can lead to unexpected results. Arm recommends that STE.INSTCFG is not used with ATS.

## 13.7.1 Permission attributes granted in ATS Translation Completions

The pseudocode below illustrates how the R, W, Exec, Priv attributes in a Translation Completion are calculated with respect to the input Translation Request, the translation table descriptor permissions and the STE INSTCFG/PRIVCFG overrides.

A PRIVCFG == Privileged or PRIVCFG == Unprivileged override calculates (R,W,X) attributes appropriate to the privilege level to which the request was overridden, but the 'Priv' field in the ATS Translation Completion returns the same privilege supplied in the associated Translation Request.

• For example, a TR with 'NW == 0, Exe == 0, Priv == 1' with PRIVCFG == Unprivileged, and page permissions of 'User-RO, Priv-RW', returns a Translation Completion with 'R == 1, W == 0, Exe == 0, Priv == 1'.

The INSTCFG override affects the interpretation of the TR's Exe and the translation table 'X' attributes.

```
// Here, TR is the incoming Translation Request, TC is the returned
// Translation Completion and final_combined_translation is the
// result of all enabled stages of translation for the given address.
// HTTU is not shown; it is assumed final_combined_translation contains
// post-HTTU permissions if relevant.
                                       (Note: HTTU for ATS is influenced
// by TR.NW.)
if (!TR.PASID_present) {
    // The Priv and Exe fields of a Translation Completion without a
    // PASID are Reserved and set to 0. Effectively, there are no Priv
    // and Exe permission bits in a response without a PASID:
    TR.Priv = 0;
    TR.Exe = 0;
// The Translation Completion's Priv field is not affected by PRIVCFG and
// is as the TR supplied:
TC.Priv = TR.Priv;
STE_effective_PRIVCFG = (SMMU_IDR1.ATTR_PERMS_OVR == 1) ? STE.PRIVCFG :
                        Use_Incoming;
```

```
STE_effective_INSTCFG = (SMMU_IDR1.ATTR_PERMS_OVR == 1) ? STE.INSTCFG :
                        Use_Incoming;
// Effective privilege that permissions will be checked against:
effectivePriv = (STE_effective_PRIVCFG == Use_Incoming) ? TR.Priv:
                ((STE_effective_PRIVCFG == PRIVILEGED) ? 1 : 0));
ttd_R = final_combined_translation.readable_by_privlevel(effectivePriv);
ttd_RX = ttd_R \&\&
    final_combined_translation.executable_by_privlevel(effectivePriv);
ttd_X = final_combined_translation.executable_by_privlevel(effectivePriv);
// Grant of write permission is always governed by the translation's W
// permission. Also note that, when enabled, HTTU only sets Dirty if
// TR.NW == 0; the page is writable if this is the case, or if the page is
// already Dirty (see text).
// Note: An implementation is not *required* to return W == 1 if
// TR.NW == 1 and translation table descriptor permissions include write,
// but doing so can avoid the Endpoint having to make a second request if it
// subsequently requires to write.
TC.W = final_combined_translation.writable_by_privlevel(effectivePriv);
if (STE_effective_INSTCFG == Use_Incoming) {
    TC.R = ttd_R;
    TC.Exe = TR.Exe && ttd_RX;
                                 // Granting X implies granting R
    // Note: An execute-only (XO) translation grants no access to ATS.
             A normal (non-ATS) transaction for Exe == 1 will succeed
    //
              to an XO translation.
} else if (STE_effective_INSTCFG == INST) {
    TC.R = ttd_X;
    TC.Exe = TR.Exe && ttd_X;
    // Note: An XO translation can grant R&Exe access to an ATS Request
             because in this configuration all reads are considered
    //
    //
             instruction fetches, therefore R&Exe are the same.
} else { // STE.INSTCFG == DATA
    // This is effectively equivalent to assuming X=R; anything with 'R'
    // for the privilege level is accessible.
    TC.R = ttd_R;
    TC.Exe = TR.Exe && ttd_R;
```

# 13.8 Attributes for SMMU-originated accesses

This table provides a summary of memory attributes used for SMMU-originated accesses. This table is an informative summary of the fields used to determine the memory attributes and the normative requirements are captured in the register and structure fields referenced.

| Access       | Attributes determined by   |
|--------------|--|
| STE fetch    | SMMU_(S_)CR1.{TABLE_IC, TABLE_OC, TABLE_SH}  |
| VMS fetch    | <pre>SMMU_(S_)CR1.{TABLE_IC, TABLE_OC, TABLE_SH}</pre>   |
| CD fetch     | STE.{S1CIR, S1COR, S1CSH}, combined with stage 2 attributes if stage 2 translation is enabled, including the effects of STE.S2FWB and STE.S2PTW. |
| Stage 1 walk | CD.{IRx, ORx, SHx}, combined with stage 2 attributes if stage 2 translation is enabled, including the effects of STE.S2FWB and STE.S2PTW.        |
| Stage 2 walk | STE.{S2IR0, S2OR0, S2SH0}  |
| GERROR MSI   | SMMU_(S_)GERROR_IRQ_CFG2.{MemAttr, SH}   |
| EVENTQ MSI   | SMMU_(S_)EVENTQ_IRQ_CFG2.{MemAttr, SH}   |
| PRIQ MSI     | SMMU_PRIQ_IRQ_CFG2.{MemAttr, SH}   |
| CMDQ MSI     | CMD_SYNC.{MSIAttr, MSH}  |
| CMDQ fetch   | SMMU_(S_)CR1.{QUEUE_IC, QUEUE_OC, QUEUE_SH} and SMMU_(S_)CMDQ_BASE.RA  |
| PRIQ write   | SMMU_CR1.{QUEUE_IC, QUEUE_OC, QUEUE_SH} and SMMU_PRIQ_BASE.WA  |
| EVENTQ write | SMMU_(S_)CR1.{QUEUE_IC, QUEUE_OC, QUEUE_SH} and SMMU_(S_)EVENTQ_BASE.WA  |

# Chapter 14

# **External interfaces**

# 14.1 Data path ingress/egress ports

Along with read/write data/address, the following information is supplied with an incoming transaction:

- StreamID
- Optionally, SubstreamID (PASID) and a SubstreamID-Valid flag, SSV.
- StreamID is qualified by a SEC\_SID identifier to indicate the Security state of the StreamID. If the SMMU supports only Non-secure state, then SEC\_SID might be absent and it is treated as always Non-secure.
- StreamID is passed through the SMMU into the memory system, to create a DeviceID that enables the GICv3 ITS to differentiate interrupts by stream.
  - An internal StreamID is generated for MSIs originating from the SMMU.
    - \* Note: The StreamID generated for MSIs must have a different value to those associated with client devices, so that the GICv3 ITS can differentiate SMMU MSIs from those originating from client devices.
- ATS Translated/Untranslated tag to control bypass.
- Instruction/Data/NS permission attributes and Memory type/Shareability/allocation hints from upstream device (optional, can be overridden in STE). See Chapter 13 Attribute Transformation.

If the ability to perform HTTU atomic updates using local monitors is required, the SMMU would need to attach to the system using a fully-coherent interconnect port. However, if HTTU is not implemented or the downstream system provides far atomic facilities which do not require a fully-coherent port, an IO-coherent interconnect port might be used.

#### Chapter 14. External interfaces 14.1. Data path ingress/egress ports

As the SMMU does not translate outgoing coherency or broadcast invalidation traffic, there is no requirement to use an interconnect supporting cache coherency or DVM between the SMMU and client devices. Client devices might connect to the SMMU using an IO-coherent interconnect port.

# 14.2 ATS Interface, packets, protocol

Note: An SMMU implementation might provide a separate interface to provide ATS and PRI protocol support with a compatible PCIe Root Complex. This interface is outside the scope of this specification.

# 14.3 SMMU-originated transactions

An SMMU read for any translation, configuration or queue structure that is performed into any PCIe address space is permitted to return any value or be terminated with an external abort.

Note: Arm expects SMMU structures and translation tables that are accessed externally in non-embedded implementations to be located in system memory. A potential deadlock (where an SMMU read access is dependent on the completion of an incoming PCIe write which is itself dependent on the SMMU translation that caused the original access) can be avoided by the system terminating SMMU accesses targeted to the PCIe domain by malicious or incorrect software.

# Chapter 15

# **Translation procedure**

The following flowcharts are an illustration of the sequence of events from the beginning of a translation to its final outcome. They represent an abstracted translation flow to summarize the information in the rest of this document.


The purpose is to indicate the end result of different types of transactions, in terms of transaction and translation success or error responses (including PCIe ATS errors and completion responses). Certain aspects are not intended to be depicted in detail, including but not limited to:


- Atomic translation table update mechanism.
- TLB conflict, configuration cache conflict (which might happen at an IMPLEMENTATION DEFINED point in the translation).
- Speculative operations (which do not record errors or faults).
- Attribute control.
- Reporting of the events controlled by the <a href="SMMU\_CR2.REC\_CFG\_ATS">SMMU\_CR2.REC\_CFG\_ATS</a> field.


Chapter 15. Translation procedure


E.a


# 15.1 Translation procedure charts

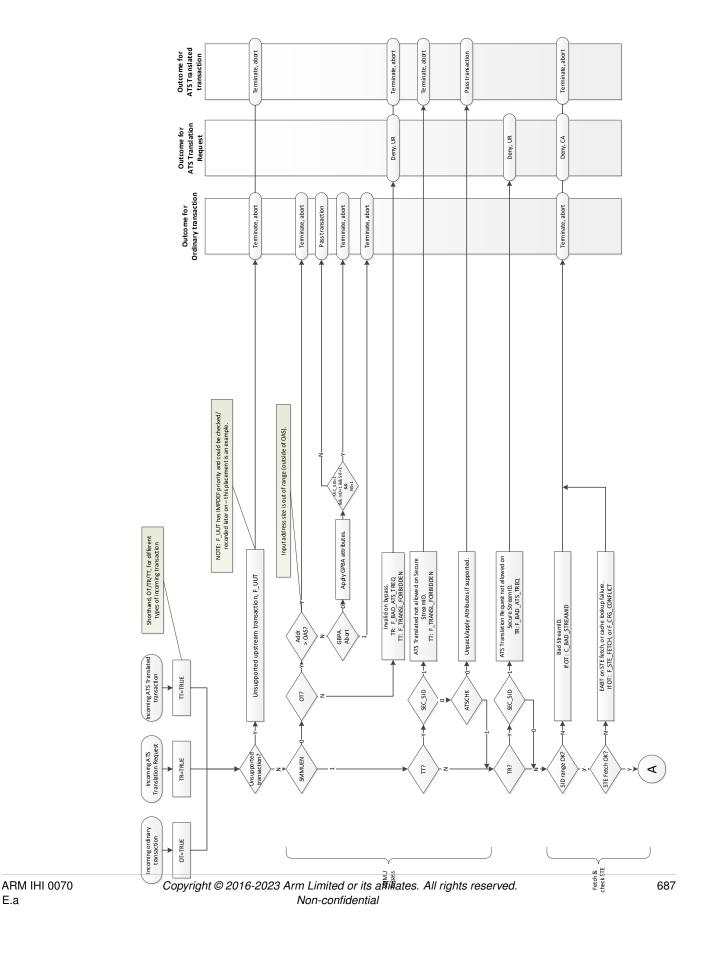


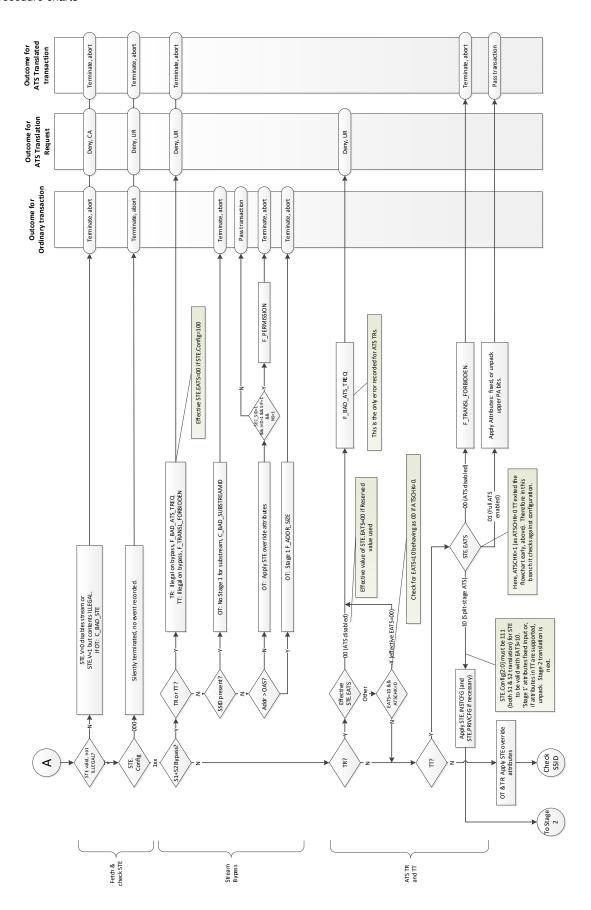

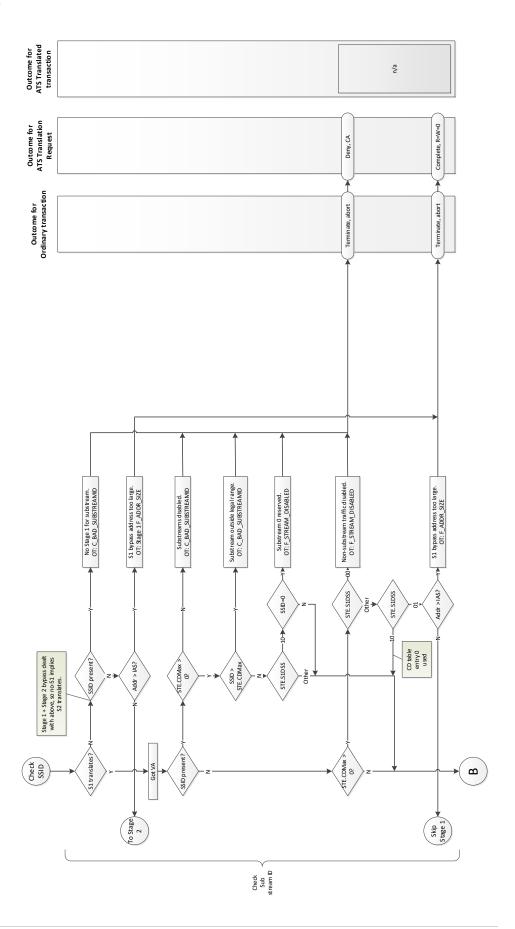

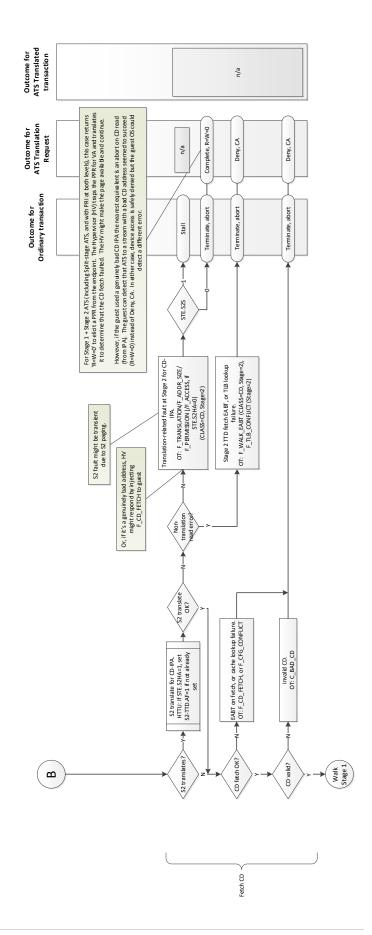

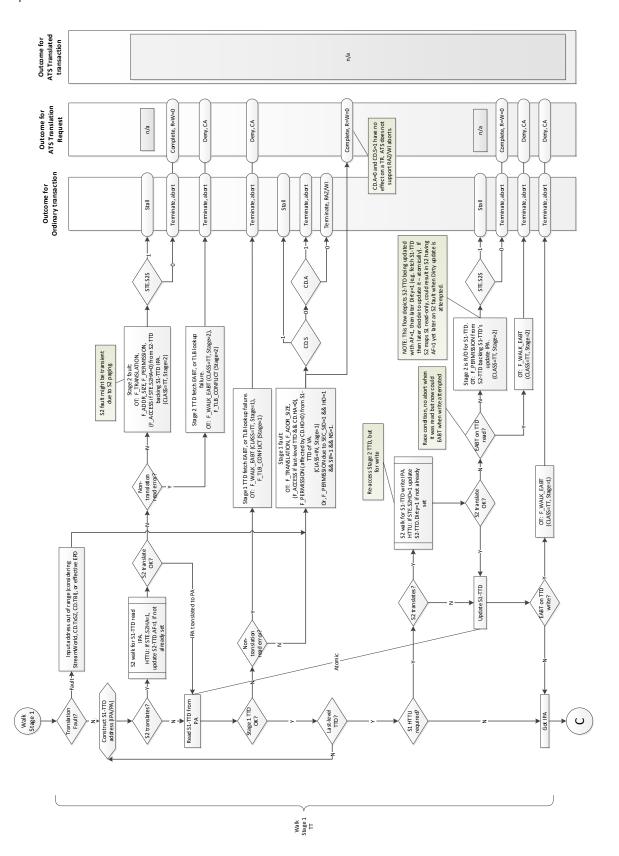

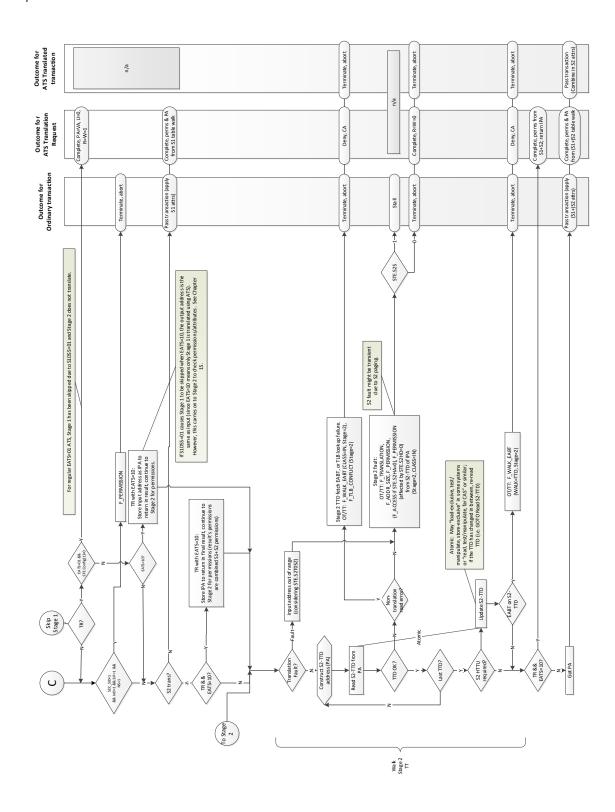

## 15.2 Notes on translation procedure charts

For every fault or termination that an ordinary transaction might experience, an ATS Translation Request has an equivalent defined response.

Similarly, an ATS Translated transaction might experience a subset of the fault or termination reasons.

Generally, situations that represent a configuration error result in a Completer Abort (CA) response to the endpoint, situations that represent an explicit prevention or disable of ATS service result in an Unsupported Request (UR) response, and Translation-related failures result in a successful Translation Completion having R == W == 0 (that is, no access for this address).

See section 3.9.1.1 Responses to ATS Translation Requests and Translated transactions.

|      | oter 16<br>tem and Implementation Considerations   |
|------|--|
| 16.1 | Stages  Arm strongly recommends that stage 2 is only used to provide device assignment to a guest OS. To support other usage scenarios, Arm recommends implementations also implement stage 1 if stage 2 is implemented. |
|      |  |
|      |  |

## 16.2 Caching

An SMMU implementation is not required to implement caching of any kind, but Arm expects that performance requirements will require caching of at least some configuration or translation information.

Caching of configuration or translations might manifest as separate caches for each type of structure, or some combination of structures into a smaller number of caches. When architected structure types are cached together as one combined entry, the invalidation and lookup semantics remain identical to many specialized per-structure caches.

For example, an implementation with caches of each structure and translation stage implemented separately would contain:

- · An STE cache
  - Indexed by StreamID.
  - Invalidated by StreamID, StreamID-span, or all.
  - Might contain a Level 1 Stream table cache of pointers to 2nd-level Stream table.
    - \* Identical index/invalidation requirements.
- · A CD cache
  - Indexed by StreamID and SubstreamID, or address.
    - \* Note: Address index could be used, calculated from the STE.S1ContextPtr of a prior STE lookup plus the incoming SubstreamID. This arrangement might be useful where many STEs share a common table of CDs.
  - Invalidated by StreamID and SubstreamID, StreamID, or all.
  - Might contain a Level 1 CD table cache of pointers to 2nd-level CD table.
    - \* Identical index and invalidation requirements.
- A VMS PARTID MAP cache
  - Indexed by VMID, or StreamID.
    - \* Note: A VMS cache might be indexed by StreamID, but this would be no different to storing VMS data as part of an STE cache.
  - Invalidated by VMID, or StreamID.
- A stage 1 TLB (VA to IPA).
  - Indexed by VA, ASID, VMID and EL.
    - \* EL is the Exception level or StreamWorld on whose behalf the TLB entry was inserted.
  - Invalidated by VA, ASID, VMID and EL, or ASID, VMID and EL, or VMID and EL, or EL.
  - Might contain or be paired with a walk cache (invalidated under the same conditions as PE translation walk caches).
- A stage 2 TLB (IPA to PA)
  - Indexed by IPA, VMID and EL.
  - Invalidated by IPA and VMID, or VMID, or all.
  - Might contain or be paired with a walk cache.

In this example, consistency is maintained by looking up cache entries in order from STE through CD, then using the parameters determined from that stream configuration to lookup in the TLBs. That is, given a StreamID,

SubstreamID and VA input, convert StreamID and SubstreamID into ASID, VMID and Exception level, then use VA, ASID, VMID and EL to lookup in the TLBs.

#### 16.2.1 Caching combined structures

Note: In the example given in 16.2 *Caching*, a stage 1 TLB is implemented separately to the stage 2 TLB. While this layout mimics the two stages of translation table, it might not provide optimal performance. A designer might determine that a combined stage 1 and stage 2 TLB is better, where each entry would translate VA to PA directly but would inherit invalidation requirements from both original structures.

For translations and TLBs, the SMMU invalidation rules for combined TLBs directly match those of Armv8-A.

Note: For example, an invalidation by IPA is not required to invalidate entries in a combined S1 and S2 TLB but is required to be paired with a second invalidation by VA or stage 1-all that would affect S1 and S2 TLB entries.

Combined structure caches maintain the same invalidation semantics as discrete structures. An entry of a combined cache is invalidated if any part of the entry would have been invalidated in an equivalent operation, with the same parameters, on a discrete cache.

Note: For example, a particular SMMU implementation maintains only two hardware caches, a combined cache of STE and CD, and a translation cache or TLB. In this layout, a StreamID and SubstreamID and VA input looks up StreamID and SubstreamID in the combined cache and determines the ASID, VMID, and StreamWorld at the same time. The translation is then looked up using VA, ASID, VMID and StreamWorld to determine the PA. The invalidation requirements of the combined STE and CD cache are the union of the requirements of the separate structures. STE invalidation operations invalidate every combined cache entry that contains data loaded using a given StreamID. This covers all CDs fetched from a given STE, which is implied anyway by the CMD\_CFGI\_STE to invalidate CDs subordinate to the STE. Conversely, every entry that contains data from a CD to be invalidated must be invalidated even if the STE portion is still valid.

An implementation might combine a TLB with configuration caching so that a single cache is looked up by StreamID and SubstreamID and VA and results in a PA output. Entries in this cache are invalidated when any part of an entry would match (or cannot be proven to not match) a required invalidation for STE, CD or translation.

Note: Implementations must balance a trade-off between over-invalidation that might be necessary to cover all required entries, and the cost of adding extra tagging. For example, a single cache might tag entries by VA, ASID, VMID, and StreamID so that broadcast TLB invalidations can remove only relevant entries, or so that an STE invalidation removes only entries that could have been constructed from the given StreamID.

#### 16.2.2 Data dependencies between structures

The configuration structures logically make a tree or graph by indicating subsequent structures (and onwards, indicating translation tables). The structures contain fields to locate the next structure in the chain but might also modify interpretation of subsequent structures.

The dependencies between structures are:

- STE to CD to TT (stage 1)
- STE to TT (stage 2)

(Here, 'STE' might be composed of multi-level L1STD to STE lookups and CD might be composed of multi-level L1CD to CD lookups.)

The STE contains fields that determine how to locate a CD and stage 2 translations (whichever are relevant to STE.Config) but also contains fields that modify the behavior of a CD and translation table walks performed through it:

- The STE StreamWorld (STRW plus STE Security state) determines the translation regime, which:
  - Tags caches of translations subsequently inserted, to separate lookup and match on invalidation

- Determines which translation table formats are valid for use by the CD.
- STE.S1STALLD modifies CD.S behavior upon stage 1 fault.
- AArch32 stage 2 translation (STE.Config[1] == 1 and STE.S2AA64 == 0) causes a 64-bit stage 1 CD (CD.AA64 == 1) to be ILLEGAL.

Note: A change to an STE field requires an STE invalidation. An STE invalidation also invalidates all CDs that were cached through the STE.

The CD contains fields that determine how to locate translation tables but also contains fields that modify the behavior of a translation table walk through it:

- CD.{AA64, EPDx, SHx, ORx, IRx, TGx, TxSZ, ENDI, NSCFGx} govern walks of the translation table itself. In addition, NSCFGx can influence the NS attribute output from stage 1, because a translation table walk made to memory that is marked as Non-secure at stage 1 can never provide an output address that is Secure at the output of stage 1.
- CD.{UWXN, WXN, PAN, AFFD, HADx} govern permission checking with the translation table descriptors.
- CD.{ASID, ASET} govern ASID-tagged translation cache entries.
- CD.{MAIR, AMAIR} modify the attribute determined from translation.
- CD.{HA,HD} determines HTTU configuration for walks performed through TTB{0,1}.

Some STE and CD fields are permitted to be cached as part of a translation or TLB entry (therefore requiring invalidation of TLB entries that might contain the old value when the fields are changed). These fields are noted in sections 5.2 Stream Table Entry and 5.4.1 CD notes. With the exception of these fields, no other information is expected to be 'carried forward' between structures.

Some configuration register fields are, where indicated, permitted to be cached in a TLB. Changes to these fields require invalidation of any TLB entries that might cache a previous value of the field.

## 16.3 Programming implications of bus address sizing

If pointers are programmed into a device from the PE that would, on the PE, cause translation faults due to failing sign-extension checks, the SMMU will also raise a translation fault because of the sign-extension checks on input. However, if a system cannot convey all 64 address bits from a device, or a device lacks the ability to register upper address bits, the SMMU does not have enough information to perform these checks. In this case, Arm recommends that if detection of such errors is required, software (or the device, if it has the facility to hold the full address) checks the validity of upper bits.

On Armv8-A PEs, the TBI facility allows the top byte of addresses to contain tags that are ignored when checking address sign-extension validity. If an address is truncated to <= 56 bits on the flow through device DMA registers to device DMA accesses to I/O interconnect to the SMMU, the SMMU cannot check the validity of the top byte so effectively TBI is always used. In such a system, another entity (device, software) must check addresses if required.

## 16.4 System integration

- The SMMU must be in the same Shareability domain as any other agents that might use DVM with the SMMU.
  - In systems implementing architectures prior to Armv8.4, DVM messages are only broadcast over the Inner Shareable domain.
  - Some systems implementing Armv8.4 may broadcast DVM messages over the Outer Shareable domain.
- In general, Arm does not expect SMMUs to be connected in series.

Note: This topology needs special software support, particularly when different software modules manage different SMMUs. This must not be used to construct two stages of translation using two SMMU implementations that support only one stage, as it is programmed differently to an SMMU that supports both stages.

- When used with a PCIe subsystem, an SMMU implementation must support at least the full (16-bit) range of PCI RequesterIDs and the system must ensure that a Root Complex generates StreamIDs from PCI RequesterIDs (BDF) in a one to one or linear fashion so that StreamID[15:0] == RequesterID[15:0]. A larger StreamID might be constructed by concatenating the RequesterIDs from multiple PCI domains (or "segments" in ACPI terminology), for example:
  - StreamID[17:0] == { pci\_rc\_id[1:0], pci\_bus[7:0], pci\_dev[4:0], pci\_fn[2:0] };
    that is, StreamID[17:0] == { pci\_domain[1:0], RequesterID[15:0] };

When used with a PCIe system supporting PASIDs, Arm recommends that the SMMU supports the same number of (or fewer) PASID bits supported by client Root Complexes so that software is able to detect end-to-end SubstreamID capabilities through the SMMU.

- If accesses from a device are expected to experience page faults and the Stall model is used, Arm recommends
  that a system does not depend on other devices on the same SMMU path as the device in order to resolve the
  faults. Because a stalled transaction occupies an input buffer resource, the SMMU might not guarantee to
  pass traffic whether faulting or not, and any new request for device DMA might deadlock.
- Streams belonging to PCIe endpoints must not be stalled. The Terminate model is the only useful option. Stalling PCIe transactions risks either timeouts from the PCIe endpoint (which might be difficult to recover from), or deadlock in certain scenarios. A system is permitted to enforce this, for safety reasons. See section 3.12 Fault models, recording and reporting.
- Specifically, PCIe traffic (especially if configured to Terminate, architecturally not stalling) must not be held up waiting for any PE action, including draining the Event queue or restarting stalled transactions. PCIe traffic must always make forward progress without unbounded delays dependent on software. An implementation must ensure that transactions to be terminated are not blocked by any other users of the SMMU which might consume resources or stall transactions for an indefinite time.

## 16.5 System software

Note: Software must:

- Not assume that both stage 1 and stage 2 are implemented.
- Support systems in which broadcast TLB invalidation messages are not supported so do not invalidate SMMU TLB entries, that is fall back to software TLB invalidation messages.
- Discover StreamID and SubstreamID sizes and capabilities.
- Probe SMMU\_IDR1 for PRESET configuration table and queue base pointers, only allocating memory for pointers that require initialization.
- Discover the maximum table sizes of the SMMU rather than using fixed-size tables.
- Not make assumptions about which SMMU Security state or states it is interacting with, and not make assumptions about which Security states are supported in the SMMU.
- Present system-specific StreamIDs as part of firmware descriptions for each device, as the StreamIDs associated with a physical device are system-specific.
- Ensure that when HTTU is not used, descriptors mapping DMA memory are marked Accessed (and not Read-Only, if DMA writes are expected) in order to avoid faults.

## 16.6 Implementation-defined features

#### 16.6.1 Configuration and translation cache locking

Note: The lockdown of configuration and translation cache entries is not a feature directly described by the SMMU architecture because cache structures might vary between implementation and entry lockdown might expose this layout to software.

An implementation might support cache locking in an IMPLEMENTATION DEFINED manner using registers in the IMPLEMENTATION DEFINED memory map.

Note: These registers might expose cache contents and provide insertion, probe and invalidation operations.

If an implementation supports translation cache locking, TLB invalidation must be consistent with the Armv8-A rules on locked entries:

- A TLB invalidate-all operation does not invalidate locked entries.
- An implementation might choose to implement TLB invalidate-by-VA or invalidate-by-ASID operations so that they do one of the following:
  - Invalidate locked entries that are explicitly matched by the operation.
  - Do not invalidate locked entries.

A locked TLB entry is not affected by over-invalidation side-effects of invalidation operations that do not directly match the entry.

The behavior of CMD\_CFGI\_\* commands with respect to locked configuration cache entries is IMPLEMENTATION DEFINED.

See SMMU\_S\_INIT.INV\_ALL, this initialization invalidate-all operation invalidates locked entries.

## 16.7 Interconnect-specific features

#### 16.7.1 Reporting of Unsupported Client Transactions

The SMMU behaves as though a single transaction is associated with one translation.

SMMU implementations might define their own input alignment restrictions leading to an unsupported client transaction error. For example, an implementation with an AMBA downstream interconnect is likely to treat an incoming transaction that crosses a 4KB boundary as unsupported, because these would violate the alignment rules of the downstream interconnect.

For AMBA 4 systems the following upstream client transactions are unsupported:

• Far Atomic operations (see section 16.7.6 *Far Atomic operations*) where not supported by the downstream interconnect or SMMU implementation.

Such transactions will be aborted and an F\_UUT event will be recorded if possible.

#### 16.7.2 Non-data transfer transactions

Some interconnect architectures support transactions that do not perform a data transfer, prefetch or translation request action.

If the input interconnect can express the following transactions from client devices, the transactions will be terminated silently by the SMMU as SLVERR (or equivalent on non-AMBA interconnect):

- DVM operations (of all sub-types).
- · Barriers.

The interconnect architecture of an implementation might support the following non-data operations, also known as Cache Maintenance Operations (CMOs), that perform address-based cache maintenance:

- Clean
- · Invalidate.
- CleanInvalidate.
- CleanToPersistence.
  - In AMBA, these are the CleanShared, MakeInvalid, CleanInvalid and CleanSharedPersist transactions.

#### SMMUv3.0:

 The SMMU does not support CMOs. If an SMMUv3.0 implementation can receive these operations from client devices, they are handled in an IMPLEMENTATION DEFINED way. A system that requires SMMU support for CMOs is required to implement SMMUv3.1 or later.

#### SMMUv3.1 and later:

- CMOs that are not address-based are not supported and are silently terminated by the SMMU.
- CMOs are permitted to pass into the system, without the transformation described in section 16.7.2.1 Control
  of Cache Maintenance Operations, when the transaction bypasses all implemented stages of translation. See
  section 16.7.2.3 Memory types and Shareability for Cache Maintenance Operations on memory types.
  - Note: For a Secure stream, SMMU\_S\_CR0.SIF still applies. See section 16.7.2.2 Permissions model for Cache Maintenance Operations.
- When one or more stages of translation is applied, the SMMU allows these operations to progress into the system subject to the configuration controls and permission model described in sections 16.7.2.1 Control of Cache Maintenance Operations and 16.7.2.2 Permissions model for Cache Maintenance Operations.

Additionally, Invalidate operations might be transformed into Clean and Invalidate operations as part of these checks.

• When the input interconnect can deliver these operations, but the output interconnect does not support them, the transactions are silently terminated.

SMMU implementations supporting AMBA might define an IMPLEMENTATION DEFINED set of unsupported incoming transactions.

SMMU implementations supporting other interconnects might define their own set of unsupported incoming transactions.

Note: See section 3.22 *Destructive reads and directed cache prefetch transactions*. A destructive read (read with invalidate), write with directed prefetch, or standalone directed prefetch transaction is not considered to be a discrete Cache Maintenance Operation and is handled differently.

#### 16.7.2.1 Control of Cache Maintenance Operations

In SMMUv3.1 and later, STE.DRE controls whether an Invalidate operation is transformed as follows:

| Input transaction class | DRE == 0   | DRE == 1  |
|-------------------------|--|---|
| Invalidate              | Transformed into CleanInvalidate. The operation is treated identically to a CleanInvalidate for permission evaluation. | Eligible for output as Invalidate (if permissions checks allow) |

The STE.DRE field applies in this manner when one or more stages of translation are applied. This does not include the case where the only stage of translation is skipped due to STE.S1DSS.

### 16.7.2.2 Permissions model for Cache Maintenance Operations

In SMMUv3.1 and later, the SMMU\_S\_CR0.SIF permission check applies to Cache Maintenance Operations (CMOs). This applies when either translation or bypass occurs.

In SMMUv3.1 and later, when one or more stages of translation are applied, the following permissions are required for CMOs:

| Maintenance operation type   | Required permissions   | Behavior if permissions not met   |  |
|--|--|---|--|
| Clean,<br>CleanInvalidate,<br>CleanToPersistence   | Identical to ordinary read: Requires Read or Execute permission, (depending on input InD and INSTCFG) at privilege appropriate to PnU input and STE.PRIVCFG. | Identical to ordinary read.   |  |
| Invalidate  To progress as Invalidate, requires both Read-or-Execute permission (depending or input InD and INSTCFG) and Write permission at appropriate to the PnU input and STE.PRIVCFG. |  | If no Read/Exec permission is available behavior is identical to an ordinary read. If Read/Exec permission is available but Write permission is not, an Invalidate is transformed into a CleanInvalidate operation. |  |

If a Clean, CleanInvalidate, Invalidate or CleanToPersistence operation leads to a fault, it is recorded as a read, that is RnW == 1. The read can be treated as either data or instruction, depending on the input InD/INSTCFG. On fault, these operations stall in the same way as an ordinary read transaction if the SMMU is configured for stalling fault

behavior. Retry and termination behave the same as for an ordinary read or write transaction. If these transactions are stalled and retried, they are retried as the same transaction type.

Note: The input interconnect might supply all CMOs as Data.

See section 3.13.7 *Hardware flag update for Cache Maintenance Operations and Destructive Reads* for information on the behavior of HTTU for Invalidate operations.

When HTTU is enabled for Access flag updates and the translation descriptor and AFFD configuration require it, a Clean, CleanInvalidate, CleanToPersistence or Invalidate operation updates the Access flag. See section 3.13.2 Access flag hardware update.

### 16.7.2.3 Memory types and Shareability for Cache Maintenance Operations

Cache Maintenance Operations (CMOs) do not have a memory type. If an input shareability is provided, it does not undergo any normalization before entering the attribute determination process described in Chapter 13 Attribute Transformation. If an input shareability is not provided, the default shareability is taken as described in section 13.1.3 Default input attributes. After input, the output Shareability of a CMO is determined in the same way to that of an ordinary transaction.

Note: This means that the input shareability of a CMO is not dependent on the input memory type even if the input bus encodes a memory type, because the SMMU does not consider a memory type to be provided on input for a CMO.

In SMMUv3.1 and later, this rule applies to all such operations in all translation and bypass configurations, including:

- Global bypass (attribute set from GBPA).
- STE bypass (whether STE.Config == 0b100 or STE.S1DSS and STE.Config == 0b101 causes skip of the only stage of translation).
- Translation.

#### 16.7.3 Treatment of AMBA Exclusives from client devices

The ACE-Lite specification does not permit Exclusive accesses to Inner-shareable or Outer-shareable AMBA domains. Therefore, if the SMMU interface to the system interconnect is ACE-Lite, a Non-shareable, or System-shareable, Exclusive access transaction that is translated into an Inner-shareable or Outer-shareable transaction cannot be marked as Exclusive. Arm recommends that such transactions are transformed into non-Exclusives.

For more information about the relationship between AMBA and Armv8 output attributes, see section 16.7.5.2 *Conversion of Armv8 attributes to AMBA on output and representation of Shareability.* 

The outcome of such a transformed Exclusive transaction is equivalent to that of an ordinary transaction and depends on whether the transaction experiences a fault and, if it faults, fault configuration. The transaction will experience one of the following:

- Translates without fault, returning the non-exclusive transaction's response to the upstream client device. A response of EXOK is not possible (as the transaction is now non-exclusive). A response of OK will be treated as an exclusive fail by the upstream client device.
- Faults on translation and is terminated with abort. These aborts are reported to the upstream client device in the same way for transformed Exclusive transactions as for regular transactions (for example as SLVERR).
- Fault on stage 1 translation and be terminated with RAZ/WI semantics because CD.A == 0. This returns a response of OK.

#### 16.7.4 Treatment of downstream aborts

Some systems might allow a Completer device to abort transactions, returning status to the Requester. Translated transactions initiated by a client device that are aborted in the memory system are not recorded in the SMMU. The abort is returned to the client device, which is responsible for recording and reporting such faults. Aborted transactions that were internally-initiated by the SMMU are recorded by the SMMU if possible to do so.

The event recorded by the SMMU, on one of its accesses being returned with abort status (whether aborted by the interconnect or Completer), depends on the type of access:

STE fetch: F STE FETCH CD fetch: F CD FETCH VMS fetch: F\_VMS\_FETCH Translation table walk: F WALK EABT GERROR.CMDQ ERR & Command queue CERROR ABT Command queue read entry: Event queue access: GERROR.EVENTO ABT ERR PRI queue access: GERROR.PRIQ\_ABT\_ERR GERROR.MSI\_\*\_ABT\_ERR MSI write:

#### 16.7.5 SMMU and AMBA attribute differences

# 16.7.5.1 Conversion of AMBA attributes to Armv8 on input and inferring Inner Attributes

AMBA does not explicitly encode separate inner attributes for an upstream client device. Arm recommends that the inner and outer attributes are considered to be the same as the outer attributes except in the following case for data operations:

• It is IMPLEMENTATION DEFINED whether Non-cacheable with any AxDOMAIN value is treated as iNC-oNC-OSH or whether Non-cacheable with an AxDOMAIN value of NSH/ISH/OSH is treated as an iWB-oNC-{NSH,ISH,OSH} type. In the latter case, it must be considered to be Read-Allocate and Write-Allocate.

Note: Determination of the inner attributes might be used if the downstream interconnect can convey inner attributes.

#### 16.7.5.1.1 Conversion of input attributes from AMBA to Armv8 architectural attributes

Incoming AMBA attributes are converted to SMMU/Armv8 architectural attributes as follows:

| AMBA attribute  | Armv8 attribute    | Notes |
|---|--------------------|-------|
| Device-Sys non-bufferable                               | Device-nGnRnE      |       |
| Device-Sys bufferable                                   | Device-nGnRE       |       |
| Normal-Non-cacheable-Sys (bufferable or non-bufferable) | Normal-iNC-oNC-OSH |       |

| AMBA attribute  | Armv8 attribute   | Notes  |
|---|---|--|
| Normal-Non-cacheable {NSH,ISH,OSH} (bufferable or non-bufferable) | Normal-iNC-oNC-OSH<br>Or<br>Normal-iWB-oNC-<br>{NSH,ISH,OSH}                | This is an IMPLEMENTATION DEFINED choice. When the input is treated as iNC-oNC-OSH, RA/WA/TR do not exist. Otherwise, RA, WA are 1 and marked non-transient.         |
| Normal-WriteThrough-<br>{NSH,ISH,OSH}                             | Normal-iNC-oNC-OSH <sup>(1)</sup><br>Or<br>Normal-iWT-oWT-<br>{NSH,ISH,OSH} | This is an IMPLEMENTATION DEFINED choice. When the input is treated as iNC-oNC-OSH, RA/WA/TR do not exist. Otherwise, RA,WA are from input and marked non-transient. |
| Normal-WriteBack-{NSH,ISH,OSH}                                    | Normal-iWB-oWB-<br>{NSH,ISH,OSH}  | RA, WA from input. Always marked non-transient.  |

<sup>(1)</sup> The conversion between architectural and AMBA attributes might consider WriteThrough to be equivalent to a Normal Non-cacheable type on output and an implementation might, for consistency, apply this strategy on input.

An ACE-Sys input Shareability in considered to be OSH for the purposes of attribute combining and overriding as described in section 13.1 *SMMU handling of attributes*.

# 16.7.5.2 Conversion of Armv8 attributes to AMBA on output and representation of Shareability

The SMMU specifies the architectural Inner and Outer Cacheability and Shareability attributes. However, in some circumstances there is a non-obvious transformation of these attributes into an AMBA representation:

- The architecture considers any-Device/Normal-iNC-oNC to be OSH, while ACE considers these to be 'Sys'.
- Final attributes of any-Device/Normal-iNC-oNC are presented on AMBA as ACE-Device-Sys/ ACE-Normal-Non-cacheable-Sys.
- If the implementation does not transform final attributes of i{WB,WT}-oNC-OSH (inner cacheable of any variety) to Normal-Non-cacheable-SYS as set out in 16.7.5.3 *Common interpretation of attribute encoding between SMMU and PE* (for example, a different interpretation of attribute mapping is used to that of Arm PE IP) and these attributes are transformed to an ACE cacheable type, the type is represented as ACE-OSH.

#### 16.7.5.2.1 Conversion of Armv8 architectural attributes to AMBA on output

SMMU/Armv8 architectural attributes are converted to AMBA attributes on output as follows:

| Armv8 attribute                  | AMBA attribute                      | Notes  |
|----------------------------------|-------------------------------------|--|
| Device-nGnRnE                    | Device-Sys non-bufferable           |  |
| Device-(n)G(n)RE                 | Device-Sys bufferable               |  |
| Normal-iNC-oNC-OSH               | Normal-Non-cacheable-Sys bufferable | Architecturally, a Normal-iNC-oNC-{NSH,ISH} attribute is not possible, only OSH. |
| Normal-iNC-oWT<br>-{NSH,ISH,OSH} | Normal-Non-cacheable-Sys bufferable | (1)  |

| Armv8 attribute                  | AMBA attribute                      | Notes |
|----------------------------------|-------------------------------------|-------|
| Normal-iNC-oWB-<br>{NSH,ISH,OSH} | Normal-Non-cacheable-Sys bufferable | (1)   |
| Normal-iWT-oNC<br>-{NSH,ISH,OSH} | Normal-Non-cacheable-Sys bufferable | (1)   |
| Normal-iWT-oWT<br>-{NSH,ISH,OSH} | Normal-Non-cacheable-Sys bufferable | (1)   |
| Normal-iWT-oWB<br>-{NSH,ISH,OSH} | Normal-Non-cacheable-Sys bufferable | (1)   |
| Normal-iWB-oNC<br>-{NSH,ISH,OSH} | Normal-Non-cacheable-Sys bufferable | (1)   |
| Normal-iWB-oWT<br>-{NSH,ISH,OSH} | Normal-Non-cacheable-Sys bufferable | (1)   |
| Normal-iWB-oWB<br>-{NSH,ISH,OSH} | Normal-WriteBack-{NSH,ISH,OSH}      |       |

<sup>(1)</sup>See 16.7.5.3 *Common interpretation of attribute encoding between SMMU and PE* below: these transformations correspond to the transformations implemented in the PEs in the system. The outputs shown correspond to Arm Cortex IP. For other PE IP, the interpretations of the Armv8 attributes are IMPLEMENTATION DEFINED.

When a cacheable type is output, AMBA interconnect RA and WA attributes are generated directly from the RA/WA portion of the Arm architectural attribute.

Section 13.1.7 *Ensuring consistent output attributes* mandates that the SMMU will not output architecturally-inconsistent attributes or attribute combinations that are illegal for the interconnect. For AMBA, the output AxDOMAIN is made consistent with the final AxCACHE value if it is not already. If required, this is made consistent by choosing the highest (most shareable) value of AxDOMAIN that is legal given AxCACHE. Normal Non-cacheable types are always bufferable. The output AxDOMAIN is ACE-Sys if the final attributes are a Device or a Non-cacheable type.

For example, in the case where:

- The SMMU is configured to bypass, SMMU\_CR0.SMMUEN == 0.
- SMMU\_GBPA.MTCFG == 1, and the input MemAttr is overridden to 'iWB-oWB' by SMMU\_GBPA.MemAttr.
- SMMU GBPA.SHCFG == "use-incoming".
- An ACE input attribute provides ACE-Device-Sys.

The final output of the SMMU is ACE-WB-OSH.

#### 16.7.5.3 Common interpretation of attribute encoding between SMMU and PE

If interoperation with the Armv8 PE IP is required, a Normal memory attribute that is not iWB-oWB is transformed to the architectural type iNC-oNC-OSH. See 16.7.5.2 *Conversion of Armv8 attributes to AMBA on output and representation of Shareability*, in AMBA systems this is represented as ACE-NC-Sys.

For example, a final output attribute of iWT-oNC-NSH is converted to iNC-oNC-OSH and is therefore output into an AMBA system as ACE-NC-Sys.

Access attributes of type any-Device are unaffected by this rule.

Otherwise, for interoperation with other PE IP, the transformations between Normal memory attributes that are not iWB-oWB or iNC-oNC and AMBA attributes are IMPLEMENTATION DEFINED.

## 16.7.6 Far Atomic operations

If an interconnect and SMMU supports client device-initiated Far Atomic operations according to the atomic operations specified in Armv8.1-A [2], they experience permission checking as though they perform both a read and a write operation. See section 13.1.1 Attribute definitions for permission checking and fault reporting. An atomic access is considered to be a write that also performs a read, so is always considered to be Data. The InD attribute and any INSTCFG overrides are ignored for atomic accesses.

Note: For example, a Far Atomic increment to an address in a read-only page must cause a write Permissions Fault (if all other translation requirements are satisfied). If the transaction is configured to stall and is later retried, the entirety of the transaction must be retried atomically. It is prohibited to satisfy the read of data prior to raising a write fault for the update of the data and then use the same read data when the transaction is later retried. The retry must perform the unbroken atomic transaction in one action.

If an upstream interconnect can express this kind of atomic transaction, but the downstream interconnect or system cannot, one of the following occurs:

- 1. Terminate the transaction in the SMMU with an abort, and record an F\_UUT.
- 2. Support Far Atomic transactions within the SMMU, converting them to local monitor atomic operations using a fully-coherent cache in the SMMU.

In case (1) where far atomics are not supported at all, Arm recommends that the system ensures that upstream devices are not able to emit these transactions (and that software not expect to use them).

#### 16.7.7 AMBA DVM messages with respect to CD.ASET == 1 TLB entries

CD.ASET == 1 affects the interaction of TLB entries with DVM messages in the following ways:

Entries created from StreamWorld == NS-EL1 are not required to be invalidated by:

- Guest OS TLB invalidation by ASID.
- Guest OS TLB invalidation by ASID and VA.

Entries created from StreamWorld == Secure are not required to be invalidated by:

- · Secure TLB invalidation by ASID.
- Secure TLB invalidation by ASID and VA.

Entries created from StreamWorld == any-EL2-E2H are not required to be invalidated by:

- Hypervisor TLB invalidation by ASID.
- Hypervisor TLB invalidation by ASID and VA.

Entries created from StreamWorld == any-EL2 are not required to be invalidated by:

- Hypervisor TLB invalidation by VA.
- Hypervisor TLB invalidation by ASID.
- Hypervisor TLB invalidation by ASID and VA.

Entries created from StreamWorld == EL3 are not required to be invalidated by:

• EL3 TLB invalidation by VA.

# Chapter 17

# **Memory System Resource Partitioning and Monitoring**

This section describes the SMMU extensions to support Memory System Resource Partitioning and Monitoring, MPAM [3].

This support is described in three areas:

- 1. How MPAM identifiers are assigned to client device transactions.
- 2. How MPAM identifiers are generated for SMMU-originated transactions.
- 3. SMMU support for partitioning of internal resources.

The MPAM architecture defines new per-transaction attributes that affect system behavior or the behavior of components that the transactions pass through or Completers that satisfy a transaction. The additional attributes are two identifiers:

- Partition ID, or PARTID.
- Performance Monitoring Group, or PMG.

The PARTID and PMG namespaces are specific to a Security state. A Non-secure stream is assigned a Non-secure PARTID and PMG. In the general case, a Secure stream is assigned a Secure PARTID and PMG. See section 17.7 *Determination of PARTID space values* for full details.

## 17.1 Discovery and global configuration

Support for MPAM is optional in SMMUv3.2 or later. Support can be discovered using SMMU\_IDR3.MPAM and the SMMU\_(S\_)MPAMIDR register in the programming interface of each Security state. If the SMMU supports MPAM, it might not be supported in all Security states.

When SMMU\_IDR3.MPAM == 1, the SMMU\_(S\_)MPAMIDR registers are present. The PMG and PARTID capabilities of a given Security state can be discovered using SMMU\_(S\_)MPAMIDR. MPAM is supported for a Security state when SMMU\_IDR3.MPAM == 1 and either of the corresponding SMMU\_(S\_)MPAMIDR.PARTID\_MAX or SMMU\_(S\_)MPAMIDR.PMG\_MAX fields are not zero.

The SMMU\_(S\_)GMPAM registers provide Global MPAM configuration used for some types of SMMU-originated transactions. See section 17.4 Assignment of PARTID and PMG for SMMU-originated transactions.

The SMMU\_(S\_)GBPMPAM registers provide MPAM configuration for client transactions that globally bypass the SMMU. When translation is enabled for a Security state, via SMMU\_(S\_)CR0.SMMUEN == 1, the MPAM configuration for a client transaction is determined from the corresponding STE.

## 17.2 Assignment of PARTID and PMG for client transactions

When the system uses MPAM, the SMMU assigns the PARTID and PMG for all client transactions. There is no support for pass-through or modification of a PARTID or PMG that are provided with a request by a client device.

The determination of the PARTID and PMG for all client transactions follows this procedure:

- 1. If the corresponding programming interface is disabled, SMMU\_(S\_)CR0.SMMUEN == 0, the transaction bypasses and the MPAM attributes are given by the corresponding SMMU\_(S\_)GBPMPAM.GBP\_{PMG,PARTID} fields.
- 2. Otherwise, when translation is enabled by SMMU\_(S\_)CR0.SMMUEN == 1, the STE configures the MPAM attributes of the given stream.

When SMMU\_(S\_)CR0.SMMUEN == 1, the STE configures the MPAM behavior. The transaction PARTID and PMG are assigned as follows:

| STE.Config[2:0]                      | STE.S1MPAM | Final transaction access                                 |
|--------------------------------------|------------|--|
| 0b100 (Bypass)                       | X          | PARTID = STE.PARTID, PMG = STE.PMG.                      |
| 0b110 (Stage 2) <sup>(1)</sup>       | X          | PARTID = STE.PARTID, PMG = STE.PMG.                      |
| 0b101 (stage 1)                      | 0          | PARTID = STE.PARTID, PMG = STE.PMG.                      |
|                                      | 1          | PARTID = CD.PARTID, PMG = CD.PMG.                        |
| 0b111 (Nested stage 1 + stage 2) (2) | 0          | PARTID = STE.PARTID, PMG = STE.PMG.                      |
|                                      | 1          | PARTID = STE.VMS.PARTID_MAP[CD.PARTID],<br>PMG = CD.PMG. |

<sup>(1)</sup> In a nested configuration, where STE.Config[2:0] ==0b111, STE.S1DSS == 0b01 will cause a transaction without a SubstreamID to be treated as though Config == 0b110, including for MPAM ID assignment.

In nested configurations that enable stage 1 control of MPAM with STE.S1MPAM == 1, the CD.PARTID[4:0] value is a virtual PARTID and is translated to a physical PARTID using the VMS.PARTID\_MAP structure located through the stream's STE.VMSPtr field. See section 5.6 *Virtual Machine Structure (VMS)* for information on the VMS. The VMS.PARTID\_MAP is not used when translation configuration is stage 1-only or stage 2-only, or when STE.S1MPAM == 0, because the PARTID in use is a physical ID in these configurations.

Note: STE.S1MPAM provides backward compatibility for software that is unaware of MPAM, allowing it to operate without requiring a VMS to be allocated.

In an SMMU with RME, the MPAM PARTID and PMG values used for NoStreamID accesses is an IMPLEMENTATION DEFINED choice between:

- Values provided by the device.
- Zero.

<sup>(2)</sup> When the relevant SMMU\_(S\_)MPAMIDR.PARTID\_MAX == 0, the VMS is not supported, the STE.VMSPtr field is not a valid pointer and is not accessed. See 5.6.2 VMS presence and fetching for how to determine whether VMS is supported.

#### 17.3 PCle ATS transactions

An ATS Translation Request causes configuration and translation table access using PARTID/PMG values the same as for an equivalent transaction on that StreamID and SubstreamID.

The PARTID and PMG assigned to an ATS Translated transaction are as follows:

| SMMU_CR0.ATSCHK | Configuration                     | PARTID and PMG                |
|-----------------|-----------------------------------|-------------------------------|
| 0               | Stage 1-only or stage 1 + stage 2 | SMMU_GBPMPAM.GBP_{PARTID,PMG} |
|                 | Stage 2-only                      | SMMU_GBPMPAM.GBP_{PARTID,PMG} |
| 1               | Stage 1-only                      | STE.{PARTID,PMG}              |
|                 | Stage 1 + stage 2                 | _                             |
|                 | Stage 2-only                      | _                             |
|                 | Split-stage ATS                   | _                             |

Implementation note: When SMMU\_CR0.ATSCHK == 1, the STE is fetched to verify whether Translated transactions are permitted. The STE.{PARTID,PMG} fields are therefore available for these transactions. The CD information is not available for an ATS Translated transaction because a PASID is not provided.

Note: When translation is enabled for the Non-secure SMMU programming interface, that is SMMU\_CR0.SMMUEN == 1, the SMMU\_GBPMPAM.GBP\_{PARTID,PMG} configuration is not used for ordinary transactions because they are assigned PARTID and PMG using the STE fields. This configuration is used for ATS Translated transactions when SMMU\_CR0.ATSCHK == 0.

When SMMU\_CR0.ATSCHK == 1, if a PASID is provided with a transaction from an endpoint, an implementation is permitted to use it to determine a PARTID/PMG from a CD as described in section 17.2 Assignment of PARTID and PMG for client transactions for non-ATS or Untranslated transactions. The set of endpoints for which this behavior occurs is IMPLEMENTATION DEFINED.

Note: Endpoints using the PCIe interconnect do not provide a PASID with Translated transactions. However, embedded endpoints that support ATS and PASIDs might be integrated in a way that provides a PASID with Translated transactions.

## 17.4 Assignment of PARTID and PMG for SMMU-originated transactions

In addition to forwarding client transactions, the SMMU makes additional requests to the memory system for access to configuration, translation structures, queues and for MSIs originating from the SMMU. When MPAM is supported and enabled for a Security state, the PARTIDs and PMGs assigned to these transactions are as follows:

| Structure or request type                | PARTID and PMG  |  |
|--|---|--|
| L1STD and STE                            |   |  |
| Access to all SMMU queues                | Determined by the corresponding SMMU_(S_)GMPAM.SO_{PARTID,PMG} fields.  |  |
| SMMU MSI writes                          | _   |  |
| VMS                                      | _   |  |
| L1CD and CD                              | PARTID and PMG are determined by STE.PARTID and STE.PMG.  |  |
| Stage 2 Translation Table<br>Descriptors | See section 17.2 Assignment of PARTID and PMG for client transactions for more information.   |  |
| Stage 1 Translation Table Descriptors    | <ul> <li>PARTID and PMG are determined in the same was as for a non-ATS client transaction:</li> <li>If both stage 1 and stage 2 are enabled and STE.S1MPAM == 1, these are determined by STE.VMSPtr -&gt; PARTID_MAP[CD.PARTID] and CD.PMG. If STE.S1MPAM == 0, these are determined by STE.PARTID and STE.PMG.</li> <li>In a stage 1-only configuration, if STE.S1MPAM == 1 these are determined by CD.PARTID and CD.PMG. If STE.S1MPAM == 0, these are determined by STE.PARTID and STE.PMG.</li> <li>See section 17.2 Assignment of PARTID and PMG for client transactions for more information.</li> </ul> |  |

Note: In a nested configuration, in order to fetch stage 1 translation table descriptors using the PARTID and PMG that will be used for the final transaction, the CD.PARTID first needs to be translated to a physical PARTID using the VMS. Although this requires an additional access before the translation table walk can begin, when an implementation provides TLB partitioning, the PARTID is required in order to insert TLB entries.

In systems that support RME, any GPT access is made with the MPAM attributes of the client-originated or SMMU-originated access that caused the GPT access. When a GPT access is made to check the output address of a translation request, the GPT access uses the MPAM attributes that would be used for an equivalent Untranslated transaction for the same StreamID and SubstreamID.

The MPAM PARTID and PMG values used for GPT walks caused by NoStreamID accesses is an IMPLEMENTATION DEFINED choice between:

- Values provided by the device.
- Zero.

## 17.5 Assignment of PARTID and PMG for PMCG-originated MSIs

A PMCG might independently support MPAM if the PMCG supports MSIs, so that MPAM information can be assigned to the MSI write.

Note: As a PMCG might be implemented separately to an SMMU, or in a distributed manner, the PMCG might generate MSI transactions in a different way to that of the SMMU queue/table accesses, so is configured separately.

Arm recommends that all PMCGs associated with an SMMU support the same MPAM facilities as the SMMU. This means that support for MPAM is recommended to be consistent amongst all PMCGs and SMMU, and that the components support PARTID and PMG sizes large enough to carry any valid system PARTID and PMG values.

Note: Because a PMCG might be implemented in a different component to the SMMU, or to other PMCGs, it is not an architectural requirement that a PMCG supports MPAM.

The PMCG has the following registers for MPAM discovery and configuration:

- SMMU\_PMCG\_MPAMIDR gives the maximum Non-secure PARTID and PMG values that can be configured for an MSI.
- SMMU\_PMCG\_S\_MPAMIDR gives the maximum Secure PARTID and PMG values that can be configured for an MSI.
- SMMU\_PMCG\_GMPAM configures the PARTID and PMG values for a PMCG MSI.
  - When the PMCG is configured to use a Non-secure attribute on an MSI, this register configures Non-secure PARTID and PMG values.
  - When the PMCG is configured to use a Secure attribute on an MSI, and SMMU\_PMCG\_SCR.MSI\_MPAM\_NS is 0 or RESO, this register configures Secure PARTID and PMG values.
  - When the PMCG is configured to use a Secure attribute on an MSI, and SMMU\_PMCG\_SCR.MSI\_MPAM\_NS is 1, this register configures Non-secure PARTID and PMG values.
  - Note: The target PA space of an MSI is determined by both SMMU\_PMCG\_SCR.NSMSI and SMMU\_PMCG\_SCR.NSRA.
  - Note: Arm expects that SMMU\_PMCG\_SCR.NSMSI is only set during the transition of a PMCG from Non-secure to Secure state, and therefore using the output PA space to select the MPAM Security state is consistent with the requirements of the MPAM specification.

See section 10.5.2 Register details for more information on these registers.

When a PMCG that does not support MPAM is integrated in an MPAM-aware system, Arm recommends that the following mapping is used for PMCG MSIs:

- PARTID = 0
- PMG = 0
- If both the system and the PMCG support Secure state, then:
  - If the MSI targets Secure PA space, then Secure PARTID space is used.
  - If the MSI targets Non-secure PA space, then Non-secure PARTID space is used.
- Otherwise, Non-secure PARTID space is used.

## 17.6 SMMU support for partitioning and monitoring of internal resources

SMMU-internal resources are permitted to be affected by the PARTID of a client device transaction. The behavior of and control interface for this facility is IMPLEMENTATION DEFINED.

Note: For example, the SMMU might use this facility to implement a TLB-partitioning scheme.

The SMMU might use the PMG of the PARTID to provide monitoring facilities. The behavior of and control interface for this monitor facility is IMPLEMENTATION DEFINED.

Arm recommends that an implementation uses the MPAM MMR interface as defined in [3] for partitioning and monitoring of internal resources. The base address of these registers is IMPLEMENTATION DEFINED.

## 17.7 Determination of PARTID space values

MPAM PARTID and PMG values are qualified with a PARTID space.

In systems without support for RME, PARTID space is determined by the memory system attribute MPAM\_NS. In systems with support for RME, PARTID space is determined by the memory system attribute MPAM\_SP. The encodings of MPAM\_NS and MPAM\_SP in the memory system are as follows:

| RME supported | Identifier | Encoding                      |
|---------------|------------|-------------------------------|
| No            | MPAM_NS    | 0: Secure PARTID space        |
|               |            | 1: Non-secure PARTID space    |
| Yes           | MPAM_SP    | 0b00: Secure PARTID space     |
|               |            | 0b01: Non-secure PARTID space |
|               |            | 0b10: Root PARTID space       |
|               |            | 0b11: Realm PARTID space      |
|               |            |                               |

Note: Some SMMU register and configuration structure fields have the name MPAM\_NS. These fields determine the target PARTID space of the accesses they govern, regardless of whether the memory system uses MPAM\_NS or MPAM\_SP.

All SMMU-originated and client-originated transactions for Non-secure state are issued with Non-secure PARTID space.

If SMMU\_S\_MPAMIDR.HAS\_MPAM\_NS == 0, all SMMU-originated and client-originated transactions for Secure state are issued with Secure PARTID space.

If SMMU\_S\_MPAMIDR.HAS\_MPAM\_NS == 1, some transactions for Secure state might be issued with Non-secure PARTID space, according to the rules in this section.

For MPAM PARTID and PMG register and structure fields that control MPAM for the Secure programming interface, the associated MPAM\_NS field determines whether accesses are issued with Secure PARTID space or Non-secure PARTID space.

PARTID and PMG values for accesses for Secure state are determined from the register and structure fields specified in section 17.2 Assignment of PARTID and PMG for client transactions and section 17.4 Assignment of PARTID and PMG for SMMU-originated transactions. Only the selection of PARTID space and the determination of maximum PARTID and PMG values are affected by this feature.

The full list of MPAM\_NS bits, which each describe the Secure accesses they apply to are:

- SMMU S GBPMPAM.MPAM NS
- SMMU\_S\_GMPAM.MPAM\_NS
- STE.MPAM\_NS
- SMMU\_PMCG\_SCR.MSI\_MPAM\_NS

Note: There is no MPAM\_NS bit in CD or VMS. They inherit the choice of PARTID space from the STE that led to them.

In systems that support RME, the MPAM\_NS or MPAM\_SP values used for NoStreamID accesses, and GPT walks caused by NoStreamID accesses, are independently an IMPLEMENTATION DEFINED choice between:

- The value provided by the device.
- The MPAM\_NS or MPAM\_SP value corresponding to the target PA space of the access.

For an SMMU that does not support MPAM\_SP, then it is permitted to map MPAM\_SP to MPAM\_NS as follows:

- NoStreamID accesses to Root PA space use the Secure MPAM\_NS value of 0.
- NoStreamID accesses to Realm PA space use the Non-secure MPAM\_NS value of 1.

Any IMPLEMENTATION DEFINED determination of MPAM attributes must comply with the requirements of the MPAM architecture [3].